




Norwegian design

Compact Heater Installation Guide

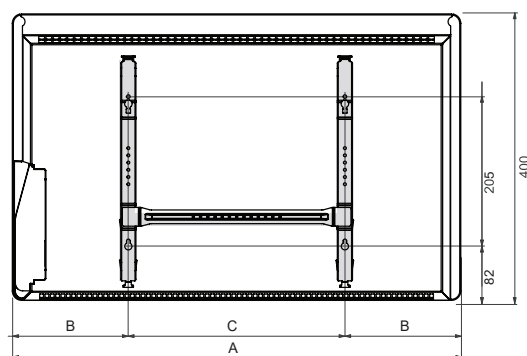

Watt	A mm	B mm	C mm
1000	525	163	200
1500	625	163	300
2000	925	263	400
2400	925	263	400

IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

Note also the information presented on the appliance

CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR GUARANTEE

IMPORTANT SAFETY ADVICE

When using electrical heaters, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

IMPORTANT – The wall bracket supplied with the heater must be used.

IMPORTANT – All packaging should be disposed of in an appropriate manner.

The heater is to be installed out of reach from people in the shower or bath. Heaters on feet must not be used in the immediate surroundings of a shower, a bath or a swimming pool. Provide additional protection against frost damage.

SUITABLE APPLICATIONS

WARNING - This heater is suitable for normal domestic household purposes and should not be used in any other type of environment. This product should only be used in the country where it was purchased from by a recognised commercial retailer. Do not use outdoors. Do not install if the product is damaged.


The use of an extension lead or multi-plug adaptor is not advised when connecting this product to the mains. Connection through these devices could lead to risk of overloading, overheating and even fire at the extension lead or adaptor due to inadequate connection quality.

OVERHEATING WARNING

WARNING - In order to avoid overheating, do not cover or obstruct the heater. Do not place material or garments on the heater, or obstruct the air circulation around the heater, for instance by curtains or furniture, as this could cause overheating and a fire risk. NEVER cover or obstruct in any way the heat outlet slots at the top of the heater or the air inlet slots in the base of the heater.

WARNING - THE SURFACES ON THIS HEATER CAN BE HOT. The heater carries a warning symbol to alert the user to the risk of fire that exists if the heater is accidentally covered.

CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present. For your safety this heater has been fitted with a thermal cut-out. In the event that the product overheats for some reason, the cut-out prevents excessive temperatures on the product by cutting the power to the heater. Once the heater has cooled down, it will reset automatically, it will continue to cycle on and off automatically until the reason for overheating is removed.

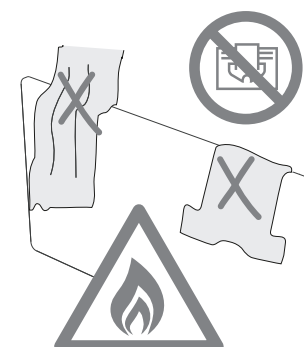

CHILD SAFETY

Do not locate the appliance immediately below a fixed socket outlet or connection box. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the appliance is damaged, check with the supplier before installation and operation. Do not use outdoors. Do not use in the immediate surroundings of a bath, shower or a swimming pool. Do not use this heater if it has been dropped. Do not use if there are visible signs of damage to the heater. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

WARNING - Packaging should be disposed of responsibly as the EPS used could be a potential choking hazard for children.

SERVICING AND REPAIRS

WARNING - Servicing and product repairs should only be undertaken by the manufacturers approved service agent or a similarly trained or qualified person, using only exact manufacturer approved spare parts.

PLEASE NOTE: Household dust, lit cigarettes, candles and oil burners, combined with the convection effect of electric heaters can cause significant soot deposits to build up on the surface directly above and to the sides of the heater. This is not a fault of the heater. Extensive burning of candles or smoking in the operating environment of this product can produce heavy discolouration within a few months of use.

OPERATING WARNINGS

IMPORTANT: Remember to observe all safety warnings and precautions when operating the heater on the automatic or timer modes, either attended or unattended since a fire risk exists when the heater is accidentally covered or displaced.

CAUTION: Do not use if the heater's main power lead is damaged. If the supply cord is damaged it must be replaced by the installer or an approved Nobo service partner.






ELECTRICAL INSTALLATION

WARNING - Minimum clearances and IP zone requirements must be adhered to.
Do not locate the heater immediately below a fixed electrical point i.e. socket outlet.

WARNING: This heater must not be connected to the electricity supply via an external switching device (such as a timer) or circuit that is regularly switched on and off by the utility supplier. Failure to follow this warning could result in the heater's thermal cut-off being inadvertently reset and could create a fire hazard. Cables/flexes that are supplied pre-fitted to the product must NOT be extended.


IMPORTANT - The wall bracket supplied with the heater must be used when wall mounting and the heater must be installed in the correct orientation (not sideways). The fixings should be used to secure the bracket to the particular wall on which the heater will be installed. The heater should be positioned observing the minimum clearances stated around the heater.

When wall mounting, this heater must be mounted on a vertical wall. It also must not be mounted on the ceiling.
This product is not suitable for use/installation in drying rooms or similar.

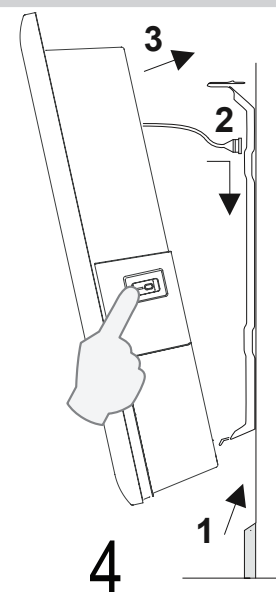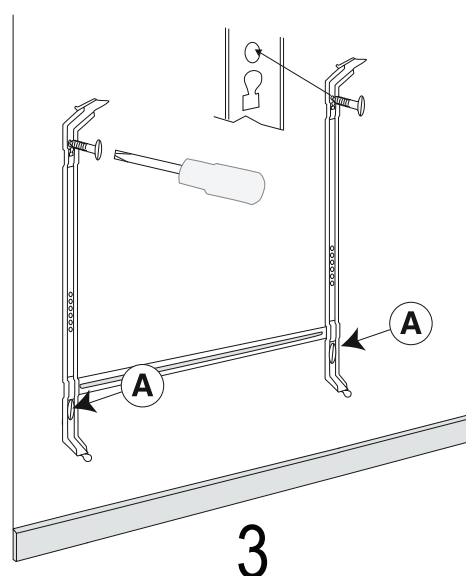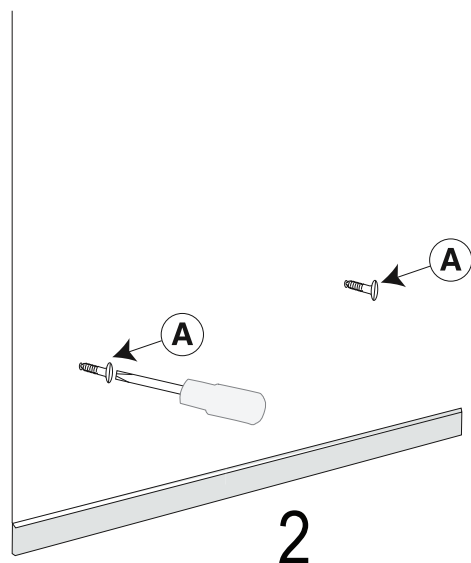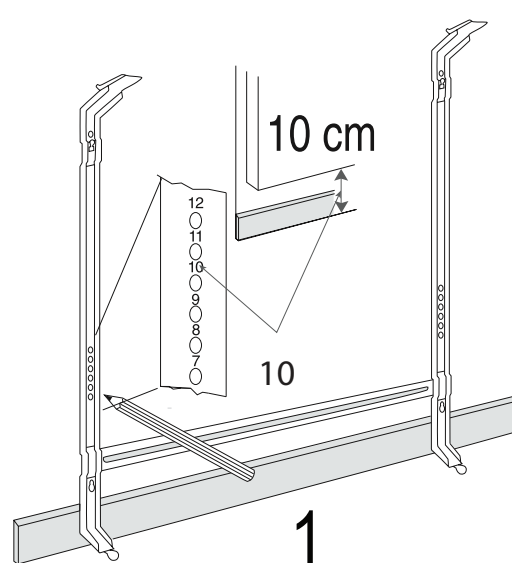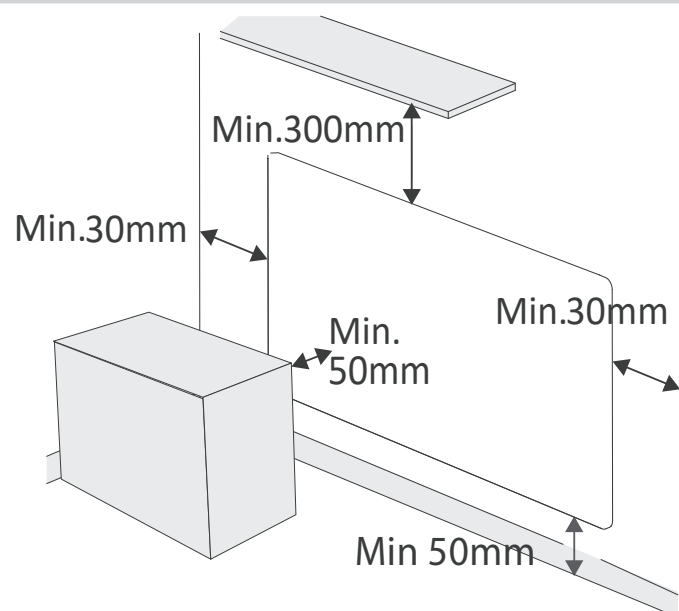


The wall bracket can be used as a measuring device for placing the heater on the wall. Mark the location for the two bottom screws (A-A) and fasten the two screws in the wall.

Place the wall bracket onto the bottom screws (A-A). Then fasten the wall bracket with the top screws. Place the heater on the wall bracket (1), secure the tilt strap (2) and click the heater onto the top catches (3).

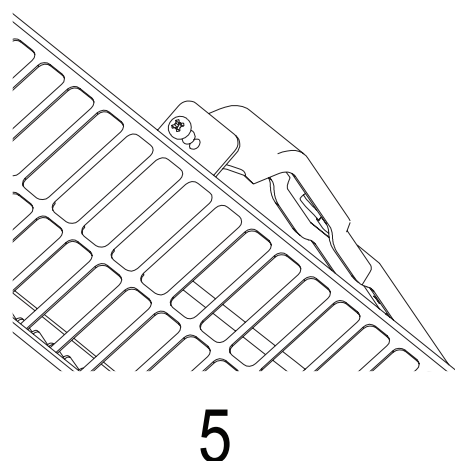

To secure the heater safely to the wall, fasten the screw on each of the two catches at the top of the wall bracket.

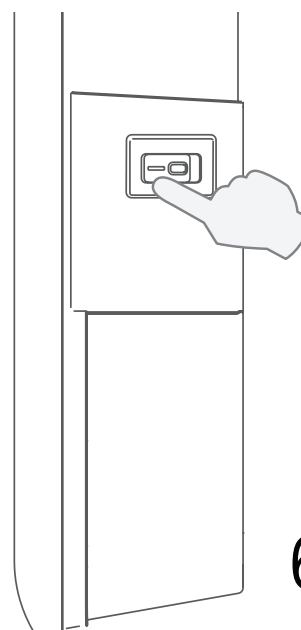

6 Turn switch to 'on' to operate heater

NOBO
Norwegian design

Glen Dimplex Australia
Phone: 1300 556 816
Email: customer.care@glendimplex.com.au
www.nobo.com.au

At the end of its service life, the product must be recycled.

 




Norwegian design

Digital weekly timer

www.nobo.com.au



Electronic room temperature control plus week timer with adaptive startup.

1 Set day and time.

Press + and ↶ simultaneously

A: Select 12H/24H (press +)

B: Confirm (press ✓)

C: Set the hour (press + or -)

D: Confirm (press ✓)






E: Set the minutes (press + or -)

F: Confirm (press ✓)



G: Set the day (press + or -)

H: Confirm (press ✓)


d1: Monday
d2: Tuesday
d3: Wednesday
d4: Thursday
d5: Friday
d6: Saturday
d7: Sunday

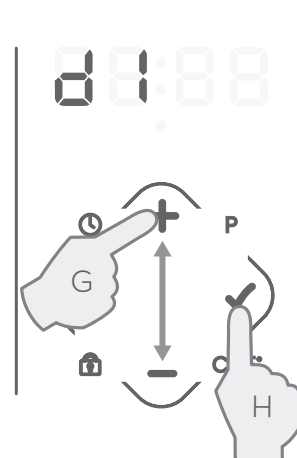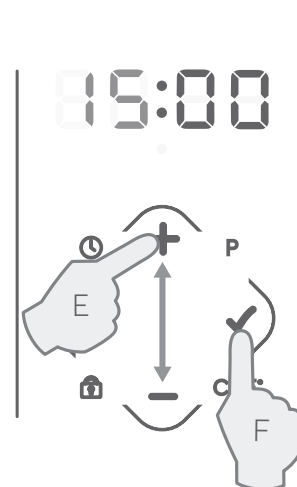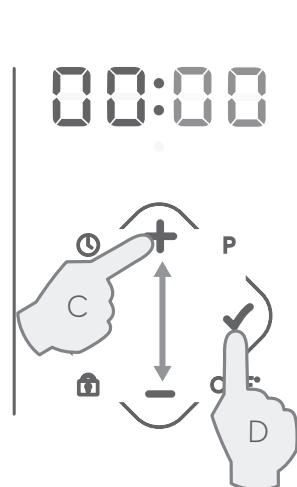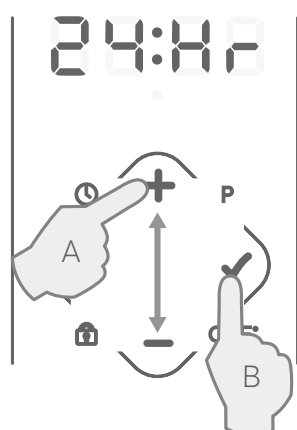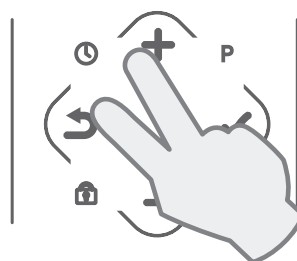


2 Temperature

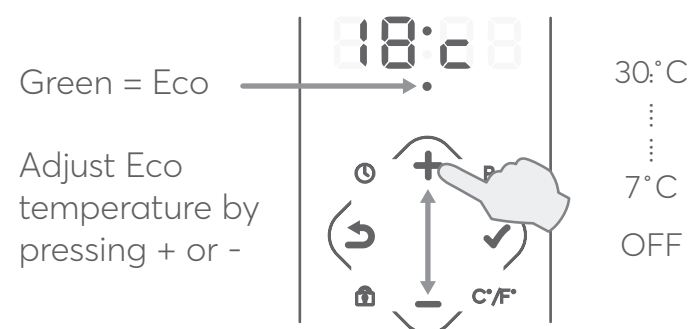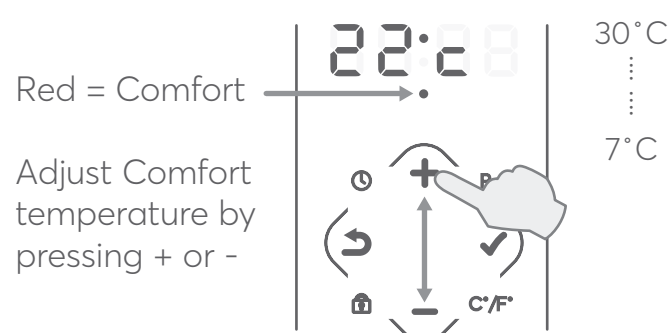

A centre dot in the numerical display will flash when the heater is heating

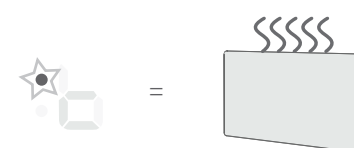


Do not cover the heater.

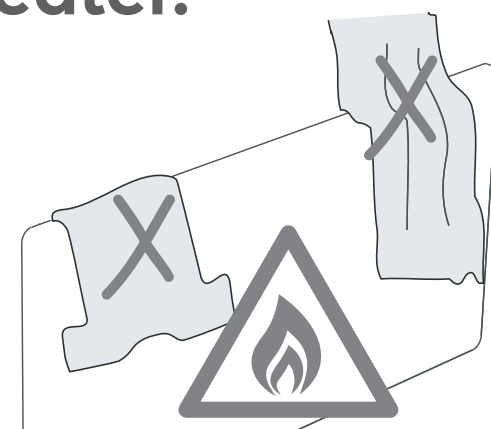


3 Optional settings

Programme daily settings

This heater has nine 24hour programs.
Select one program for each day of the week.

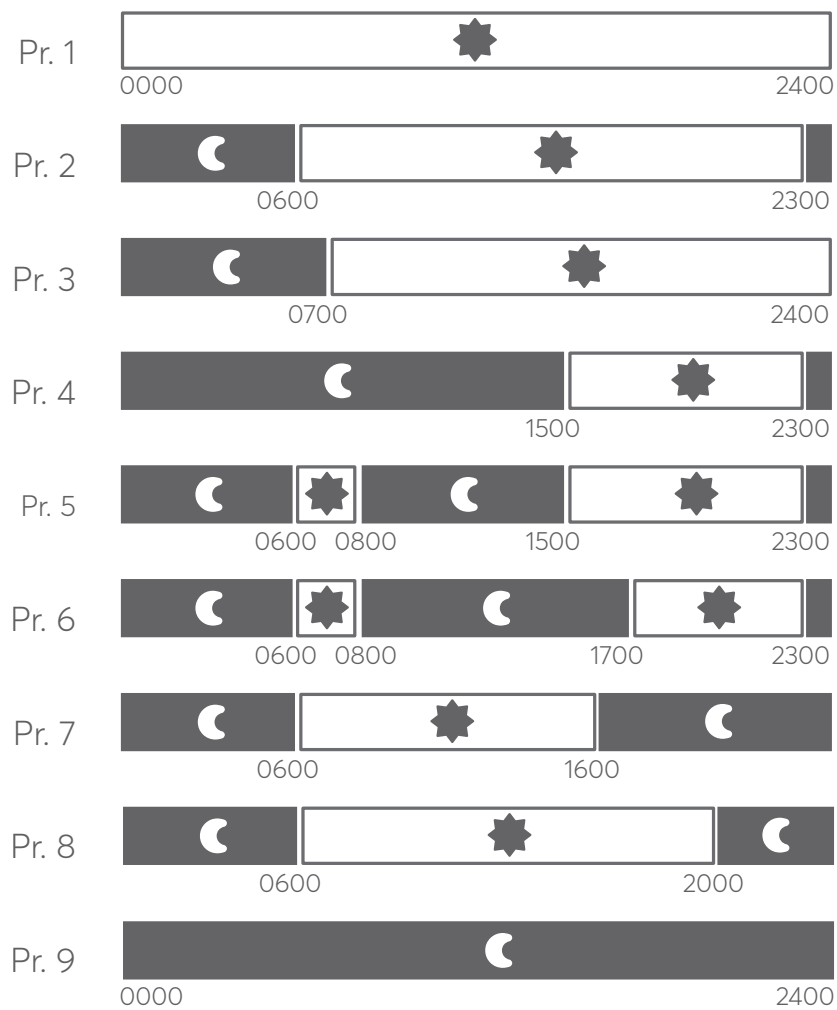


Press ✓ and + simultaneously

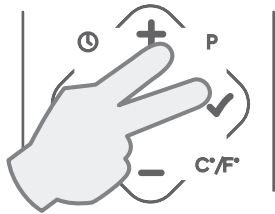

A: Select from above programmes for day 1 (Monday) (press + or -)


d1 = Monday

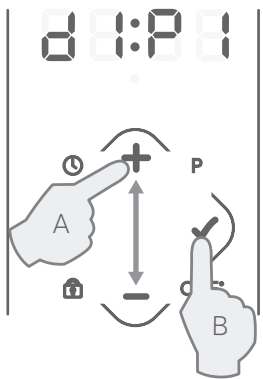

B: Confirm (press ✓)

C: Now select from above programmes for day 2 (Tuesday) (press + or -)


d2 = Tuesday

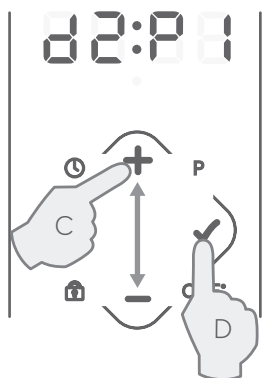

D: Confirm (press ✓)

Repeat for each day (d1 to d7)

Override

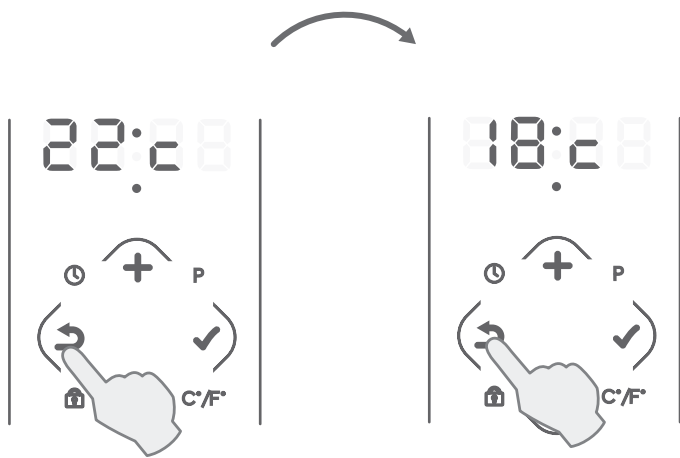


Pressing ↶ overrides the status from Comfort to Eco or vice versa.

The override is terminated automatically upon the next event in the program, or at 03.00.

Key lock

Press ↶ and - simultaneously to lock or unlock

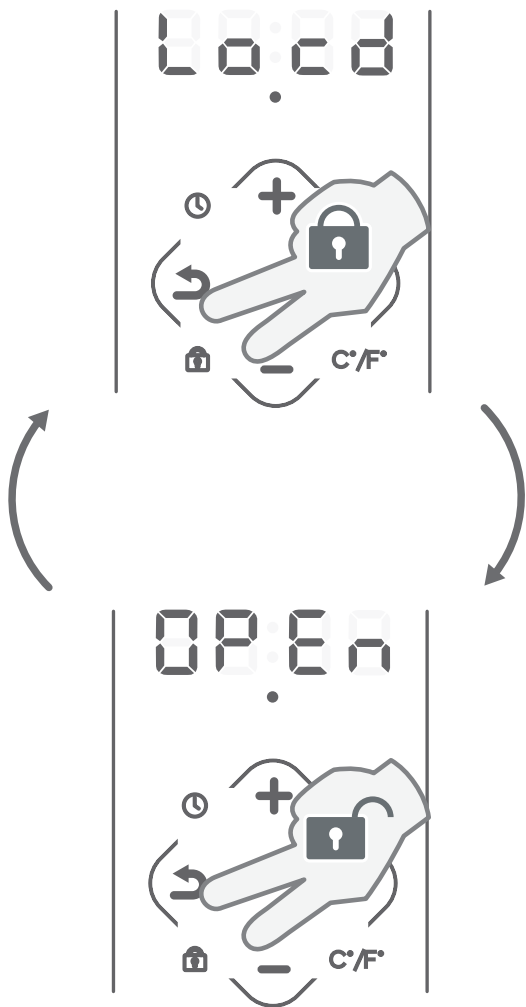

Adaptive start allows the heater to learn what time it needs to start heating so that the room is at the set temperature by the time of the programmed setting. For example, if the programming is set to 20 degrees Celsius at 6am, the heater will start heating up before 6am so that by 6am, the room will be 20 degrees Celsius. Many factors impact on room heat up times (e.g. size of the room and insulation) and initially the heater may start too early or too late. However it will learn and recalibrate itself over several days optimising itself to the best time to start heating.