

## 104cm Digital Tower Fan

Model: DCTF104DG

---

For domestic household use only.



## **IMPORTANT**

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

**Note also the information presented on the appliance**

**CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY**

Please read the operating instructions carefully before using your fan for the first time and keep them in a safe place.

**WARNING** – This appliance must not be used in a bathroom.

**WARNING** – Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

- If the mains lead is damaged it must only be replaced by the manufacturer's service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Never immerse the appliance in water or other liquids.
- Operate this unit only on a firm, flat surface.
- Do not place on soft, unstable or non-horizontal/angled surfaces.
- Never operate the appliance if a cable or connector has been damaged, after appliance malfunction or if the appliance was dropped or is otherwise damaged.
- Please ask a professional service agent to repair the product. Improper repair may cause danger to users.
- Disconnect the appliance from mains power whenever it is not

in use, before relocating it, and before cleaning.

- Operate the appliance only at the voltage specified on the rating label.
- Only connect the unit to a properly installed and easily accessible socket so that you can quickly disconnect the plug if necessary.
- Do not connect this product to the mains using an extension lead.
- This fan is only intended for **INDOOR RESIDENTIAL** applications. This fan should not be used for commercial or industrial or leisure applications or in small enclosed spaces.
- Never use the mains lead as a carrying strap or pulling lead.
- To avoid a fire or electrocution hazard, **NEVER** put the cord near heat registers, radiator, stoves or heaters.
- **DO NOT** cover cord with carpeting, throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping hazard.
- **DO NOT** use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Only operate this appliance with a minimum of 50cm clearance all around i.e. away from walls, furniture and overhanging objects such as curtains or a shelf.
- **WARNING:** To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.
- **NEVER** drop or insert any object or fingers into any openings.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use bug sprays or other flammable cleansers/vapour sprays on or around the unit.

- Always switch off the unit and take the plug out of the socket:
  - If you are not using the unit
  - Before you clean or carry out maintenance on the unit
  - If a fault occurs
  - In the event of an electrical storm.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electrical appliances such as televisions & radios.
- **DO NOT** use this appliance with an extension lead or power board.



Exposed to the weather outdoors



Near water



If the power cable wires are frayed or cut



Where small children may be left unattended



No extension leads or power boards



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair





If there is a risk of water falling on the unit

## Specification

<b>Model no.</b>	<b>DCTF104DG</b>
Colour	Grey
Power supply	220-240V~ 50-60Hz
Rated power	45W
Speed settings	4
Modes	4
Timer	1-12hrs
Air speed	5.5m/s
Oscillation	60°
Controls	Button & Remote
Noise level	48dB
Weight (net)	3.7kg
Dimensions (w x d x h)	320 x 320 x 1040mm


- For greater precision, please always refer to the rating label placed on the product.

# Parts

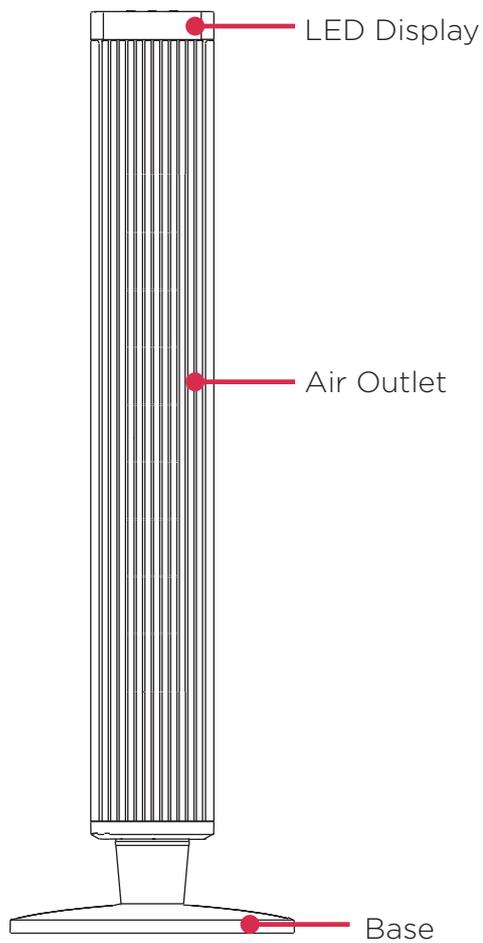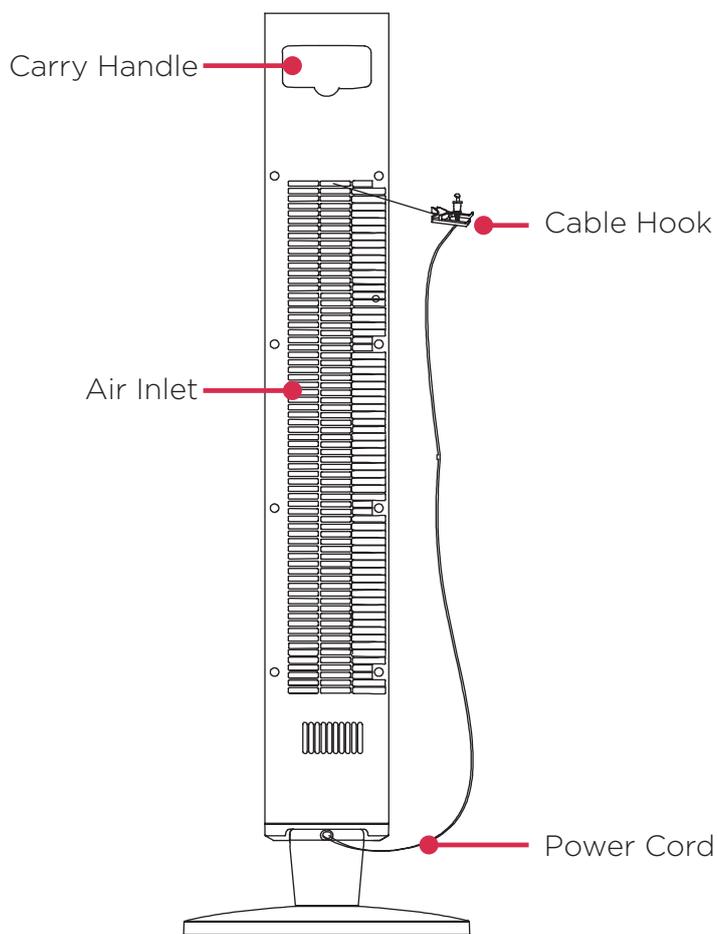

## Assembly

1. Take the two parts of the pole (A and B) and assemble them together.
2. Position the larger end of the pole at the bottom of the tower fan body and place into the groove.
3. Turn the pole clockwise until an audible click is heard.
4. Take the two parts of the base (C and D). Insert the two poles of part C into the two holes of part D, and insert the two poles of part D into the two holes of part C.
5. Position the base onto the smaller end of the pole.
6. Turn the base clockwise until an audible click is heard. The boundary of the pole should align with the boundary of the base.

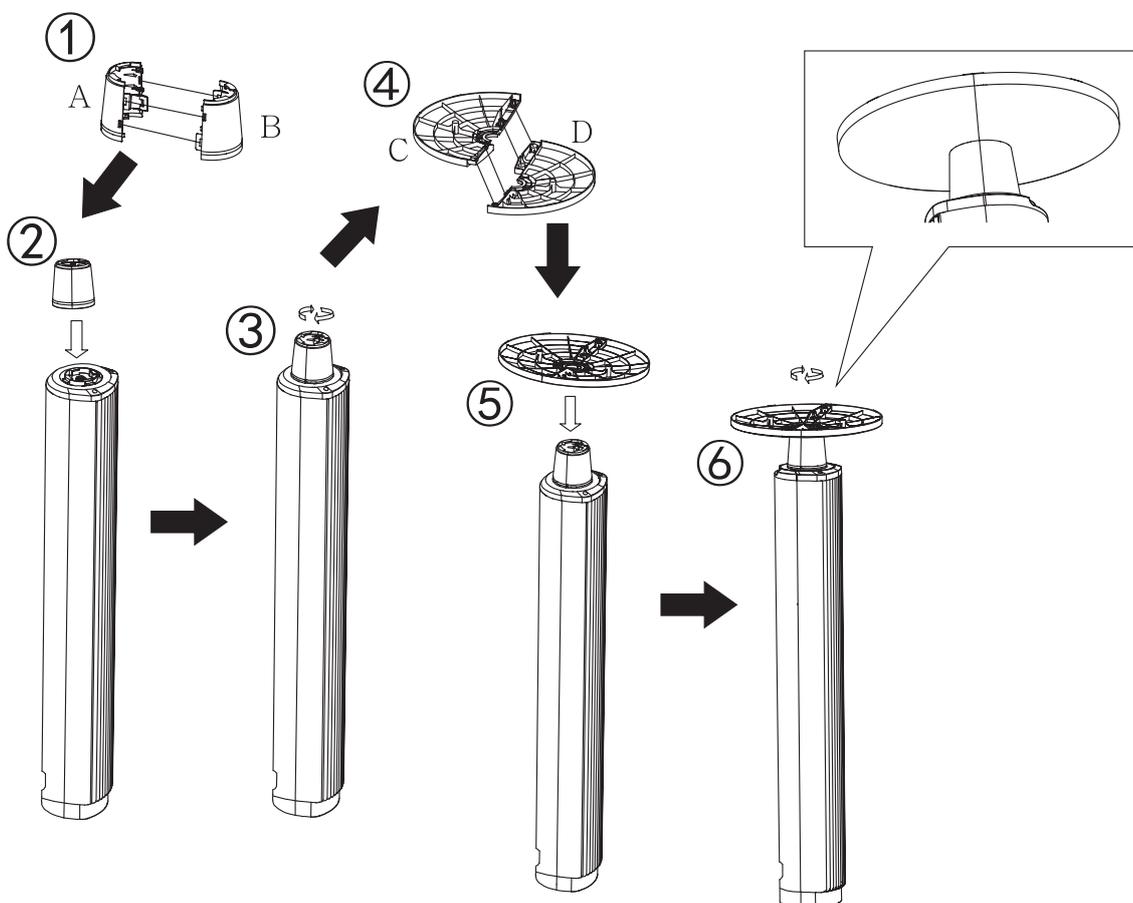


# Operation


This tower fan can be operated by the control panel and remote control. Please refer to the below diagrams and descriptions.

## Remote Control

1. Install 2 x AAA batteries (not included) into the remote.

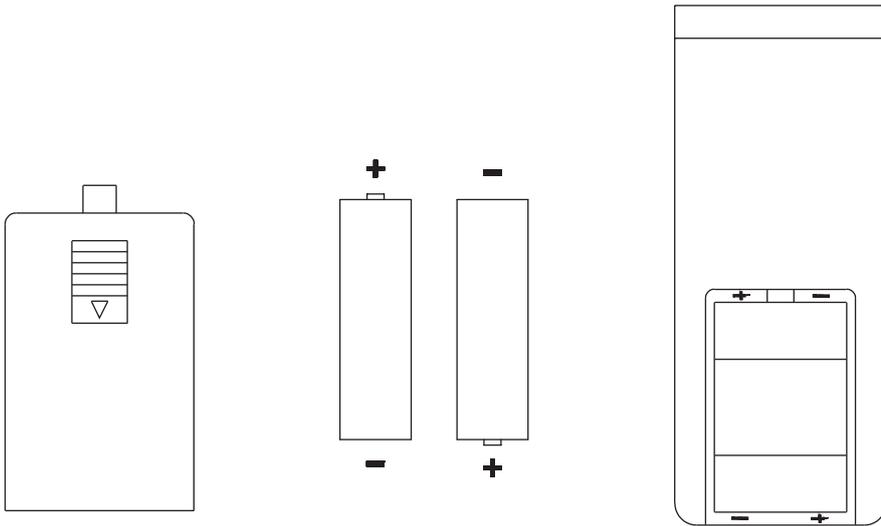


2. All remote control buttons are labeled as below and all the remote control functions work identically as the manual controls.

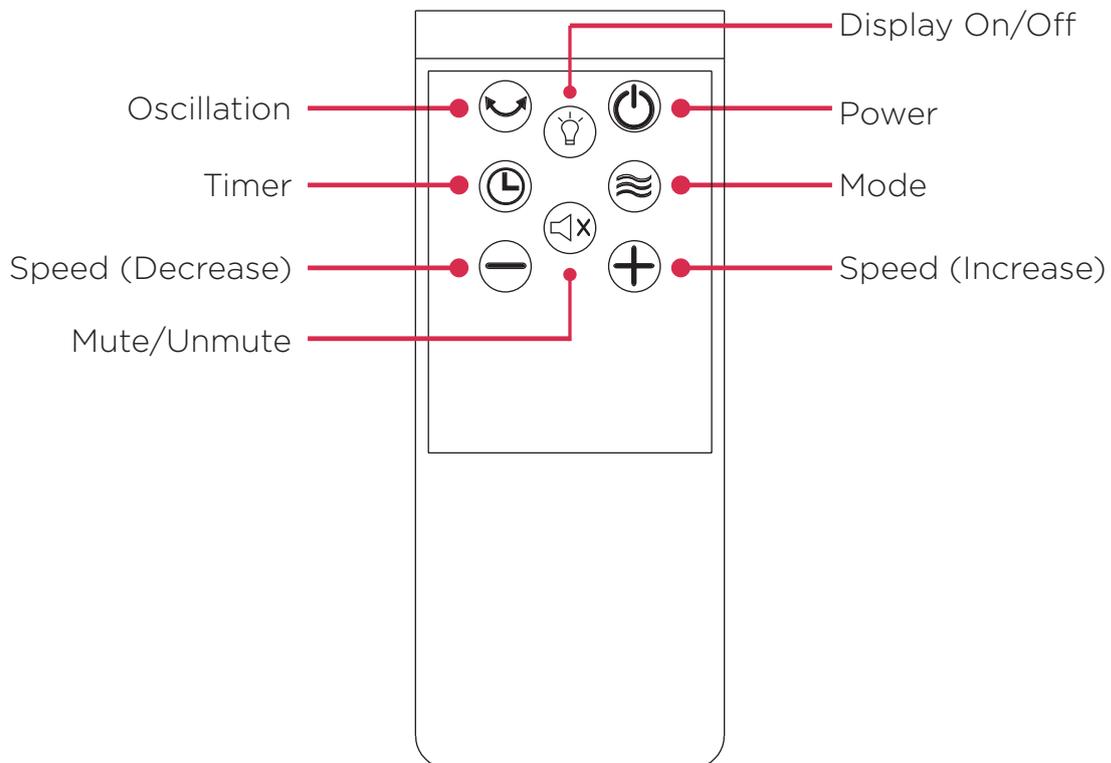


# Operation

## Control Panel

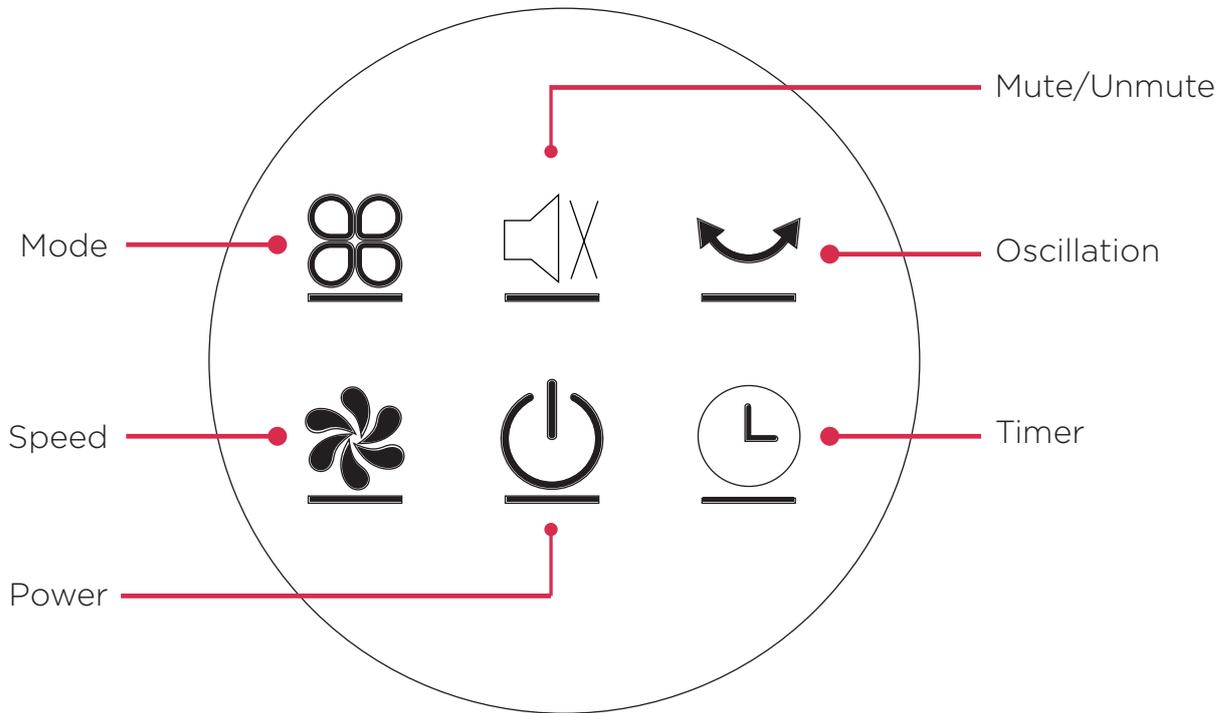


## LED Display

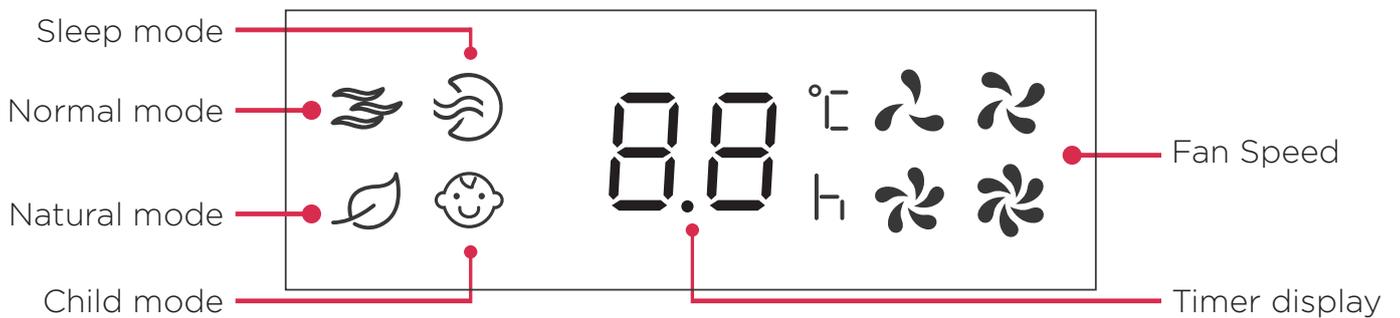

## Cable Hook:

The cable hook is packed with the user manual. Take it out and install it on the grille of the Air Inlet on the backside of the fan. The power cord can be hung at the cable hook when the fan is not in use.

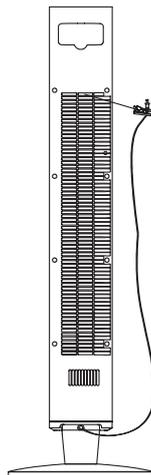

## Manual Controls

1. Place the fan on a stable, flat surface. Plug the cord set into an appropriate electrical outlet.
2. Turn the fan on by pressing the '**POWER**' button. Turn the fan off by pressing the '**POWER**' button again.
3. You can adjust the fan speed to the desired level: 1 (low), 2 (medium-low), 3 (medium-high) and 4 (high) by pressing the '**SPEED**' button. The speed setting is displayed on the LED panel.
4. You can adjust the fan mode by pressing the '**MODE**' button. The four modes are 'natural' 'normal' 'sleep' and 'child'.
5. To set the fans timer, press the '**TIMER**' button. This allows you to set the fans length of operation between 1-12 hours in intervals of 1 hour. To cancel the Timer function, press the Timer button continuously until the timer light is no longer displayed.
6. To make the fan oscillate, press the '**OSCILLATION**' button. This allows the fan to oscillate up to 60° .
7. To toggle the operating sounds, press the '**MUTE/UNMUTE**' button.
8. Turn the LED display temporarily off by pressing the '**DISPLAY ON/OFF**' button on the remote. The display will light up again once any control button is pressed.  
**Note:** The LED display will turn off automatically after 30 seconds on inactivity. The Display On/Off button can be held for three seconds after turning the LED display on to cancel this feature. To re-enable the feature, press and hold the button for 3 seconds once again.

## Operation Modes

**NORMAL Mode**  - The normal mode has 4 fan speeds (1, 2, 3, 4, from low to high). The fan will run continuously at the selected speed, and will not change automatically

**NATURAL Mode**  - The natural mode has 3 fan speeds (2, 3, 4). When set to natural mode, the fan will automatically switch circulation between fan speeds 2/3/4 based on the current selected fan speed to simulate natural wind.

**SLEEP Mode**  - The sleep mode has 4 fan speeds (1, 2, 3, 4). When set to sleep mode, the fan will automatically switch circulation between 1/2/3/4 fan speeds based on the current selected fan speed in order to provide a comfortable breeze during sleep.

**CHILD Mode**  - The child mode is designed especially for children and babies. The child mode has 3 wind speeds (1, 2, 3) which provide a soft airflow. The fan will automatically switch circulation between 1/2/3 fan speeds based on the currently selected fan speed. By default, oscillation is enabled in this mode. The oscillation can be cancelled by pressing the Oscillation button.

## Cleaning

Over time, dust can accumulate on the fan grille, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

**Do not** use abrasive sponges, scouring pads, or a stiff brush to clean the unit.

### **IMPORTANT**

The control panel and other parts must not come into contact with water or any other liquids.

### **Storage**

If not using the unit for an extended period of time. After cleaning please:

- Turn the unit off, unplug and take care of the mains lead & plug.
- Cover the unit and store it upright in a location where it will not receive direct sunlight. NB- Prolonged exposure to direct sunlight will discolour the enclosure.

## Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

## Warranty


Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

### **Glen Dimplex Australia Pty Ltd**

8 Lakeview Drive,  
Scoresby 3179, Victoria  
Australia  
Ph: 1300 556 816

### **Glen Dimplex New Zealand Ltd**

38 Harris Road, East Tamaki,  
Auckland 2013  
New Zealand  
Ph: 0800 666 2824

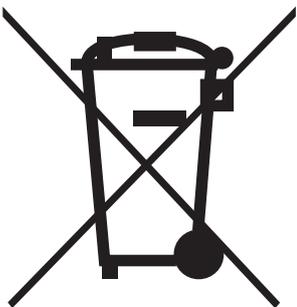

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.



**Customer Care:** 1300 556 816  
customer.care@glendimplex.com.au  
www.dimplex.com.au

Supplied by Glen Dimplex Australia  
8 Lakeview Drive, Scoresby, Victoria, 3179

---

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.