


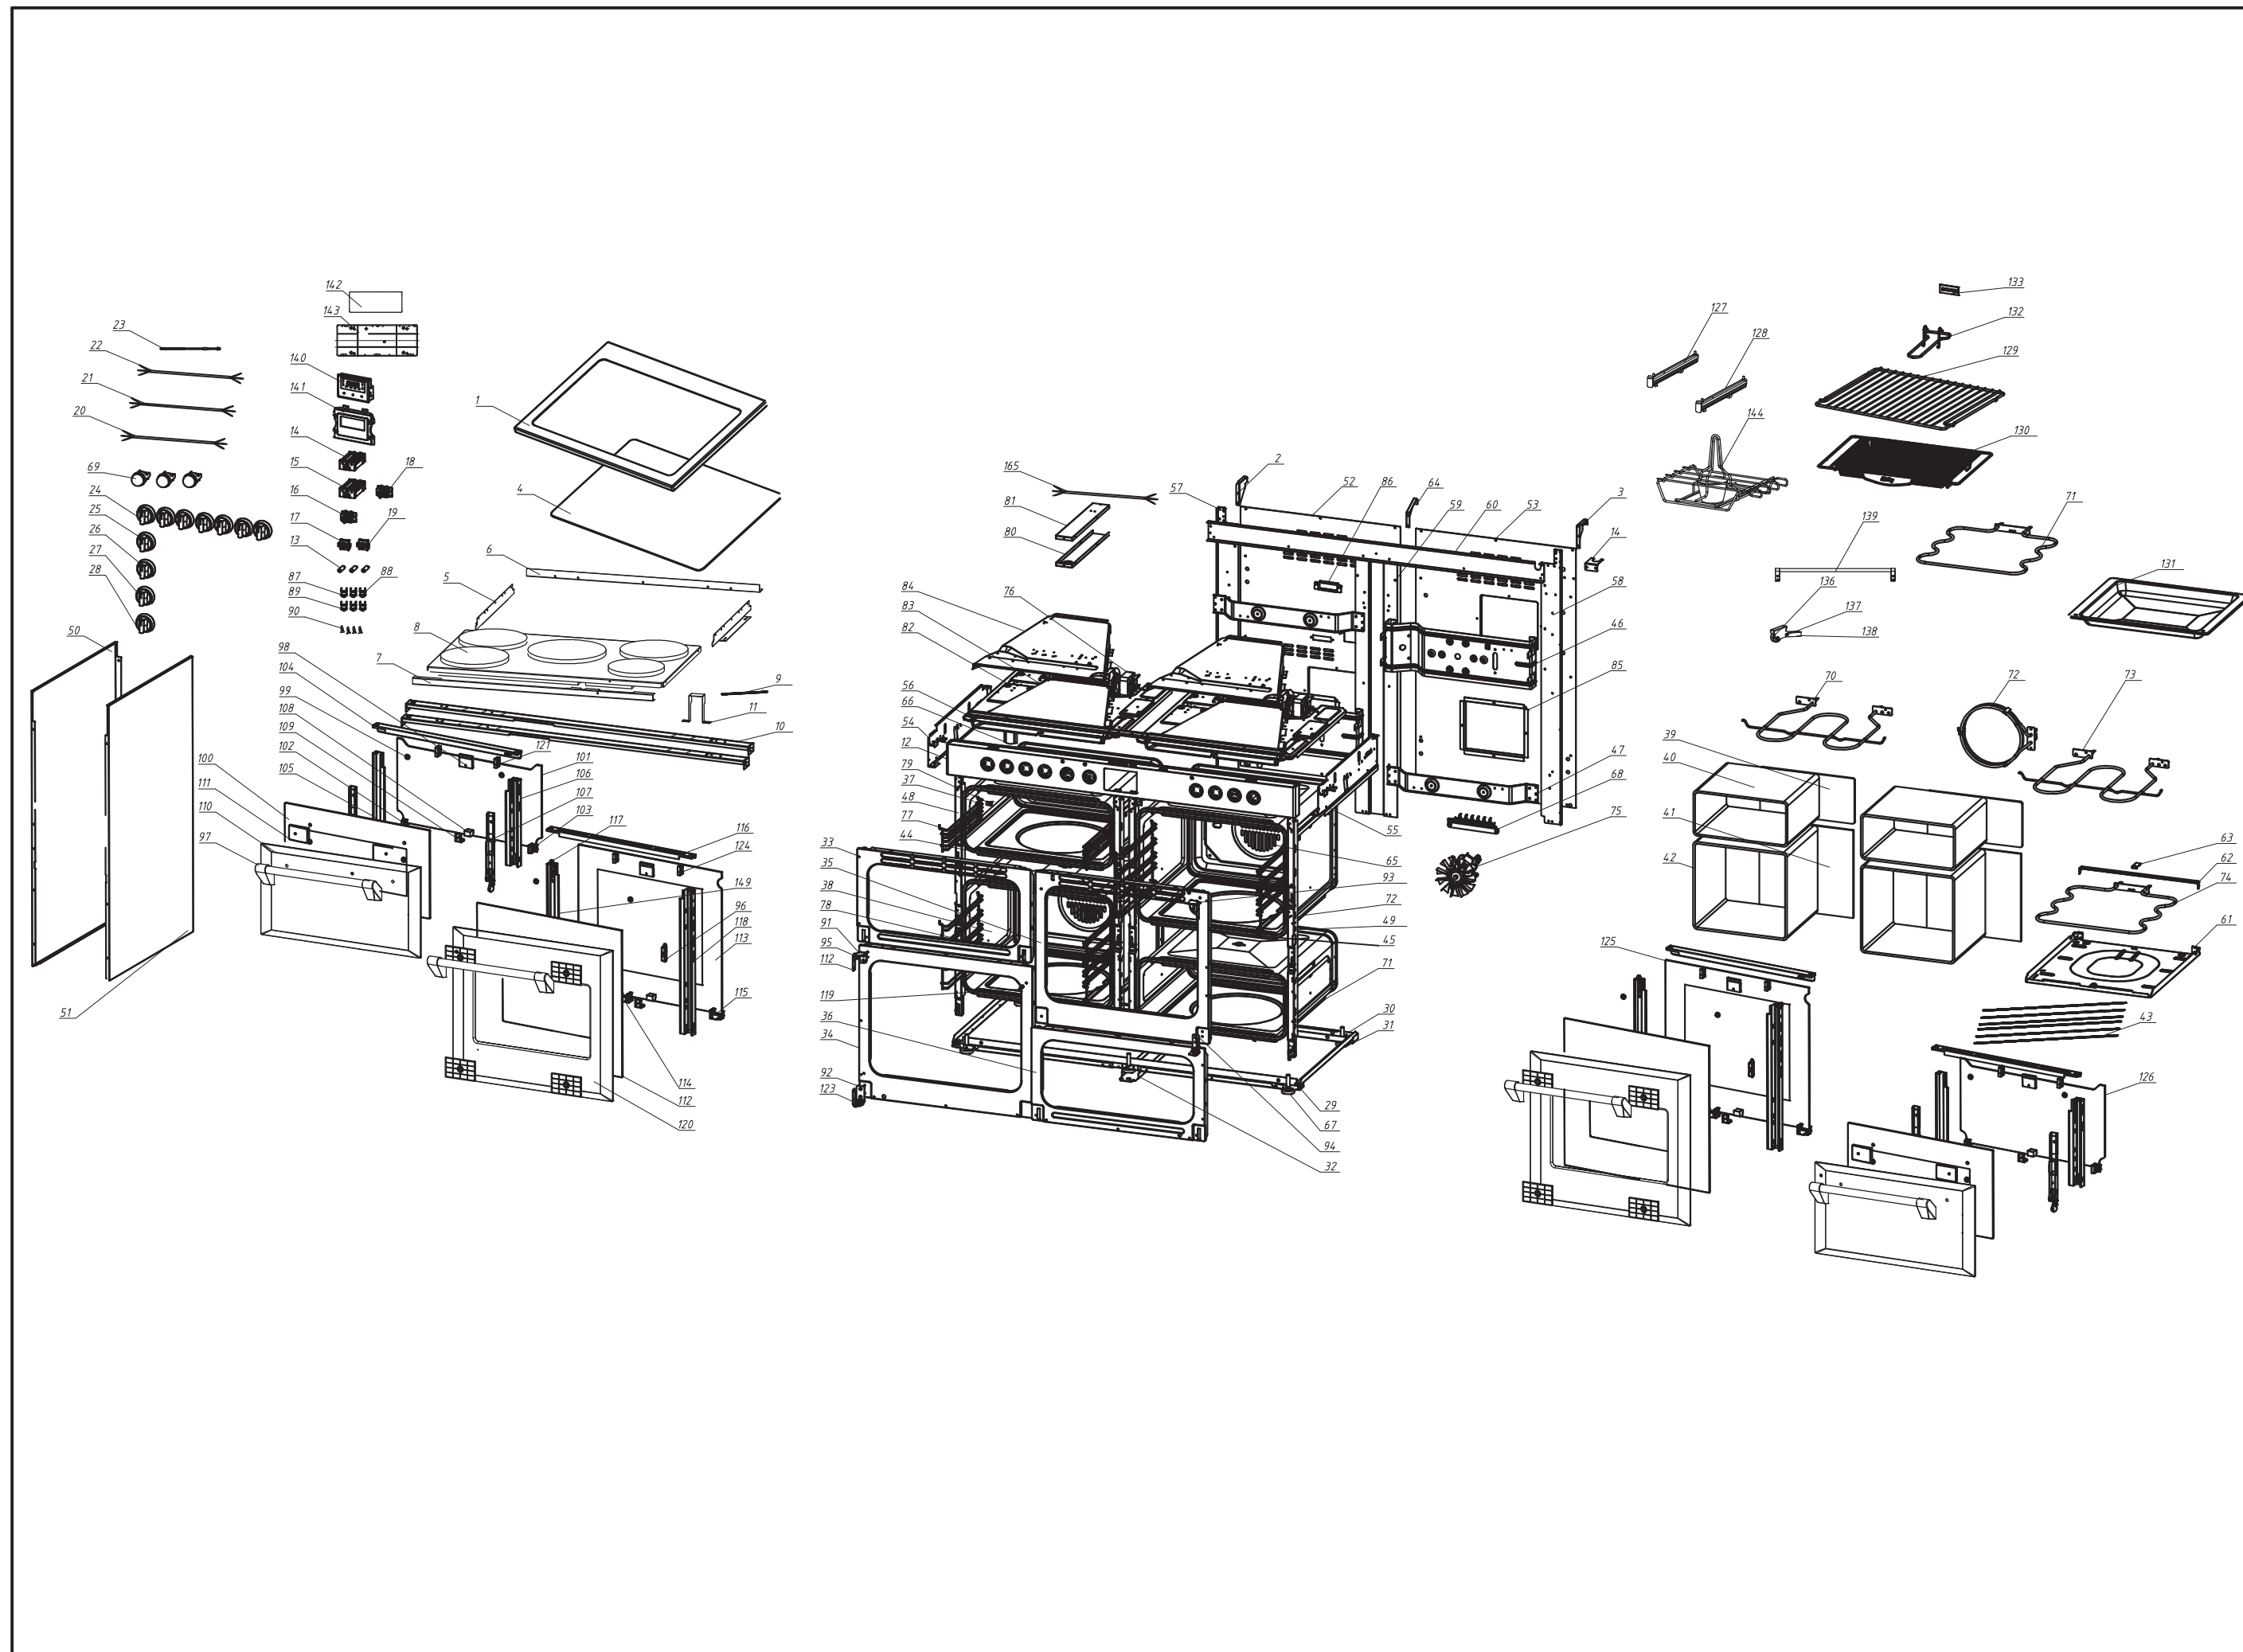

No	Part number	Part Description	QTY
1	30300400943	HOB	1
2	30313300075	OVEN FIXED BOARD	1
3	30313300076	OVEN FIXED BOARD	1
4	30502201339	CERAMIC GLASS PANEL	1
5	30302700224	CONNECTING PLATE	2
6	30302700249	CONNECTING PLATE	1
7	30302700220	CONNECTING PLATE	1
8	30102900060	ELECTROMAGNETIC MODULE	1
9	30102101415	CONNECTING WIRE	1
10	30300100073	HOLDER	2
11	30302700238	CONNECTING PLATE	1
12	30305900577	CONTROL PANEL	1
13	30102500073	INDICATOR LAMP	3
14	30100500051	2 FUNCTIONS SWITCH	1
15	30100500084	4 FUNCTIONS SWITCH	1
15	30100500091	1 FUNCTION SWITCH	1
16	30100900028	TEMPERATURE SWITCH	1
16	30100900030	TEMPERATURE SWITCH	1
17	30105700010	ENCODER SWITCH	1
18	30102200039	ENERGY SWITCH	1
19	30105700028	ENCODER SWITCH	1
20	30105000037	OVEN WIRING	1
21	30105000061	OVEN WIRING	1
22	30105000036	OVEN WIRING	1
23	30100600027	TEMPERATURE MEASURING PROBE ASSEMBLY	1
24	30402500589	KNOB-4 FUNCTIONS SWITCH	1
24	30402500590	KNOB-TEMPERATURE CONTROL SWITCH	1
24	30402500591	KNOB-12 FUNCTIONS CODE SWITCH	1
25	30402500605	KNOB-2 FUNCTIONS SWITCH REAR WITH TEMPERATURE CONTR	1
26	30402500611	KNOB-ENERGY SWITCH	1
27	30402500646	KNOB-CODE SWITCH WITH BRIDGE	2
28	30402500656	KNOB-CODE SWITCH	3
29	30302700202	CONNECTING PLATE	1
30	30302700207	CONNECTING PLATE	1
31	30302700216	CONNECTING PLATE	2
32	30302800074	OVEN STIFFENER	1
33	30315000536	CAVITY PANEL	1
34	30315000566	CAVITY PANEL	1
35	30315000542	CAVITY PANEL	1
36	30315000565	CAVITY PANEL	1
37	2040700308	CAVITY ASSEMBLY	1
38	2040700310	CAVITY ASSEMBLY	2
39	30600100036	HEAT RESERVATION FIBRE	1
39	30600100161	HEAT RESERVATION FIBRE	2
40	30600100162	HEAT RESERVATION FIBRE	1
41	30600100163	HEAT RESERVATION FIBRE	2
42	30600100164	HEAT RESERVATION FIBRE	2
43	30401600005	SPRING	8

No	Part number	Part Description	QTY
44	2030400013	DOOR SEAL	2
45	2041000022	DOOR SEAL	2
46	30301500018	INNER BACK BRACKET	2
46	30301500019	INNER BACK BRACKET	2
47	30302600054	FIXATION BOARD FOR HINGE	2
48	30302600044	FIXATION BOARD FOR HINGE	2
49	30302300162	LEFT OR RIGHT SIDE PANELS OF THE SHELL	1
50	30302300160	LEFT OR RIGHT SIDE PANELS OF THE SHELL	1
51	30500201436	DOOR GLASS	1
52	30302200197	REAR PANEL	1
53	30302200198	REAR PANEL	1
54	30302700199	CONNECTING PLATE	1
55	30302700198	CONNECTING PLATE	1
56	30302700212	CONNECTING PLATE	1
57	30313200115	SUPPORTIVE BRACKET	1
58	30313200114	SUPPORTIVE BRACKET	1
59	30302700215	CONNECTING PLATE	1
60	30308500023	SUPPORT PLATE	1
61	30301200012	BOTTOM ELEMENT FIXED BLOCK	3
61	30302800072	OVEN STIFFENER	1
62	30316200124	OVEN BAFFLE	3
63	30302900301	OVEN FIXED PLATE	3
64	30302900347	OVEN FIXED PLATE	1
65	30301100115	GUARDING BOARD FOR REAR ELEMENT	2
65	30303500177	TOP BRACKET	1
66	30401100002	EXHAUSTING FLUE	2
67	30201600011	NON-SLIP FOOT	3
68	30104800010	BINDING POST	1
69	30101000014	ROUND LAMP COMPONENT	3
70	30101200285	ELEMENT	1
71	30101200292	ELEMENT	2
72	30101200288	ELEMENT	2
73	30101200287	ELEMENT	1
74	30101200310	ELEMENT	1
75	30100300066	CIRCULATION FAN ASSEMBLY	2
76	30100400101	COOLING FAN	2
77	30400200094	GUIDE BRACKET	2
78	30400200087	GUIDE BRACKET	4
79	30400300005	GUIDE BRACKET FIXED SHAFT	6
80	30313400040	EXHAUST PIPE UPPER/BOTTOM COVER PANEL	1
81	30313400041	EXHAUST PIPE UPPER/BOTTOM COVER PANEL	1
82	30301800050	BOTTOM BOARD FOR EXHAUSTING FLUE	2
83	30312700003	BAFFLE PLATE FOR EXHAUSTING FLUE	2
84	30312600011	COVER BOARD FOR EXHAUSTING FLUE	2
85	30309600142	COVER BOARD	2
86	30301900014	EXHAUST PIPE BAFFLE PLATE	1
87	30100700008	OVER-HEAT PROTECTOR	1
88	30100700027	OVER-HEAT PROTECTOR	2

No	Part number	Part Description	QTY
89	30100800003	THERMOSTAT	3
90	30304100001	CLIPS FOR THERMOSTATS	6
91	30407300027	SHAFT BRACKET	1
92	30407300024	SHAFT BRACKET	1
93	30407300025	SHAFT BRACKET	1
94	30407300026	SHAFT BRACKET	1
95	30404300007	SHAFT BRACKET FIXING SLEEVE	4
96	30407200012	DOOR LOCK ASSEMBLY LH/ RH	2
97	30400700367	HANDLE	4
98	30303600001	FIXATION BOARD FOR HANDLE	4
99	30201400005	HANDLE SEAL	8
100	30500201436	DOOR GLASS	1
101	30500400246	INNER GLASS	1
102	30200900036	FIXATION BLOCK FOR INNER GLASS	1
103	30200900037	FIXATION BLOCK FOR INNER GLASS	1
104	30303500177	TOP BRACKET	1
105	30303400309	DOOR BRACKET	1
106	30303400305	DOOR BRACKET	1
107	30400600095	HINGE ASSEMBLY	4
108	30201000032	MIDDLE GLASS SUPPORT RUBBER	3
109	30302900347	OVEN FIXED PLATE	1
110	30304500427	DOOR TRIM	1
111	30202100026	CUSHION BLOCK	20
112	30500201439	DOOR GLASS	1
113	30500400271	INNER GLASS	1
114	30200900034	FIXATION BLOCK FOR INNER GLASS	1
115	30200900035	FIXATION BLOCK FOR INNER GLASS	1
116	30303500178	TOP BRACKET	1
117	30303400310	DOOR BRACKET	1
118	30303400311	DOOR BRACKET	1
119	30407200011	DOOR LOCK FIXING BASE	2
120	30304500426	DOOR TRIM	1
121	30201000030	MIDDLE GLASS SUPPORT RUBBER	2
122	30302800073	OVEN STIFFENER	1
123	30302800072	OVEN STIFFENER	1
124	30200900042	FIXATION BLOCK FOR INNER GLASS	2
125	30500400252	INNER GLASS	1
126	30500400254	INNER GLASS	1
127	30401700008	TELESCOPIC RUNNER	3
128	30401700009	TELESCOPIC RUNNER	3
129	30400100070	RACK	7
130	30400100074	RACK	1
131	30304200058	BAKING TRAY	2
132	30400800002	TONGS FOR RACK	1
132	30102101512	CONNECTING WIRE	1
139	30400700375	HANDLE	1
140	30101600442	DISPLAY	1
141	30200200030	DISPLAY FIXED BRACKET	2

No	Part number	Part Description	QTY
142	30207700007	PCB FIXED BRACKET	1
143	30101500239	PCB	1
144	30302800082	OVEN STIFFENER	2
145	30401000013	GRILL INSERT FOR BAKING TRAY	2
146	30205700024	OIL COLLECTOR	1
147	30401000028	GRILL INSERT FOR BAKING TRAY	1
148	30401000029	GRILL INSERT FOR BAKING TRAY	1
149	30401000030	GRILL INSERT FOR BAKING TRAY	4
150	30401600039	SPRING	2
151	30700500278	SCREWS	2
152	30309600143	COVER BOARD	1
153	30200200037	DISPLAY FIXED BRACKET	1
154	30303500178	DOOR STRIP	1
155	30304500427	DOOR TRIM	1
156	30211000019	PANEL WASHER	5
157	30200900034	INNER GLASS FIXED BLOCK	1
158	30200900035	INNER GLASS FIXED BLOCK	1
159	30211000019	PANEL WASHER	5
160	30302900347	OVEN FIXED PLATE	1
161	30303400305	DOOR FRAME LEFT AND RIGHT SUPPORT	1
162	30303400309	DOOR FRAME LEFT AND RIGHT SUPPORT	1
163	30200900036	INNER GLASS FIXED BLOCK	1
164	30200900037	INNER GLASS FIXED BLOCK	1
165	30303400310	DOOR FRAME LEFT AND RIGHT SUPPORT	1
166	30303400311	DOOR FRAME LEFT AND RIGHT SUPPORT	1
167	30304500426	DOOR TRIM	1
168	30500201439	OUTER DOOR GLASS	1
169	30500300116	MIDDLE GLASS	1
170	30700400035	NUT	6
171	30700500269	SCREWS	2
172	69900600249	HEX KEY	1
173	30205800015	PRESS THE PLATE	1
174	30212400018	ROLLER	2
175	30212000008	REGULATING LEVER	2
176	30406200021	CATCH PIN	4
177	30700300009	RETAINER	40
178	30213800009	KICK PANEL	1
179	30302900351	OVEN FIXED PLATE	2
180	30302900360	OVEN FIXED PLATE	2
	2040200922	COMPLETE DOOR - LHS TOP GRILL	1
	2040201135	COMPLETE DOOR - MAIN LHS	1
	2040200928	COMPLETE DOOR - MAIN RHS	1
	2040200931	COMPLETE DOOR - RHS LOWER	1