

| Key | Part number | Description                | QTY |
|-----|-------------|----------------------------|-----|
| 1   | 30300400904 | Hob                        | 1   |
| 2   | 30313300075 | Oven fixed board           | 1   |
| 3   | 30313300076 | Oven fixed board           | 1   |
| 4   | 30402600476 | Trivet                     | 1   |
| 5   | 30402600477 | Trivet                     | 1   |
| 6   | 30401900427 | INTAKE-TUBE                | 1   |
| 7   | 30300100073 | Holder                     | 1   |
| 8   | 30101700046 | MICRO SWITCH               | 1   |
| 9   | 30403100225 | Valve-Φ0.65                | 1   |
| 10  | 30403100226 | Valve-Φ0.44                | 2   |
| 11  | 30403100227 | Valve-Φ0.35                | 3   |
| 12  | 30403100228 | Valve-Φ0.27                | 1   |
| 13  | 30200300012 | Seal ring                  | 2   |
| 14  | 30302900364 | Oven fixed plate           | 1   |
| 15  | 30208200005 | Microswitch pressure plate | 7   |
| 16  | 30402800009 | WOK Burner base            | 1   |
| 17  | 30402400012 | WOK IGNITION PIN           | 1   |
| 18  | 30401600001 | SNAP HOOK                  | 1   |
| 19  | 30402800032 | RD burner base             | 2   |
| 20  | 30402400004 | SR IGNITION PIN            | 2   |
| 21  | 30402800022 | SR burner base             | 3   |
| 22  | 30402800016 | AU burner base             | 1   |
| 23  | 30401800012 | WOK thermocouple           | 1   |
| 24  | 30401800078 | SR burner thermocouple     | 6   |
| 25  | 30402900085 | Wok buerner                | 1   |
| 26  | 30402900037 | RD buerner                 | 2   |
| 27  | 30402900026 | SR buerner                 | 3   |
| 28  | 30402900018 | AU buerner                 | 1   |
| 29  | 30403000031 | Burner cap-Wok-outer       | 1   |
| 30  | 30403000013 | Burner cap-Wok-inner       | 1   |
| 31  | 30403000064 | Burner cap-RD              | 2   |
| 32  | 30403000050 | Burner cap-Wok-SR          | 3   |
| 33  | 30403000038 | Burner cap-AU              | 1   |
| 34  | 30402100238 | Nozzle-Y1.8                | 1   |
| 35  | 30402100129 | Nozzle-Y1.0                | 1   |
| 36  | 30402100056 | Nozzle-Y1.55               | 2   |
| 37  | 30402100047 | Nozzle-Y1.18               | 3   |
| 38  | 30402100105 | Nozzle-Y0.7                | 3   |
| 39  | 30402100094 | Nozzle-Y0.53               | 1   |
| 40  | 30402100031 | Nozzle-Y0.9                | 1   |
| 41  | 30402100031 | Nozzle-Y0.9                | 2   |
| 42  | 30102300042 | PULSE IGNITER              | 1   |
| 43  | 30402001519 | aluminuim pipe             | 1   |
| 44  | 30402001521 | aluminuim pipe             | 1   |
| 45  | 30402001522 | aluminuim pipe             | 1   |
| 46  | 30402001524 | aluminuim pipe             | 1   |
| 47  | 30402001536 | aluminuim pipe             | 1   |
| 48  | 30402001537 | aluminuim pipe             | 1   |

|    |             |                                        |   |
|----|-------------|----------------------------------------|---|
| 49 | 30402001538 | aluminuim pipe                         | 1 |
| 50 | 30305900652 | control panel                          | 1 |
| 52 | 30200200037 | display board holder                   | 1 |
| 53 | 30100500051 | 2 functions switch                     | 1 |
|    | 30100500084 | 4 functions switch                     | 1 |
| 54 | 30100500091 | 1 functions switch                     | 1 |
| 55 | 30100900028 | TEMPERATURE SWITCH                     | 1 |
| 55 | 30100900030 | TEMPERATURE SWITCH                     | 1 |
| 56 | 30400700367 | handle                                 | 1 |
| 56 | 30102200039 | Energy switch                          | 1 |
| 57 | 30102500073 | INDICATOR LAMP                         | 3 |
| 58 | 30500201436 | door glass                             | 1 |
| 58 | 30402500588 | Knob-gas                               | 7 |
| 59 | 30402500589 | Knob-4 functions switch                | 1 |
| 60 | 30402500590 | Knob-temperature control               | 1 |
| 61 | 30211000019 | PANEL WASHER                           | 5 |
| 61 | 30402500591 | Knob-12 functuions code switch         | 1 |
| 62 | 30402500605 | Knob-2 functions                       | 1 |
| 63 | 30302700202 | connecting plate                       | 1 |
| 64 | 30302700207 | connecting plate                       | 1 |
| 65 | 30302700216 | connecting plate                       | 2 |
| 66 | 30302800074 | Oven stiffener                         | 1 |
| 67 | 30200900036 | fixation block for inner glass         | 1 |
| 67 | 30315000536 | cavity panel                           | 1 |
| 68 | 30105700010 | encoder switch                         | 1 |
| 68 | 30315000566 | cavity panel                           | 1 |
| 69 | 30200900037 | fixation block for inner glass         | 1 |
| 69 | 30315000542 | cavity panel                           | 1 |
| 70 | 30315000565 | cavity panel                           | 1 |
| 71 | 30201000031 | middle glass support rubber            | 2 |
| 71 | 2040700308  | Cavity assembly                        | 1 |
| 71 | 2040700338  | Cavity assembly                        | 1 |
| 72 | 30105700028 | encoder switch                         | 1 |
| 72 | 2040700310  | Cavity assembly                        | 2 |
| 73 | 30105000036 | Oven wiring                            | 1 |
| 74 | 30302800072 | Oven stiffener                         | 1 |
| 75 | 30302800073 | Oven stiffener                         | 1 |
| 76 | 30100600027 | TEMPERATURE MEASURING PROBE ASSEMBLY   | 1 |
| 77 | 30303400310 | door bracket                           | 1 |
| 77 | 30401600005 | spring                                 | 8 |
| 78 | 2030400013  | Door seal                              | 2 |
| 79 | 30303400311 | door bracket                           | 1 |
| 79 | 2041000022  | Door seal                              | 2 |
| 80 | 30301500018 | inner back bracket                     | 2 |
| 81 | 30301500019 | inner back bracket                     | 2 |
| 82 | 30302600044 | fixation board for hinge               | 2 |
| 83 | 30302600054 | fixation board for hinge               | 2 |
| 84 | 30302300162 | Left or right side panels of the shell | 1 |
| 85 | 30302300160 | Left or right side panels of the shell | 1 |
| 86 | 30302200197 | rear panel                             | 1 |
| 87 | 30500300116 | Middle glass                           | 1 |

|     |             |                                       |    |
|-----|-------------|---------------------------------------|----|
| 87  | 30302200209 | rear panel                            | 1  |
| 88  | 30302700199 | connecting plate                      | 1  |
| 89  | 30302700198 | connecting plate                      | 1  |
| 90  | 30302700212 | connecting plate                      | 1  |
| 91  | 30313200115 | supportive bracket                    | 1  |
| 92  | 30313200114 | supportive bracket                    | 1  |
| 93  | 30302700215 | connecting plate                      | 1  |
| 94  | 30308500023 | Support plate                         | 1  |
| 95  | 30301200012 | Bottom element fixing plate           | 3  |
| 96  | 30316200124 | Oven baffle                           | 3  |
| 97  | 30302900301 | Oven fixed plate                      | 3  |
| 98  | 30401600050 | spring                                | 12 |
| 98  | 30302900347 | Oven fixed plate                      | 1  |
| 99  | 30301100115 | guarding board for rear element       | 2  |
| 100 | 30401100002 | exhausting flue                       | 2  |
| 101 | 30201600011 | Non-slip foot                         | 3  |
| 102 | 30102600033 | TERMINAL BLOCK                        | 1  |
| 103 | 30101000014 | ROUND LAMP COMPONENT                  | 3  |
| 104 | 30101200292 | Element                               | 2  |
| 104 | 30101200310 | Element                               | 1  |
| 105 | 30101200288 | Element                               | 2  |
| 107 | 30101200285 | Element                               | 1  |
| 107 | 30101200287 | Element                               | 1  |
| 108 | 30100300066 | circulation fan assembly              | 2  |
| 109 | 30100400101 | Cooling fan                           | 2  |
| 110 | 30400200094 | GUIDE BRACKET                         | 2  |
| 111 | 30400200087 | GUIDE BRACKET                         | 4  |
| 112 | 30400300005 | Guide bracket fixed shaft             | 6  |
| 113 | 30313400040 | Exhaust pipe upper/bottom cover panel | 1  |
| 114 | 30313400041 | Exhaust pipe upper/bottom cover panel | 1  |
| 115 | 30301800050 | bottom board for exhausting flue      | 2  |
| 116 | 30312700003 | Baffle plate for exhausting flue      | 2  |
| 117 | 30312600011 | cover board for exhausting flue       | 2  |
| 118 | 30309600142 | Cover plate                           | 2  |
| 119 | 30301900014 | exhaust pipe baffle plate             | 1  |
| 120 | 30100700008 | over-heat protector                   | 1  |
| 120 | 30100700027 | over-heat protector                   | 2  |
| 121 | 30100800003 | THERMOSTAT                            | 3  |
| 122 | 30304100001 | CLIPS FOR THERMOSTATS                 | 6  |
| 123 | 30402400004 | IGNITION PIN                          | 3  |
| 123 | 30407300027 | SHAFT BRACKET                         | 1  |
| 124 | 30407300024 | SHAFT BRACKET                         | 1  |
| 125 | 30407300025 | SHAFT BRACKET                         | 1  |
| 126 | 30407300026 | SHAFT BRACKET                         | 1  |
| 127 | 30404300007 | SHAFT BRACKET Fixing sleeve           | 4  |
| 128 | 30407200012 | DOOR LOCK ASSEMBLY LH/ RH             | 2  |
| 129 | 30400700367 | handle                                | 1  |
| 130 | 30303600001 | fixation board for handle             | 4  |
| 131 | 30201400005 | handle seal                           | 8  |
| 132 | 30500201436 | door glass                            | 1  |
| 133 | 30500400246 | inner glass                           | 1  |

|     |             |                                |    |
|-----|-------------|--------------------------------|----|
| 134 | 30200900034 | fixation block for inner glass | 1  |
| 135 | 30200900035 | fixation block for inner glass | 1  |
| 136 | 30303500178 | top bracket                    | 2  |
| 137 | 30303400305 | door bracket                   | 1  |
| 138 | 30303400309 | door bracket                   | 1  |
| 139 | 30400600095 | hinge assembly                 | 4  |
| 140 | 30201000032 | middle glass support rubber    | 1  |
| 141 | 30302900347 | Oven fixed plate               | 1  |
| 142 | 30304500427 | door trim                      | 1  |
| 143 | 30500201439 | door glass                     | 1  |
| 144 | 30500400271 | inner glass                    | 1  |
| 145 | 30200900036 | fixation block for inner glass | 1  |
| 146 | 30200900037 | fixation block for inner glass | 1  |
| 147 | 30303500178 | top bracket                    | 2  |
| 148 | 30303400310 | door bracket                   | 1  |
| 149 | 30303400311 | door bracket                   | 1  |
| 150 | 30106900017 | DOOR LOCK ASSEMBLY             | 2  |
| 151 | 30304500426 | door trim                      | 1  |
| 152 | 30201000032 | middle glass support rubber    | 1  |
| 153 | 30200900042 | fixation block for inner glass | 2  |
| 154 | 30302800072 | Oven stiffener                 | 1  |
| 155 | 30302800073 | Oven stiffener                 | 1  |
| 156 | 30200900042 | fixation block for inner glass | 2  |
| 157 | 30500400254 | inner glass                    | 1  |
| 158 | 30400800002 | Tongs for rack                 | 1  |
| 159 | 30202100026 | cushion block                  | 4  |
| 160 | 30202100026 | cushion block                  | 6  |
| 161 | 30202100026 | cushion block                  | 4  |
| 162 | 30202100026 | cushion block                  | 6  |
| 163 | 30500400252 | inner glass                    | 1  |
| 164 | 30401700008 | telescopic runner              | 3  |
| 165 | 30101500239 | PCB                            | 1  |
| 166 | 30401700009 | telescopic runner              | 3  |
| 167 | 30101600442 | Display                        | 1  |
| 168 | 30400100070 | rack                           | 7  |
| 169 | 30400100074 | rack                           | 1  |
| 170 | 30304200058 | baking tray                    | 2  |
| 171 | 30401000013 | grill insert for baking tray   | 2  |
| 172 | 30102101413 | connecting wire                | 1  |
| 173 | 30207700007 | PCB fixed bracket              | 1  |
| 174 | 30212000008 | Regulating lever               | 2  |
| 175 | 30212400018 | roller                         | 2  |
| 176 | 30302900351 | Oven fixed plate               | 2  |
| 177 | 30302900360 | Oven fixed plate               | 2  |
| 178 | 30406200021 | Catch pin                      | 4  |
| 179 | 30700300009 | retainer                       | 40 |
| 180 | 30213800009 | Kick panel                     | 1  |
| 181 | 30302800082 | Oven stiffener                 | 2  |
| 182 | 30302900364 | Oven fixed plate               | 1  |
| 183 | 30401000024 | grill insert for baking tray   | 1  |
| 184 | 30205700024 | OIL COLLECTOR                  | 1  |

|     |             |                                |   |
|-----|-------------|--------------------------------|---|
| 185 | 30401000028 | grill insert for baking tray   | 1 |
| 186 | 30401000029 | grill insert for baking tray   | 1 |
| 187 | 30401000030 | grill insert for baking tray   | 4 |
| 188 | 30402600411 | WOK ADAPTOR                    | 1 |
| 189 | 30407200011 | door lock fixing base          | 1 |
| 190 | 30200900035 | fixation block for inner glass | 1 |
| 191 | 30200900034 | fixation block for inner glass | 1 |
| 192 | 30407200011 | door lock fixing base          | 1 |
| 193 | 30201000032 | middle glass support rubber    | 1 |
| 194 | 30402200007 | Intake elbow                   | 1 |
| 195 | 30402300010 | Regulator                      | 1 |
| 196 | 30304500427 | Door glass trim                | 1 |
| 197 | 30211000019 | PANEL WASHER                   | 5 |
| 198 | 30201900020 | Burner base waterproof ring    | 1 |
| 199 | 30401600001 | SNAP HOOK                      | 1 |
| 200 | 30402400004 | IGNITION PIN                   | 1 |

1044300108

