

USER INSTRUCTIONS

Please read this instruction manual carefully before using for the first time, and always keep these instructions.

DELUXE OVEN Model number: Arda - RVLEO (CKFL10-25)

- Voltage: AC 240V
- Frequency: 50Hz
- Power: oven 1500W(upper 700W / lower 800W)
hotplates 1700W(big 1000W / small 700W)
- **Ensure that the voltage indicated on the rating label corresponds with the mains voltage.**

WARNING: This appliance must be earthed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Never use the oven when it is damaged in any way.
- To protect against electrical shock, do not immerse cord, plugs or appliance in water or any other liquids.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The user must not leave when the oven is used. Do not allow children to use or close to the oven.
- Do not let power cord hang over the edge of the table or kitchen worktop, or close to hot surfaces.
- Ensure that the appliance is placed on firm level surface and close to the electrical outlet. kept away from any flammables and explosives during use.
- Always ensure that you have disconnected the plug from the outlet on the wall before proceeding to clean the oven or after using every time.
- Make sure that the electrical cable does not come into contact with the heated parts of the oven.
- The temperature of accessible surfaces may be high when the appliance is in operation. Do not touch hot surfaces. Please use handles or knobs.
- The use of attachments that are not recommended by the appliance manufacturer may cause injury.
- Do not use appliance for anything else except its original use. Do not use outdoors.
- Do not sprinkle water on the glass window while it is still very hot, this could cause the glass to crack.
- Never immerse the heating element in water. Even a drop of water may damage the parts and cause earth leakage.
- Do not leave the hotplate "on" without pots except for pre-heating maximum 3 minutes.
- No liability will be held for any damage caused by noncompliance with these instructions for any improper use or mishandling.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


- Children should be supervised to ensure that they do not play with the appliance.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

OPERATION INSTRUCTION

Before using:

- Ensure that the distance between the oven with the wall (back & side) or other oven is at last 15~25CM, and always place it in a dry environment.
- When using the oven for the first time, place the oven on max setting for 3 minutes. Do not put anything into the oven during this period. The oven may generate smoke at this time. It is normal, the smoke (smell) will clear off safely within a few minutes of use.


Control panel

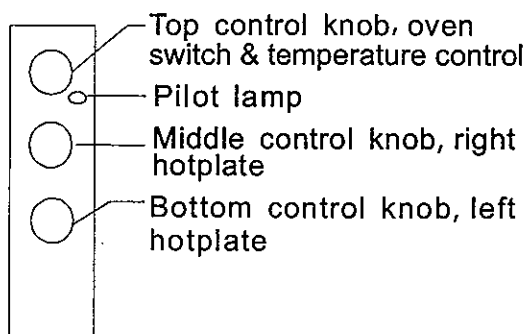

Parts description

- | | |
|---|---------------------|
| 1. Oven switch & temperature control knob | 7. Handgrip |
| 2. Pilot lamp | 8. Door handle |
| 3. Right hotplate control knob | 9. Tray |
| 4. Left hotplate control knob | 10. Heating element |
| 5. Oven glass door | 11. Grill |
| 6. Power Cord | 12. Left hotplate |
| | 13. Right hotplate |

CKFL10-25

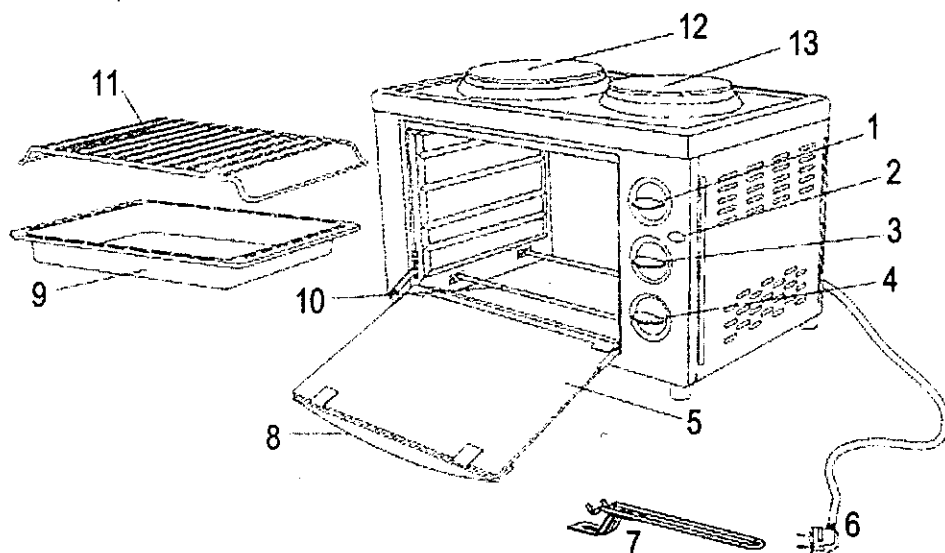

HOT PLATE OPERATION

Middle control knob: (right) 700W
Bottom control knob: (left) 1000W

- Turn the desired control knob to choose temperature setting, the knob is marked "MIN- MAX" means the temperature is from low to high.
- Place a flat-pot or pan onto the desired hotplate and start cooking.
- Do not leave the element "ON" without any pot or pan on the hotplate. This will damage the hotplate and cause excessive heat.

- When turning the control knob to low or high, this will adjust the hotplate temperature.
- It is impossible to operate both hotplates and oven at the same time. Both hotplate can be operate when oven switch & temperature control knob is on "OFF" position.

ATTENTION:

After use turn the temperature knob to "MIN" position and unplug the appliance.

OVEN OPERATION

- Turn on oven & temperature control knob (to position "  1500W), and choose temperature setting: the panel is marked 4 temperature from low to high, during this period, both heating elements will work, and the temperature in oven will be circle automatically.
- To grill, turn oven switch & temperature control knob to position "  700W ", the upper heating element will work alone, the temperature in oven will not be chose.

Note:

- Hotplates can not be operated when oven is in use!

COOKING TIPS

- Before putting food in the oven, oil the grill.
- Place the tray under the grill to avoid oil dropping inside the oven.
- If the food is oily such as roast chicken etc, use two pieces aluminum foils, put one piece on the tray and use another one to cover the food. This will avoid oil splashing during operation.

Note:

- The accessible surface may be hot during operation.


DIRECTION FOR USES: (only for your reference)

TEMPERATURE RANGE	RECIPES
130°C	Shortbread, Cookies, Tarts
170°C	Crisp dumplings, Cake
210°C	Bread, Fried dumplings, Pancake, Peanuts, Rice in Box
250°C	Chicken, Goose, Duck, Meat, Fish

MAINTENANCE AND CLEANING

- After using, set all switch counterclockwise to "0" or "MIN" position, remove the plug from the power socket. Make sure the appliance has cooled down to the room temperature, wipe the appliance surface and interior with a damp cloth or a sponge. **DO NOT IMMERSE THIS APPLIANCE.**
- Always clean the dyed and enamel parts of the oven after every use. Keep the oven door open to allow for drying.
- Ensure that all acidic materials (lemon and oils) are cleaned immediately after use.
- The tray and grill can be cleaned with detergent and water. Preferable use dry cleaning powders to clean inner & outer sides of the appliance.

Disposal of old electrical appliances

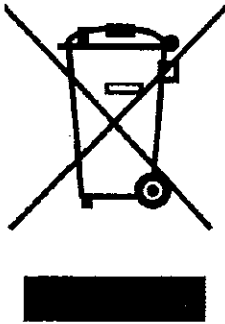

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.