 
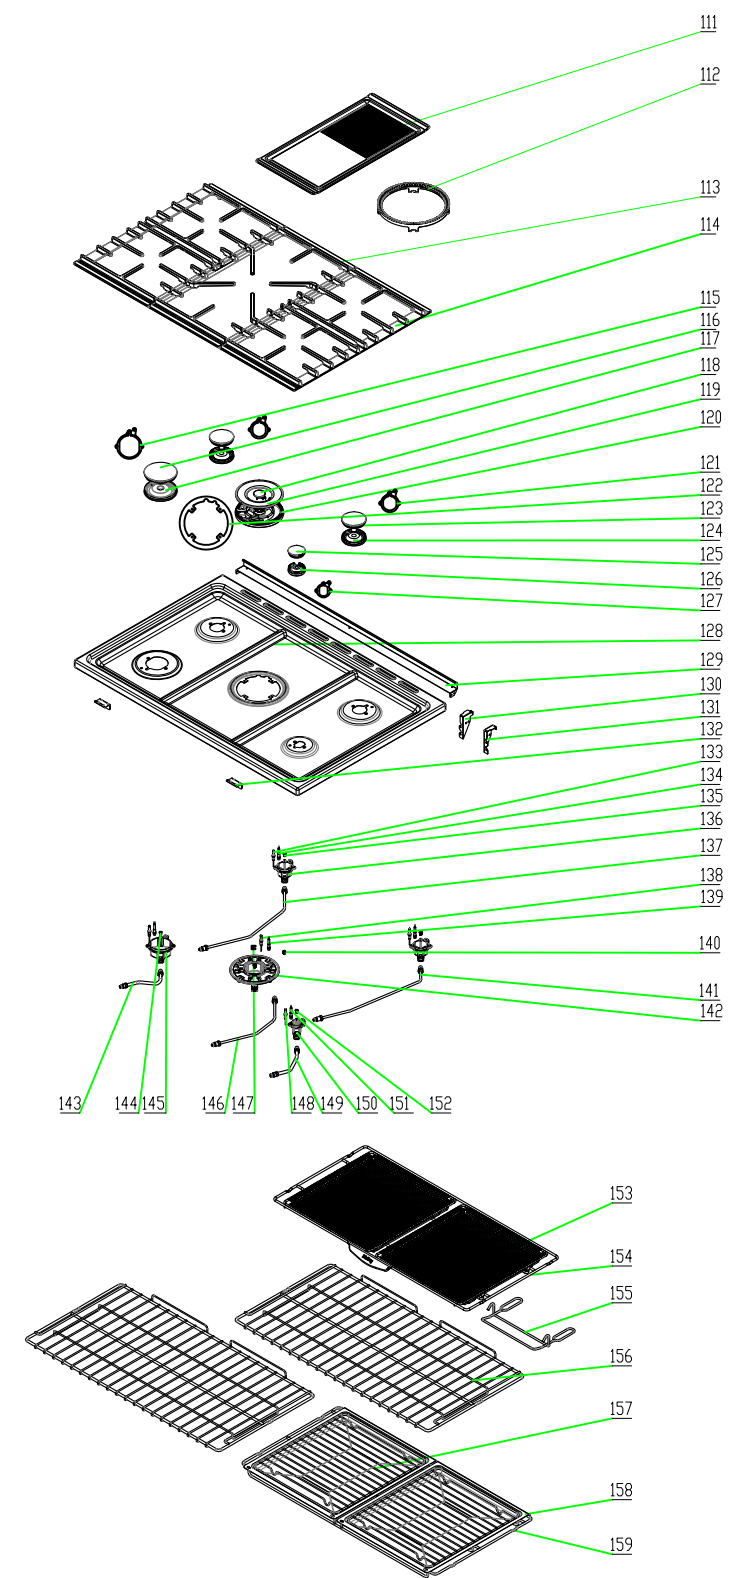 


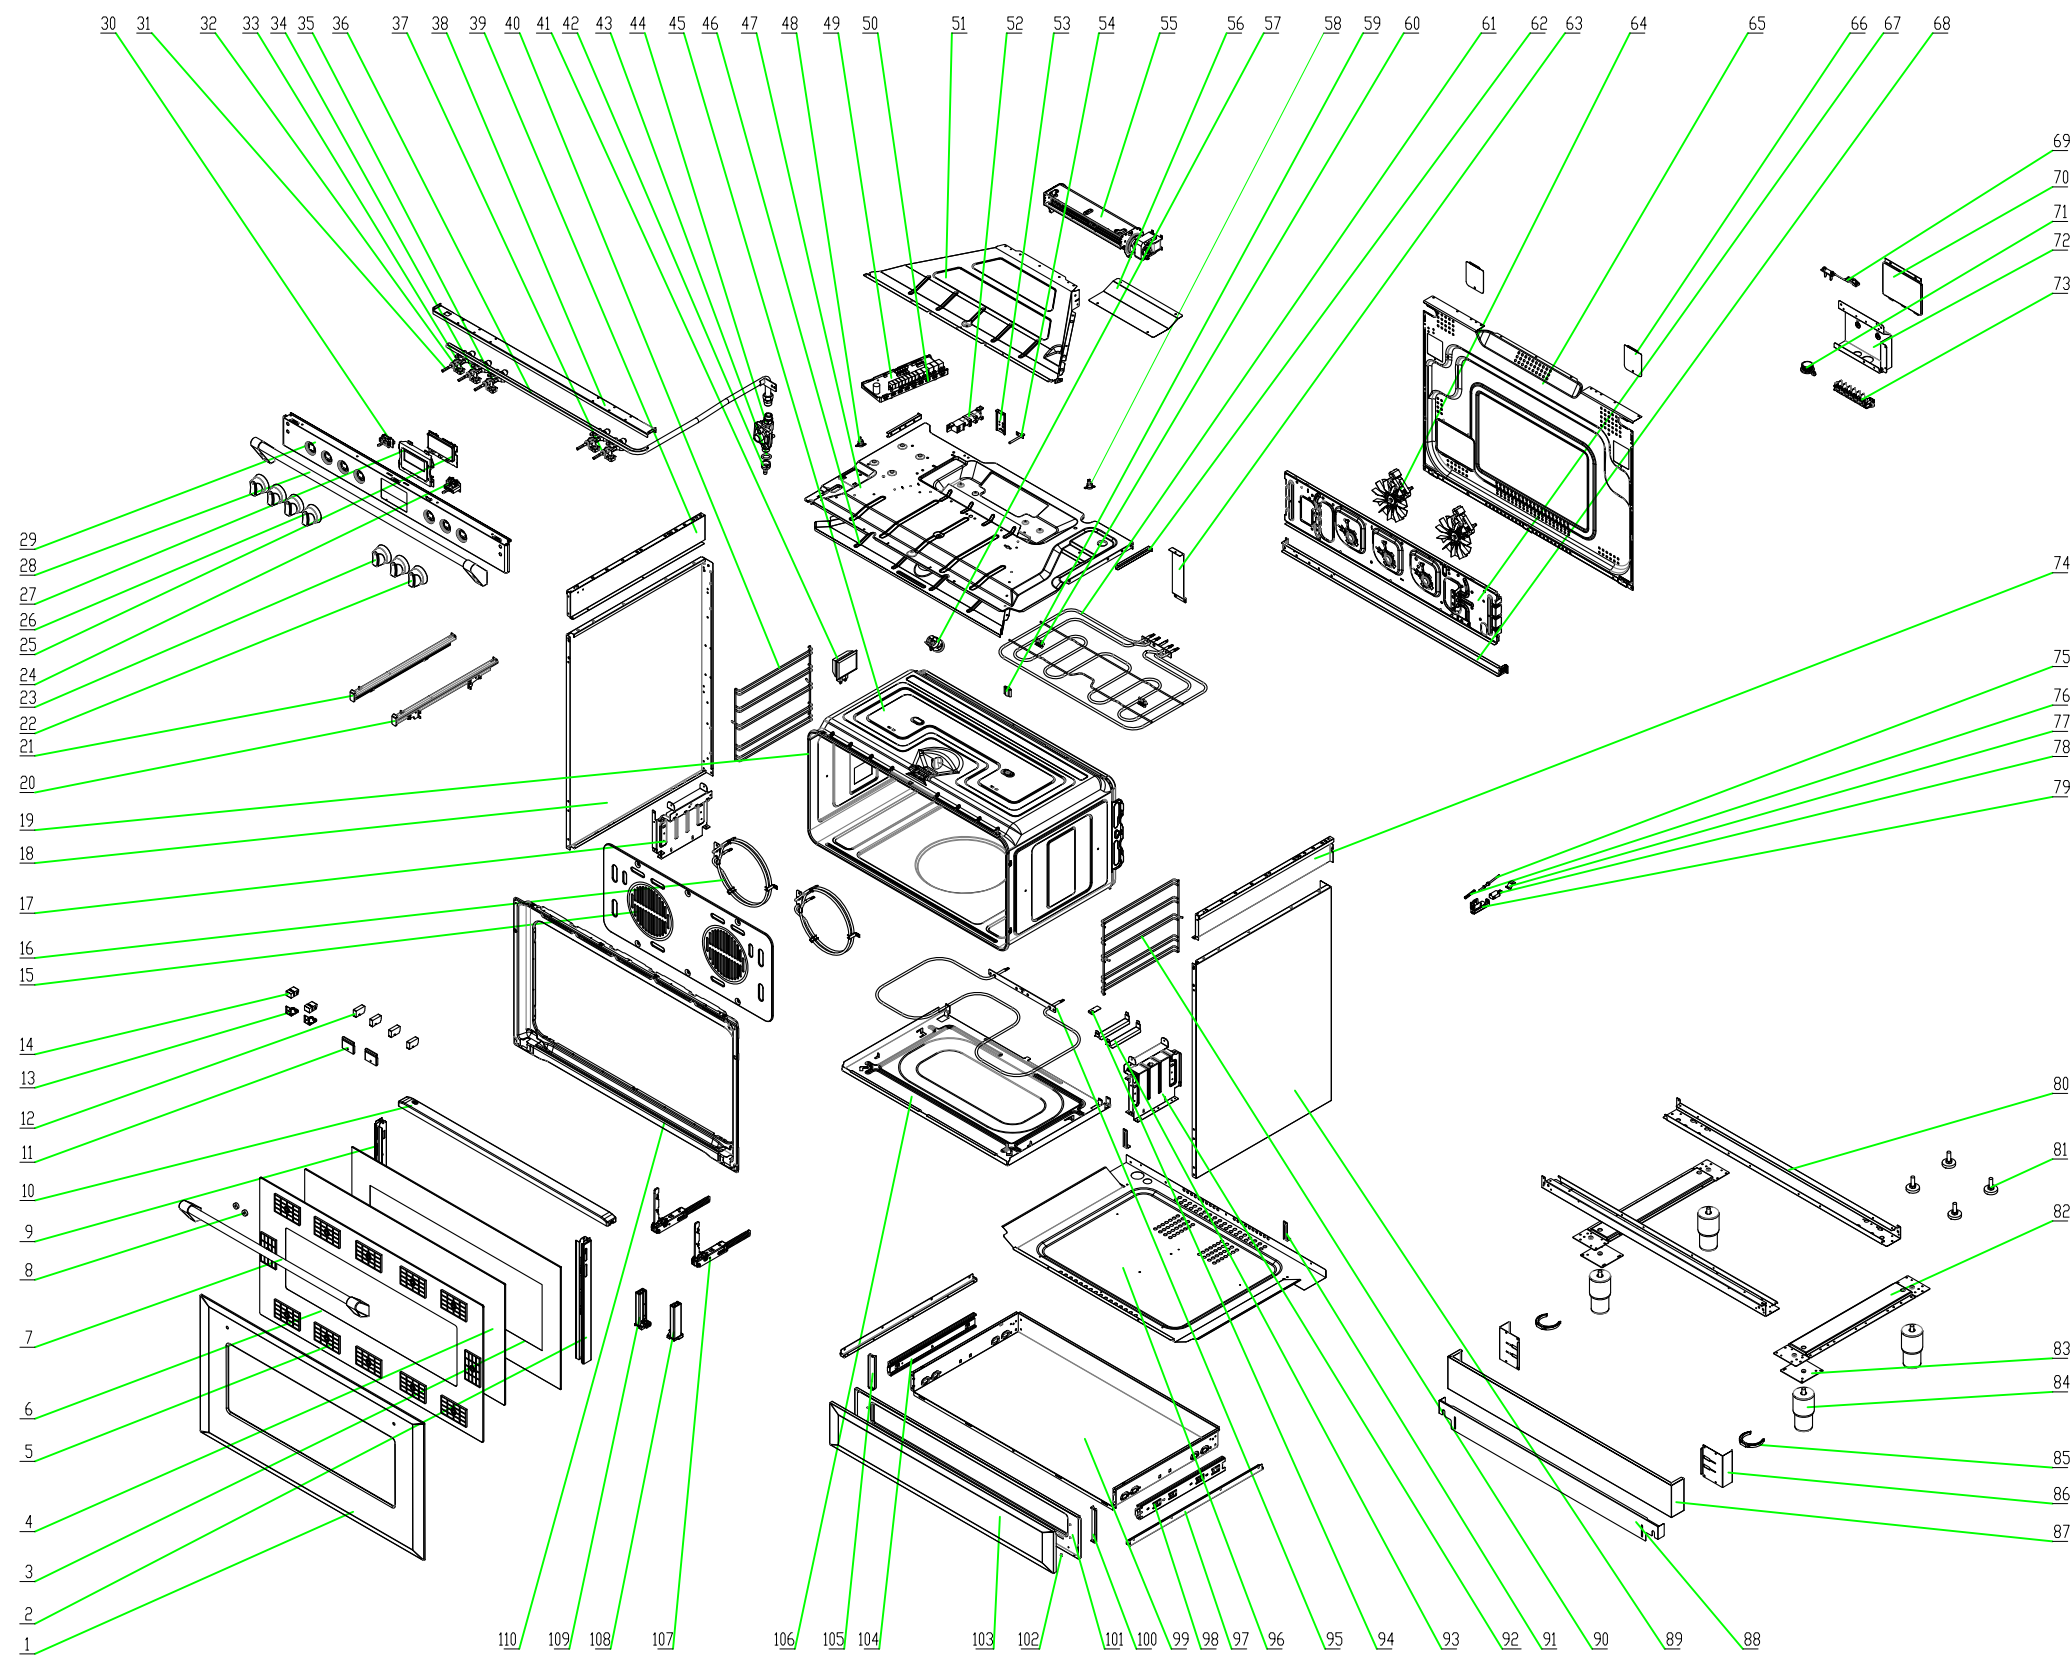

Number	Part number	Description	QTY
1	30304500676	door trim	1
2	30303400338	door bracket	1
3	30500400322	inner glass	1
4	30500300098	Middle glass	1
5	30202100026	cushion block	12
6	30500201612	door glass	1
7	30400700547	handle	1
8	30201400005	handle seal	2
9	30303400337	door bracket	1
10	30303500212	top bracket	1
11	30303600001	fixation board for handle	2
12	30201000020	middle glass support rubber	3
13	30303700011	Middle glass positioning block	2
14	30201000018	middle glass support rubber	2
15	30301100179	guarding board for rear element	1
16	30101200283	Element	2
17	30302600040	fixation board for hinge	1
18	30302300207	Left or right side panels of the shell	1
19	2030400028	Door seal	1
20	30403900025	Guide rail	2
21	30403900024	Guide rail	2
22	30402500588	Knob-Gas	5
23	30402500590	Knob-Temperature	1
24	30105700028	encoder switch	1
25	30101600553	Display	1
26	30402500909	Knob-Function	1
27	30200200037	display board holder	1
28	30400700373	handle	1
29	30305900984	control panel	1
30	30105700010	encoder switch	1
31	30403100226	Valve-Φ0.44	1
32	30101700054	MICRO SWITCH	1
33	30208200005	Microswitch pressure plate	5
34	30403100227	Valve-Φ0.35	2
35	30403100225	Valve-Φ0.65	1
36	30401900476	INTAKE-TUBE	1
37	30403100228	Valve-Φ0.27	1
38	30300100083	Holder	1
39	30302700285	connecting plate	1
40	30400200079	GUIDE BRACKET	1
41	30101100008	Square lamp component	1
42	30402300026	Intake connector	1
43	30200300012	Seal ring	2

44	30402300010	Regulator	1
45	2030300652	Cavity component	1
46	30312600040	cover board for exhausting flue	1
47	30301800043	bottom board for exhausting flue	1
48	30100800001	THERMOSTAT	1
49	30101500239	PCB	1
50	30207700007	PCB fixed bracket	1
51	30312600039	cover board for exhausting flue	1
52	30102300032	PULSE IGNITER	1
53	30302900239	Oven fixed plate	1
54	30100600027	TEMPERATURE MEASURING PROBE ASSEMBLY	1
55	30100400083	Cooling fan	1
56	30301300037	HEAT SHIELD	1
57	30101000023	ROUND LAMP COMPONENT	1
58	30100700013	over-heat protector	1
59	30401100026	exhausting flue	1
60	30408700001	FIXING CLIP	2
61	30101200282	Element	1
62	30301700008	Bottom support block for exhausting flue	2
63	30301700010	Bottom support block for exhausting flue	1
64	30100300060	circulation fan assembly	2
65	30302200249	rear panel	1
66	30302700287	connecting plate	2
67	30301500026	inner back bracket	1
68	30302800058	Oven stiffener	1
69	30205800015	cable ramp	1
70	30309600013	Cover plate	1
71	30313300007	Oven fixed board	1
72	30302900291	Oven fixed plate	1
73	30104800010	Terminal post	1
74	30302700286	connecting plate	1
75	30200600008	SLIDER	1
76	30401600042	spring	1
77	30302900430	Oven fixed plate	1
78	30101700040	MICRO SWITCH	1
79	30217500003	FIXING BASE	1
80	30302900273	Oven fixed plate	2
81	30201600011	Non-slip foot	4
82	30302700172	connecting plate	2
83	30302900404	Oven fixed plate	2
84	30202600008	ADJUST LEG	4
85	30204100033	LOCKING BLOCK PLASTIC	4
86	30302900378	Oven fixed plate	2
87	30213800031	Kick panel	1
88	30316200196	Oven baffle	1

89	30302300208	Left or right side panels of the shell	1
90	30400200080	GUIDE BRACKET	1
91	30313300056	Oven fixed board	2
92	30302600041	fixation board for hinge	1
93	30302900321	Oven fixed plate	2
94	30302900301	Oven fixed plate	1
95	30101200220	Element	1
96	30307800018	BAFFLE	1
97	30302900275	Oven fixed plate	2
98	30403900050	Guide rail	1
99	30307100240	Warming drawer bottom board	1
100	30307800021	BAFFLE	1
101	30307100161	Warming drawer Lining plate	1
102	30202100027	cushion block	2
103	30307100270	DRAWER PANEL	1
104	30403900049	Guide rail	1
105	30307800020	BAFFLE	1
106	30301200013	Bottom element fixing plate	1
107	30400600109	hinge assembly	2
108	30313300059	Oven fixed board	1
109	30313300058	Oven fixed board	1
110	2030900165	CAVITY PANEL COMPONENT	1
111	30401000024	grill insert for baking tray	1
112	30402600411	WOK ADAPTOR	1
113	30402600474	Trivet-MID	1
114	30402600473	Trivet-L&R	2
115	30201900022	Burner base waterproof ring	1
116	30403000064	RD Burner cap	1
117	30402900037	RD Buerner	1
118	30403000013	WOK Inner Burner cap	1
119	30403000031	WOK OuterBurner cap	1
120	30402900085	WOK Buerner	1
121	30201900021	Burner base waterproof ring	2
122	30201900024	Burner base waterproof ring	1
123	30403000050	SR Burner cap	2
124	30402900026	SR Buerner	2
125	30403000038	AU Burner cap	1
126	30402900018	AU Buerner	1
127	30201900020	Burner base waterproof ring	1
128	2040500402	Hob Panel Assembly	1
129	30302800105	Oven stiffener	1
130	30302900470	Oven fixed plate	1
131	30302900471	Oven fixed plate	1
132	30302800060	Oven stiffener	2
133	30402400004	IGNITION PIN	2

134	30401800006	Thermocouple	2
135	30402100047	Nozzle	2
135	30402100105	Nozzle	2
136	30402800022	SR Burner base	2
137	30402001514	aluminuim pipe	1
138	30402400012	IGNITION PIN	1
139	30401800012	Thermocouple	1
140	30402100129	Nozzle	1
140	30402100204	Nozzle	1
141	30402001516	aluminuim pipe	1
142	30402800009	WOK Burner base	1
143	30402001513	aluminuim pipe	1
144	30402100056	Nozzle	1
145	30402800032	RD Burner base	1
146	30402001539	aluminuim pipe	1
147	30401600001	SNAP HOOK	5
148	30402400005	IGNITION PIN	2
149	30402001517	aluminuim pipe	1
150	30402800016	AU Burner base	1
151	30401800005	Thermocouple	2
152	30402100031	Nozzle	2
152	30402100094	Nozzle	1
153	30400100054	rack	2
154	30400100053	rack	1
155	30400800001	Tongs for rack	1
156	30400100157	rack	2
157	30401000025	grill insert for baking tray	2
158	30304200063	baking tray	2
159	30400100052	rack	1
	2040201545	Complete door	1
	30102101227	Connection wires	1
	30102101299	Connection wires	1
	30102101335	Connection wires	1
	30105000060	Oven wiring	1
	30105000061	Oven wiring	1
	30105000066	Oven wiring	1
	30105000067	Oven wiring	1