 
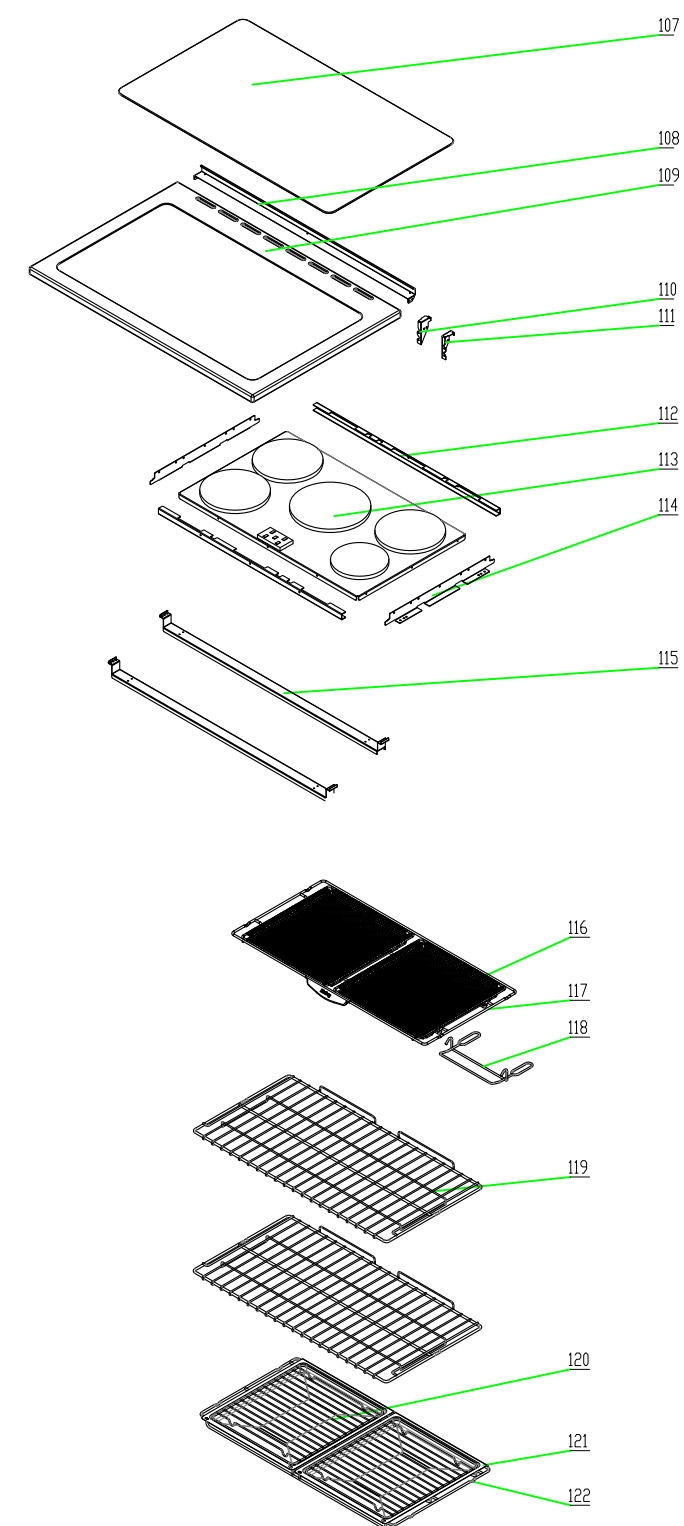 


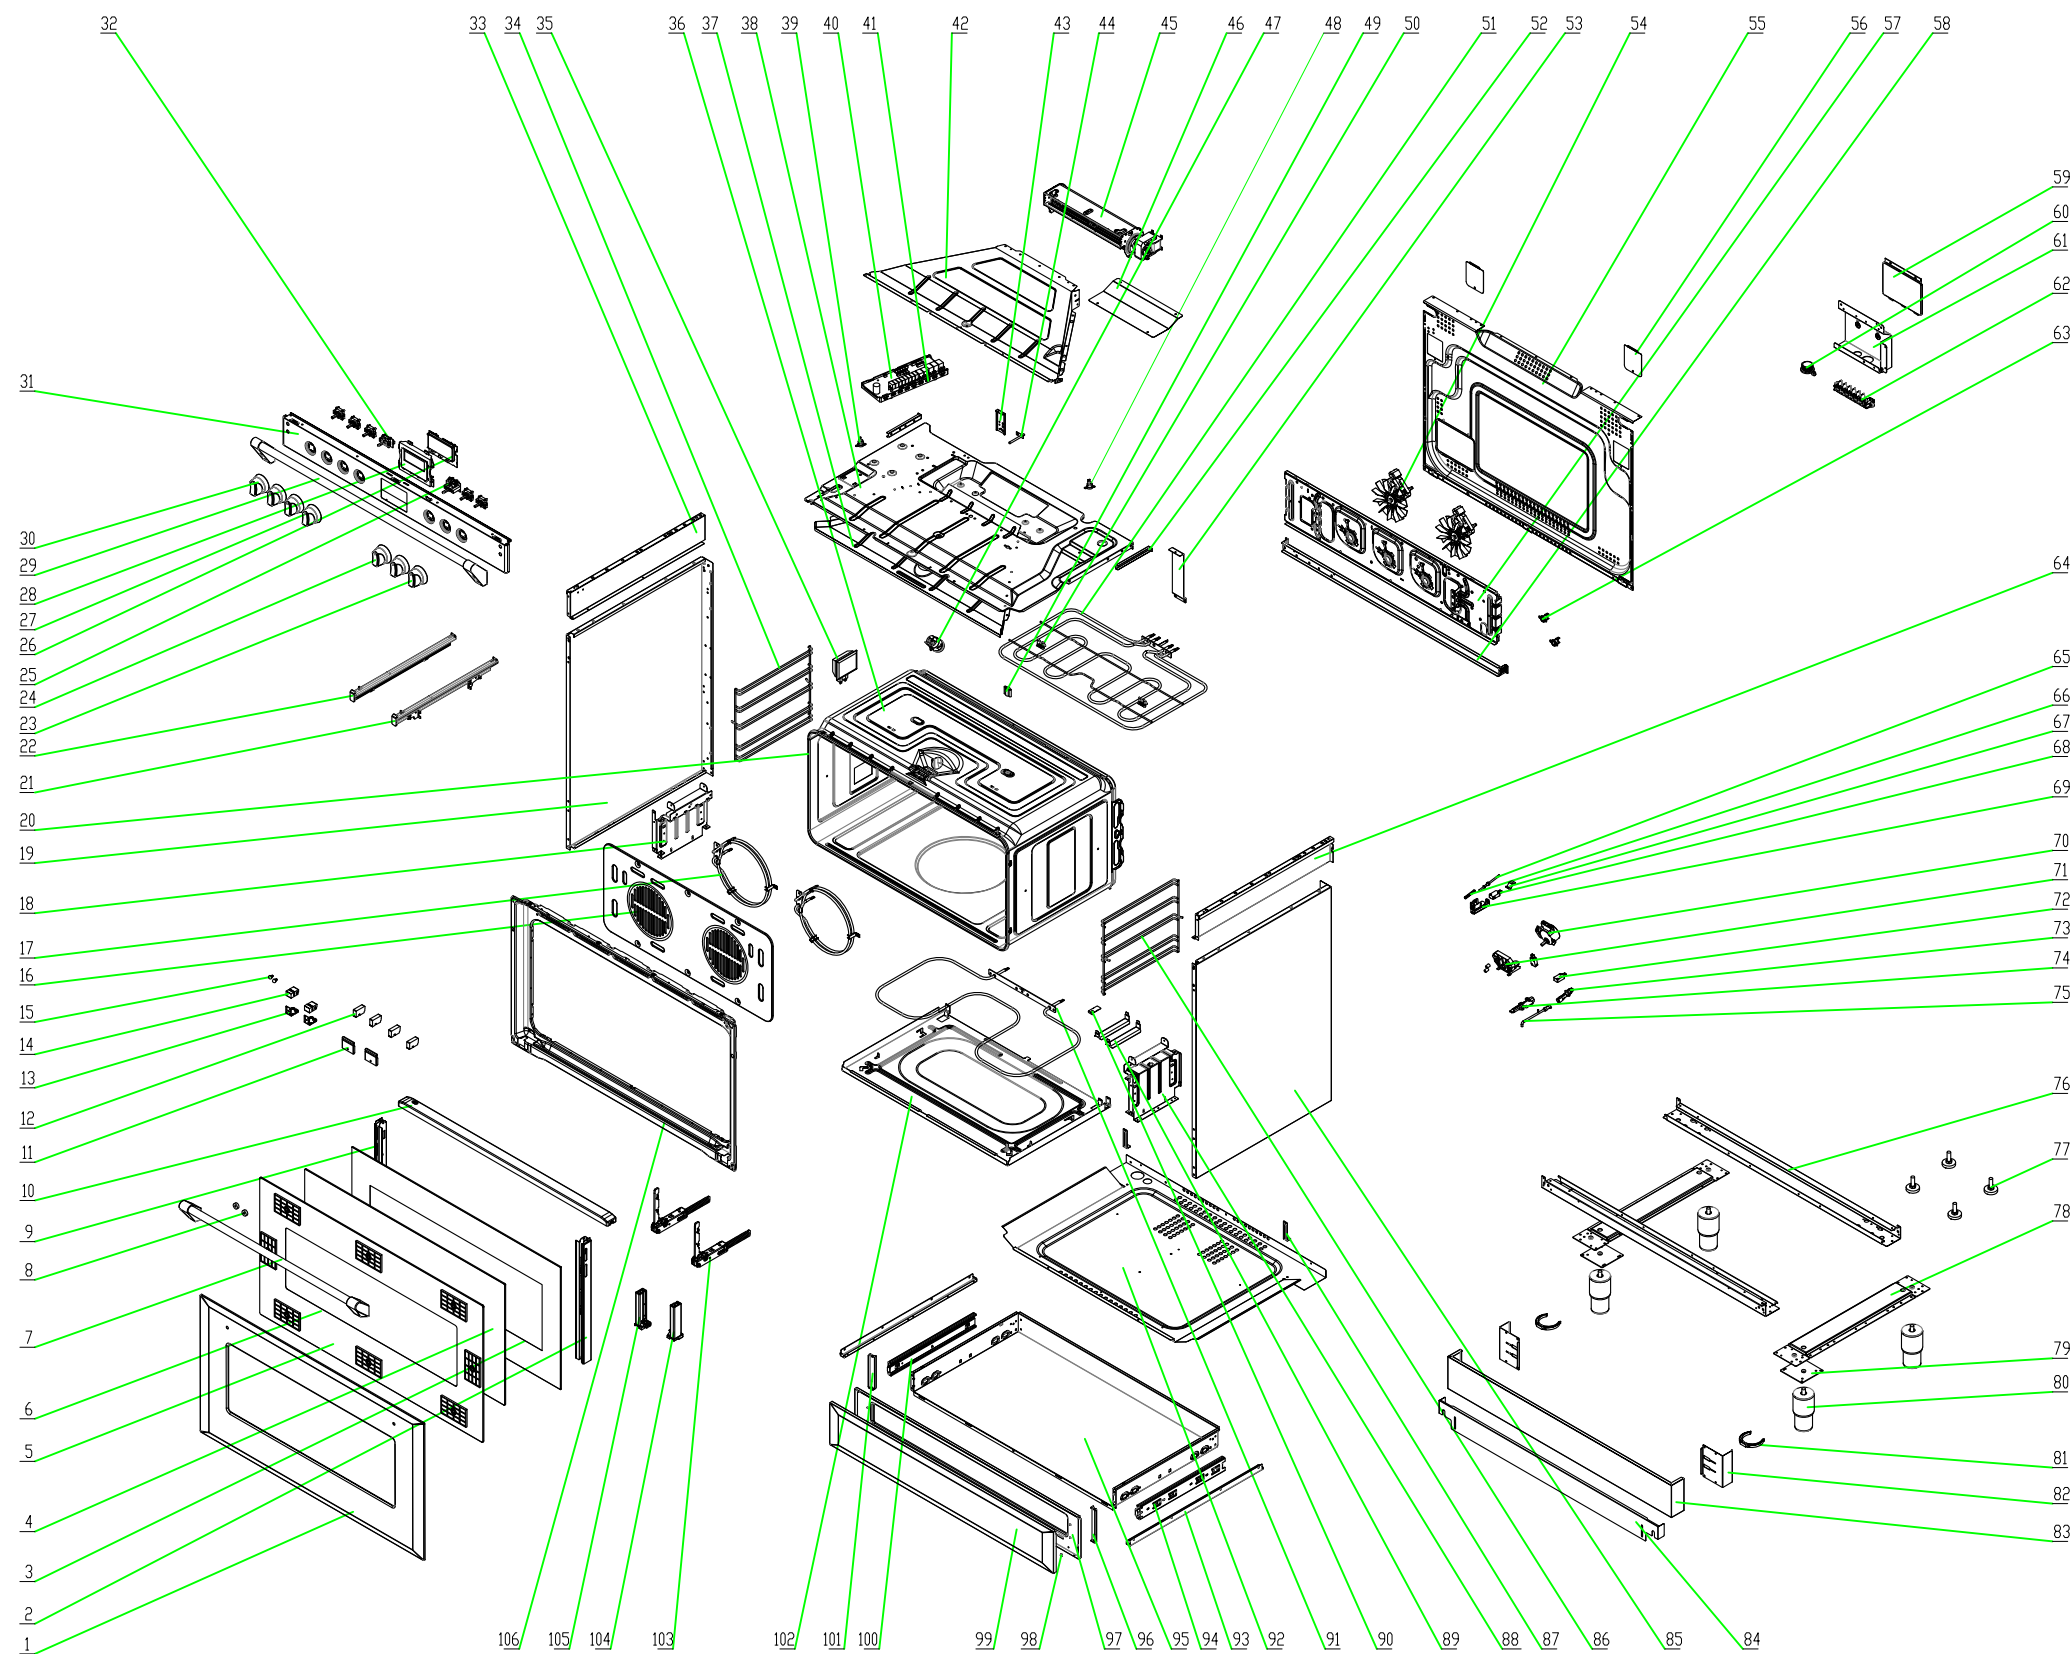

Number	Part number	Description	QTY	Unit Price /USD
1	30304500677	door trim	1	4.06
2	30303400338	door bracket	1	1.25
3	30500400323	inner glass	1	10.88
4	30500300097	Middle glass	1	9.41
5	30202100026	cushion block	12	0.18
6	30500201612	door glass	1	9.09
7	30400700547	handle	1	17.94
8	30201400005	handle seal	2	0.04
9	30303400337	door bracket	1	1.25
10	30303500212	top bracket	1	2.25
11	30303600001	fixation board for handle	2	0.1
12	30201000020	middle glass support rubber	3	0.37
13	30303700011	Middle glass positioning block	2	0.16
14	30201000018	middle glass support rubber	2	0.41
15	30204100025	LOCKING BLOCK PLASTIC	2	0.07
16	30301100179	guarding board for rear element	1	5.86
17	30101200283	Element	2	3.39
18	30302600040	fixation board for hinge	1	1.37
19	30302300207	Left or right side panels of the shell	1	4.71
20	30200500025	Door seal	1	4.58
21	30403900025	Guide rail	2	6.06
22	30403900024	Guide rail	2	6.06
23	30402500656	Knob-encoder switch	3	1.35
24	30402500590	Knob-Temperature	1	1.35
25	30105700028	encoder switch	1	2.26
26	30101600554	Display	1	16.18
27	30402500908	Knob-Function	1	1.35
28	30200200037	display board holder	1	2.04
29	30400700373	handle	1	19.93
30	30402500646	Knob-encoder switch	2	1.35
31	30305900985	control panel	1	2.13
32	30105700010	encoder switch	1	2.26
33	30302700285	connecting plate	1	0.92
34	30400200079	GUIDE BRACKET	1	2.02
35	30101100008	Square lamp component	1	1.99
36	2030300652	Cavity component	1	24.3
37	30312600040	cover board for exhausting flue	1	2.04
38	30301800043	bottom board for exhausting flue	1	4.36
39	30100800001	THERMOSTAT	1	0.29
40	30101500239	PCB	1	14.86
41	30207700007	PCB fixed bracket	1	0.91
42	30312600039	cover board for exhausting flue	1	2.37
43	30302900239	Oven fixed plate	1	0.25

44	30100600027	TEMPERATURE MEASURING PROBE ASSEMBLY	1	2.73
45	30100400081	Cooling fan	1	12.12
46	30301300037	HEAT SHIELD	1	0.47
47	30101000023	ROUND LAMP COMPONENT	1	1.34
48	30100700008	over-heat protector	2	0.32
49	30401100026	exhausting flue	1	0.44
50	30408700001	FIXING CLIP	2	0.2
51	30101200282	Element	1	8.3
52	30301700008	Bottom support block for exhausting flue	2	0.14
53	30301700010	Bottom support block for exhausting flue	1	0.35
54	30100300060	circulation fan assembly	2	4.5
55	30302200249	rear panel	1	4.18
56	30302700287	connecting plate	2	0.73
57	30301500026	inner back bracket	1	2.41
58	30302800058	Oven stiffener	1	0.64
59	30309600013	Cover plate	1	0.28
60	30313300007	Oven fixed board	1	1
61	30302900291	Oven fixed plate	1	2.31
62	30104800010	Terminal post	1	3.77
63	30100700001	over-heat protector	1	0.32
64	30302700286	connecting plate	1	0.92
65	30200600008	SLIDER	1	0.09
66	30401600042	spring	1	0.02
67	30302900430	Oven fixed plate	1	0.07
68	30101700040	MICRO SWITCH	1	0.49
69	30217500003	FIXING BASE	1	0.16
70	30101800012	Door lock motor	1	2.62
71	30204100008	LOCKING BLOCK PLASTIC	1	0.25
72	30101700015	MICRO SWITCH	2	0.47
73	30204100028	LOCKING BLOCK PLASTIC	1	0.2
74	30204100010	LOCKING BLOCK PLASTIC	1	0.09
75	30401400007	Door lock hook	1	0.93
76	30302900273	Oven fixed plate	2	3.54
77	30201600011	Non-slip foot	4	0.39
78	30302700172	connecting plate	2	1.52
79	30302900404	Oven fixed plate	2	0.32
80	30202600008	ADJUST LEG	4	2.29
81	30204100033	LOCKING BLOCK PLASTIC	4	0.06
82	30302900378	Oven fixed plate	2	0.44
83	30213800031	Kick panel	1	1.9
84	30316200196	Oven baffle	1	2.2
85	30302300208	Left or right side panels of the shell	1	4.71
86	30400200080	GUIDE BRACKET	1	2.02
87	30313300056	Oven fixed board	2	0.16
88	30302600041	fixation board for hinge	1	1.37

89	30302900321	Oven fixed plate	2	0.14
90	30302900301	Oven fixed plate	1	0.12
91	30101200220	Element	1	6.65
92	30307800018	BAFFLE	1	3.02
93	30302900275	Oven fixed plate	2	0.59
94	30403900050	Guide rail	1	5.22
95	30307100240	Warming drawer bottom board	1	7.21
96	30307800021	BAFFLE	1	0.12
97	30307100161	Warming drawer Lining plate	1	2.91
98	30202100027	cushion block	2	0.04
99	30307100271	DRAWER PANEL	1	1.7
100	30403900049	Guide rail	1	5.22
101	30307800020	BAFFLE	1	0.12
102	30301200013	Bottom element fixing plate	1	3.59
103	30400600109	hinge assembly	2	11.45
104	30313300059	Oven fixed board	1	0.77
105	30313300058	Oven fixed board	1	0.77
106	2030900204	CAVITY PANEL COMPONENT	1	7.67
107	30502201330	Ceramic glass	1	44.04
108	30302800105	Oven stiffener	1	1.05
109	2040500406	Hob Panel Assembly	1	16.07
110	30302900470	Oven fixed plate	1	0.74
111	30302900471	Oven fixed plate	1	0.74
112	30302700218	connecting plate	2	1.34
113	30102900097	Electromagnetic module	1	501.11
114	30302700291	connecting plate	2	0.77
115	30302700292	connecting plate	2	1.59
116	30400100054	rack	2	6.7
117	30400100053	rack	1	5.32
118	30400800001	Tongs for rack	1	0.87
119	30400100157	rack	2	13.11
120	30401000025	grill insert for baking tray	2	2.32
121	30304200063	baking tray	2	7.5
122	30400100052	rack	1	4.78
	2040201558	Complete door	1	64.3
	30102101299	Connection wires	1	2.82
	30102101547	Connection wires	1	15.33
	30105000020	Oven wiring	1	1.24
	30105000060	Oven wiring	1	0.66
	30105000061	Oven wiring	1	1.6
	30105000066	Oven wiring	1	0.43
	30105000067	Oven wiring	1	0.34