
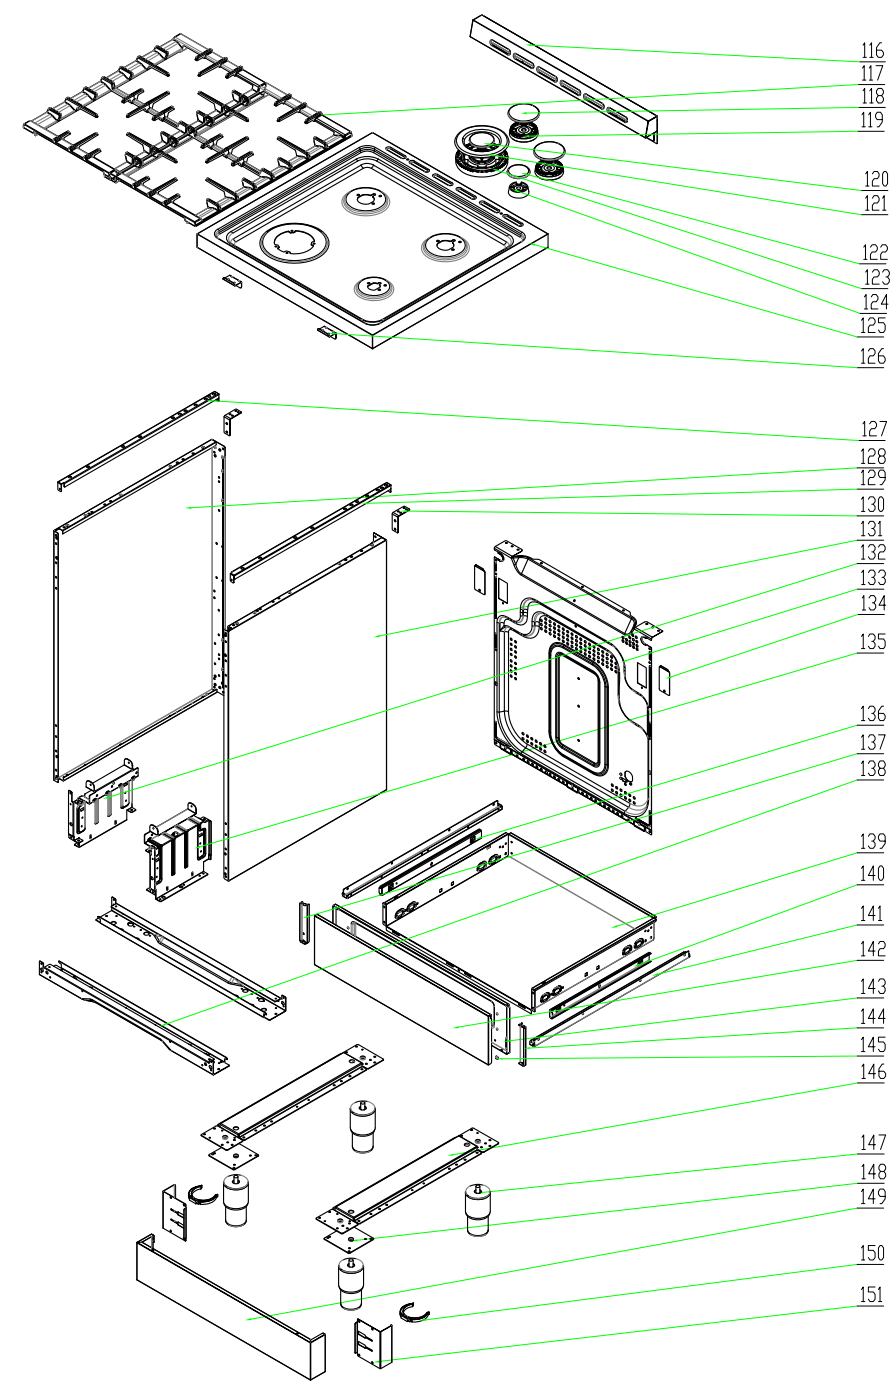


EFS6010APDFB_Parts

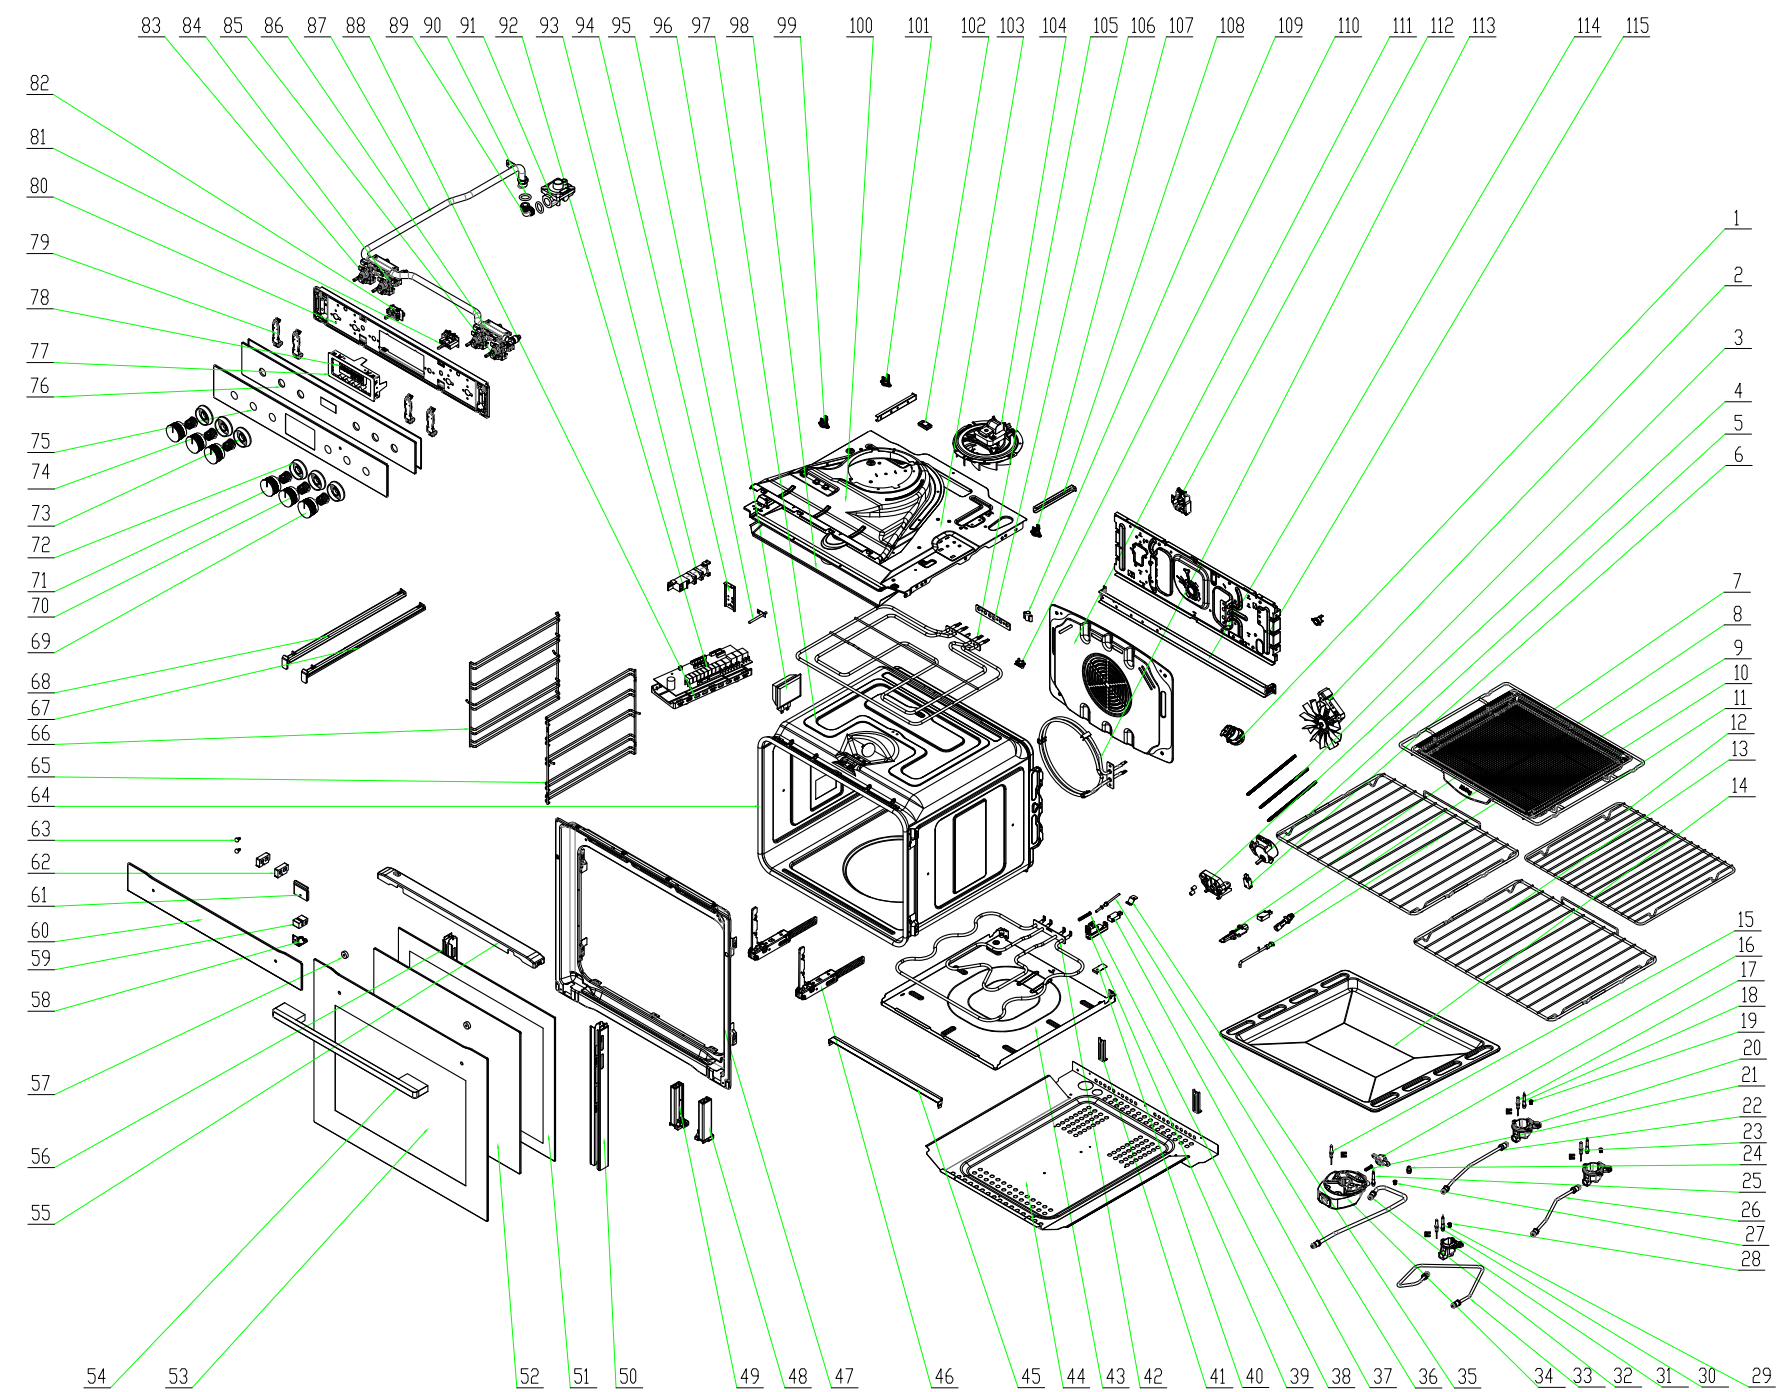

Location	Part Number	Description	QTY
1	30101000023	ROUND LAMP COMPONENTS	1
2	30100300057	CIRCULATION FAN	1
3	30401600005	SPRING	3
4	30204100008	LOCKING BLOCK PLASTIC	1
5	30101800012	MOTOR DOOR LOCK	1
6	30101700015	MICRO SWITCH	2
7	30204100028	LOCKING BLOCK PLASTIC	1
8	30204100010	LOCKING BLOCK PLASTIC	1
9	30401400007	HOOK ARM	1
10	30400100048	RACK	1
11	30400100049	RACK	1
12	30401000026	GRILL INSERT	1
13	30400100045	RACK	2
14	30304200069	BAKING TRAY	1
15	30401800044	THERMOCOUPLE	1
16	30402800042	NOZZLE BLOCK	1
17	30402400064	IGNITION PIN	1
18	30401800047	THERMOCOUPLE	2
19	30402100077	NOZZLE	2
19	30402100108	NOZZLE	2
20	30402800024	SR BURNER BASE	2
21	30401600003	SPRING	4
22	30402001661	ALUMINIUM TUBE	1
23	30402400066	IGNITION PIN	1
24	30313900001	IGNITION PIN FIXED NUT	1
25	30402400022	IGNITION PIN	1
26	30402001664	ALUMINIUM TUBE	1
27	30402100047	NOZZLE	1
27	30402100285	NOZZLE	1
28	30402100096	NOZZLE	1
28	30402100164	NOZZLE	1
29	30401800046	THERMOCOUPLE	1
30	30402400065	IGNITION PIN	1
31	30402800017	SR BURNER BASE	1
32	30402001662	ALUMINIUM TUBE	1
33	30402001660	ALUMINIUM TUBE	1
34	30402800038	WOK BURNER BASE	1
35	30302900430	OVEN FIXED BOARD	1
36	30200600008	SLIDER	1
37	30101700040	MICRO SWITCH	1
38	30401600042	SPRING	1
39	30217500003	FIXING BASE	1
40	30302900301	OVEN FIXED BOARD	1
41	30313300056	OVEN FIXED BLOCK	2
42	30101200216	ELEMENT	1
43	30301200012	FIXED BOARD FOR BOTTOM ELEMENT	1
44	30307800017	BAFFLE	1
45	30302900323	OVEN FIXED BOARD	1
46	30400600070	HINGE	2
47	2030900157	CAVITY PANEL COMPONENT	1
48	30313300058	OVEN FIXED BLOCK	1
49	30313300059	OVEN FIXED BLOCK	1
50	30303400338	DOOR FRAME ON THE RIGHT	1
51	30500400214	INNER GLASS	1

Location	Part Number	Description	QTY
52	30500300096	MIDDLE GLASS	1
53	30500201780	DOOR PANEL GLASS	1
54	30400700282	HANDLE	1
55	30303500215	DOOR STRIP	1
56	30303400337	DOOR FRAME ON THE LEFT	1
57	30201400005	HANDLE WASHER	2
58	30303700011	MIDDLE DOOR GLASS LIMITED BLOCK	1
59	30201000018	MIDDLE GLASS SUPPORT RUBBER	1
60	30304500586	DOOR TRIM	1
61	30303600001	HANDLE FIXED BOARD	1
62	30201000020	MIDDLE GLASS SUPPORT RUBBER	2
63	30204100025	LOCKING BLOCK PLASTIC	2
64	30200500052	DOOR SEAL	1
65	30400200066	GUIDE BRACKET	1
66	30400200070	GUIDE BRACKET	1
67	30403900025	GUIDE RAIL	1
68	30403900024	GUIDE RAIL	1
69	30402500495	KONB	4
70	30401600033	SPRING	6
71	30402500881	KONB	2
72	30402500885	KNOB BASE- TEMPERATURE	1
73	30402500884	KNOB BASE - FUNCTION	1
74	30402500882	KNOB BASE - GAS	4
75	30304400576	CONTROL PANEL DECORATIVE PLATE	1
76	30500101198	CONTROL PANEL GLASS	1
77	30200200019	DISPLAY FIXED FRAME	1
78	30101600284	DISPLAY	1
79	30217400001	CONTROL PANEL FIXED BUCKLE	4
80	30301400323	CONTROL PANEL FIXING PLATE	1
81	30105700005	ENCODER SWITCH	1
82	30105700010	ENCODER SWITCH	1
83	30403100257	VALVE -Φ0.65	1
84	30403100259	VALVE -Φ0.34	2
85	30403100260	VALVE -Φ0.29	1
86	30300100059	HOLDER	2
87	30401900331	INTAKE-TUBE	1
88	30207700007	PCB FIXED FRAME	1
89	30402200007	GAS INLET	1
90	30200300012	SEALING RING	2
91	30402300010	REGULATOR	1
92	30101500239	PCB	1
93	30102300008	IGNITOR	1
94	30302900239	OVEN FIXED BOARD	1
95	30100600027	TEMPERATURE MEASURING PROBE ASSEMBLY	1
96	30101100008	SQUARE LAMP	1
97	2030300646	CAVITY ASSEMBLY	1
98	30312600051	COVER BOARD FOR EXHAUSTING FLUE	1
99	30100800001	THERMOSTAT	1
100	30312600041	COVER BOARD FOR EXHAUSTING FLUE	1
101	30100700001	OVERHEAT PROTECTOR	2
102	30301900013	EXHAUST PIPE BAFFLE PLATE	1
103	30301800045	BOTTOM BOARD FOR EXHAUSTING FLUE	1
104	30100400087	COOLING FAN	1
105	30101200316	ELEMENT	1

Location	Part Number	Description	QTY
106	30317900033	ELEMENT FIXED BOARD	1
107	30100700008	OVERHEAT PROTECTOR	1
108	30301700008	BOTTOM SUPPORT BLOCK FOR EXHAUSTING FLUE	2
109	30401100020	EXHAUSTING FLUE	1
110	30408700002	FIXING CLIP	1
111	30301100190	BACK ELEMENT BAFFLE	1
112	30102600028	TERMINAL BLOCK	1
113	30101200223	ELEMENT	1
114	30302800057	OVEN STIFFENER	1
115	30301500025	CAVITY BACK BRACKET	1
116	2040600024	SPLASHBACK COVER ASSEMBLY	1
117	30402600519	TRIVET	2
118	30403000076	SR BURNER CAP	2
119	30402900047	SR BURNER	2
120	30403000098	INNER BURNER CAP	1
121	30403000097	OUTER BURNER CAP	1
122	30403000077	AU BURNER CAP	1
123	30402900060	WOK BURNER	1
124	30402900048	AU BURNER	1
125	30300400998	HOB	1
126	30302800060	OVEN STIFFENER	2
127	30302800086	OVEN STIFFENER	1
128	30302300147	LEFT AND RIGHT SIDE PANELS OF THE SHELL	1
129	30302800087	OVEN STIFFENER	1
130	30302900290	OVEN FIXED BOARD	2
131	30302300150	LEFT AND RIGHT SIDE PANELS OF THE SHELL	1
132	30302600040	HINGE FIXED BOARD	1
133	30302200150	BACK COVER FOR SHELL	1
134	30302700073	CONNECTING PLATE	2
135	30302600041	HINGE FIXED BOARD	1
136	30403900027	GUIDE RAIL	1
137	30307800020	BAFFLE	1
138	30302900274	OVEN FIXED BOARD	2
139	30307100156	WARMING DRAWER BOTTOM BOARD	1
140	30403900028	GUIDE RAIL	1
141	30302900275	OVEN FIXED BOARD	2
142	30307100255	DRAWER PANEL	1
143	30307100160	WARMING DRAWER LINING PLATE	1
144	30307800021	BAFFLE	1
145	30202100027	CUSHION BLOCK	2
146	30302700172	CONNECTING PLATE	2
147	30202600001	ADJUST FOOT	4
148	30302900404	OVEN FIXED BOARD	2
149	30213800036	KICK PANEL	1
150	30204100033	LOCKING BLOCK PLASTIC	2
151	30302900378	OVEN FIXED BOARD	2
	2030102692	COMPLETED DOOR	1
	2040100226	DRAWER COPMPONENT	1
	2040300804	CONTROL PANEL COMPONENT	1
	2042200019	EXHAUSTING PIPE COMPONENT	1
	2070600005	DOOR SWITCH COMPONENT	1
	30106900013	DOOR LOCK ASSEMBLY	1
	30102101299	CONNECTION LINE	1

Location	Part Number	Description	QTY
	30102101342	CONNECTION LINE	1
	30102101343	CONNECTION LINE	1
	30105000020	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000036	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000037	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000046	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000060	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1