


EFS6010AINDS_Parts

A

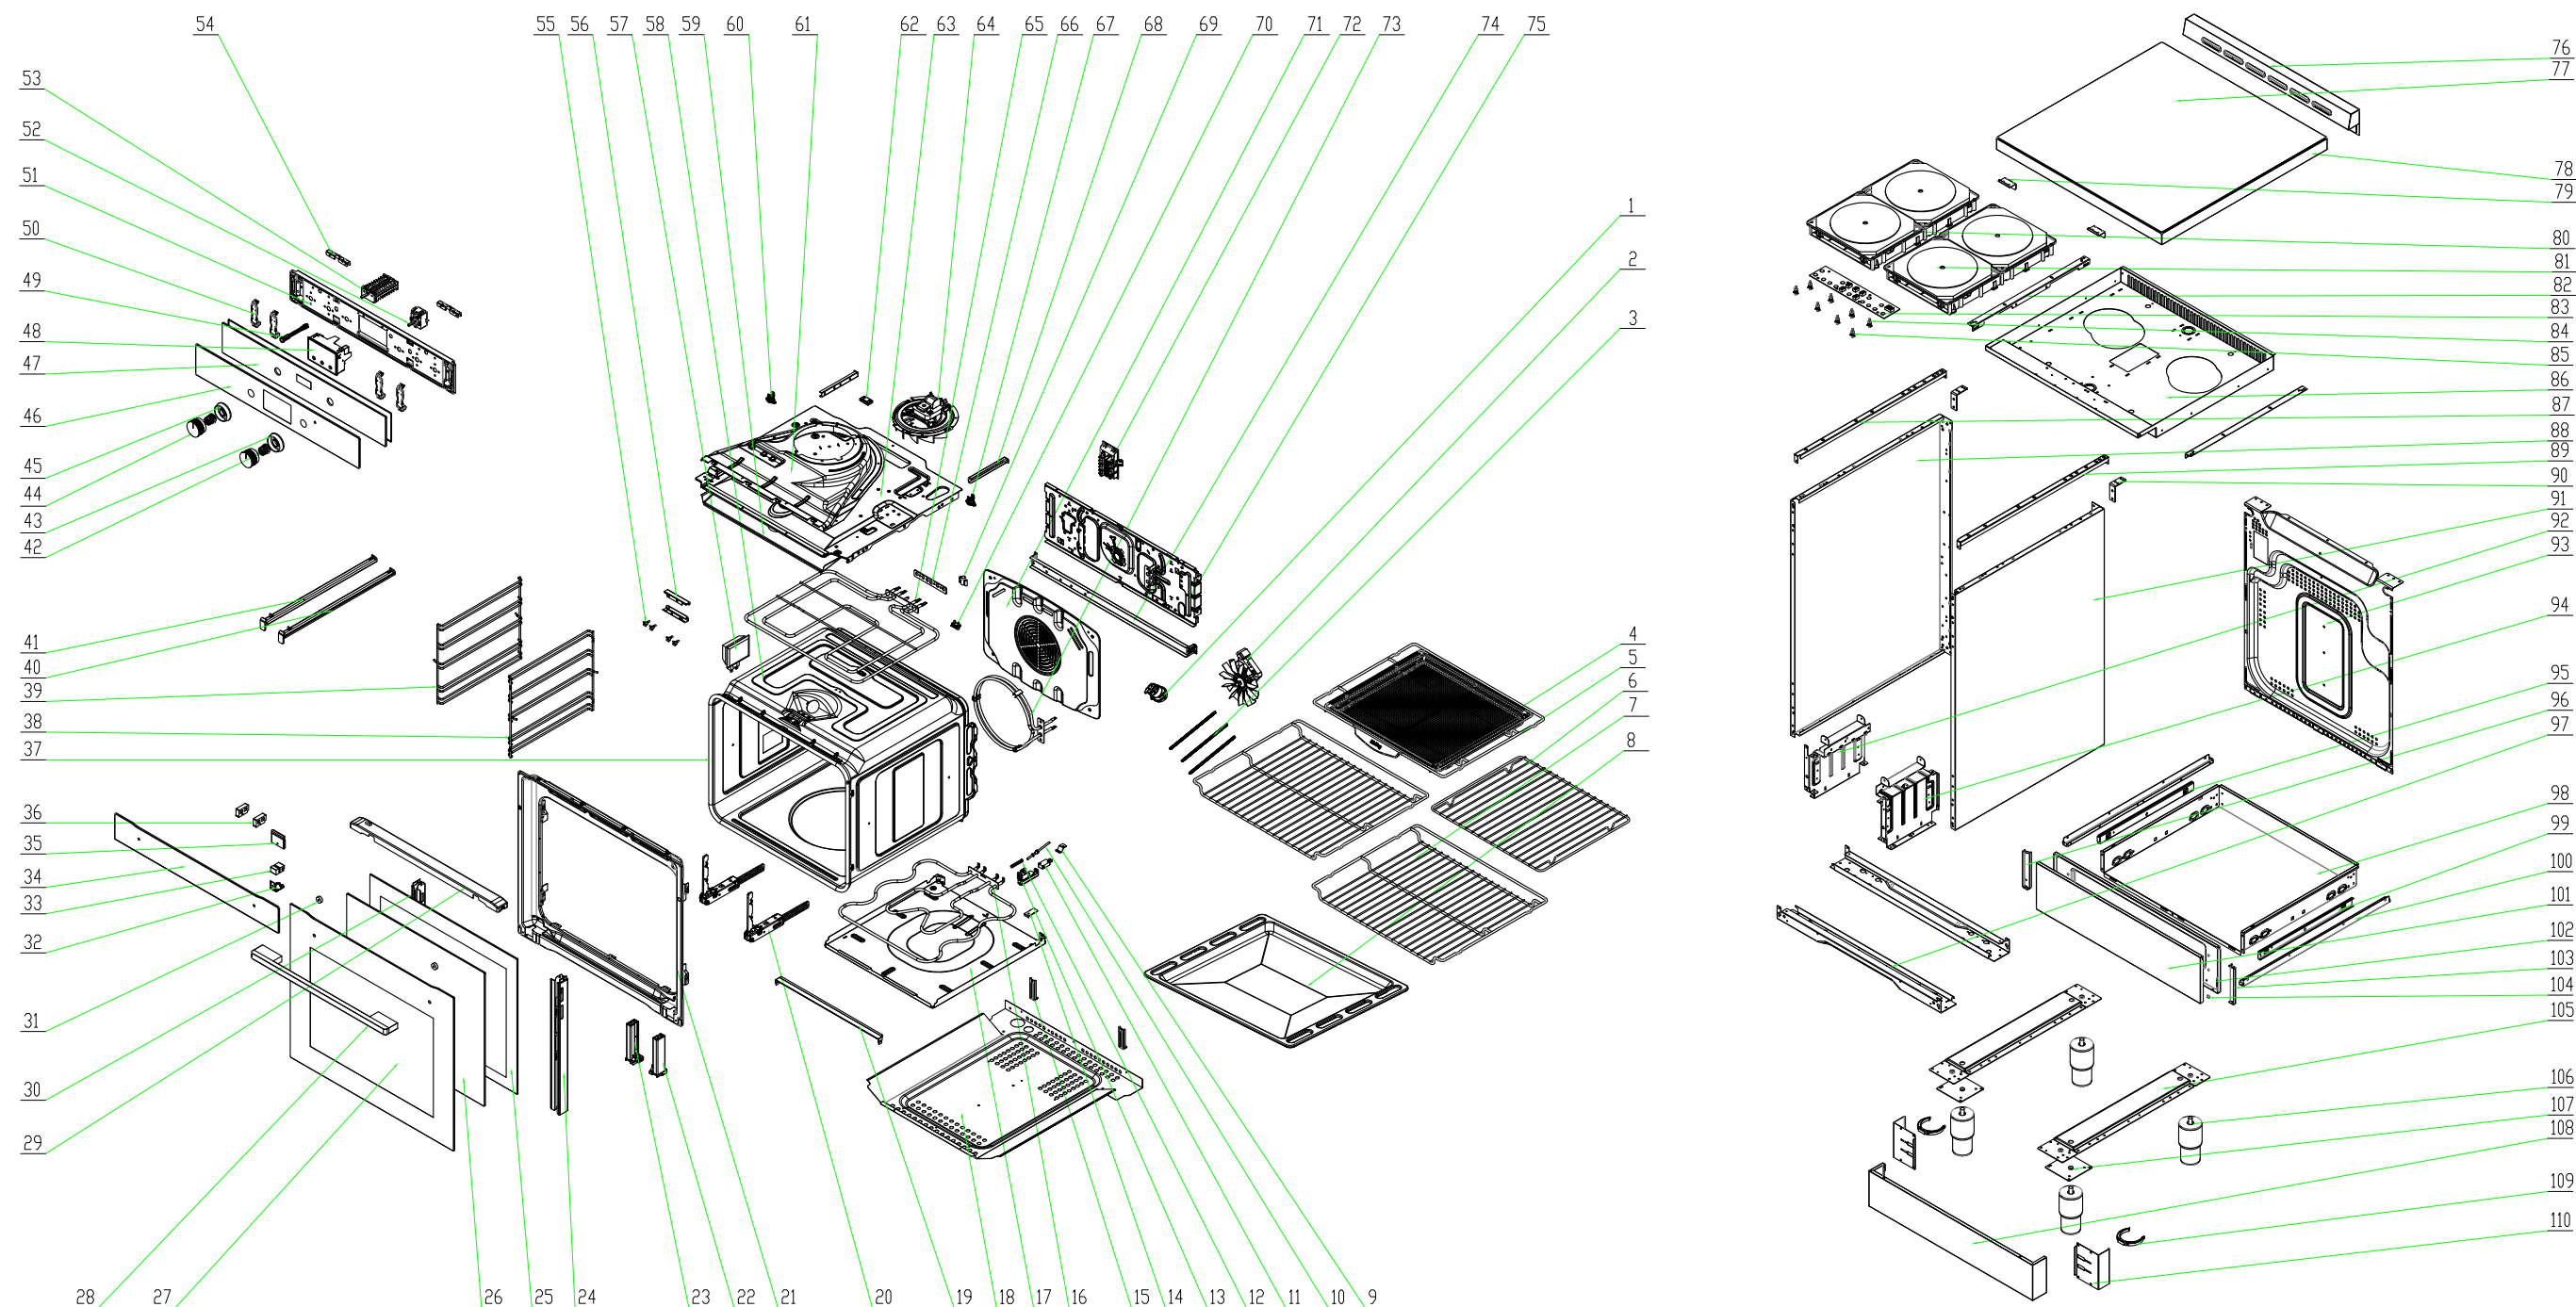

Location	Part Number	Description	QTY
1	3010100023	ROUND LAMP COMPONENTS	1
2	30100300057	CIRCULATION FAN	1
3	30401600005	SPRING	3
4	30400100048	RACK	1
5	30400100049	RACK	1
6	30401000026	GRILL INSERT	1
7	30400100047	RACK	2
8	30304200045	BAKING TRAY	1
9	30302900430	OVEN FIXED BOARD	1
10	30200600008	SLIDER	1
11	30101700040	MICRO SWITCH	1
12	30401600042	SPRING	1
13	30217500003	FIXING BASE	1
14	30302900301	OVEN FIXED BOARD	1
15	30313300056	OVEN FIXED BLOCK	2
16	30101200216	ELEMENT	1
17	30301200012	FIXED BOARD FOR BOTTOM ELEMENT	1
18	30307800017	BAFFLE	1
19	30302900323	OVEN FIXED BOARD	1
20	30400600070	HINGE	2
21	2030900076	CAVITY PANEL COMPONENT	1
22	30313300058	OVEN FIXED BLOCK	1
23	30313300059	OVEN FIXED BLOCK	1
24	30303400220	DOOR FRAME ON THE RIGHT	1
25	30500400213	INNER GLASS	1
26	30500300095	MIDDLE GLASS	1
27	30500201572	DOOR PANEL GLASS	1
28	30400700281	HANDLE	1
29	30303500145	DOOR STRIP	1
30	30303400219	DOOR FRAME ON THE LEFT	1
31	30201400005	HANDLE WASHER	2
32	30303700011	MIDDLE DOOR GLASS LIMITED BLOCK	1
33	30201000018	MIDDLE GLASS SUPPORT RUBBER	1
34	30304500318	DOOR TRIM	1
35	30303600001	HANDLE FIXED BOARD	1
36	30201000020	MIDDLE GLASS SUPPORT RUBBER	2
37	2030400025	DOOR SEAL	1
38	30400200066	GUIDE BRACKET	1
39	30400200070	GUIDE BRACKET	1
40	30403900025	GUIDE RAIL	1
41	30403900024	GUIDE RAIL	1
42	30401600050	SPRING	2
43	30402500887	KNOB BASE-TEMPERATURE	1
44	30402500717	KONB	2
45	30402500886	KNOB BASE-FUNCTION	1
46	30304400627	CONTROL PANEL DECORATIVE PLATE	1
47	30500101993	CONTROL PANEL GLASS	1
48	30100200162	TIMER	1
49	30102500083	INDICATOR LAMP	1
50	30217400001	CONTROL PANEL FIXED BUCKLE	4
51	30301400114	CONTROL PANEL FIXING PLATE	1
52	30100900003	TEMPERATURE CONTROL SWITCH	1
53	30100500076	FUNCTION SWITCH	1
54	30302700254	CONNECTING PLATE	2

Location	Part Number	Description	QTY
55	30304100001	THERMOSTAT FIXING CLIP	4
56	30302900411	OVEN FIXED BOARD	2
57	30101100008	SQUARE LAMP	1
58	2030300535	CAVITY ASSEMBLY	1
59	30312600051	COVER BOARD FOR EXHAUSTING FLUE	1
60	30100800001	THERMOSTAT	1
61	30312600041	COVER BOARD FOR EXHAUSTING FLUE	1
62	30301900013	EXHAUST PIPE BAFFLE PLATE	1
63	30301800045	BOTTOM BOARD FOR EXHAUSTING FLUE	1
64	30100400085	COOLING FAN	1
65	30101200316	ELEMENT	1
66	30317900033	ELEMENT FIXED BOARD	1
67	30100700008	OVERHEAT PROTECTOR	1
68	30301700008	BOTTOM SUPPORT BLOCK FOR EXHAUSTING FLUE	2
69	30401100020	EXHAUSTING FLUE	1
70	30408700002	FIXING CLIP	1
71	30301100116	BACK ELEMENT BAFFLE	1
72	30102600037	TERMINAL BLOCK	1
73	30101200223	ELEMENT	1
74	30302800057	OVEN STIFFENER	1
75	30301500025	CAVITY BACK BRACKET	1
76	2040600024	SPLASHBACK COVER ASSEMBLY	1
77	30502201588	HOB PANEL GLASS	1
78	30300401026	HOB	1
79	30302800060	OVEN STIFFENER	2
80	30102900094	ELECTROMAGNETIC MODULE	1
81	30102900095	ELECTROMAGNETIC MODULE	1
82	30302700187	CONNECTING PLATE	2
83	30101600555	DISPLAY	1
84	30200200030	DISPLAY FIXED FRAME	8
85	30401600039	SPRING	8
86	2020300012	COOKTOP BASE COMPONENT	1
87	30302800086	OVEN STIFFENER	1
88	30302300127	LEFT AND RIGHT SIDE PANELS OF THE SHELL	1
89	30302800087	OVEN STIFFENER	1
90	30302900290	OVEN FIXED BOARD	2
91	30302300128	LEFT AND RIGHT SIDE PANELS OF THE SHELL	1
92	30302600040	HINGE FIXED BOARD	1
93	30302200151	BACK COVER FOR SHELL	1
94	30302600041	HINGE FIXED BOARD	1
95	30403900027	GUIDE RAIL	1
96	30307800020	BAFFLE	1
97	30302900274	OVEN FIXED BOARD	2
98	30307100156	WARMING DRAWER BOTTOM BOARD	1
99	30403900028	GUIDE RAIL	1
100	30302900275	OVEN FIXED BOARD	2
101	30307100167	DRAWER PANEL	1
102	30307100160	WARMING DRAWER LINING PLATE	1
103	30307800021	BAFFLE	1
104	30202100027	CUSHION BLOCK	2
105	30302700172	CONNECTING PLATE	2
106	30202600001	ADJUST FOOT	4
107	30302900404	OVEN FIXED BOARD	2

Location	Part Number	Description	QTY
108	30213800021	KICK PANEL	1
109	30204100033	LOCKING BLOCK PLASTIC	2
110	30302900378	OVEN FIXED BOARD	2
	2040201531	COMPLETED DOOR	1
	2040300842	CONTROL PANEL COMPONENT	1
	30102101299	CONNECTION LINE	1
	30102101771	CONNECTION LINE	1
	30105000060	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1