


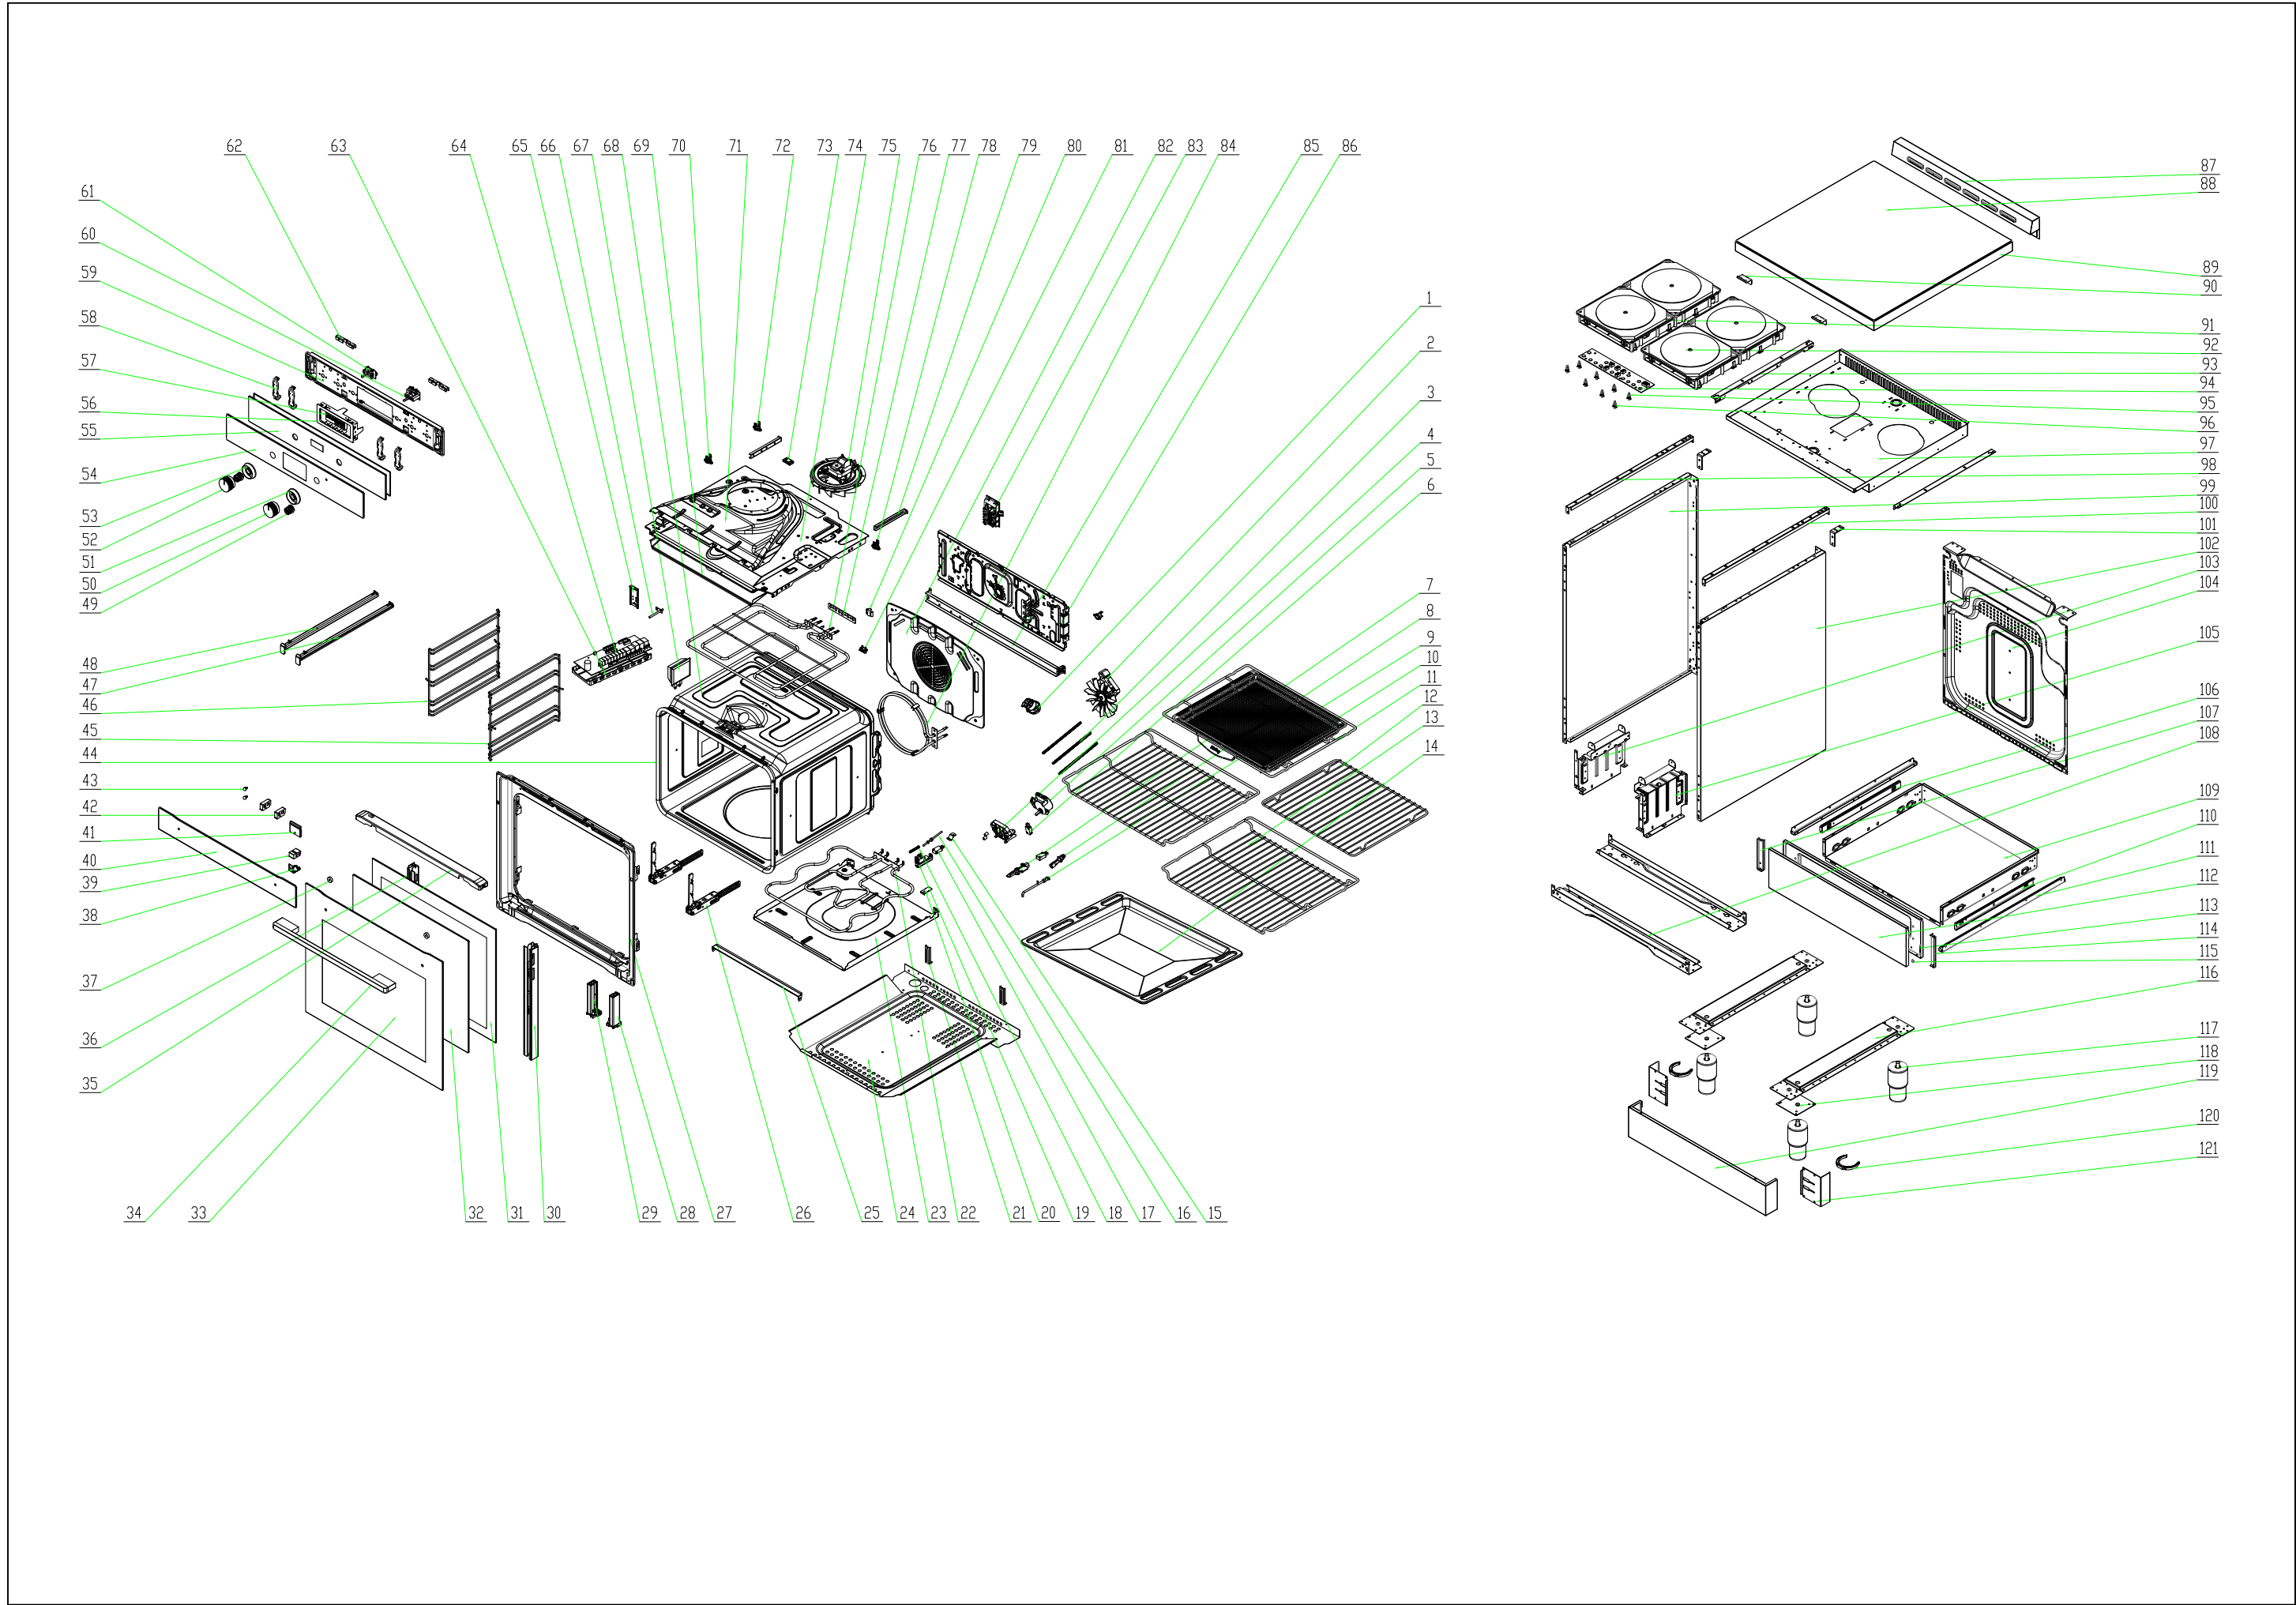

Location	Part Number	Description	QTY
1	30101000023	ROUND LAMP COMPONENTS	1
2	30100300057	CIRCULATION FAN	1
3	30401600005	SPRING	3
4	30204100008	LOCKING BLOCK PLASTIC	1
5	30101800012	MOTOR DOOR LOCK	1
6	30101700015	MICRO SWITCH	2
7	30204100028	LOCKING BLOCK PLASTIC	1
8	30204100010	LOCKING BLOCK PLASTIC	1
9	30401400007	HOOK ARM	1
10	30400100048	RACK	1
11	30400100049	RACK	1
12	30401000026	GRILL INSERT	1
13	30400100047	RACK	2
14	30304200069	BAKING TRAY	1
15	30302900430	OVEN FIXED BOARD	1
16	30200600008	SLIDER	1
17	30101700040	MICRO SWITCH	1
18	30401600042	SPRING	1
19	30217500003	FIXING BASE	1
20	30302900301	OVEN FIXED BOARD	1
21	30313300056	OVEN FIXED BLOCK	2
22	30101200216	ELEMENT	1
23	30301200012	FIXED BOARD FOR BOTTOM ELEMENT	1
24	30307800017	BAFFLE	1
25	30302900323	OVEN FIXED BOARD	1
26	30400600070	HINGE	2
27	2030900157	CAVITY PANEL COMPONENT	1
28	30313300058	OVEN FIXED BLOCK	1
29	30313300059	OVEN FIXED BLOCK	1
30	30303400338	DOOR FRAME ON THE RIGHT	1
31	30500400214	INNER GLASS	1
32	30500300096	MIDDLE GLASS	1
33	30500201572	DOOR PANEL GLASS	1
34	30400700282	HANDLE	1
35	30303500215	DOOR STRIP	1
36	30303400337	DOOR FRAME ON THE LEFT	1
37	30201400005	HANDLE WASHER	2
38	30303700011	MIDDLE DOOR GLASS LIMITED BLOCK	1
39	30201000018	MIDDLE GLASS SUPPORT RUBBER	1
40	30304500586	DOOR TRIM	1
41	30303600001	HANDLE FIXED BOARD	1
42	30201000020	MIDDLE GLASS SUPPORT RUBBER	2
43	30204100025	LOCKING BLOCK PLASTIC	2
44	30200500052	DOOR SEAL	1
45	30400200066	GUIDE BRACKET	1
46	30400200070	GUIDE BRACKET	1
47	30403900025	GUIDE RAIL	1
48	30403900024	GUIDE RAIL	1
49	30401600050	SPRING	2
50	30402500954	KONB	1
51	30402500885	KNOB BASE-TEMPERATURE	1
52	30402500718	KONB	1
53	30402500884	KNOB BASE-FUNCTION	1
54	30304400605	CONTROL PANEL DECORATIVE PLATE	1

Location	Part Number	Description	QTY
55	30500101995	CONTROL PANEL GLASS	1
56	30200200019	DISPLAY FIXED FRAME	1
57	30101600284	DISPLAY	1
58	30217400001	CONTROL PANEL FIXED BUCKLE	4
59	30301400296	CONTROL PANEL FIXING PLATE	1
60	30105700049	ENCODER SWITCH	1
61	30105700010	ENCODER SWITCH	1
62	30302700254	CONNECTING PLATE	2
63	30207700007	PCB FIXED FRAME	1
64	30101500239	PCB	1
65	30302900239	OVEN FIXED BOARD	1
66	30100600027	TEMPERATURE MEASURING PROBE ASSEMBLY	1
67	30101100008	SQUARE LAMP	1
68	2030300646	CAVITY ASSEMBLY	1
69	30312600051	COVER BOARD FOR EXHAUSTING FLUE	1
70	30100800001	THERMOSTAT	1
71	30312600041	COVER BOARD FOR EXHAUSTING FLUE	1
72	30100700001	OVERHEAT PROTECTOR	2
73	30301900013	EXHAUST PIPE BAFFLE PLATE	1
74	30301800045	BOTTOM BOARD FOR EXHAUSTING FLUE	1
75	30100400087	COOLING FAN	1
76	30101200316	ELEMENT	1
77	30317900033	ELEMENT FIXED BOARD	1
78	30100700008	OVERHEAT PROTECTOR	1
79	30301700008	BOTTOM SUPPORT BLOCK FOR EXHAUSTING FLUE	2
80	30401100020	EXHAUSTING FLUE	1
81	30408700002	FIXING CLIP	1
82	30301100190	BACK ELEMENT BAFFLE	1
83	30102600037	TERMINAL BLOCK	1
84	30101200223	ELEMENT	1
85	30302800057	OVEN STIFFENER	1
86	30301500025	CAVITY BACK BRACKET	1
87	2040600080	SPLASHBACK COVER ASSEMBLY	1
88	30502201588	HOB PANEL GLASS	1
89	30300401025	HOB	1
90	30302800060	OVEN STIFFENER	2
91	30102900094	ELECTROMAGNETIC MODULE	1
92	30102900095	ELECTROMAGNETIC MODULE	1
93	30302700187	CONNECTING PLATE	2
94	30101600555	DISPLAY	1
95	30200200030	DISPLAY FIXED FRAME	8
96	30401600039	SPRING	8
97	2020300012	COOKTOP BASE COMPONENT	1
98	30302800086	OVEN STIFFENER	1
99	30302300147	LEFT AND RIGHT SIDE PANELS OF THE SHELL	1
100	30302800087	OVEN STIFFENER	1
101	30302900290	OVEN FIXED BOARD	2
102	30302300150	LEFT AND RIGHT SIDE PANELS OF THE SHELL	1
103	30302600040	HINGE FIXED BOARD	1
104	30302200151	BACK COVER FOR SHELL	1
105	30302600041	HINGE FIXED BOARD	1
106	30403900027	GUIDE RAIL	1
107	30307800020	BAFFLE	1

Location	Part Number	Description	QTY
108	30302900274	OVEN FIXED BOARD	2
109	30307100279	WARMING DRAWER BOTTOM BOARD	1
110	30403900028	GUIDE RAIL	1
111	30302900275	OVEN FIXED BOARD	2
112	30307100255	DRAWER PANEL	1
113	30307100160	WARMING DRAWER LINING PLATE	1
114	30307800021	BAFFLE	1
115	30202100027	CUSHION BLOCK	2
116	30302700172	CONNECTING PLATE	2
117	30202600001	ADJUST FOOT	4
118	30302900404	OVEN FIXED BOARD	2
119	30213800036	KICK PANEL	1
120	30204100033	LOCKING BLOCK PLASTIC	2
121	30302900378	OVEN FIXED BOARD	2
	2030102692	COMPLETED DOOR	1
	2040300805	CONTROL PANEL COMPONENT	1
	30102101299	CONNECTION LINE	1
	30102101767	CONNECTION LINE	1
	30105000020	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000036	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000037	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000046	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1
	30105000060	WIRE FOR ENCODER SWITCH (FOR DOOR LOCK)	1