


PARTS LIST AND DIAGRAM

Part List

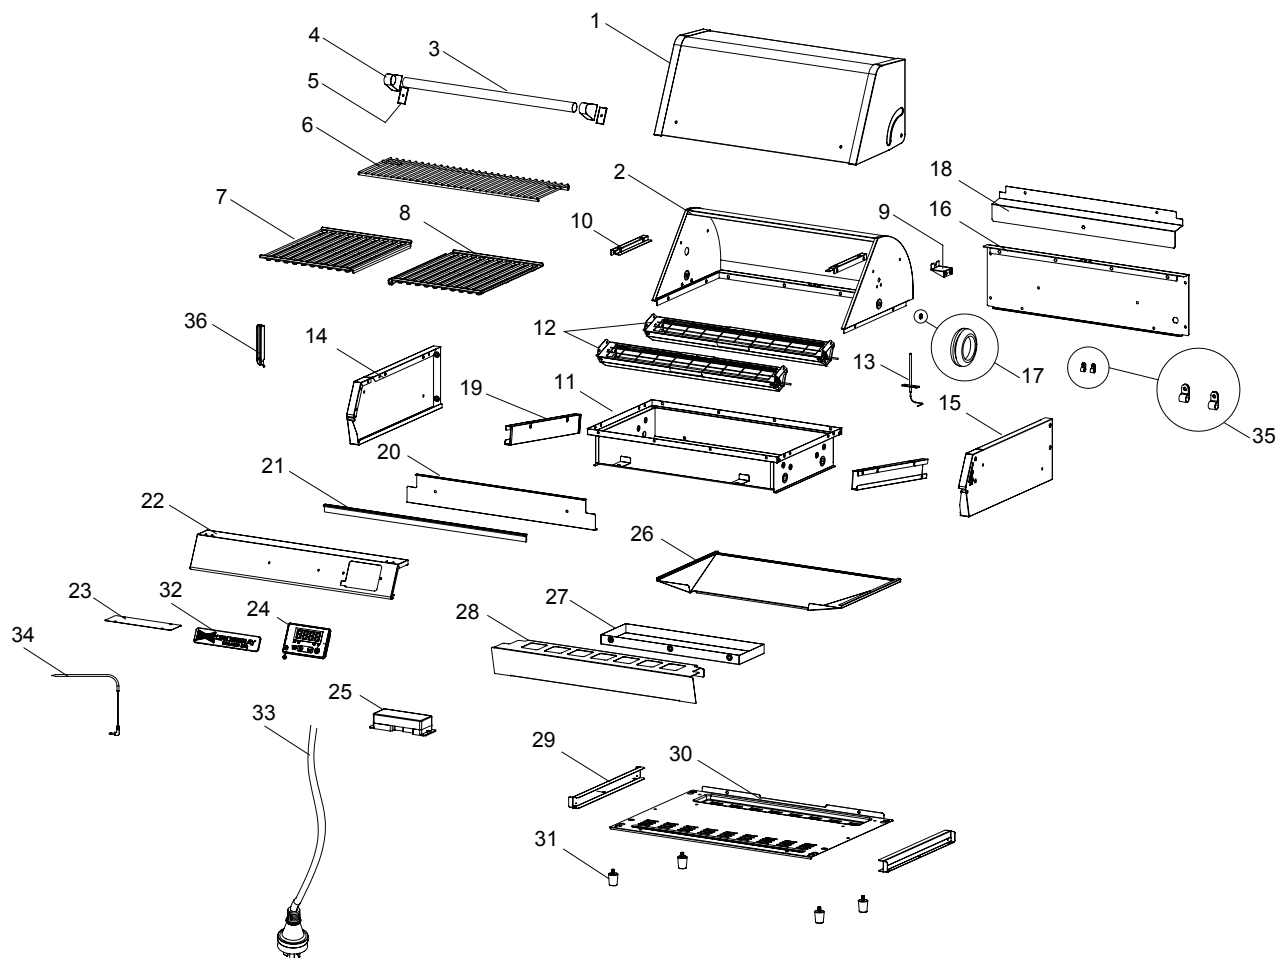

KEY DESCRIPTION	PART#	QTY
1 Lid Assembly	PD01010053	1
2 Grill Bowl, Rear Upper	PD04010073	1
3 Lid Handle	PD02010065	1
4 Lid Handle Seat	PD02010077	2
5 Lid Handle Seat Pad	P06802014G	2
6 Warming Rack	PD07010021	1
7 Cooking Grid	P01609002H	1
8 Cooking Grid	P01609003H	1
9 Rotisserie Rod Bracket	P033280944	1
10 Warming Rack Bracket	P033280954	2
11 Grill Bowl	PD04020025	1
12 Lamp Assembly - 240v	PD05020010	2
- 220v	PD05020030	
13 Grill Temperture Probe	P05385002B	1
14 Grill Bowl Panel, Left	PD04010085	1
15 Grill Bowl Panel, Right	PD04010095	1
16 Grill Bowl Panel, Rear	PD04010105	1
17 Protective Pad	P05518115K	2
18 Grill Bowl Heat Shield, Rear	P06923010B	1
19 Wires Cover	P05377003G	2

KEY DESCRIPTION	PART#	QTY
20 Grill Bowl Heat Shield, Front	P06923010B	1
21 Control Panel Strip	P06804010G	1
22 Grill Panel, Front	PD09010063	1
23 Control Panel Cover	PD09010073	1
24 Control Panel	PD10010020	1
25 Power Box	PD10010030	1
26 Grease Tray	P0271797C4	1
27 Grease Receptacle	P0270145D4	1
28 Grease Receptacle Handle	P02720212B	1
29 Grease Receptacle Bracket	P033190094	2
30 Grill Panel, Bottom	PD20010032	1
31 Grill Leg	P05391024P	4
32 Name Plate	P00403010D	1
33 Cord -240v	PD06010050	1
-220v	PD06010080	
34 Meat Probe	P05385004B	1
35 Cable Clip	PD06020020	2
36 Cooking Grid Hook	P05709005B	1
Operator Manual	P80196023A	1