




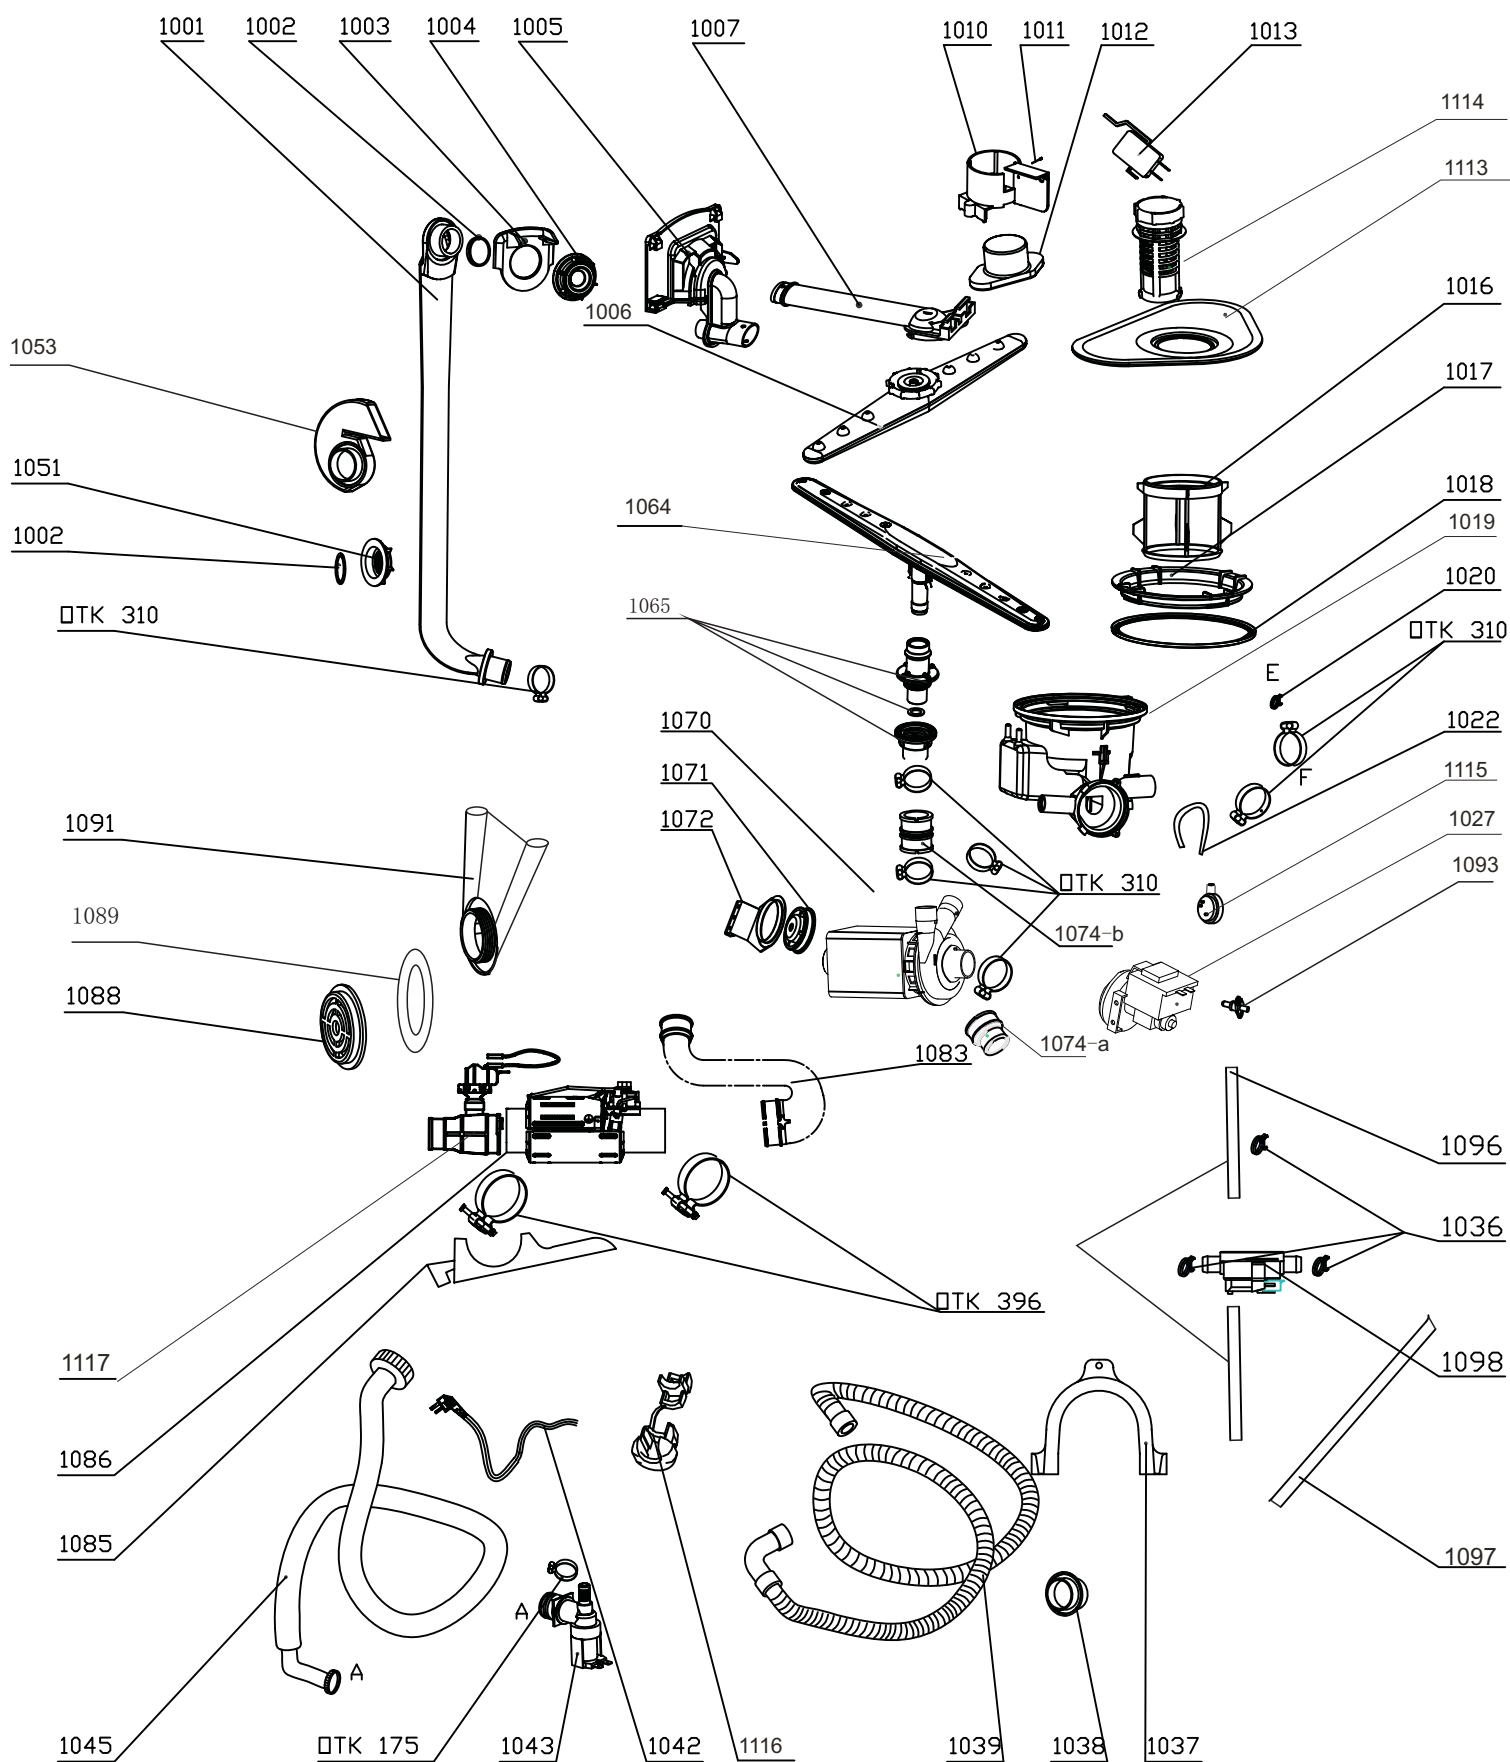

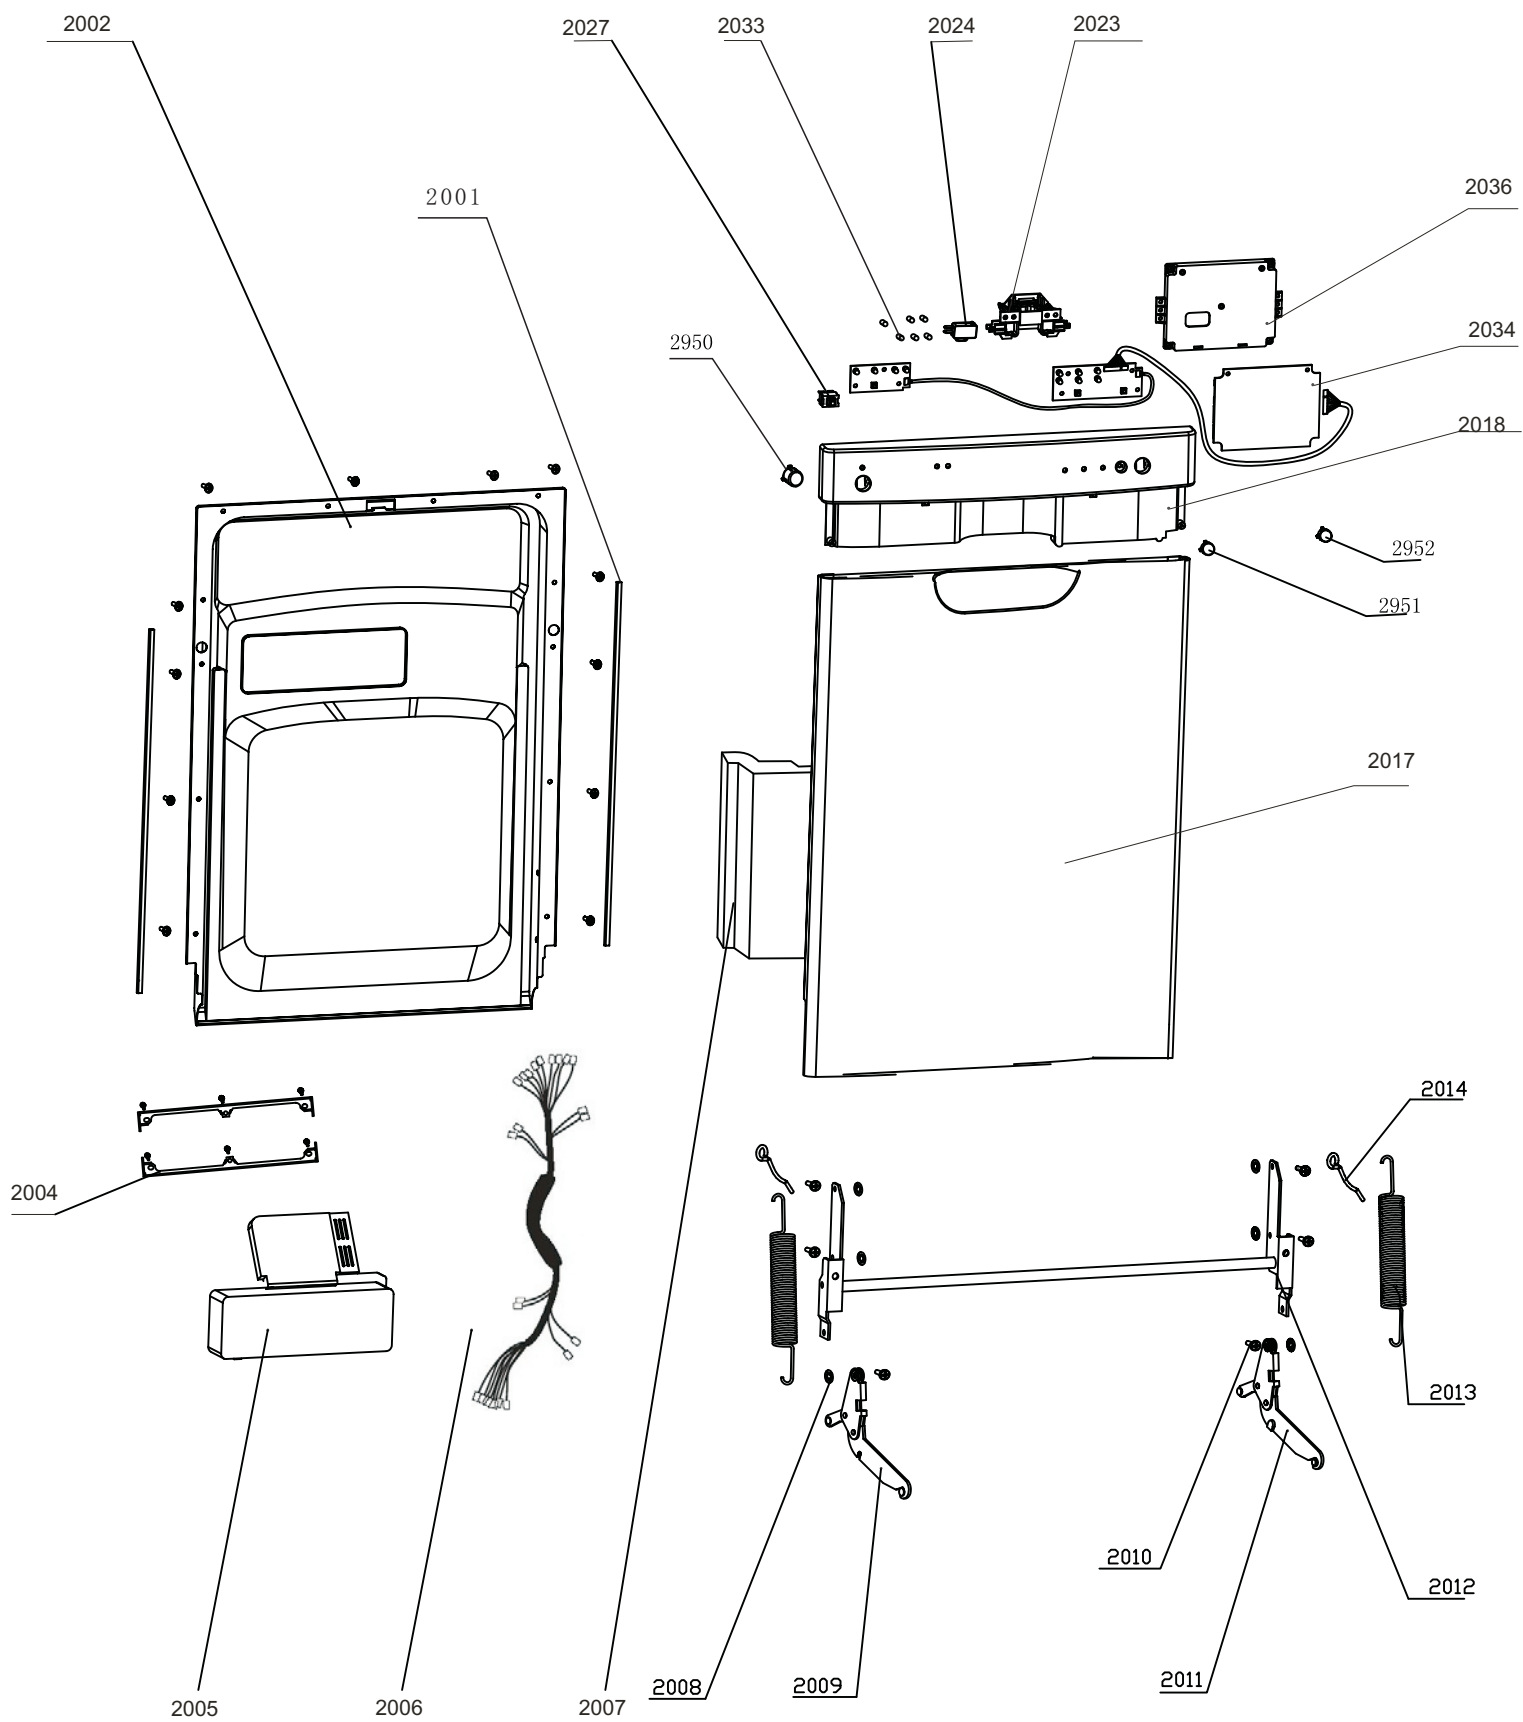

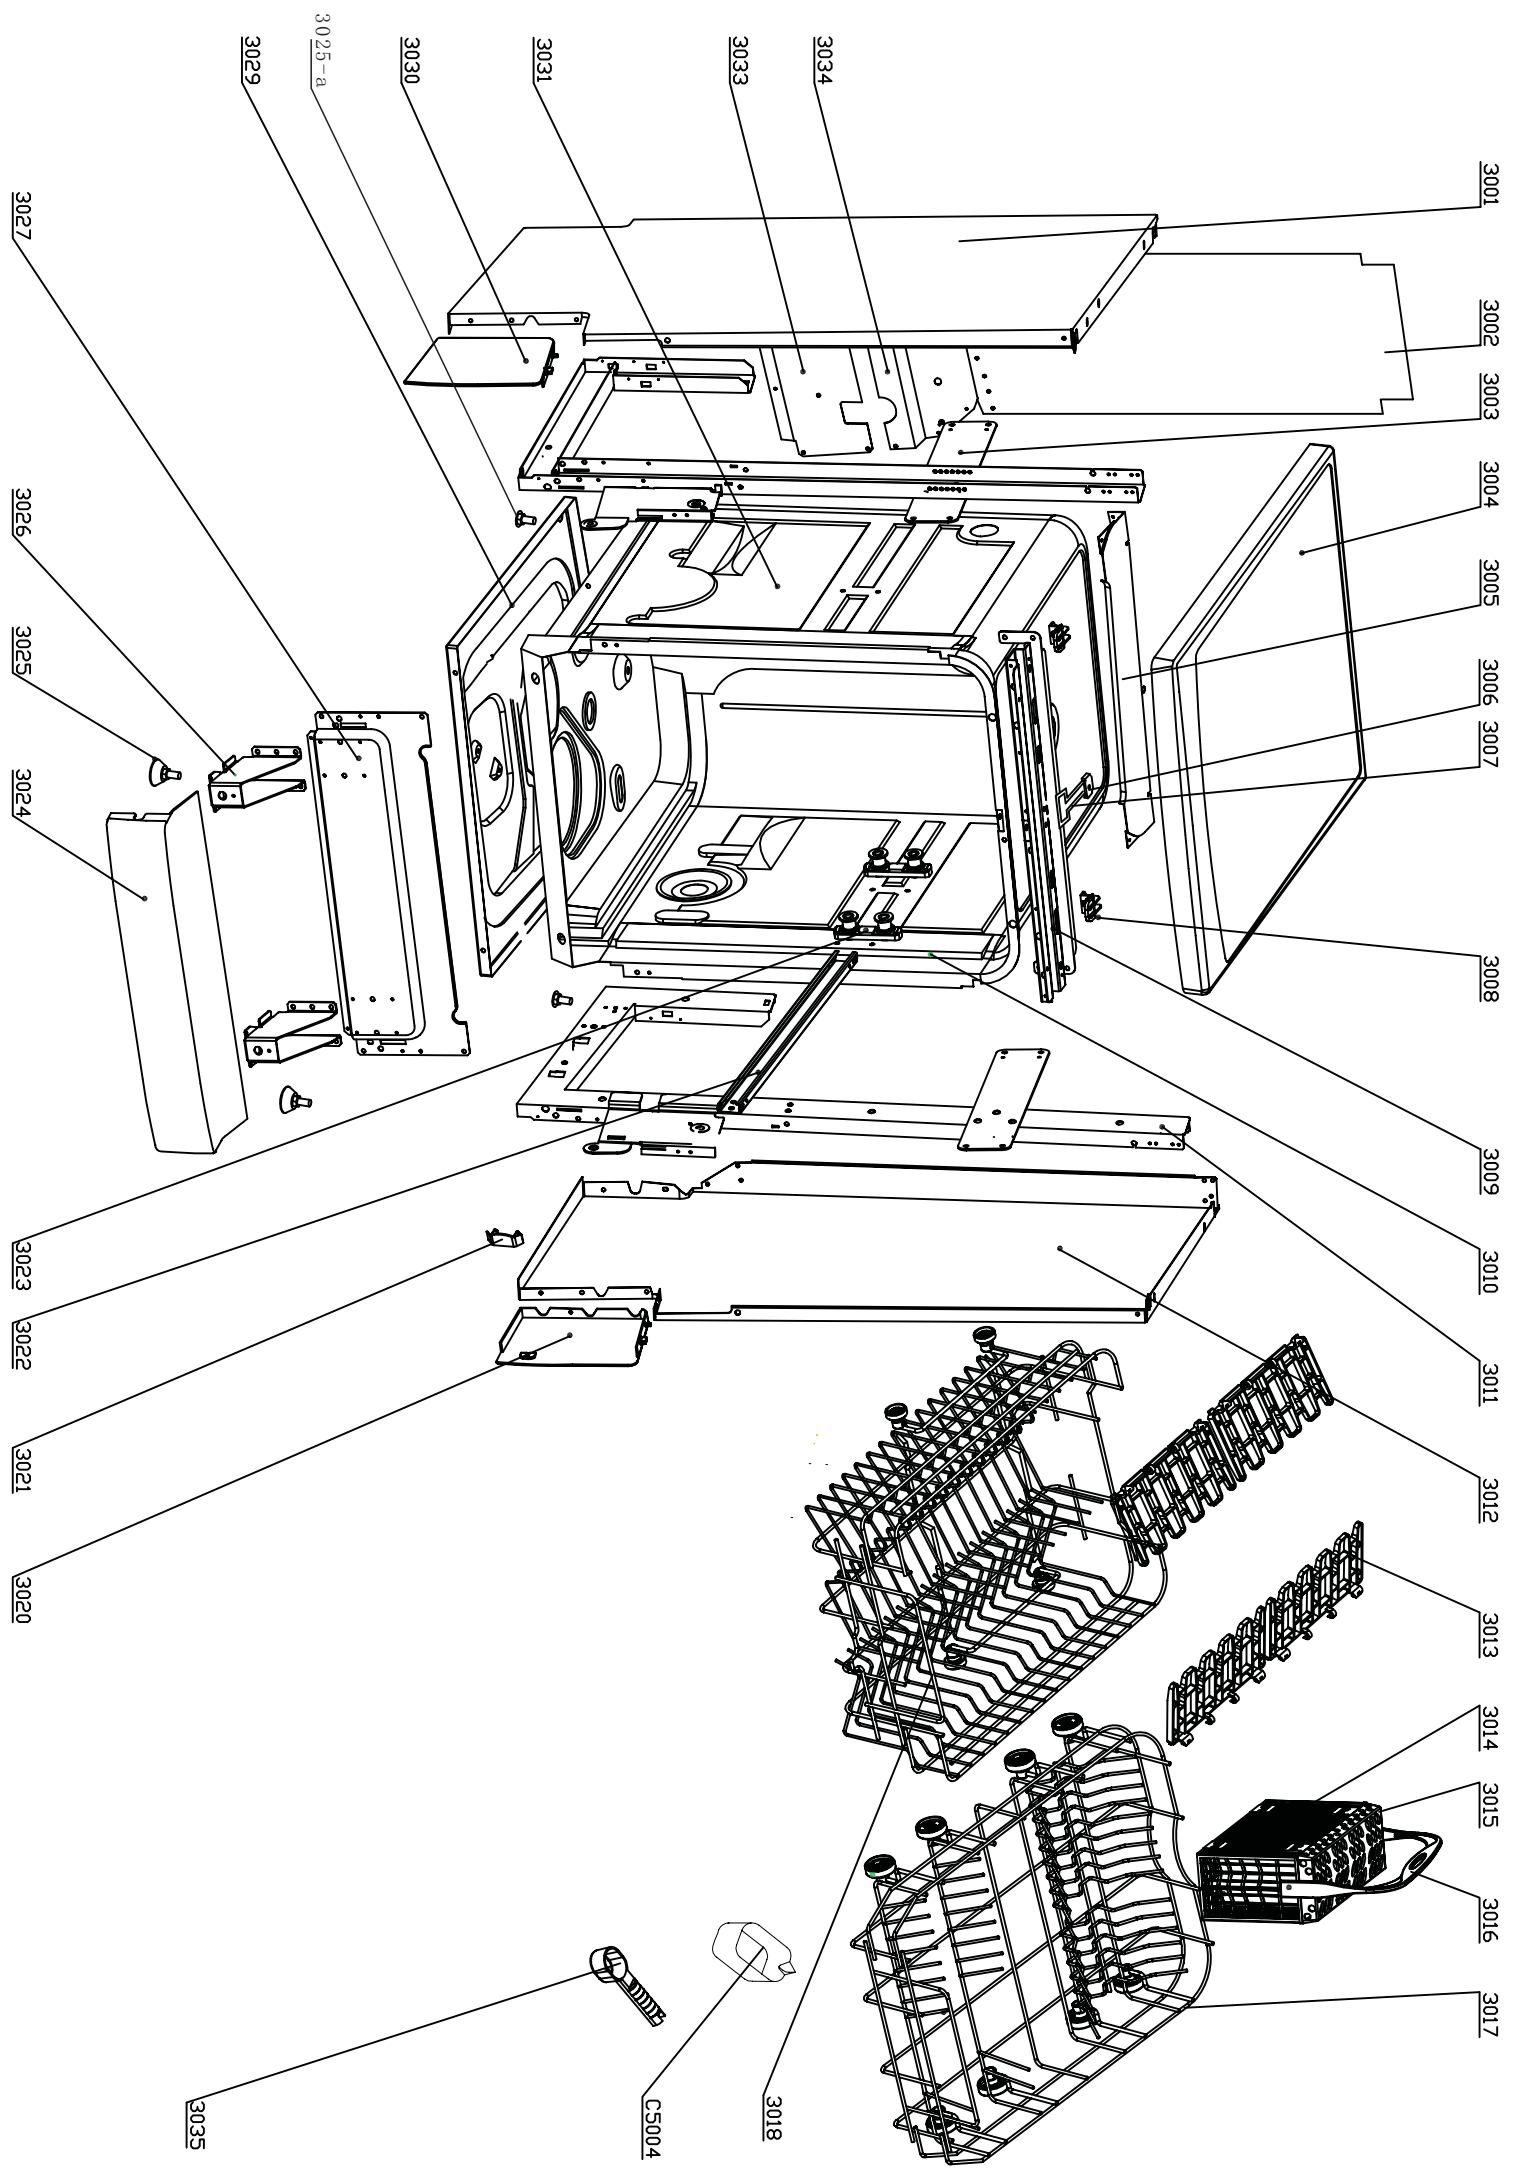

Part Code at the Exploded View	Part number	Part Name
1001	673000900223	External pipe
1002	673001500005	O Ring I 31.5X3.55
1003	673001800364	Guide casing
1004	673001600021	External pipe nut
1005	673001900016	Water dispenser
1006	673000300067	Upper sprayer
1007	673000900195	Upper sprayer pipe
1012	673002300003	Float
1016	673002500047	Micro filter
1017	673001600022	Sump nut
1018	673001500098	Sump gasket
1019	673000700087	Sump assembly
1022	673000900073	PVC hose
1027	674000600106	Drain pump
1036	672000700029	Clamp 14.5×1.8
1037	673006200027	Drain hose hook
1038	673001500002	Drain hose holder
1039	673000900269	Drain hose
1042	674000000196	power cord
1043	674000200001	Inlet valve
1045	673000900225	Inlet hose assembly
1051	673001600025	Air breather nut
1053	673002600001	Air inlet
1064	670400051614	Lower sprayer
1065	673001200027	Lower sprayer connection assembly
1070	674005600080	Washing pump
1083	673000900045	Bend connect hose
1085	673001400025	Heating element support
1086	674001100050	Heating elements
1088	673001600024	Water inlet nut
1089	673001500019	Water inlet gasket
1091	673002700608	Water inlet
1093	674000900053	Sensing device
1096	673000900368	Inlet hose 1
1097	673000900369	Inlet hose 2
1098	674006000006	Flowmeter
1113	672000605000	plane filter
1114	673001300179	Scran collection
1115	674000300079	Pressure switch
1116	673001400083	power cord clasper
1117	674000302006	pressure switch assembly for heating elements
2001	673002000059	Door edge guard piece
2002	672002200330	Inner door
2004	672001700002	Dispenser bracket
2005	674000800032	Dispenser
2006	674000102027	Wiring harness
2007	675000201002	Inner door foam
2008	672000500006	Ring Φ6

2009	672001300029	Left hinge
2010	672001200012	Dowel
2011	672001300030	Right hinge
2012	672001300024	Door gemel assembly
2013	672000100000	Door spring
2014	672001100001	Door spring bolt
2017	672001800309	Outer door
2018	673000491658	Control panel
2023	673001800513	Handle assembly
2024	674010030000	Micro switch
2027	674010010002	Power switch
2033	673000900003	Indicator cover
2034	674001000885	Control assembly
2036	673002400190	Control board box
2950	673000801969	Power button
2951	673000801967	program button
2952	673000801968	start/pause button
3001	672001600158	Left side panel
3002	673000100014	Back cover board
3003	672002190005	Left frame
3004	673000200334	Ceiling board
3005	672001500008	Upper rear crosspiece
3006	673001300634	door clamp
3007	672001400039	door lock
3008	673001300003	Top clamp block
3009	672001500150	Upper front crosspiece
3010	673001700079	Tank gasket
3011	672002190006	Upright right assembly
3012	672001600157	Right panel
3013	673001300072	Upper basket cup holder
3017	672000800335	Lower basket
3018	672000800339	Upper basket
3020	673001100032	Right washboard
3021	673001300044	Rail block
3022	672001701000	Rail
3023	673001401005	Rail support assembly
3024	673001100045	Washboard
3025	673001100156	Adjustable foot(front)
3026	672000200058	Feet support assembly
3027	672001503004	Lower front crosspiece
3029	672002000044	Base board
3030	673001100031	Left side baseboard
3033	672001500202	Lower rear crosspiece
3034	672001500007	Middle rear crosspiece
3035	673002200079	Measurable spoon
1010+1011+1013	673001490016	Float holder assembly
1071+1072	672000200054	Washing motor support
1074-a	673000900228	connect hose a
1074-b	673000900229	connect hose b

3014+3015+3016	673002200055	Cutlery basket
3025-a	673001100180	Adjustable foot(back)
C5004	673006200004	rinse aid cup
OTK 175	672000700004	OTK 175
OTK 310	672000700001	OTK 310
OTK 396	672000700007	OTK 396