

Dishwasher LPA97S

Exploded View:

Parts List:

Variations only.

LPA96 / LPA97

Position	Description	Code	
		LPA96	LPA97 - S
101	Front trim	951010	951011
104	Knob cover plate	951040	951041
105	Knob cover	951050	951051
107	Timer knob & spring	951070	951071
109	Push button	951090	951091
116	Front panel plate		951161
117	Front panel spacer – 10 mm		951171
118	Front panel spacer – 5 mm		951181
121	Door	951210	951211
201	Upper cover	952010	952011
207	Left side panel	952070	952071
213	Inspection front/lower cross piece	952130	952131
232	Right side panel	952320	952321
233	Plinth adjustment cross piece – right		952331
234	Plinth adjustment cross piece – left		952341
235	Plinth support		952351
236	Plinth spring		952361
237	Door handle cover	951120	952371
238	Filter handle st/steel	PLASTIC 953120	952381
239	Filter cover	PLASTIC 953130	952391
240	Filter cover	PLASTIC 953140	952401

