

morphy richards®

smart **i**deas for your home

Equip 2 Slice Toaster

INSTRUCTION MANUAL

Models: MRET02B

Read these instructions carefully before
using this appliance for the first time.


STORE THESE INSTRUCTIONS CAREFULLY

www.morphyrichards.com.au

SPECIFICATIONS

Model:	MRET02B
Colour:	Black
Rated Voltage:	220-240V
Rated Power:	950-1150W
Capacity:	2 Slice Toaster
External Dimensions (L x W x H):	mm
Net Weight:	kg

TOASTER PARTS

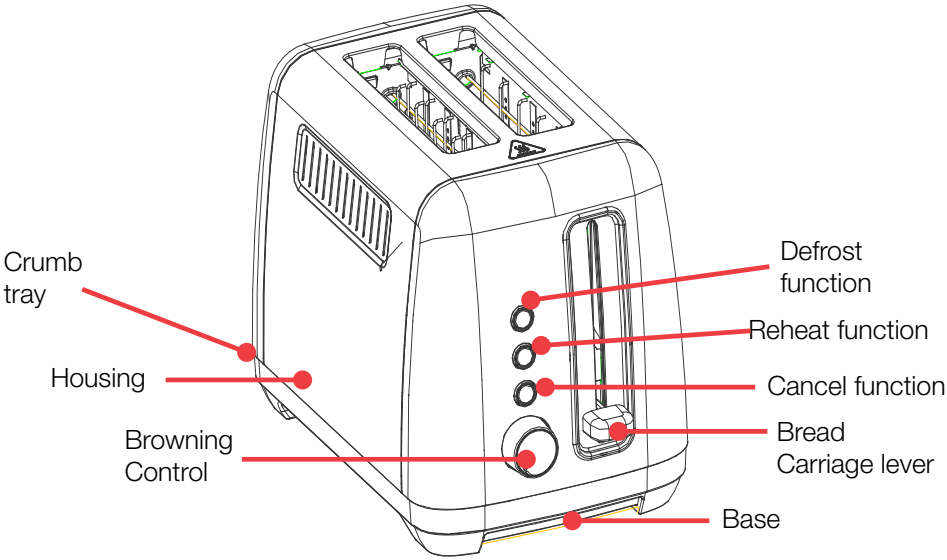

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- The use of any electrical appliance requires the following common sense safety rules.
- Please read these instructions carefully before using the product.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is intended to be used in household and similar applications such as: farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Misuse of the appliance could cause personal injury.
- The bread may burn, therefore do not use the appliance near or below combustible material such as curtains.

- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not let the cable run across a cooker or hot area which might damage the cable.

OTHER SAFETY CONSIDERATIONS

- Only use for intended purpose.

PERSONAL SAFETY

- Do watch your appliance during use.

WARNING: Do not touch the top of the appliance or other hot parts during or after use, use handles or knobs.

WARNING: Do not wrap the cable around the main body of the appliance during or immediately after use.

WARNING: Do not use under cupboards.

WARNING: Do not insert oversize foods, metal, foil packages or utensils into the toaster.

WARNING: Do not attempt to dislodge food when the appliance is plugged in and never insert cooking utensils into the slots.

IMPORTANT: Do not place bread or other items on top of the slots as this may damage the appliance and creates a fire hazard.

- Never use the appliance when it is empty (when there is no bread inside) except on first use.
- Do not use very thin or broken slices of bread.

- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires.
- Clean the crumb tray regularly: crumbs can smoke or burn.
- Do not insert (by force) foods that are too big for the slots.
- Do not insert forks or other utensils into the toaster in order to remove bread. As well as damaging the toaster, there is a high risk of electric shock.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.
- This appliance must be used in accordance with the instructions and must not be used for other purposes.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

OPERATING INSTRUCTIONS

As there is manufacturing residue or oil remaining in the toaster and on the heat element, it usually emits a 'new' odor when first used. This is normal and will not occur after the first few uses.

NOTE: Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

1. Place the sliced bread into the Bread Slots.
2. Adjust the Browning Control to the desired setting.
3. Depress the Bread Carriage Lever. The toaster will begin toasting the bread.
4. When completed, the Bread Carriage Lever will automatically rise and lift the toast from the toaster.

Note: The carriage handle will only depress when the appliance is connected to the power supply.

5. During the toasted process, you may interrupt the toasting process at any time by pressing the Cancel button.
6. To toast frozen bread, do not adjust the Browning Control from your normal setting. Place the frozen bread in the Bread Slots, depress the Bread Carriage Lever and press the Defrost Button. The button will illuminate and the toaster will operate for a longer period defrosting and toasting the bread.
7. If you want to reheat bread that was previously toasted but gone cold. Press the Bread Carriage handle down vertically until it is positioned in place, then press REHEAT button. The REHEAT button will be illuminated and the toaster will operate for a short period reheating the bread.

CLEANING

WARNING: Crumbs will accumulate in the Crumb Tray and could catch fire if not emptied regularly.

1. Disconnect the power supply before cleaning.
2. When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toaster. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.

NOTE: Never operate the appliance without the Crumb Tray fitted.

3. Wipe the outside with soft dry cloth after toaster cools down.
4. When not used or when being stored for extended periods, the power cord may be wound under the bottom of toaster.

WARRANTY

This appliance is guaranteed for 2 years against faulty material, components and workmanship. This warranty is in addition and does not affect your statutory rights. Proof of purchase must be produced for any warranty benefit.

In the unlikely event of any appliance proving to be faulty, securely pack and return the item to the place of purchase accompanied by the original receipt or invoice. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NOT COVERED BY THIS WARRANTY (AUSTRALIAN ONLY)

- If the appliance has not been used in accordance with the manufacturers' recommendations or Instructions.
- If the fault is deemed to be caused by abuse, misuse, neglect, modifications or in proper use and or care Eg: Kettles: Excessive build up of scale. Toasters: Excessive build up of crumbs or foreign matter etc.
- Connection to incorrect voltage to that stamped on the product.
- Unauthorised repairs.
- Appliance used other than for domestic purposes.
- Excluding bags, filters, glass, carafes, and cutting blades.
- Freight and insurance costs.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of original purchase.

Morphy Richards's policy is to continually improve quality design and product quality. The company therefore reserves the right to change any specifications or to carry out modifications as deemed worthy at any time.

The Australian supplier reserves the right to repair, modify, exchange or replace the faulty appliance with the same or similar model or product of equivalent value.

NOTES

[illegible]



Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and wellbeing.

morphy richards

Glen Dimplex Australia Pty Ltd
1340 Ferntree Gully Road
Scoresby VIC 3179
Phone: 1300 556 816
Email: sales@glendimplex.com.au
Web: www.morphyrichards.com.au