

Baumatic®

Before using your tumble dryer, please read this manual carefully and keep it for future reference.

Tumble Dryer

OWNER'S MANUAL

BCD71

Read This Manual

Inside you will find many helpful hints on how to use and maintain your tumble dryer properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your tumble dryer. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.

Dear Customer,

Congratulations on purchasing your new product from Think Appliances.

To register your parts and labour warranty (some conditions apply please refer to your warranty card for more details) please contact our Customer Care team on:

1800 444 357

Our Customer Care centre is there to ensure you get the most out of your appliance. For example, should you want to learn more about recommended cooking temperatures, the various cooking functions available, how to set and program your LED clock, and importantly taking care of your appliance when cleaning, please call us because we are here to help you.

It is important that you read through the following use and care manual thoroughly to familiarize yourself with the installation and operation requirements of your appliance to ensure optimum performance.

We also carry a complete range of spare parts for all Think products. For all your spare parts enquiries please contact our team at Pronto Parts on:

1300 306 973

Again, thank you for choosing an appliance brought to you by Think Appliances and we look forward to being of service to you.

Kind regards

Management

Think Appliances

Contents

Safety information.....	1
Installation.....	3
Part description.....	4
Attention and advice.....	6
Description of controls.....	7
Operation instruction.....	8
Programme table.....	9
Specialty drying function.....	10
Cleaning and routine maintenance.....	12
Alarm function.....	13
Precautions.....	14
Technical specifications.....	15

Safety information

Dry Care Symbols

Please pay attention to use the drying machine if the materials of your clothes can not be dried by it or contain the symbols as follows:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

Safety notes

 To prevent any damages to your and others' life or property, you have to follow the safety notes.

- 1.This product belongs to Category I electrical appliances, and only for drying textiles which have been washed with water in the household. Please pay attention to the safety of power use during the operation!
- 2.The power source with reliable earthing must be used. Its earth wire must be buried under the ground and shall not be connected with the public utilities such as city water pipe or gas pipe etc. The earth wire and null wire shall be distinguished and shall not be connected together.
- 3.The power wire shall meet national standard and must be able to withstand the current above 16A. To ensure your and your family's safety, please make improvement immediately if any power use at your home does not comply with the above-mentioned requirements.

Electric shock hazard

- 1.If the power cable is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- 2.Do not draw the power cable forcefully to pull out the mains plug.
- 3.Please do not plug/draw the mains plug with wet hands.
- 4.Do not damage the power cord and the power plug.
- 5.To prevent any accidental electric shock, please make sure the mains plug of the dryer is earthed. **DO NOT USE AN EXTENSION CORD**

Safety information

Injury danger

1. Please do not disassemble and install the dryer under no instruction or supervision.
2. Please do not stack this dryer on washing machine without stacking kits.
3. Please do not lean on the opened door of the dryer.
4. Please do not put any pyrotoxin on the dryer, such as the candle, electric cooker.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. The tumble dryer is not to be used if industrial chemicals have been used for cleaning and lint must not to be allowed to accumulate around the tumble dryer.

Damage danger

1. Please do not dry over the regulated capacity.
2. Please do not operate the dryer without the lint filter and air condenser.
3. Please do not dry clothes before they have been spun in a washing machine.
4. Please do not expose the dryer directly under the sun, and indoor use only.
5. Please do not install the dryer in the humid and drenching environment.
6. Please do not keep any object in the pockets of your laundry before drying process.
7. At the cleaning and maintenance, please do remember to pull out the power plug and do not directly wash the dryer with water.

Explosion danger

Please do not dry the clothes with some flammable substances such as the coal oil, alcohol or there will be the explosion.

Notes on disposal

When you want to dump the dryer because it is not operable or not worth of repairing, please pull out the mains plug and cut the power cable. All the material used for this machine is environmental-friendly and recyclable. Please help the disposal of the material via environmental-friendly means.


Guidelines

Move cautiously. Do not grasp any salient parts of machine. The machine door can not be used as the handle for delivery.

Installation

Installation Position

1. Please install the dryer on solid and flat ground.
2. Please do not place the dryer on the slope, soft carpet or wooden floor.
3. Please do not install the dryer outdoors, to prevent the dryer from being frozen to damage of machine parts.

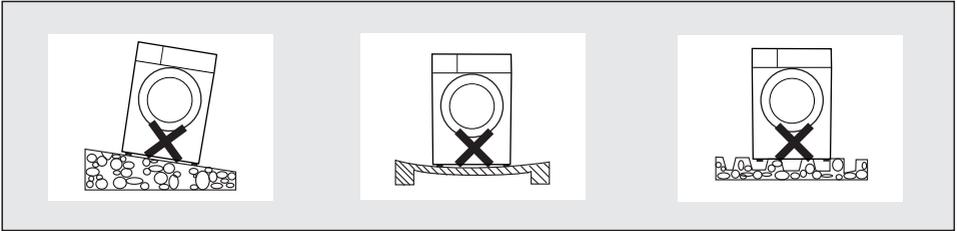

Level Adjusting

If the floor is obviously uneven, it needs to be adjusted. It vibrates the machine, causing machine to move from its position.


Using hands to adjust the height of four machine legs to adjust the levelness of this dryer.

Power Supply Connection

1. Make sure that the voltage of the power supply is the same as the electric specification of the dryer.
2. Please replace it by the professional if the power supply wire is damaged, and only the power wire from the manufacturer or the customer service center can be used.
3. Please do not connect it with a power board or double adaptor
4. Please do not connect the power supply with wet hands.
5. Please do not pull out the plug by pulling the power wire with force

Part Description

Part Description

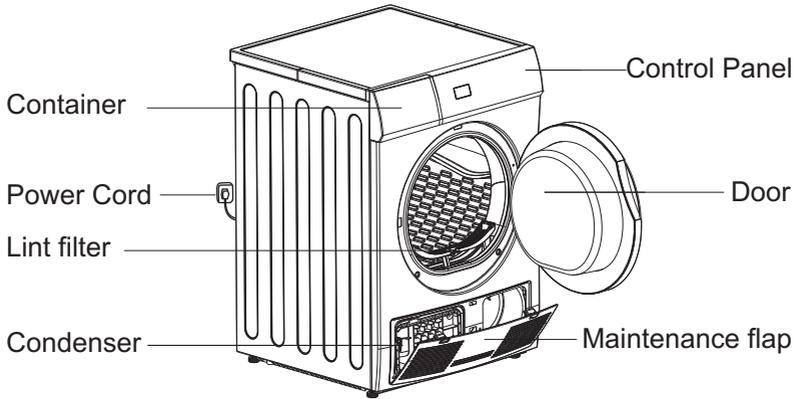

Accessories


The following parts are optional for specific models.
If your dryer has following parts, please install them following the instruction below .





Condensing drain hose(optional)




Hose holder(optional)

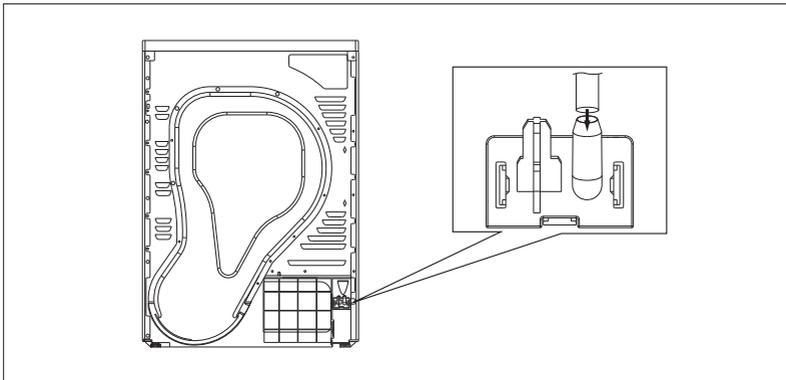

Part Description

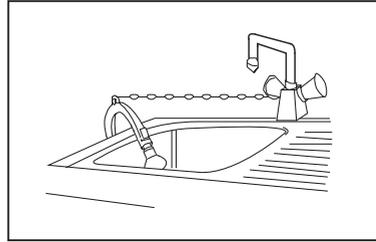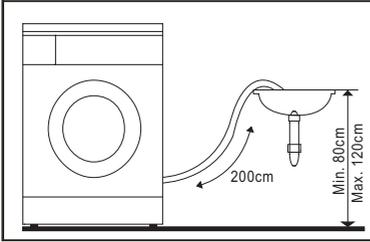

Quick start

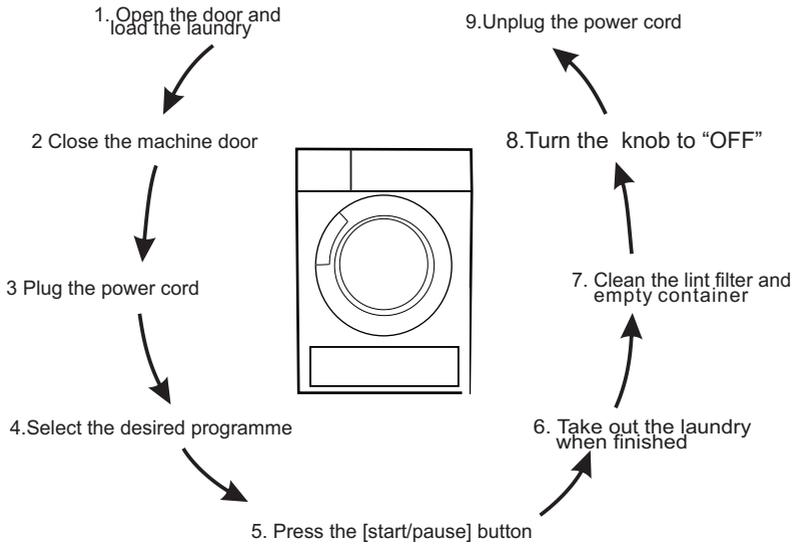

Attention & Advice

Attention

! Before the first cycle, the dust and grease may remain in this dryer during the period of manufacture and transportation, to avoid contaminating your clothes, please follow these steps:

- a) Put some clean rags into the drum.
- b) Plug the power.
- c) Select the “Quick” Programme, press “Start/Pause” button.
- d) After finishing this programme, please follow the “cleaning and routine maintenance” to clean the lint filter and air condenser.

Advice

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
2. For uniform drying result, sort the laundry according to fabric type and drying programme.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, because over dried clothes can easily get creases or shrinkage.
5. Do not dry the articles containing rubber or similar elastic materials such as raincoats, bicycle covers and feather products.
6. The door can be opened only after the programme of the drying machine is completed. Do not open the door before the programme finished to avoid the human skin from being scalded by hot steam or over heated drying machine.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy use.
8. Do not dry these clothes after dry-clean process.
9. The weight references as follows:

 Blended Coats (about 800g)	 Jackets (about 800g in cotton)	 Jeans Trousers (about 800g)	 Towel Quilts (about 900g in cotton)
 Single Sheets (about 600g in cotton)	 Work Clothes (upper and lower) (about 1120g in cotton)	 Pajamas (about 200g)	 Shirts (about 300g in cotton)
 Undershirts (about 180g in cotton)	 Underpants (about 70g in cotton)	 Socks (about 30g in blended material)	

Description of controls


Filter
Please clean the filter when the "F" is flashing, after the dryer stops.

Tank
Please empty the container when the "T" is flashing, after the dryer stops.

Digital tube display

- Only light (DELAY/REMAIN) relevant to the phase that is currently being carried out will remain display during the drying process.
- When the drying procedure begins, REMAIN will display the remaining time, that is, the drying procedure will finished in Lx:xx time.
- The display "-.-" means programme in "hibernation" status, you can press any buttons or open the door to awaken programme.

Start/pause
[Start/Pause] button, has the start and pause function. When this button is pressed, this machine is switched between start and pause.

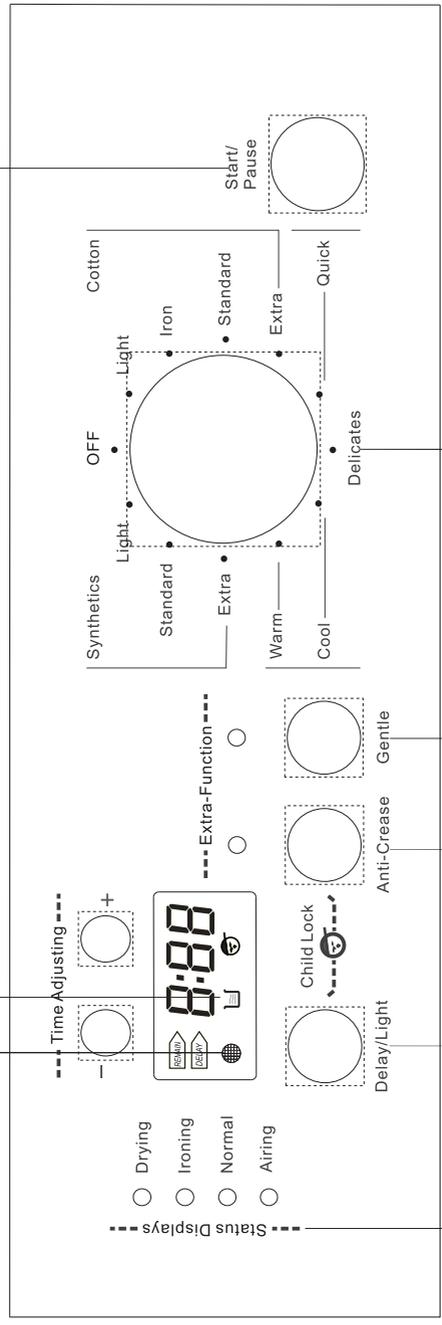

Status display
The four LED lights indicate the status of the drying procedure.

Delay/Light
This function is used to delay drying process. You can get 1-24hour by pressing this key continuously. The drum light will activate when you press the [Delay/Light] during the drying procedure.

Anti-Crease
This function will give more care to protect sensitive textiles from being creased.

Gentle
This function will give less heat to protect sensitive textiles from high temperature.

Cycle
Different Dryer cycle can be selected according to the user's needs to make the clothes have more effective drying result.

Operation Instruction

Programme selector

1. Rotate the programme knob to select the desired programme.
2. Select the **【Delay】** , **【Anti-Crease】** or **【Gentle】** functions for additional option.
3. Press the **【Start/Pause】** key.

The Drying procedure stops

The buzzer will prompt from the dryer when finishing the cycle.
Rotate the programme knob to the “OFF” position, and pull out the power cable.

Consumption values

Specifications are approximate values determined under normal conditions.
Fluctuations up to 10% are possible.

Programme	Weight (kg)	Residual humidity (approx.)	Energy consumption (kWh)
Cotton (standard)	7.0	50%	3.7
		60%	4.3
		70%	5.0
Cotton (iron)	7.0	50%	3.6
		60%	3.8
		70%	4.2
Synthetics	3.5	40%	1.2
		50%	1.6

Note:

Some jeans and large towels are difficult to dry ,due to its material features, if you find them are still wet, please use **【WARM】** programme to dry them again.

Programme table



Programme		Weight(max)	T-Shirt	Shirts	Trousers	Skirts/ dresses	Sportswear	Work clothes	Anorak	bathrobe	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ hand towels	
For cottons and coloureds made of cotton or linen.																	
Cotton	Light	7.0kg	●		●	●	●			●		●	●			●	
	Standard							●			●		●			●	
	Iron								●		●		●			●	●
	Extra								●				●			●	●
For non-iron washing made of synthetic and blended fabrics,cotton.																	
Synthetics	Light	3.5kg		●	●	●	●	●									
	Standard			●		●											
	Extra								●					●			
Delicate		3.0kg	For machine-washable woollen textiles. Textiles are fluffier, but not dried. Remove and hang up textiles when the programme ends.														
Quick		3.0kg	For washing which is to be dried quickly, e.g. made of acrylic fibres or for individual small items. Also for subsequent drying.														
Warm/Cool (30min/20min)		3.0kg	For timer programme , delicate textiles made of acrylic fibres or small items. Using 【Time Adjusting】 “+” “-” function to adjust time.														

Specialty drying function

Specialty drying function

1. Instruction of the moisture sensor

This function can automatically sense the moisture of clothes, and will automatically adjust the time of drying procedure according to how much clothes you put into the dryer.

This function will automatically activate during the drying procedure except the “Warm” and “Cool” programme.

2. Additional time adjusting function

This function can set the time of drying procedure by your self; the time can be adjusted from 20 to 40 minutes by press “+” or “-” buttons. This function is designed for a small load, for example, one facecloth or two pairs of socks. It's like using timer to control drying process, but only for “Warm” and “Cool” programme.

3. Instruction to the delay drying procedure

This function is used to delay clothes drying within 24 hours. You can press this key continuously; it can be selected within 1-24 hours. The delay time means drying procedure will start in x:xx hours.

When the delay procedure starts, the display will only show the delay start time and light  icon.

Steps in details

- (1). Load your laundry and make sure the machine door is closed.
- (2). To turn the programme selector knob and select a desired programme
- (3). You can select the **【Anti-Crease】** or **【Gentle】** functions according to your need;
- (4). To press the **【Delay/Light】** key;
- (5). Continue to press the **【Delay/Light】** to select the delay time;
- (6). After the **【Start/Pause】** key is pushed, the Dryer is at the run condition.
The drying procedure will be automatically performed when the delay time is over.
- (7). If you push the **【Start/Pause】** button again, the delay function will be paused.
- (8). If you want to cancel the “Delay” function, please turn the programme selector knob to “OFF” and reselect the programme .

4. Instruction of the child safety feature

- (1). This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.
- (2). When the dryer is at the operation state, press the **【Delay/Light】** and **【Anti-Crease】** buttons at the same time for over 3 seconds to start child lock function. When child lock function is set, the display will light “Child Lock”

Special drying function

icon and no key can effect to the dryer.

Under the start state of the child lock button, the **【Delay/Light】** and **【Anti-Crease】** buttons shall be pressed at the same time for over 3 seconds to release the child lock function.

5. Instruction of the **【Anti-Crease】** function

When the anti-crease function is selected, the LED of anti-crease shall illuminate, and the drum will intermittent rotate during the drying programme , in order to give more care to ensure the sensitive textiles can not get crease.

6. Instruction of the **【Gentle】** function

When the Gentle function is selected, the LED of Gentle shall illuminate, and the programme will give less heat to protect sensitive textiles from high temperature which may harm to these textiles, such as acetate, elastane and etc.

7. Instruction of the drum light

For your convenience, this function can help you to see clearly when you open the machine door, and the drum light will also activate when you press the **【Delay/Light】** during the drying procedure.

8. Instruction of the Auto Anti-crease function

To avoid the clothes creasing after the programme finished, the dryer will automatically intermittent rotate about 2 hours.

Cleaning and routine maintenance

Clean the lint filter

Leave the dryer to cool down.

1. Open the machine door.
2. Take out the lint filter, pull upward to take it out.
3. Clean the lint filter; wipe off the scrap threads accumulated on the lint filter.
4. Reinstall the lint filter.



NOTE!





1. The lint filter accumulated on the filter will block the air circulation, which will cause the extension of drying time and energy use; therefore, the scrap thread filter shall be cleaned after each use.
2. Do disconnect the power cord before cleaning!
3. Do not operate the dryer without the lint filter !
4. Clean the lint filter after each use to prevent lint accumulation inside the dryer.

Wash air condenser

-Leave the dryer to cool down.

-Residual water may escape, place an absorbent cloth under the maintenance flap.

1. Unlock the maintenance flap.
2. Completely open maintenance flap.
3. Screw both locking levers toward each other.
4. Pull out the air condenser.
5. Clean the air condenser completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air condenser, handle at the button!
8. Unscrew both locking levers.
9. Close the maintenance flap until it locks into position.
Please clean the air condenser if frequently used.
Do not damage the air condenser!

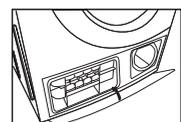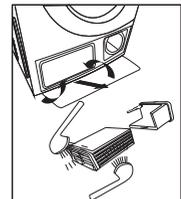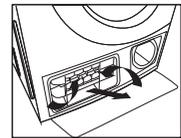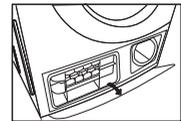

- ! 1. Clean with warm water only; do not use hard/sharp-edged objects! Do not operate the dryer without the the air condenser !
- 2. During drying, water may collect between the window and the seal, but this does not affect the function of your dryer!

Alarm function

Alarm function

Alarm Problem	Alarm Reason	Buzzer Alarm	Release
 Is flashing	Water tank full or pump error		Check the water tank and pump.
 Is flashing	Air flow block		Check the filter and the air folw
“ E30 ”	Heater problem	The Error Code is flashing on X:XX at Flash Rate 1. Meanwhile the beep is sounded every 15 minutes.	Check the heater and the thermostat
“ E32 ”	Humidity sensor error		Check the Humidity sensor and PCB
“ E33 ”	Temprature sensor error		Check the front temprature sensor
“ E34 ”			Check the rear temprature sensor
“ E60 ”	Motor error		Check the motor and the PCB

Precautions

Precautions

- !** Repairs may be carried out by customer service of authorised technicians only!

Before you call customer service, please check whether you can correct the fault yourself.

A technician will charge you for advice, even during the warranty period.

Problem	Solution
<ul style="list-style-type: none"> ● Display does not come on 	<ul style="list-style-type: none"> ● The mains plug is inserted. ● Check the programme selected. ● Check fuse in the house.
<ul style="list-style-type: none"> ● “”Is flashing 	<ul style="list-style-type: none"> ● Empty condensation container. ● If failure, check hose for condensation outlet.
<ul style="list-style-type: none"> ● “”Is flashing 	<ul style="list-style-type: none"> ● Clean air cooler. ● Clear lint filter.
<ul style="list-style-type: none"> ● Dryer does not start 	<ul style="list-style-type: none"> ● Check the start button has selected . ● Check the the door has closed. ● Check the programme has set.
<ul style="list-style-type: none"> ● Water is running out 	<ul style="list-style-type: none"> ● Align dryer horizontally. ● Clear air condenser and door seals.
<ul style="list-style-type: none"> ● Door is open by itself 	<ul style="list-style-type: none"> ● Press door until it “clicks”into position. ● Check the clothes is over load .
<ul style="list-style-type: none"> ● Humidity in the room is increase significantly 	<ul style="list-style-type: none"> ● Ventilate room adequately. ● Clean the cool grille. ● Ensure that the air condenser has been inserted.
<ul style="list-style-type: none"> ● Degree of dryness was not reached or drying time too long 	<ul style="list-style-type: none"> ● Clean lint filter and wash condenser. ● Empty container. ● Check water outlet. ● Dryer installation too restricted. ● Clean the moisture sensors. ● Use next higher drying programme or using ● Timer programme.

- !** If you cannot correct a fault yourself or if a repair is required :

- 1.Set programme knob to OFF.
- 2.Pull out the mains plug and call the service.

Technical Specification

Specification

Power supply voltage	220-240V~
Rated input Power	2000W
Rated Frequency	50Hz
Overall Size	595×565×845(mm)
Rated DryingCapacity	7.0kg (Dry Clothes)
Net Weight	43kg



(AUS)

Think Appliances Pty Ltd.

416-424 Barry Rd
Coolaroo VIC 3048

Sales Telephone

1300 132 824

Service Telephone

1800 444 357

Website

www.thinkappliances.com

(NZ)

Applico Ltd.

Private Bag 92900
Onehunga, Auckland,
New Zealand 1061

Website

www.baumatic.co.nz

(UK)

United Kingdom

Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone

(0118) 933 6900

Website:

www.baumatic.co.uk