

	1	2	3	4	5	6	7	8		
A	This technical diagram illustrates the exploded view of a gas cooktop assembly. The components are numbered as follows: 1: Main cooktop body 2: Front panel 3: Control knobs 4: Knob cap 5: Gas supply line 6: Gas valve 7: Gas control valve 8: Gas control valve bracket 9: Gas control valve cover 10: Gas control valve cap 11: Gas control valve assembly 12: Gas control valve bracket 13: Gas control valve cap 14: Gas control valve cap 15: Gas control valve cap 16: Gas control valve cap 17: Gas control valve cap 18: Gas control valve cap 19: Gas control valve cap 20: Gas control valve cap 21: Gas control valve cap 22: Gas control valve cap 23: Gas control valve cap 24: Gas control valve cap 25: Gas control valve cap 26: Gas control valve cap 27: Gas control valve cap 28: Gas control valve cap 29: Gas control valve cap 30: Gas control valve cap 31: Gas control valve cap 32: Gas control valve cap 33: Gas control valve cap 34: Gas control valve cap 35: Gas control valve cap 36: Gas control valve cap 37: Gas control valve cap 38: Gas control valve cap 39: Gas control valve cap 40: Gas control valve cap 41: Gas control valve cap 42: Gas control valve cap									A
B										B
C										C
D										D
E	E									
F	F									
	1	2	3	4	5	6	7	8		

Number	Model no.	Description
1	11000137	Bottom shell (Galvanized steel plate)
2	14000006	Power cable holder
3	12000024	Power cable holder
4	12000008	Blue cable
5	12000013	Brown cable I
6	12000014	Borwon cable II
7	14000012	Terminal connector spacer
8	12000021	Terminal connector spacer
9	12000002	Ignitor
10	13000007	Fixing square
11	13000055	Gas valve support
12	11000292	Intake tube
13	11000134	Gas valve without FFD
14	14000015	Knob waterproof gasket
15	501000147	Plastic knob
16	11000261	Rapid AI. Tube
17	11000259	S-R AI Tube (Long)
18	11000258	AUX AI Tube
19	11000260	S-R AI Tube (Short)
20	11000351	SABAF 500 Sparking ignition
21	14000005	Joint gasket
22	13010041	HHG610SS
23	11000350	SABAF 400 Sparking ignition
26	13020053	HHG610SS pan stand (Right & Left)
27	11000150	AUX Burner cap
28	11000026	AUX gas injector, NG
29	11000141	AUX flame spreader
30	11000156	AUX burner cap
31	11000151	Semi-rapid burner cap
32	11000027	Semi-rapid gas injector, NG
33	11000144	Semi-rapid flame spreader
34	11000157	Semi-rapid burner cap
35	11000152	Rapid burner cap
36	11000028	rapid injector, NG
37	11000047	Rapid flame spreader
38	11000158	Rapid burner cap
39	14000022	Pan stand rubber feet
40	11000022	AUX gas injector, LPG
41	11000023	S-R gas injector, LPG
42	11000024	Rapid gas injector, LPG