






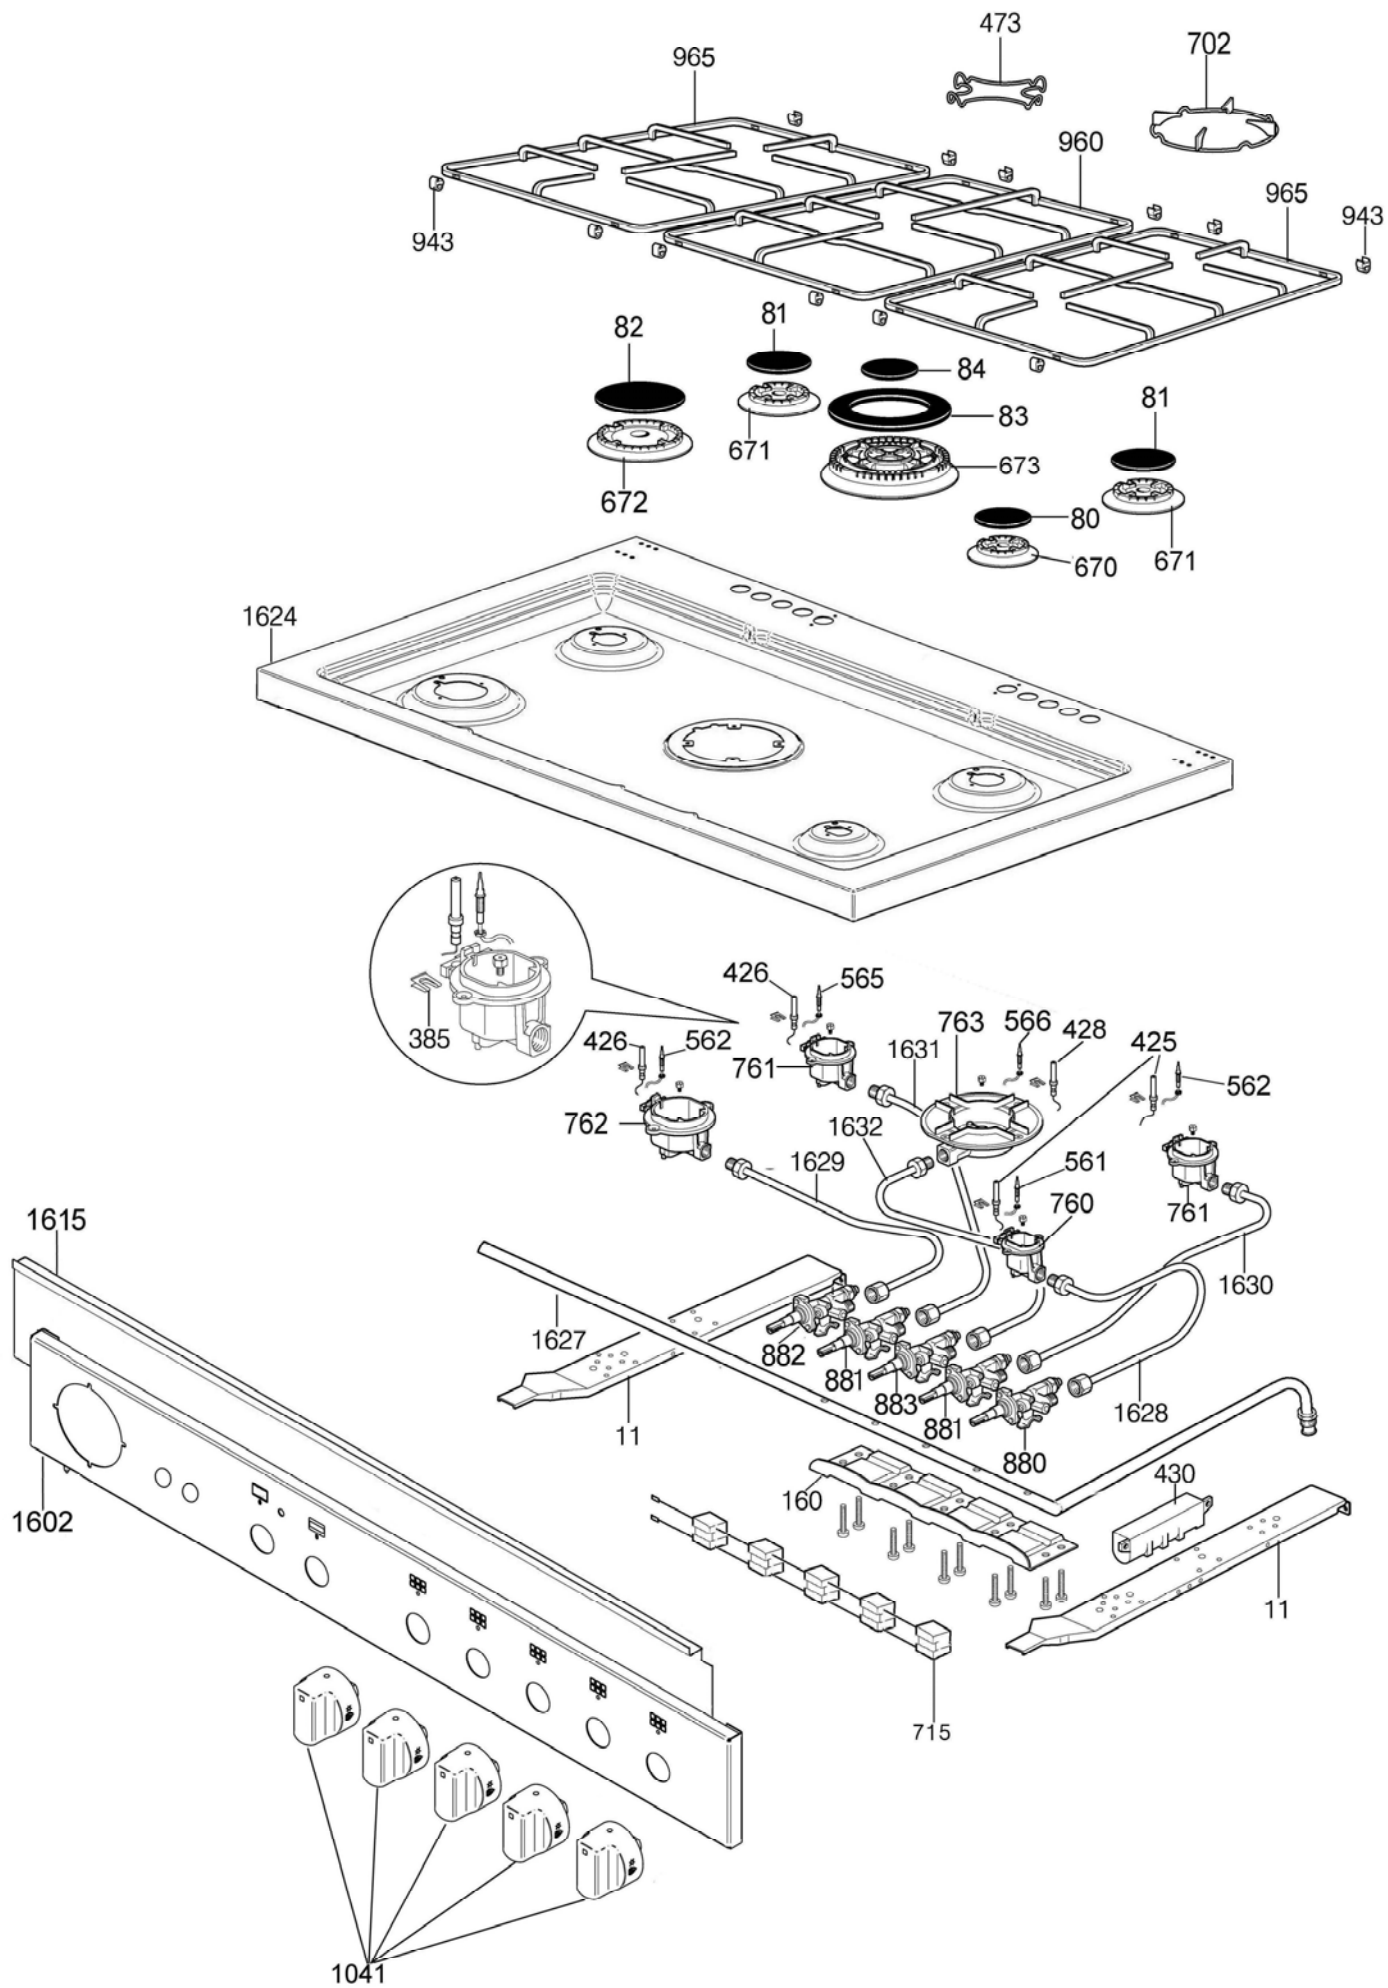


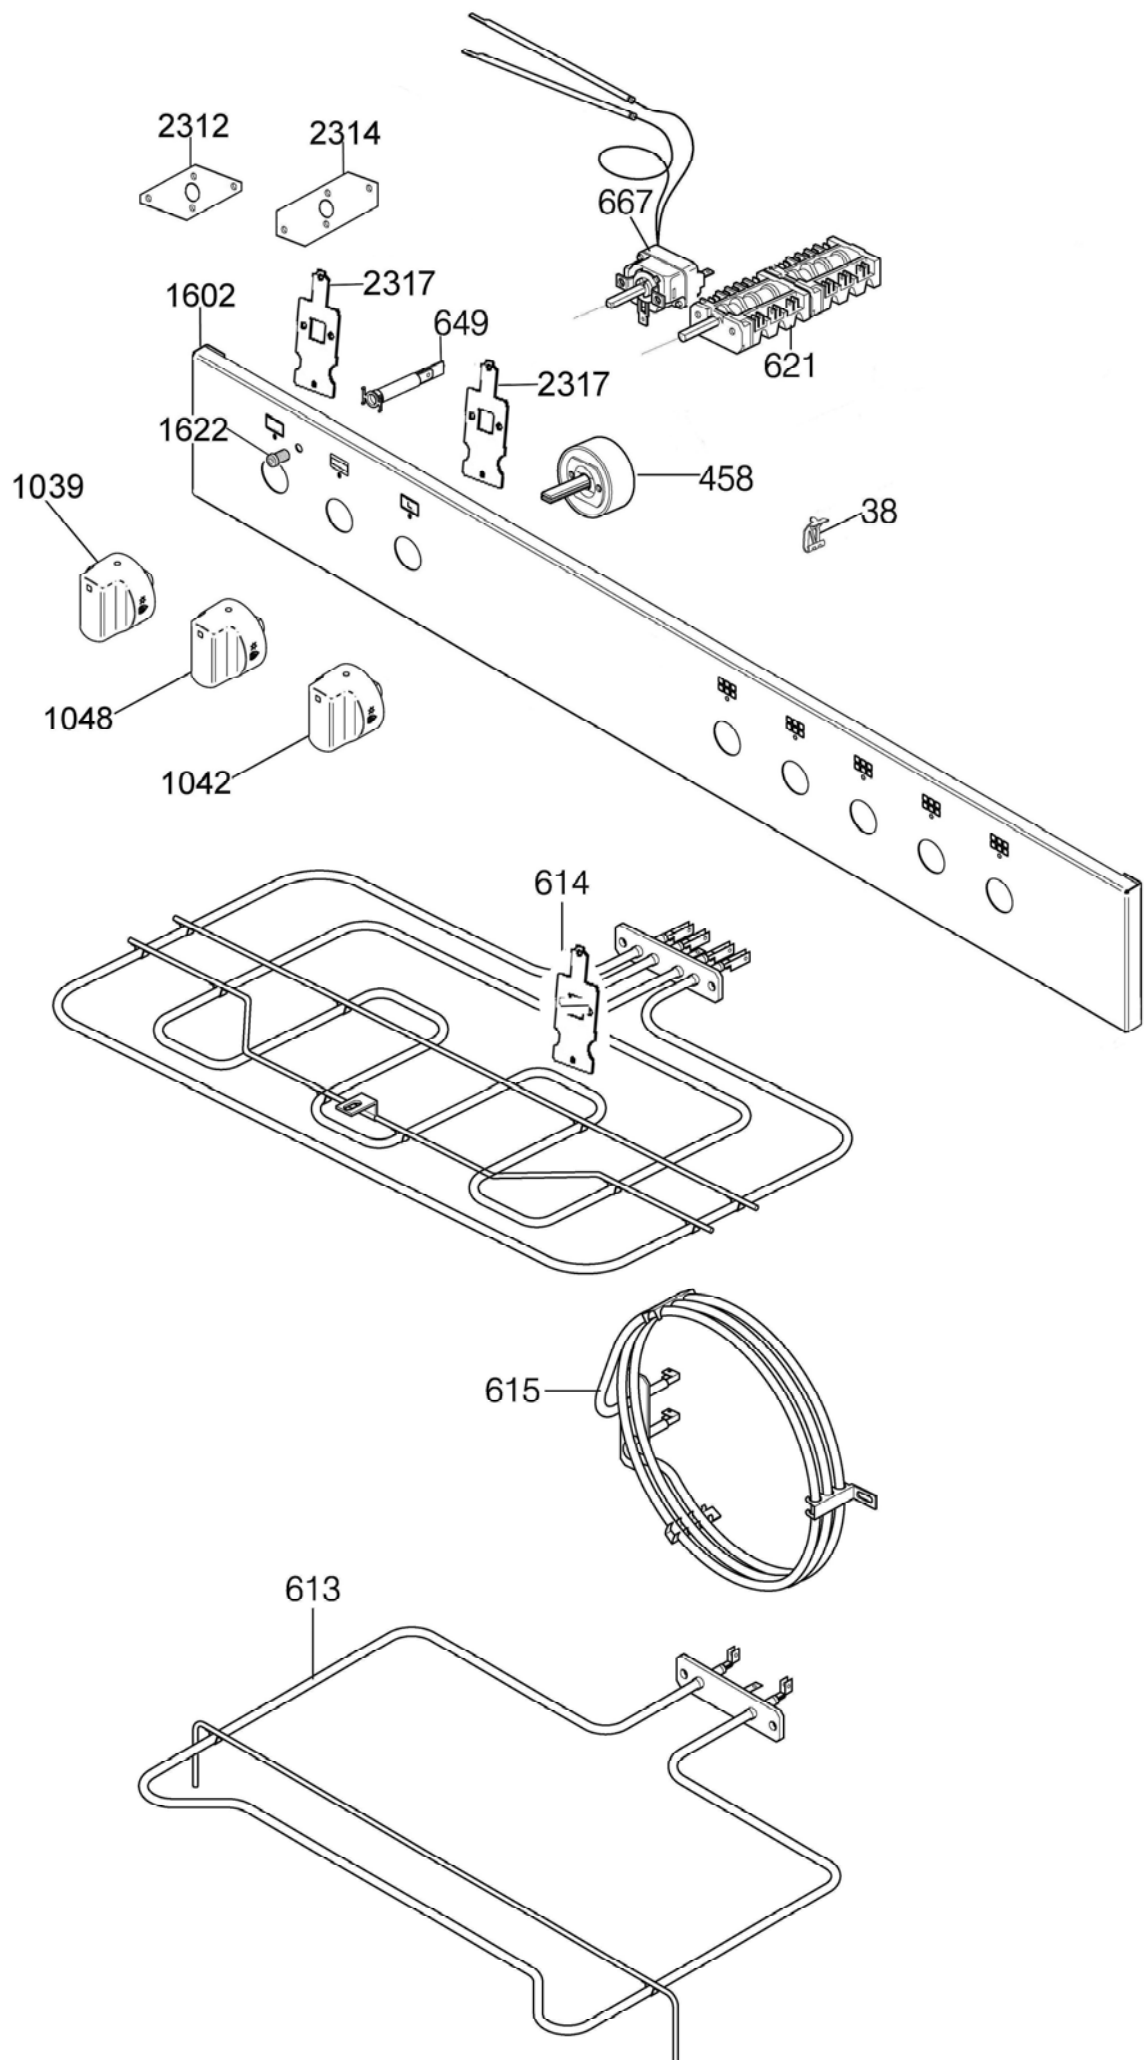

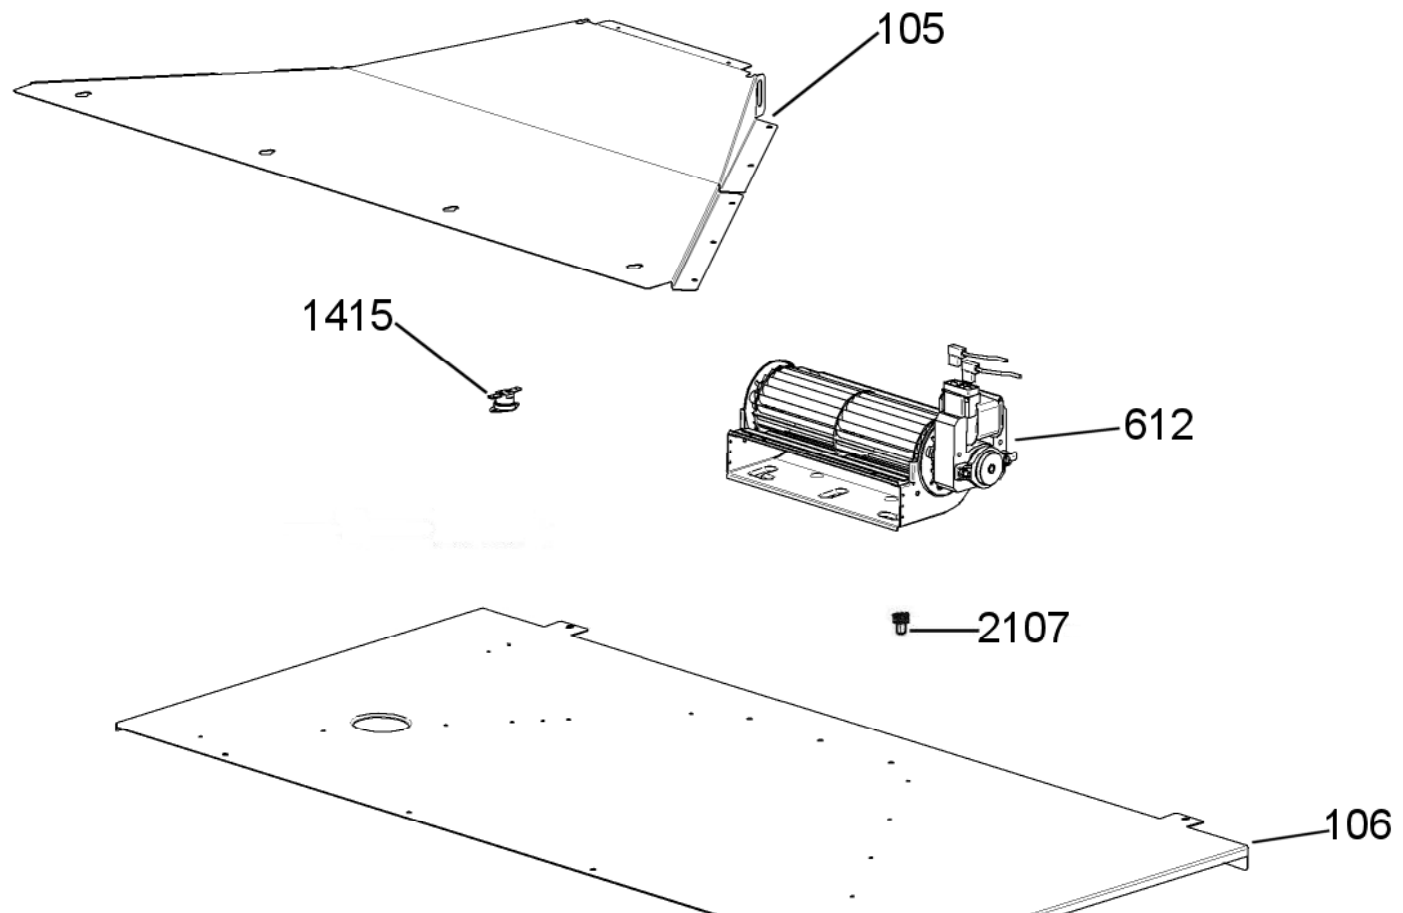

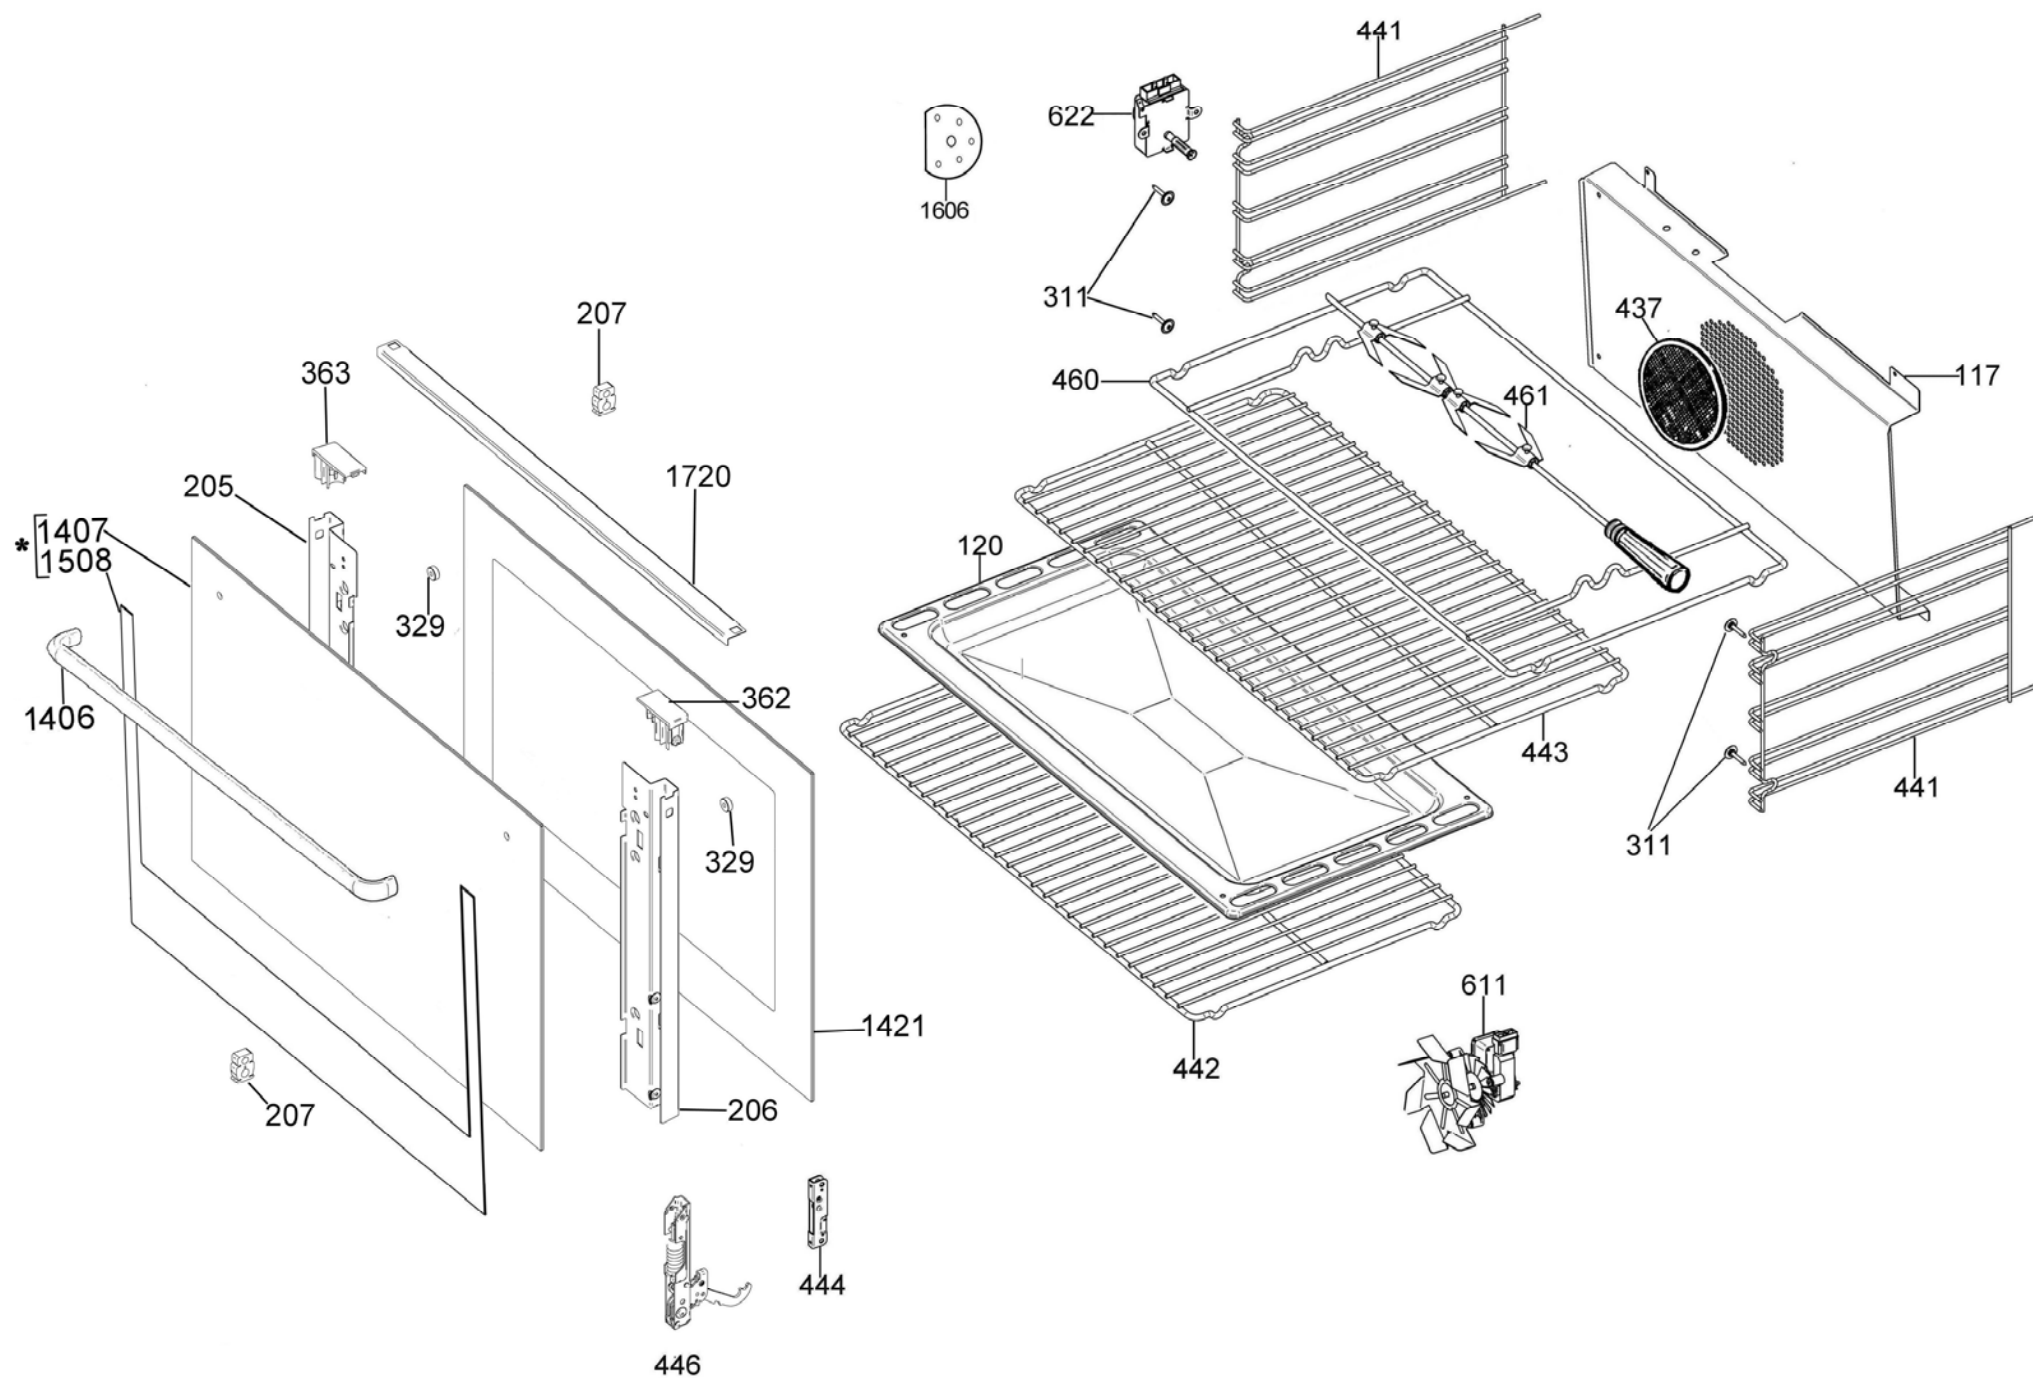

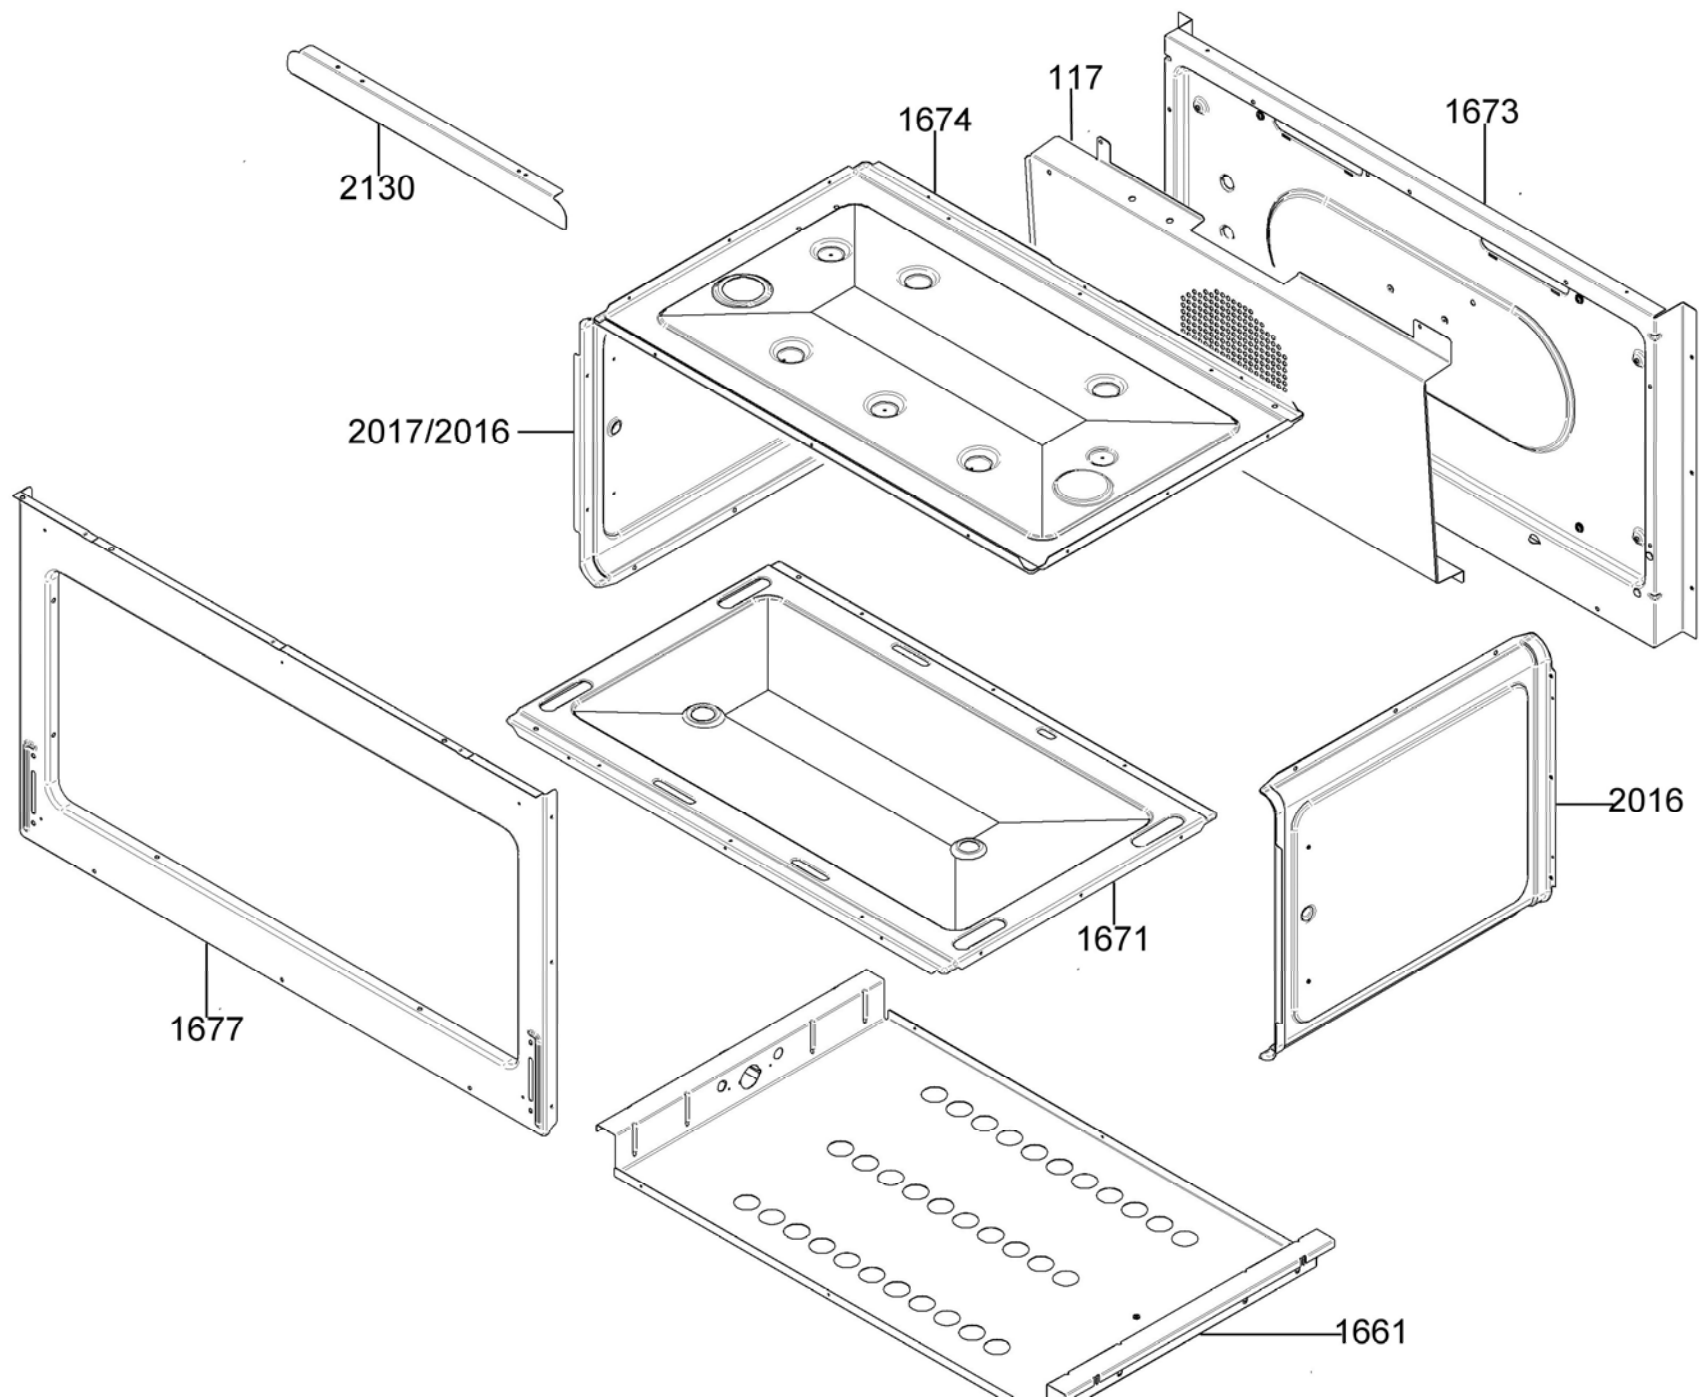

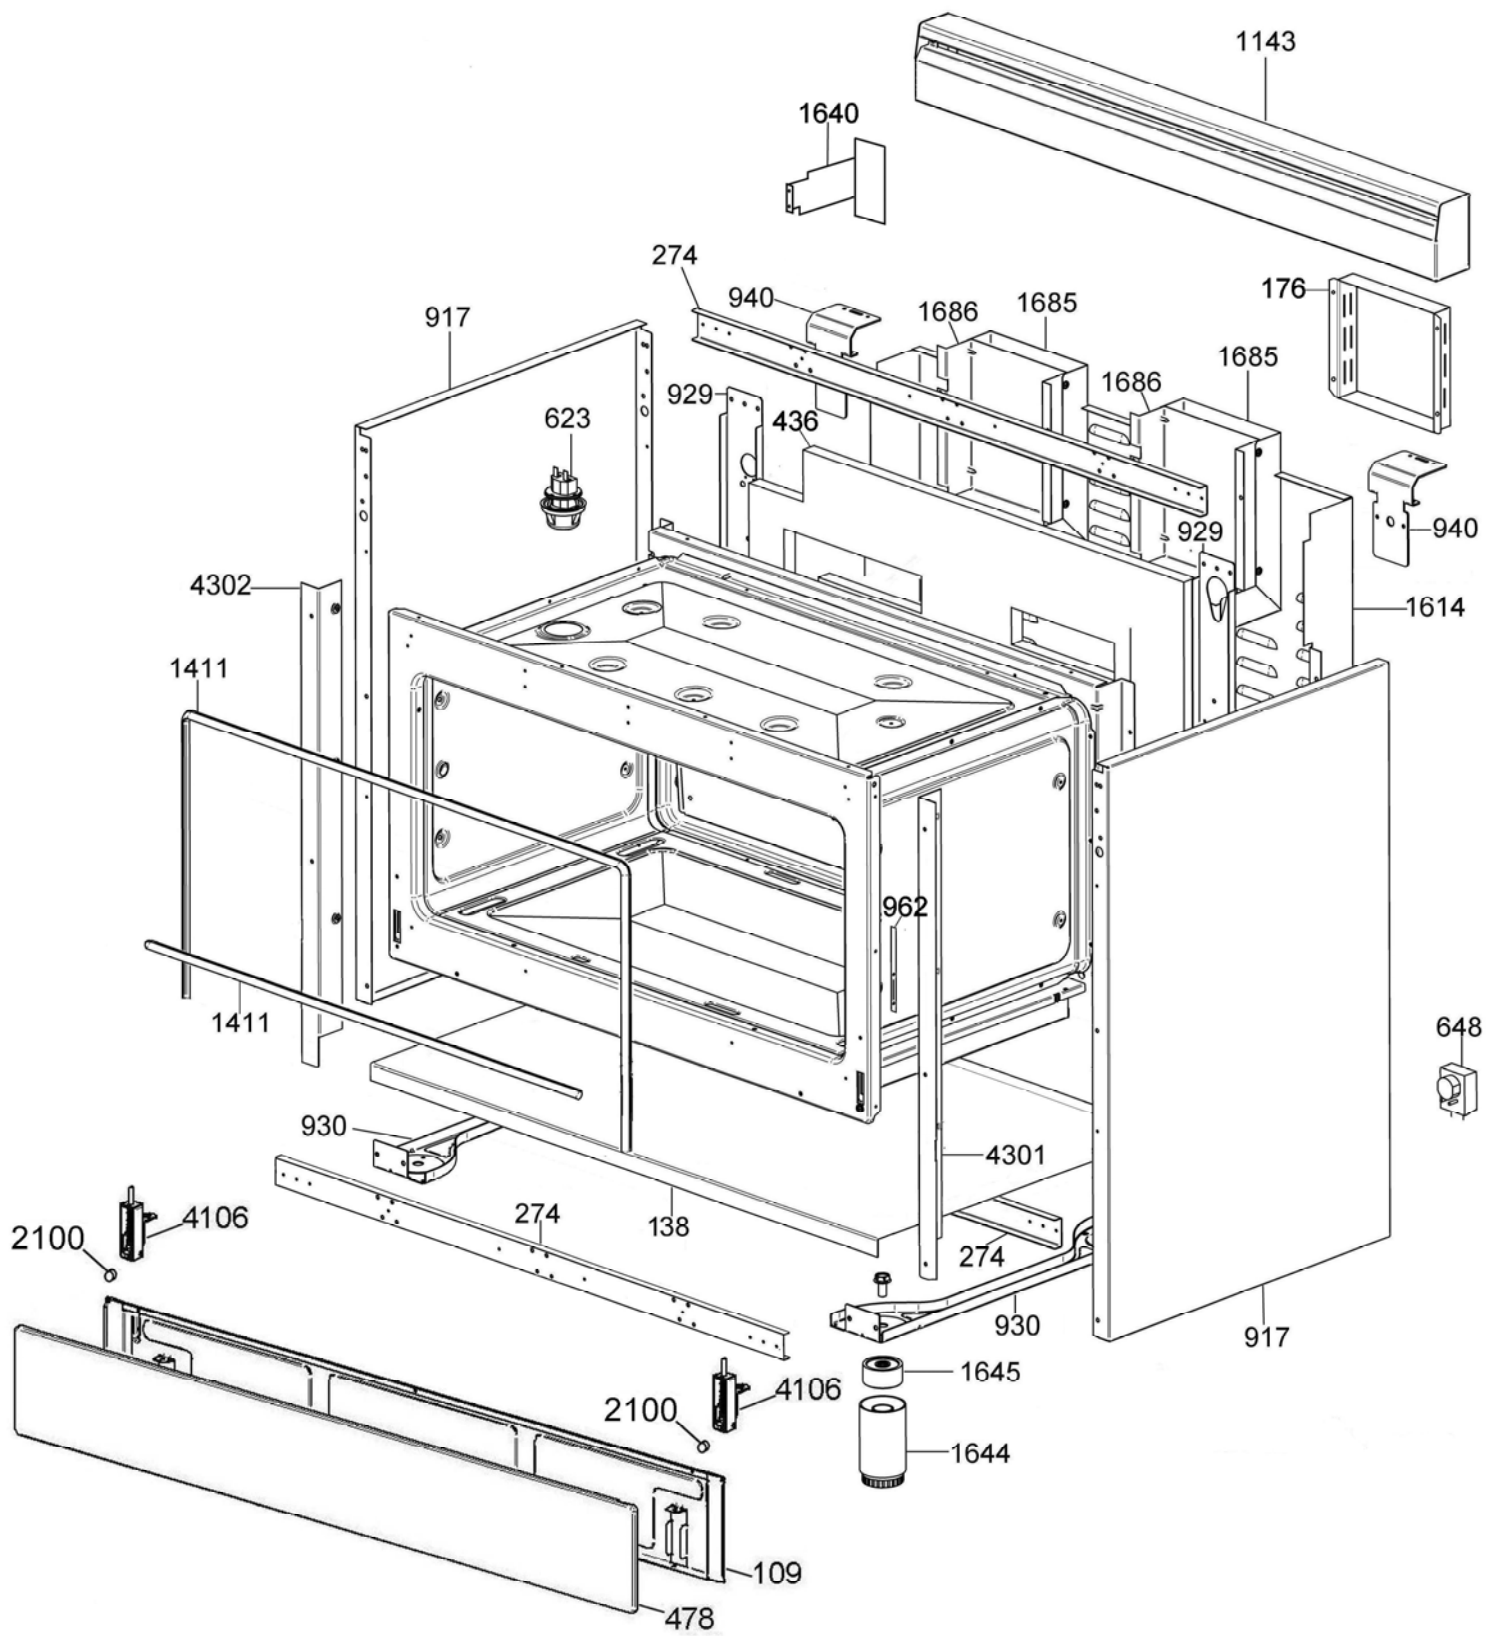

Model: BAU95EG

No	Part No.	Description	Qty
1	601503	CIRCUIT DIAGRAM	1
1	601734	CIRCUIT DIAGRAM	1
1	800112	EXPLODED VIEW COOLING FAN	1
1	800290	EXPLODED VIEW OF MUFFLE	1
1	800617	EXPLODED VIEW OF WORK TABLE	1
1	800743	EXPLODED VIEW OF STRUCTURE	1
1	800814	EXPLODED VIEW OF OVEN	1
1	800824	EXPLODED VIEW OF DOTATION	1
1	910588	PAN SUPPORT BUMPER KIT	1
2	3100141	USER MANUAL	1
11	202631	BURNERS FLASK	2
38	306032	THERMOSTAT CLIP	4
80	504160	COVER FOR SMALL FLAME SPREADER	1
81	504161	COVER FOR MEDIUM BURNER	2
82	504162	COVER FOR RAPID BURNER	1
83	504800	COVER OUT FOR ULTRA RAPID FLAME SPREADER	1
84	504798	COVER IN FOR ULTRA RAPID FLAME SPREADER	1
105	2020063	UP SUPPORT FOR AXIAL COOLIN FAN	1
106	2020062	DOWN SUPPORT FOR AXIAL COOLIN FAN	1
109	202220	INSIDE FLAP DOOR	1
117	190061	SELF CLEANING PROT. FOR VENT.OVEN 9000	1
120	101280	OVEN TRAY	1
138	202994	DISHWARMER BOTTOM	1
160	202526	BRIDLE FOR FIXING GAS VALVES	1
205	410987	PROFILE FOR GLASS DOOR	1
206	410986	PROFILE FOR GLASS DOOR	1
207	308061	BUMPER FOR GLASS	2
274	202428	HORIZONTAL VENT	1
274	202681	HORIZONTAL VENT	2
311	301156	SCREW 4,2X30	4
329	309176	INSIDE DOOR PAN COMPARTMENT SPACER	2
362	4010451	PROFILE FOR GLASS DOOR TAP RIGHT	1
363	4010452	PROFILE FOR GLASS DOOR TAP LEFT	1
385	306024	SPRING FOR SPARK PLUG	5
389	301105	SCREW	2
425	415054	SPARK	2
426	415057	SPARK	2
428	415102	SPARK	1
430	415081	ACCUMULATOR	1
436	402475	BACK FIBER GLASS	1
441	404042	SIDE GRID FOR OVEN	2
442	404154	GRID FOR OVEN	2
443	404151	GRID FOR TRAY	1
444	202936	FLASK HINGE	2
446	405134	OVEN DOOR HINGE	2
450	409040	ELECTRONIC PROGRAMMER	1
478	200203	DISHWARMER FLAP DOOR	1
561	508025	THERMOCOUPLE MM300	1
562	508021	THERMOCOUPLE MM600	2
565	508027	THERMOCOUPLE MM800	1
566	508034	THERMOCOUPLE ULTRA-RAPID	1
611	603037	MOTOVENTILATOR	1
612	603039	COOLING FAN	1
613	606094	HEATING ELMENT 1800W 240V	1
614	606095	UPPER+GRILL RESISTANCE	1
615	606045	CIRCULAR HEATER 3000W 240V	1
621	602031	COMMUTATOR 9+0	1
623	608062	OVEN BULB WITH HOLDER	1
648	601965	TERMINAL SEPARATOR	1
649	608034	SMALL WARNING LIGHT	1
667	602025	THERMOSTAT	1

No	Part No.	Description	Qty
670	504128	SMALL FLAME SPREADER	1
671	504129	MEDIUM FLAME SPREADER	2
672	504130	RAPID FLAME SPREADER	1
673	504796	ULTRA RAPID FLAME SPREADER	1
715	604072	DASYCHAIN SWITCH	1
760	510507	SMALL BURNER	1
761	510508	SEMI RAPID BURNER	2
762	510509	RAPID BURNER	1
763	510708	ULTRA-RAPID BURNER	1
880	502217	GAS	1
881	502218	GAS	2
882	502221	GAS	1
883	502223	GAS	1
917	200302	STAINLESS	2
929	202108	VERTICAL VENT	2
930	202214	FEET SUPPORT	2
940	201220	FIXING FOR WORK TABLE	2
943	308041	BUMPER	4
960	408074	CAST IRON PAN SUPPORT	1
965	408073	CAST IRON PAN SUPPORT	2
1039	4010511	THERMOSTAT KNOB	1
1041	4010278	GAS VALVE KNOB	5
1048	4010510	COMMUTATOR KNOB	1
1143	410738	RISER	1
1407	406431	OUTER OVEN DOOR GLASS	1
1411	411087	GASKET FOR OVEN FRONT	1
1411	411088	GASKET FOR OVEN FRONT	1
1415	602037	THERMOREGULATOR	1
1421	406588	INNER OVEN DOOR GLASS	1
1508	410967	STAINLESS STEEL OVEN	1
1602	2100136	CONTROL PANEL	1
1614	202888	BACK PROTECTION	1
1615	202907	CONTROL SUPPORT	1
1616	402169	FIBER GLASS	2
1622	608029	SMALL YELLOW BUD	1
1624	200431	WORK TABLE	1
1627	501937	GAS COLLECTOR	1
1628	5010103	FRONT RIGHT TUBE	1
1629	501871	LEFT FRONT TUBE	1
1630	5010101	RIGHT BACK TUBE	1
1631	501870	LEFT BACK TUBE	1
1632	501869	CENTRAL TUBE	1
1640	202223	CLAMP PROTECTION FOR FLAP DOOR	1
1644	414055	FEET	4
1645	414063	BASE FOR LEGS	4
1661	202127	OVEN PANEL	1
1671	101256	ELECTRIC OVEN PANEL	1
1673	101468	BACK PANEL FOR OVEN	1
1674	101115	OVEN TOP PANEL BLACK	1
1677	101497	FRONT PANEL BLACK	1
1685	201152	BACK VENT STACK	2
1720	200858	OVEN DOOR SUPPORT	1
2016	190040	OVEN SIDE PANEL BLACK RIGHT	2
2100	308041	BUMPER	2
2100	308041	BUMPER	1
2122	202370	CONTROL SUPPORT AND RESIST. PROTECTION	1
2130	201159	GRILL PROTECTION	1
2317	202720	THERMOSTAT SUPPORT	2
4106	405047	HINGE FOR FLAP DOOR	2
4276	403629	OVEN HANDLE	1
4301	410978	RIGHT VERTICAL PROFILE	1
4302	410979	VERTICAL LEFT PROFILE	1

No	Part No.	Description	Qty
4311	409008	BLACK PUSH BUTTON FOR PROGRAMMER	5