



34L Microwave Oven

Model: BMWO34



INSTRUCTION MANUAL

Read these instructions carefully before using your microwave oven, and keep as a reference guide.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- a) Do not attempt to operate this oven with the door open, as it can result in harmful exposure to microwave energy. It is important not to break or tamper with safety interlocks.
- b) Do not place any object between the front face of the oven and the door. Do not allow residue to accumulate on sealing surfaces.
- c) WARNING: If the door or door seals are damaged, do NOT operate the unit until it has been repaired by an authorised repairer.

ADDENDUM

If the unit is not maintained sufficiently, its surface could be degraded and affect the lifespan of the unit. Surface degradation can be dangerous.

Specifications

Model:	BMW034
Rated Voltage:	240V~ 50Hz
Rated Input Power(Microwave):	1500 W
Rated Output Power(Microwave):	1100 W
Oven Capacity:	34L
Turntable Diameter:	Ø315 mm
External Dimensions:	519X421X315mm
Net Weight:	Approx.15.87kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic pre-cautions including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers due to risk of explosion.
2. Warning: It is hazardous for anyone other than a licensed repairer to carry out any service or repair operation that involves the removal of the unit cover which gives protection against exposure to microwave energy.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
4. Keep the appliance and its cord out of reach of children under the age of 8 years.
5. Only use utensils that are suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
8. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
9. Do not overcook food.
10. Do not use the oven cavity for storage purposes. Do not store items such as bread, cookies etc inside the oven.

11. Removable wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
12. Install or locate this oven only in accordance with the installation instructions provided.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. This appliance is intended to be used in domestic appliances only. Use in any other applications may void the warranty.
15. If the supply cord is damaged, it must be replaced by the manufacturer, licensed service agent or similarly qualified persons in order to avoid a hazard.
16. Do not store or use this appliance outdoors.
17. Do not use this oven near water, in a wet basement or near a swimming pool.
18. The temperature of accessible surfaces may be high when appliance is operating. The surfaces may get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
19. Do not let the cord hang over the edge of tables or counters.
20. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
21. Please use caution when heating infant bottles or food. Always shake or stir food and test temperature before consumption to avoid burns or injury.
22. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
23. Children should be supervised to ensure that they do not play with the appliance.

24. The appliances are not intended to be operated by means of an external timer or separate remote control.
25. Accessible parts may become hot during use. Young children should be kept away.
26. Do not clean the unit with a steam cleaner.
27. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
28. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age should be kept away unless continually supervised.
29. The rear surface of the appliance must be placed against a wall.
30. The microwave oven must not be placed in a cabinet.
31. The microwave oven is intended for heating food and beverages. Drying food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar materials may lead to risk of injury, ignition or fire.

**Please read and understand above before using your appliances.
Keep for future reference.**

WARNING TO PERSONS GROUNDING INSTALLATION

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble the appliance.

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The extension cord must be a grounding-type 3-wire cord.

- c. The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply before cleaning.

1. Clean the cavity of the oven after use with a slightly damp cloth.
2. Clean the accessories in soapy water.
3. The door frame, seal and neighbouring parts must be cleaned carefully with a damp cloth regularly. Do not operate unit if these are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning tip – for easier cleaning of the cavity walls place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a licensed repairer to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on “Materials you can use in microwave oven or to be avoided in microwave oven.” There may be certain non-metallic

utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following below steps:

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

MATERIALS YOU CAN USE IN A MICROWAVE OVEN

Aluminium Foil

Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.

Browning Dish

Following manufacturer's instructions. The bottom of the browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.

Dinnerware

Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.

Glass Jars

Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.

Glassware

Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use crack or chipped dishes.

Oven Cooking Bags

Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.

Paper Plates and Cups

Use for short-term cooking/warming only. Do not leave oven unattended while cooking.

Paper Towels

Use to cover food for re-heating and absorbing fat. Use with supervision for short-term cooking only.

Parchment Paper

Use as a cover to prevent splattering or a wrap for steaming.

Plastic

Microwave-safe only. Follow manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed on the packaging.

Plastic Wrap

Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.

Thermometers

Microwave-safe only (meat and candy thermometers).

Wax Paper

Use as a cover to prevent splattering and retain moisture.

MATERIALS TO BE AVOIDED IN A MICROWAVE OVEN

Utensils

Remarks.

Aluminium Tray

May cause arcing. Transfer food into microwave-safe dish.

Food Carton with Metal Handle

Metal shields the food from microwave energy. Metal trim may cause arcing.

Metal Twist Ties

May cause arcing and could cause a fire in the oven.

Paper Bags

May cause a fire in the oven.

Plastic Foam

Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.

Wood

Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

1 x Glass Tray


1 x Turntable Ring Assembly

1 x Instruction Manual

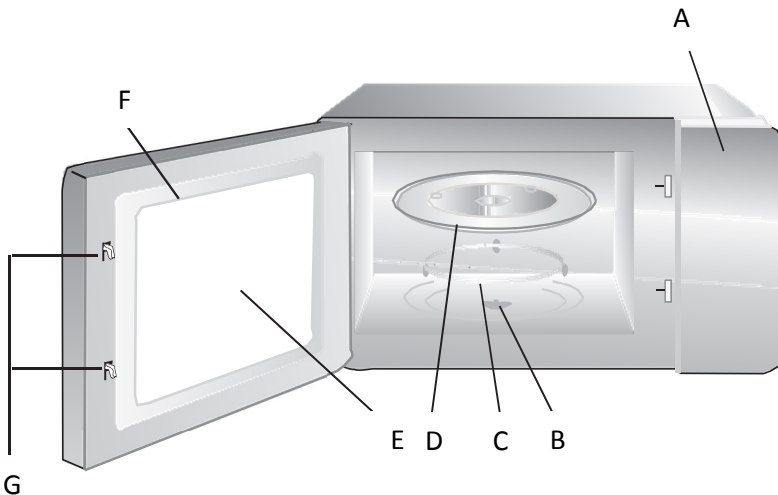

- A) Control Panel
- B) Turntable Shaft
- C) Turntable Ring Assembly
- D) Glass Tray
- E) Observation Window
- F) Door Assembly
- G) Safety Interlock System

Turntable Installation

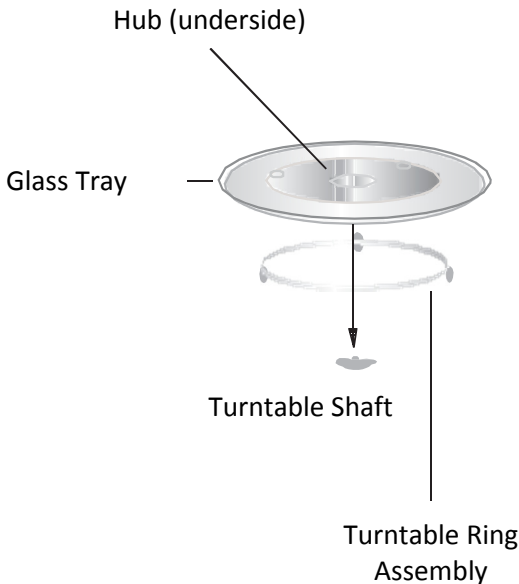

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If the glass tray or turntable ring assembly cracks or breaks, contact your nearest authorised service centre.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if the oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provides enough open space for the inlet and/or outlet vents.

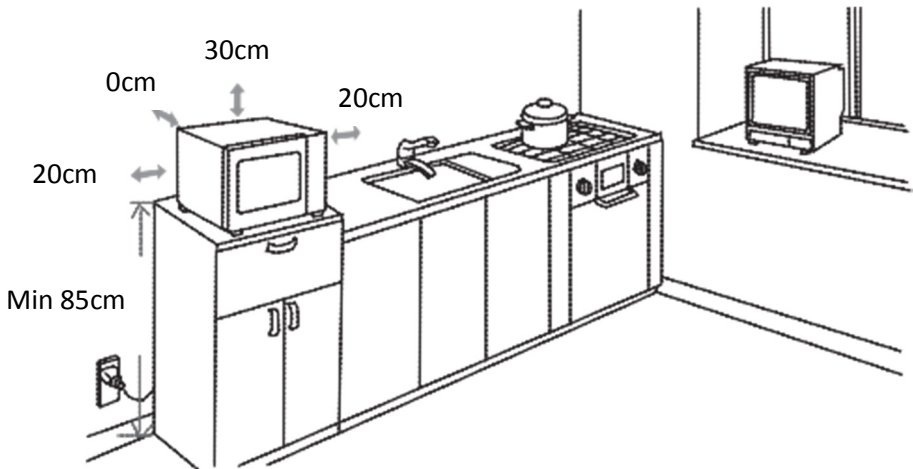

- a. The minimum installation height is 85cm above floor level.
 - b. The rear surface of appliance must be placed against a wall. Leave a minimum clearance of 30cm above the oven, and a minimum clearance of 20cm is required between the oven and any adjacent walls.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Place the oven as far away from radios and TV's as possible. Operation of the microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and void the warranty.



The accessible surface may be hot during operation.

Operating Instructions

This microwave uses electronic controls to adjust cooking parameters to achieve your desired cooking results.

Clock Setting

- 1) In standby mode, press “CLOCK/TIMER” once, “00:00” displays. The hour figures will flash.
- 2) Turn  to adjust the hour figures, the input time should be within 0—23.
- 3) Press “CLOCK/TIMER”, the minute figures will flash.
- 4) Turn  to adjust the minute figures, the input time should be within 0—59.
- 5) Press “CLOCK/TIMER” to finish clock setting. “:” will flash.

Note: 1) The clock will not set if the unit is not powered.

2) When setting the clock, if you press “STOP/CLEAR”, you will exit the clock setting function.

Microwave Cooking

- 1) Press “MICROWAVE” once, the screen will display “P100”.
- 2) Press “MICROWAVE” once again or turn  to select power. Power from 100% to 10%, “P100 = 100%”, “P80 = 80%”, “P50 = 50%”, “P30 = 30%”, “P10 = 10%”.
- 3) Press “Start/+30Sec/Confirm” to confirm, and the screen displays “P80”.

4) Turn  to adjust cooking time (The time setting should be 0:05 – 95:00)

5) Press “Start/+30Sec/Confirm” to start cooking.

Note: the step quantities for the adjustment time of the coding switch are as follows:

0—1 min	:	5 seconds
1—5 min	:	10 seconds
5—10 min	:	30 seconds
10—30 min	:	1 minutes
30—95 min	:	5 minutes

Quick Start

- 1) In standby mode, press “Start/+30Sec/Confirm” to start cooking with 100% power. Each time this button is pressed, 30 seconds will be added to the cooking time, up to 95 minutes.
- 2) During cooking or in defrost state, you can add 30 seconds of cooking time by pressing “Start/+30Sec/Confirm” button.
- 3) In standby mode, turn  left to set cooking time with 100% power, then press “Start/+30Sec/Confirm” to start cooking.

Defrost by Weight

- 1) Press “WEIGHT/TIME DEFROST” once, and the oven will display “dEF1”.
- 2) Turn  to select the weight of food from 100g to 2000g.
- 3) Press “Start/+30Sec/Confirm” to start defrosting.

Defrost by Time

- 1) Press “WEIGHT/TIME DEFROST” twice, and the oven will display “dEF2”.
- 2) Turn  to select defrost time. The MAX time is 95 minutes.
- 3) Press “Start/+30Sec/Confirm” to start defrosting. The defrost power is P30 (30%), and it cannot be changed.

Timer

- 1) Press "TIMER/CLOCK" once, and the oven will display 00:00.
- 2) Turn  to enter correct timer (the maximum cooking time is 95 minutes).
- 3) Press "Start/+30Sec/Confirm" to confirm setting.
- 4) When the time is reached, the clock indicator will go out and the buzzer will ring 5 times. If the clock has been pre-set, the screen will display the current time.

Multi-Stage Cooking

This microwave will allow you to cooking in stages. For example, you can defrost the food for 5 minutes, then operate the unit at 80% for the remaining 7 minutes. To do this, use the steps below (noting that a buzzer will ring once after every stage of cooking):

- 1) Press "WEIGHT/TIME DEFORST" twice, the screen will display "d-2".
- 2) Turn  to adjust the defrost time to 5 minutes. The screen should display "5:00".
- 3) Press "MICROWAVE" once, the screen will display "P100"
- 4) Press "MICROWAVE" once again or turn  to choose 80% microwave power.
- 5) Press "Start/+30Sec/Confirm" to confirm, the screen should display "P80".
- 6) Turn  to adjust the cooking time until the oven displays "7:00".
- 7) Press "Start/+30Sec/Confirm" to start cooking. The buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking stage. When cooking is finished, the buzzer will sound 5 times.

Auto Menu

- 1) Turn  right to choose the menu, and “A-1” to “A-8” will display, which means pizza, meat, vegetables, pasta, potato, fish, beverage and popcorn.
- 2) Press “Start/+30Sec/Confirm” to confirm.
- 3) Turn  to choose the default weight as per the menu chart.
- 4) Press “Start/+30Sec/Confirm” to start cooking.

Example, if you want to use “Auto Menu” to cook fish for 350g:

- a) Turn  clockwise until “A-6” is displayed.
- b) Press “Start/+30Sec/Confirm” to confirm.
- c) Turn  to select the weight of the fish until “350” is displayed.
- d) Press “Start/+30Sec/Confirm” to start cooking.

Auto Menu

Menu	Weight	Display
A-1 Pizza	200g	200
	400g	400
A-2 Meat	250g	250
	350g	350
	450g	450
A-3 Vegetable	200g	200
	300g	300
	400g	400
A-4 Pasta	50g (with water 450g)	50
	100g(with water 800g)	100
A-5 Potato	200g	200
	400g	400
	600g	600
A-6 Fish	250g	250
	350g	350
	450g	450
A-7 Beverage	1 cup (120ml)	1
	2 cup (240ml)	2
	3 cup (360ml)	3
A-8 Popcorn	50g	50
	85g	85
	100g	100

Inquiring Function

- 1) In cooking state, press “MICROWAVE”, the current power will be displayed for 2-3 seconds.
- 2) During cooking state, press “CLOCK/TIMER” to check the current time. It will be displayed for 2-3 seconds.

Lock-Out Function for Children

Lock: In standby mode, press “STOP/CLEAR” for 3 seconds, there will be a long “beep” denoting entering into the child-lock state and the locked indicator light will turn on. Screen will display current time of 0:00.

Un-locking: In locked state, press “STOP/CLEAR” for 3 seconds, there will be a long “beep” denoting that the lock is released. The “key logo” will disappear.

WARRANTY

The warranty period is 24 months from date of purchase.

CONTACT

Glen Dimplex Australia P/L

Unit 1, 21 Lionel Road
Mount Waverley VIC 3149
Australia

Ph: 1300 556 816

Fax: 1800 058 900

Web: www.belling.com.au

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki
Manukau, Auckland 2013
New Zealand

Ph: 09 274 8265

Fax: 09 274 8472

Web: www.belling.co.nz

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



- Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities.

- Contact your local government for more information regarding the collection systems available.

- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into ground water, polluting the food chain and damaging health and well-being.