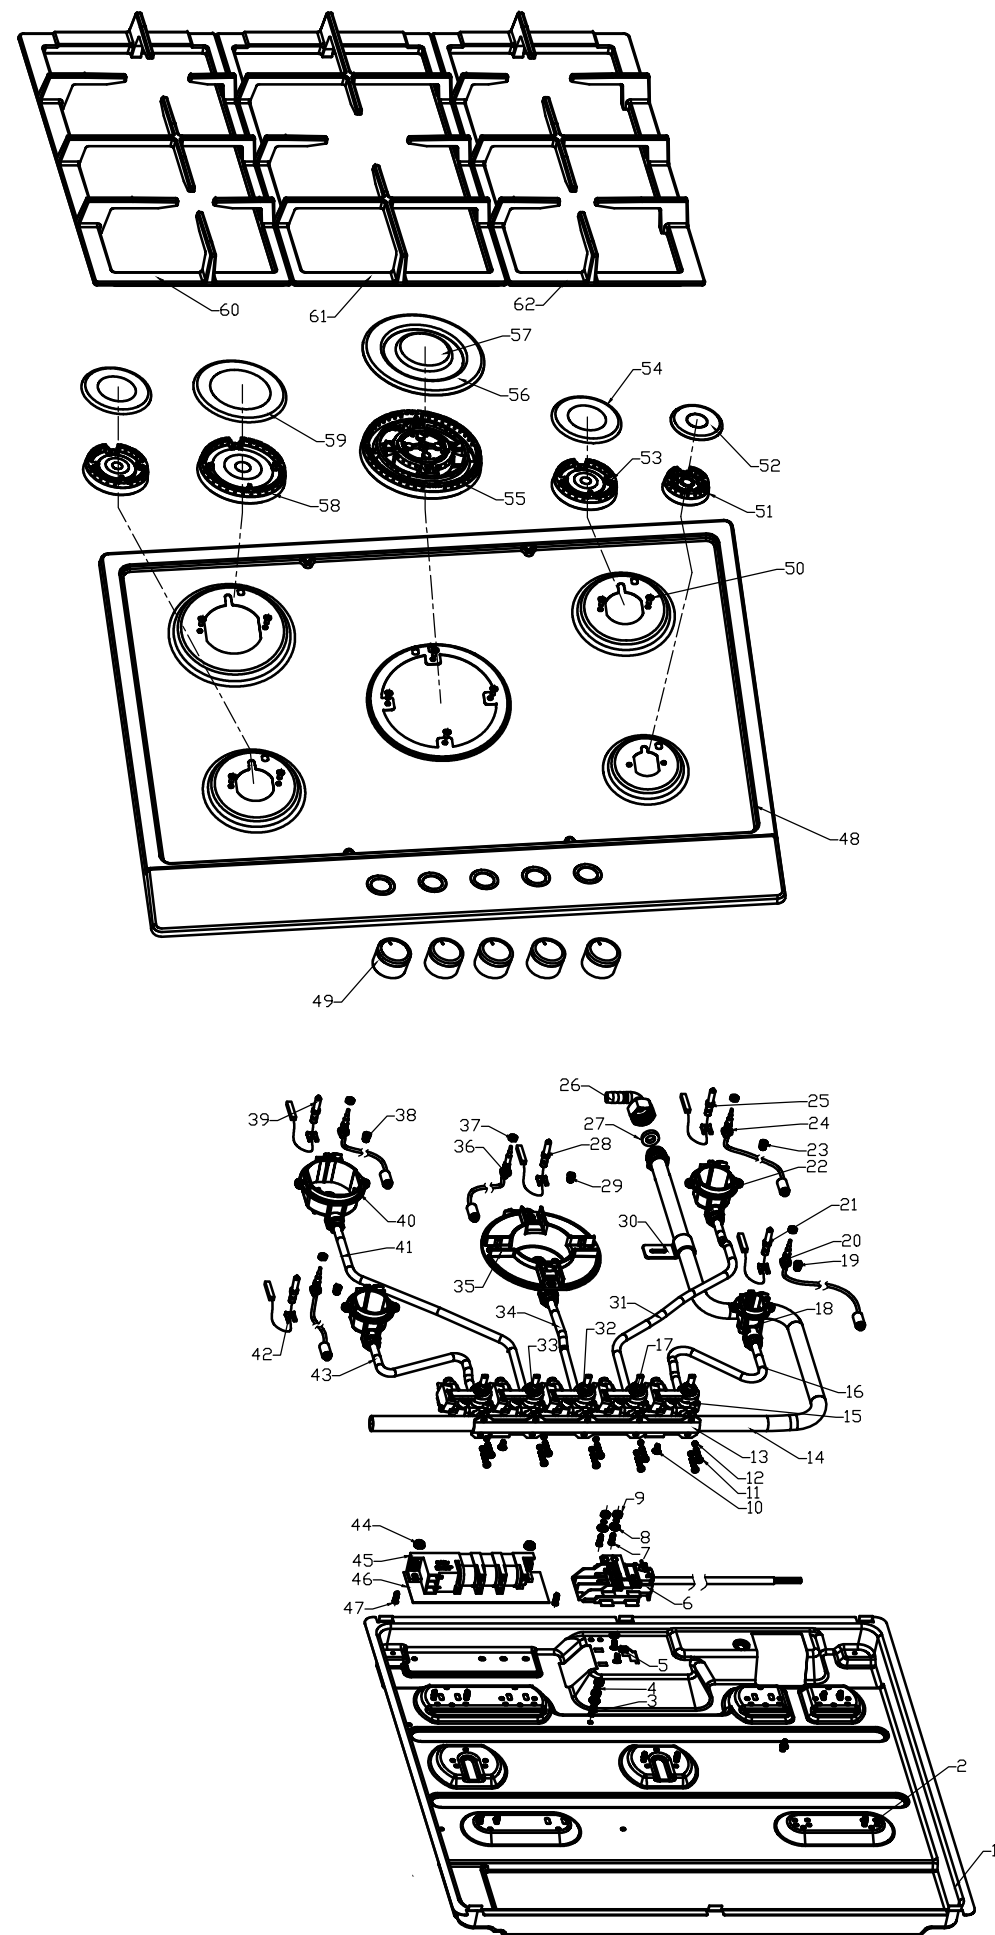


Model: CD7SG1

No	Part No.	Description	Qty
1	12S705-D	Bottom plate	1
2	GB/T818-2000	screw	10
3	GB/T818-2000	screw	1
4	GB/T93-1987	spring washer	4
5	GB/T6170-2000	nut	2
6	240001	Electric box	1
7	GB/T818-2000	screw	2
8	GB/T862.2-1987	washer	3
9	GB/T818-2000	nut	4
10	GB/T818-2000	nut	5
11	GB/T818-2000	screw	10
12	GB/T93-1987	spring washer	10
13	27935-F2	Nip for the tube	1
14	17S705-F	Inlet tube	1
15	141001	Valve 1	1
16	18S705-F5	Aluminum tube 5	1
17	141002	Valve 2	1
18	130501-1	50# burner basement	1
19	130501-4	50# nozzle	1
20	195281	Thermocouple (350)	1
21	201470	Ignition pin (470)	1
22	130701-1	70# burner basement	2
23	130701-4	70# nozzle	2
24	195282	Thermocouple (500)	1
25	201220	Ignition pin (220)	1
26	171003	Elbow	1
27	171002	Gasket washer	1
28	202210	Ignition pin (210)	1
29	131201-5	120# nozzle	1
30	271601	Nip for the tube	1
31	18S705-F4	Aluminum tube 4	1
32	141004	Valve 4	1
33	141003	Valve 3	1
34	18S705-F3	Aluminum tube 3	1
35	131201-1	120# burner basement	1
36	195161	Thermocouple (350)	1
37	GB/T6172.1-2000	nut	5
38	131001-4	100# nozzle	1
39	201370	Ignition pin (370)	1
40	131001-1	100# burner basement	1
41	18S705-F2	Aluminum tube 2	1
42	200005	Ignition braket	5
43	18S705-F1	Aluminum tube 1	1
44	GB/T6172.1-2000	nut	5
45	216220	Ignition sparker	1
46	216001	Insulation sheet	1
47	GB/T818-2000	screw	2
48	11S705-F	S.S panel	1
49	220001-Z	Knob	5
50	GB/T819.1-2000	screw	12
51	130501-2	50# burner	1
52	130501-3	50# burner cap	1
53	130701-2	70# burner	2
54	130701-3	70# burner cap	2
55	131201-2	120# burner	1
56	131201-3	120# burner cap - external	1
57	131201-4	120# burner cap - internal	1
58	131001-2	100# burner	1
59	131001-3	100# burner cap	1

No	Part No.	Description	Qty
60	15S705-D1	Left pan support	1
61	15S705-D3	Middle pan support	1
62	15S705-D2	Right pan support	1
	240001	Electric box	
	200004-1	Ignition pin (120)	1
	200003-4	Ignition pin (470)	1
	131205	120# nozzle	1
	171003	connector	1
	171004	Nut for connector	1