




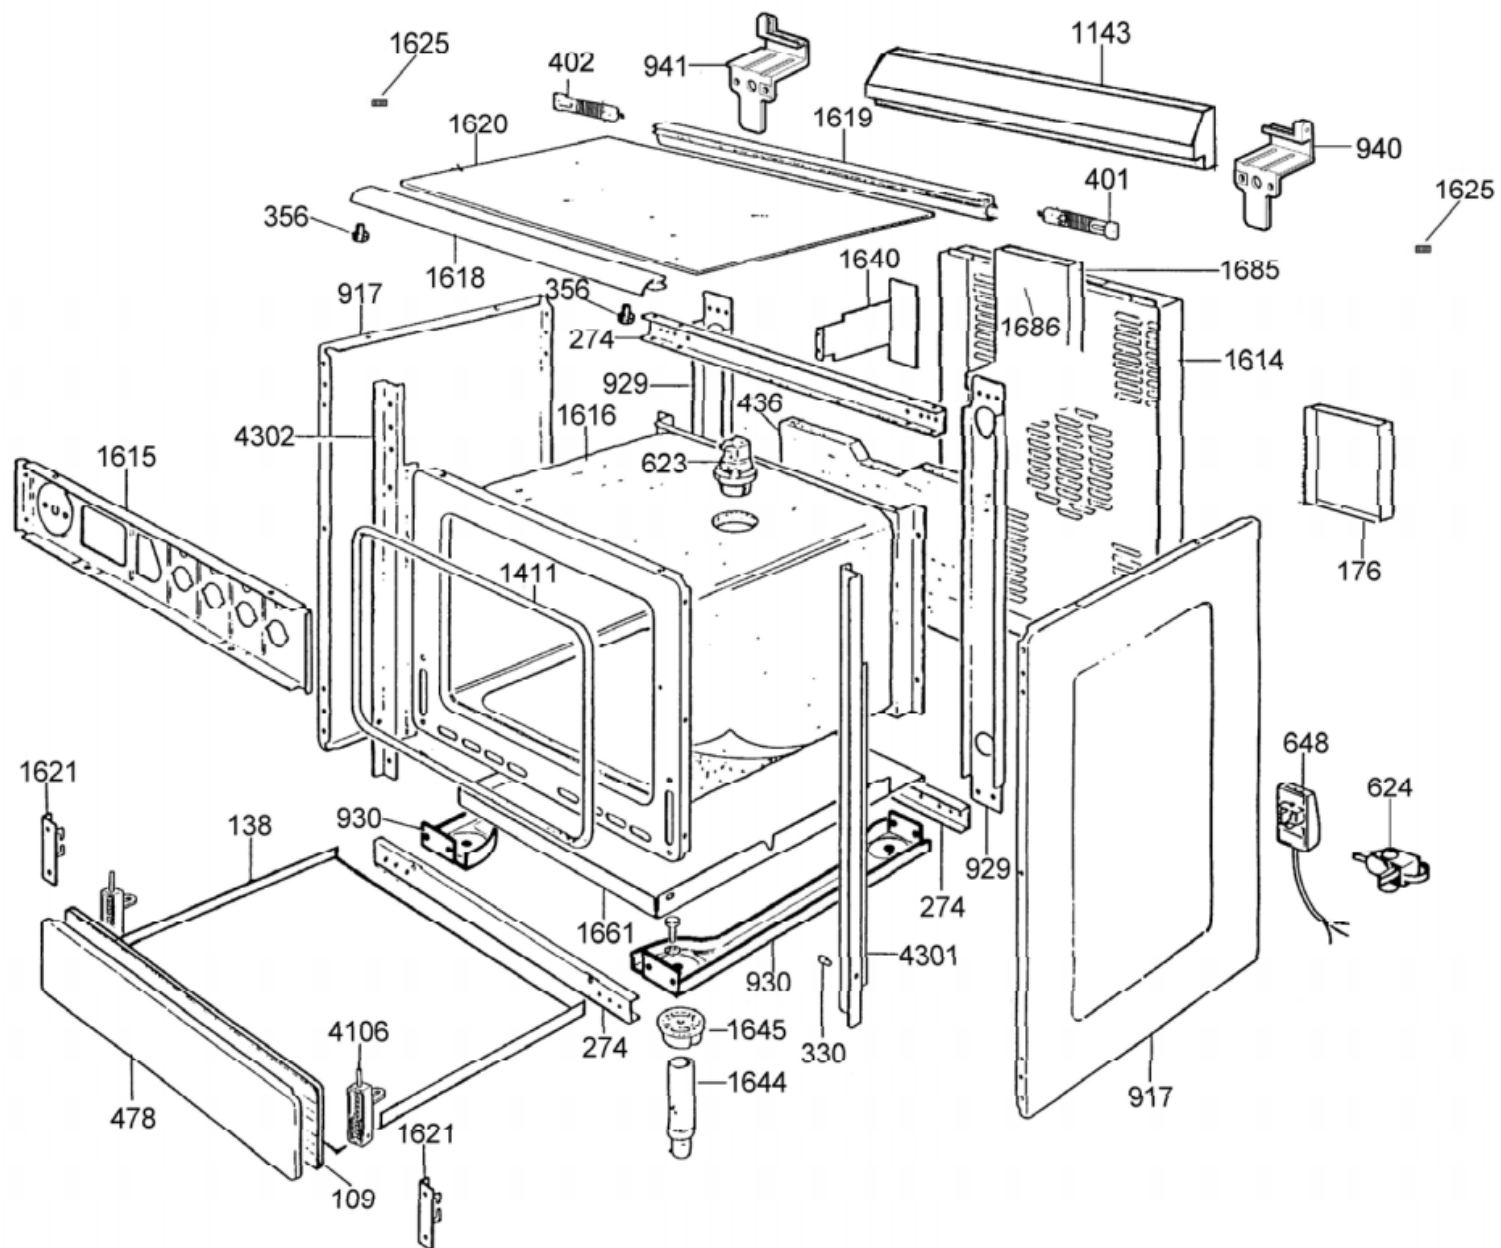
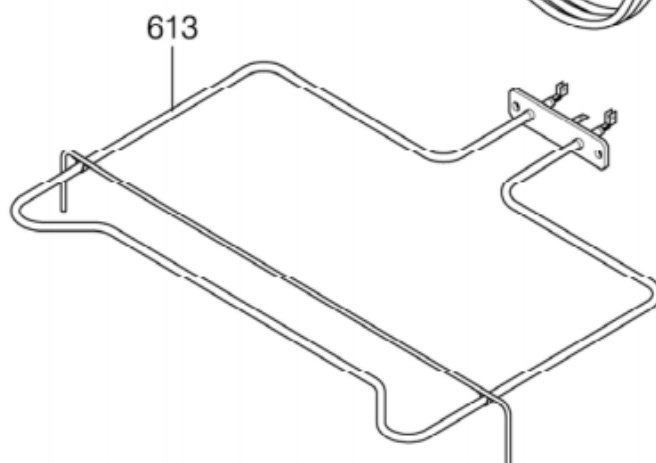
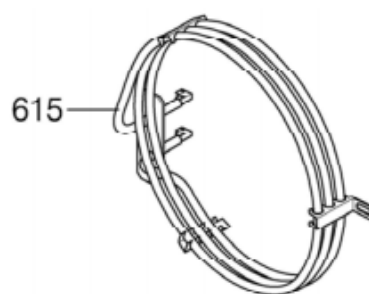
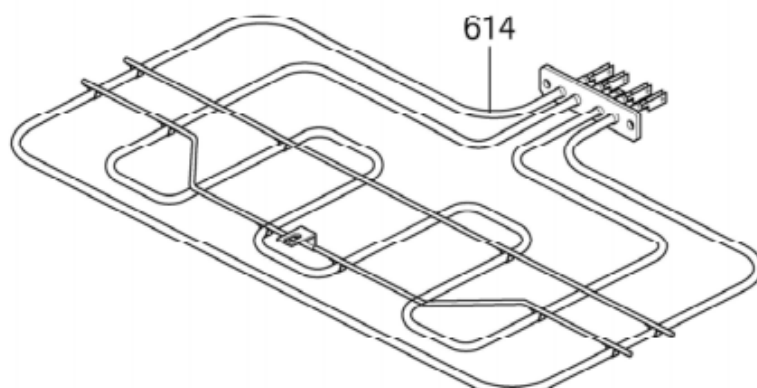


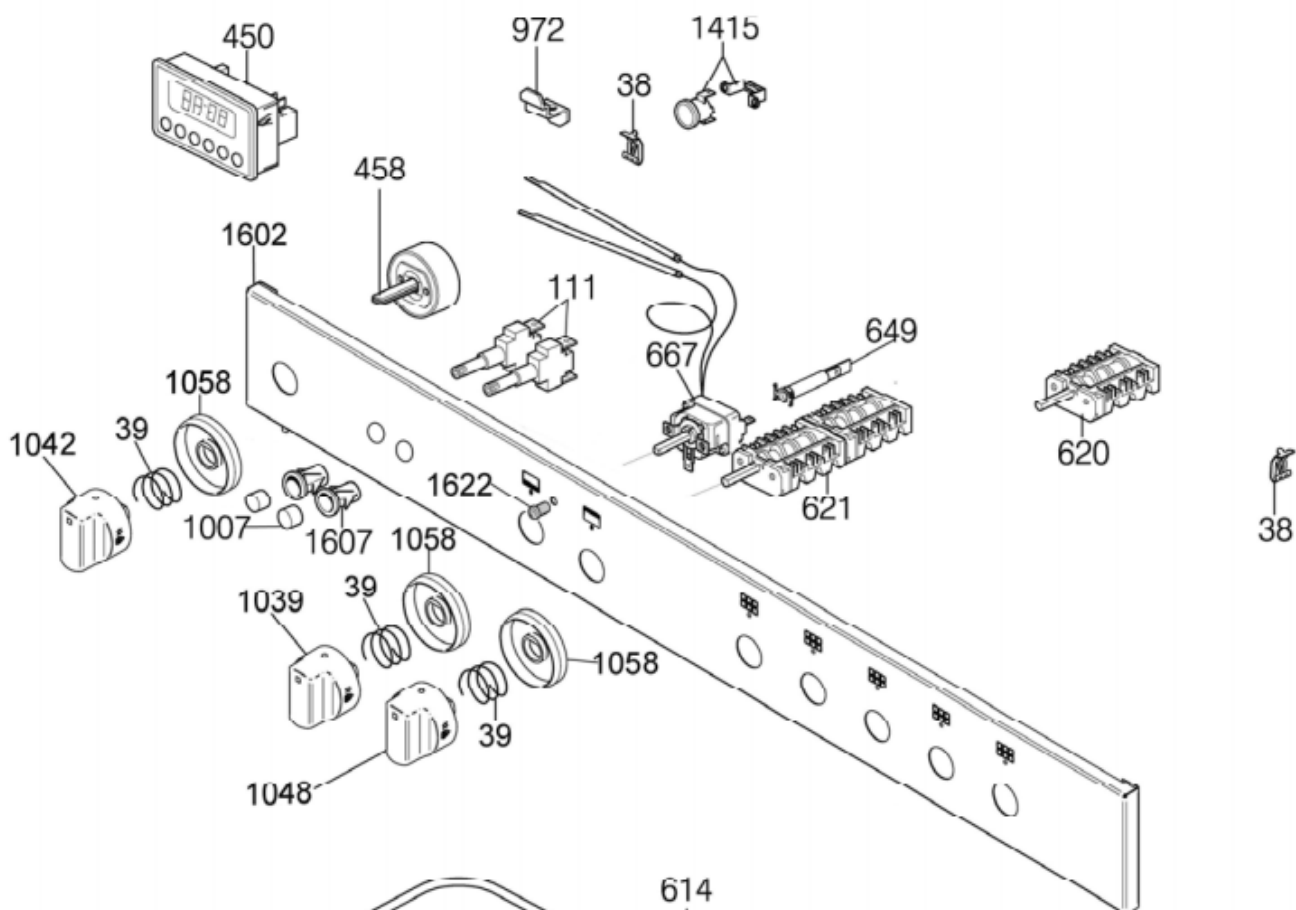


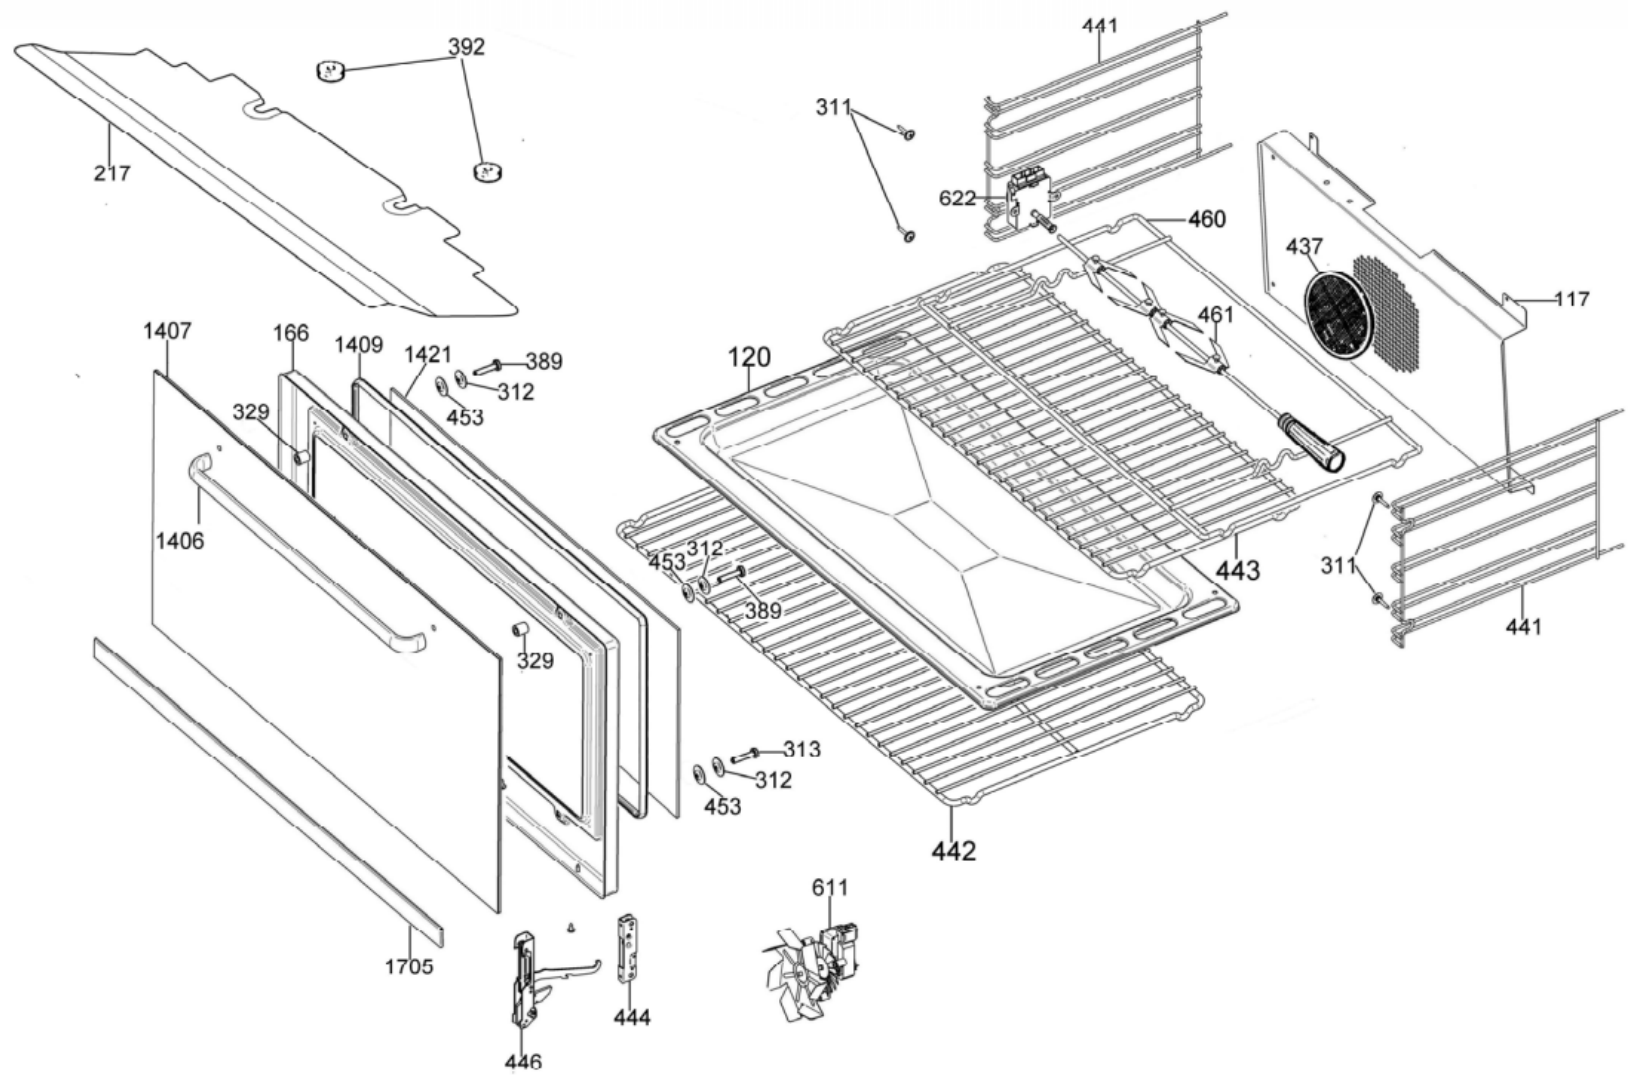

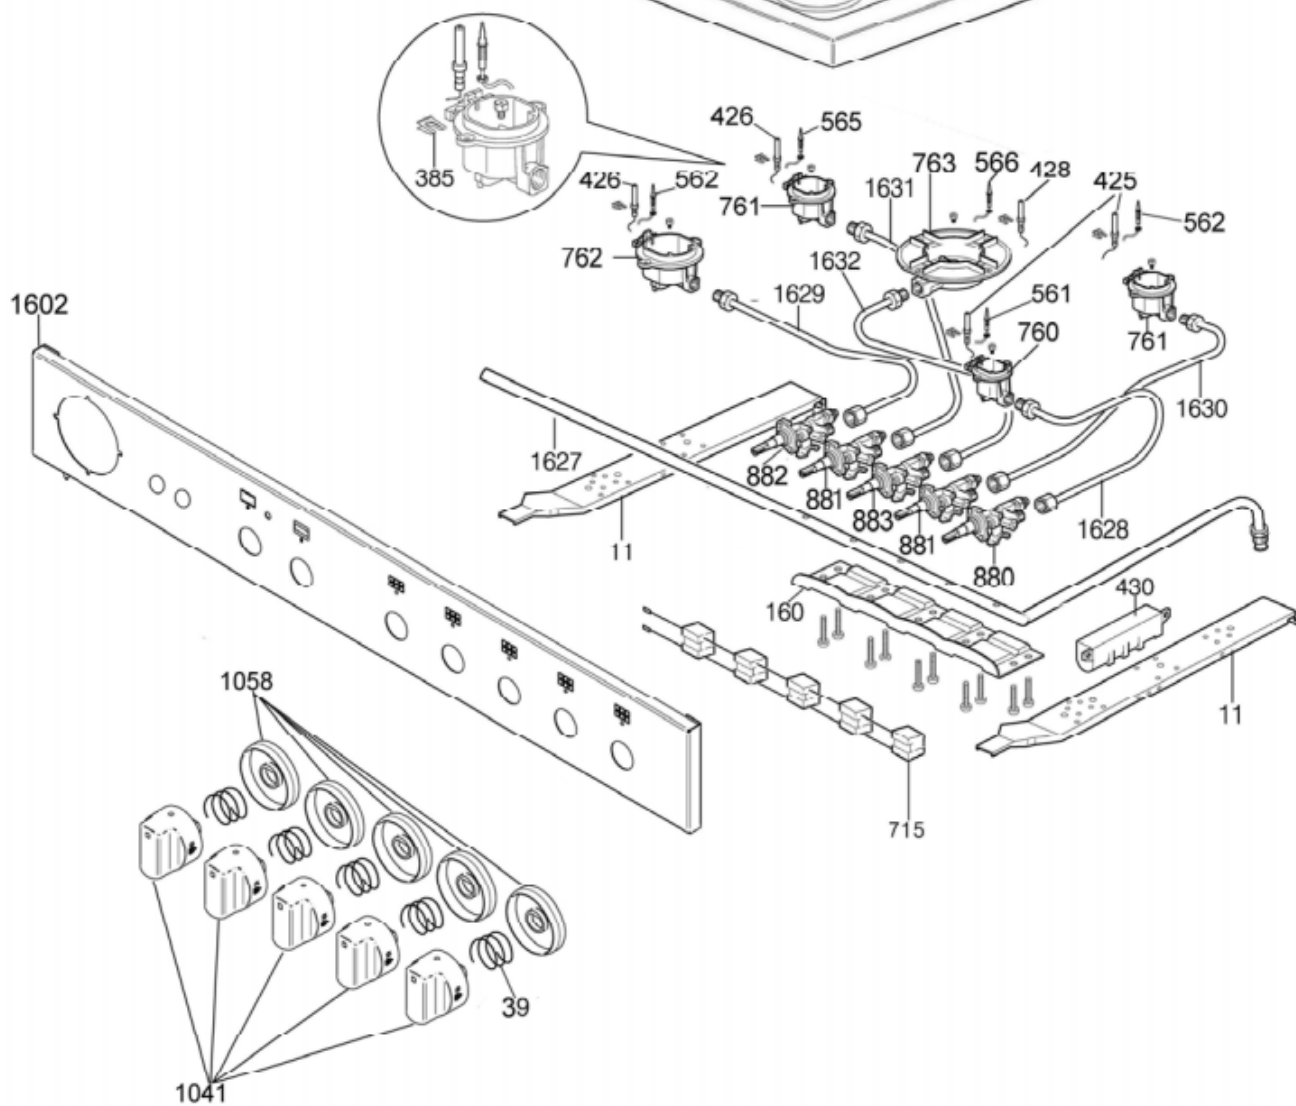

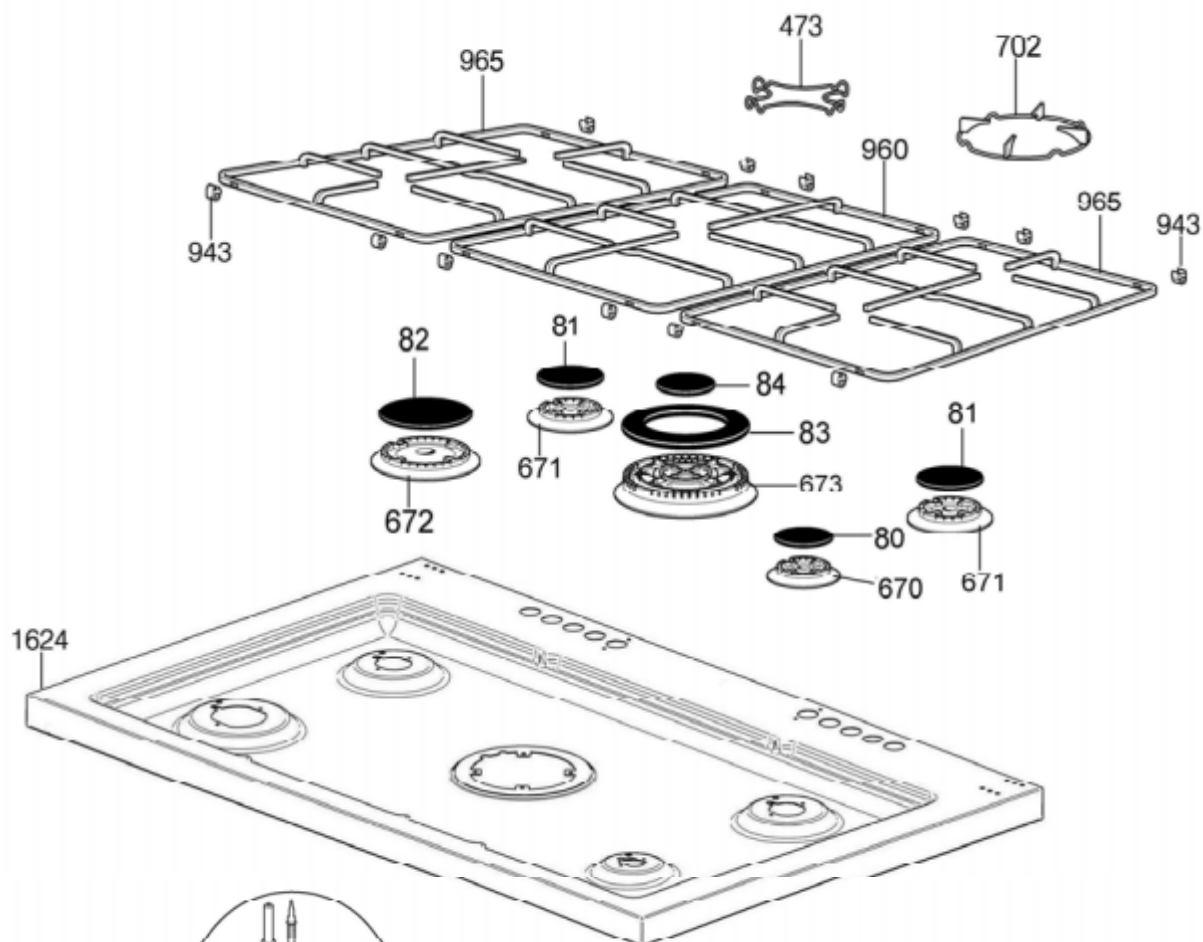

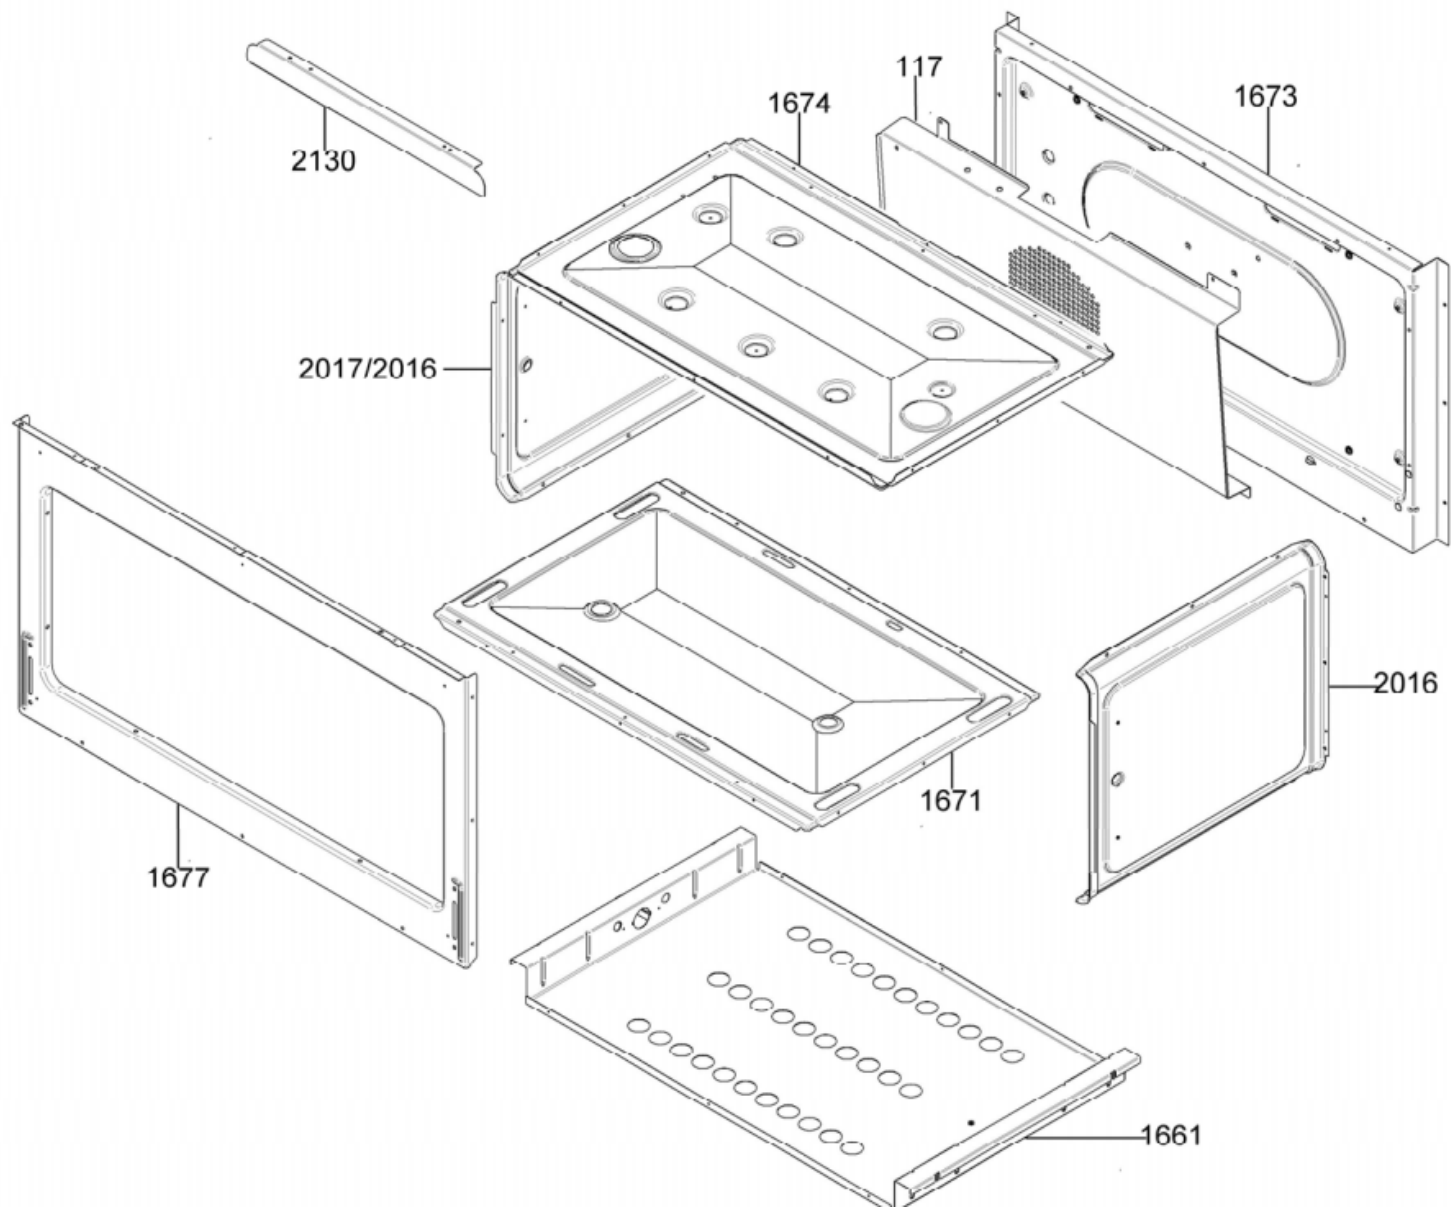

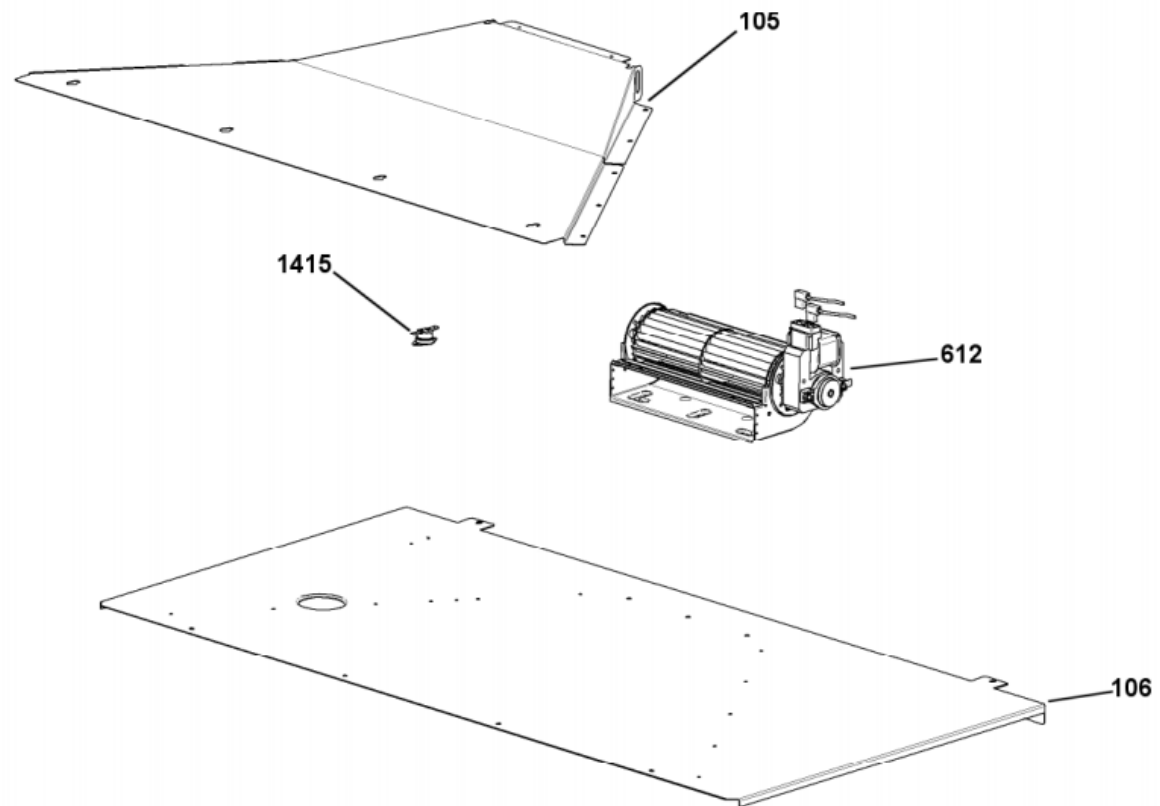

Model: DAF91EG

No	Part No.	Description
1	910588	PAN SUPPORT BUMPER KIT
11	202375	PART FOR BURNER FIXING
38	306003	THERMOSTAT CLIP
39	306002	SPRING FOR KNOB
80	504160	COVER FOR SMALL FLAME SPREADER
81	504161	COVER FOR MEDIUM BURNER
82	504162	COVER FOR RAPID BURNER
83	504158	COVER OUT FOR ULTRA RAPID FLAME SPREADER
83	504800	COVER OUT FOR ULTRA RAPID FLAME SPREADER
84	504191	COVER IN FOR ULTRA RAPID FLAME SPREADER
84	504798	COVER IN FOR ULTRA RAPID FLAME SPREADER
105	202626	UP SUPPORT FOR AXIAL COOLIN FAN
106	202659	DOWN SUPPORT FOR AXIAL COOLIN FAN
117	190050	PROTECTION FOR FAN ASSISTED OVEN
120	101280	OVEN TRAY
138	202348	DISHWARMER BOTTOM
160	202526	BRIDLE FOR FIXING GAS VALVES
166	101297	INSIDE OVEN DOOR
176	202351	CARTER MOTORVENTILATOR
274	202681	HORIZONTAL VENT
311	301122	SCREW 4,2X30
312	200145	OVEN GLASS FIXING RING
313	301073	SCREW 5MAX10 TCT
329	309116	HIGH INSIDE DOOR SPACER
385	306024	SPRING FOR SPARK PLUG
389	301077	SCREW M5X35 FOR HANDLE
392	309026	PART FOR KNOB PROTECTION FIXING
425	415054	SPARK PLUG 350MM
426	415057	SPARK PLUG 700MM
428	415073	SPARK PLUG FOR ULTRA RAPID BURNER
428	415102	SPARK PLUG FOR ULTRA RAPID BURNER
430	415081	ACCUMULATOR
436	402090	BACK FIBER GLASS
441	404042	SIDE GRID FOR OVEN
442	404154	GRID FOR OVEN
443	404151	GRID FOR TRAY
444	405003	OVEN DOOR HINGE FIX PART
446	405039	OVEN DOOR HINGE M9/D2
450	409040	ELECTRONIC PROGRAMMER
453	411084	RING GASKET
478	200430	DISHWARMER FLAP DOOR
561	508025	THERMOCOUPLE MM300
562	508021	THERMOCOUPLE MM600
565	508027	THERMOCOUPLE MM800
566	508034	THERMOCOUPLE ULTRA-RAPID BURNER
611	603025	MOTOVENTILATOR 220/240V 50/60HZ

No	Part No.	Description
612	603021	COOLING FAN
613	606049	RESISTENCE 1800W 240V
614	606060	UPPER+GRILL RESISTANCE
615	606045	CIRCULAR HEATER 3000W 240V
621	602031	COMMUTATOR 9+0
623	608018	OVEN BULB WITH HOLDER
648	601965	TERMINAL SEPARATOR
649	608034	SMALL WARNING LIGHT
667	602025	THERMOSTAT
670	504128	SMALL FLAME SPREADER
671	504129	MEDIUM FLAME SPREADER
672	504130	RAPID FLAME SPREADER
673	504777	ULTRA RAPID FLAME SPREADER
673	504796	ULTRA RAPID FLAME SPREADER
715	604072	DASYCHAIN SWITCH
760	510507	SMALL BURNER
761	510508	SEMI RAPID BURNER
762	510509	RAPID BURNER
763	510708	ULTRA-RAPID BURNER
880	502217	GAS VALVE BY PASS 034
881	502218	GAS VALVE BY PASS 036
882	502221	GAS VALVE BY PASS 052
883	502223	GAS VALVE BY PASS 065
917	200303	STAINLESS STEEL SIDE
929	202108	VERTICAL VENT
930	202214	FEET SUPPORT
940	405075	WORK TABLE AND TOP COVER HINGE RIGHT
941	405076	WORK TABLE AND TOP COVER HINGE LEFT
943	308031	BUMPER FOR C.I. GRIDS AND DISHWARMER
960	408074	CAST IRON PAN SUPPORT 1 BURNER
965	408073	CAST IRON PAN SUPPORT 2 BURNERS
972	202360	WORK TABLE FIXING
1039	4010133	THERMOSTAT KNOB
1041	4010129	GAS VALVE KNOB
1048	4010132	COMMUTATOR KNOB
1058	4010105	KNOB RING
1143	410532	RISER
1406	403485	OVEN HANDLE
1407	406143	OVEN DOOR GLASS STOPSOL
1409	411052	UNDER GLASS OVEN GASKET
1411	411087	GASKET FOR OVEN FRONT 4 SIDE
1411	411088	GASKET FOR OVEN FRONT ONE SIDE
1415	602037	THERMOREGULATOR
1421	406349	INTERNAL OVEN GLASS
1602	210595	CONTROL PANEL
1614	201160	BACK PANEL
1615	202508	CONTROL SUPPORT

No	Part No.	Description
1616	402169	FIBER GLASS
1622	608029	SMALL YELLOW BUD
1624	200319	WORK TABLE
1627	501872	GAS COLLECTOR
1628	5010020	FRONT RIGHT TUBE
1629	501827	LEFT FRONT TUBE
1630	501833	RIGHT BACK TUBE
1631	501826	TUBE FOR LEFT BACK BURNER
1632	501828	CENTRAL TUBE
1640	202223	CLAMP PROTECTION FOR FLAP DOOR
1644	414044	FEET
1645	414031	BASE FOR LEGS
1661	202127	OVEN PANEL
1671	101256	ELECTRIC OVEN PANEL
1673	101409	BACK PANEL FOR OVEN
1674	101115	OVEN TOP PANEL BLACK
1677	101423	FRONT PANEL BLACK M9
1685	201152	BACK VENT STACK
1705	200081	OVEN GLASS SUPPORT M9/D2
2016	190040	OVEN SIDE PANEL BLACK RIGHT
2130	201159	GRILL PROTECTION
4301	410540	RIGHT VERTICAL PROFILE
4302	410541	LEFT VERTICAL PROFILE