


Exploded View

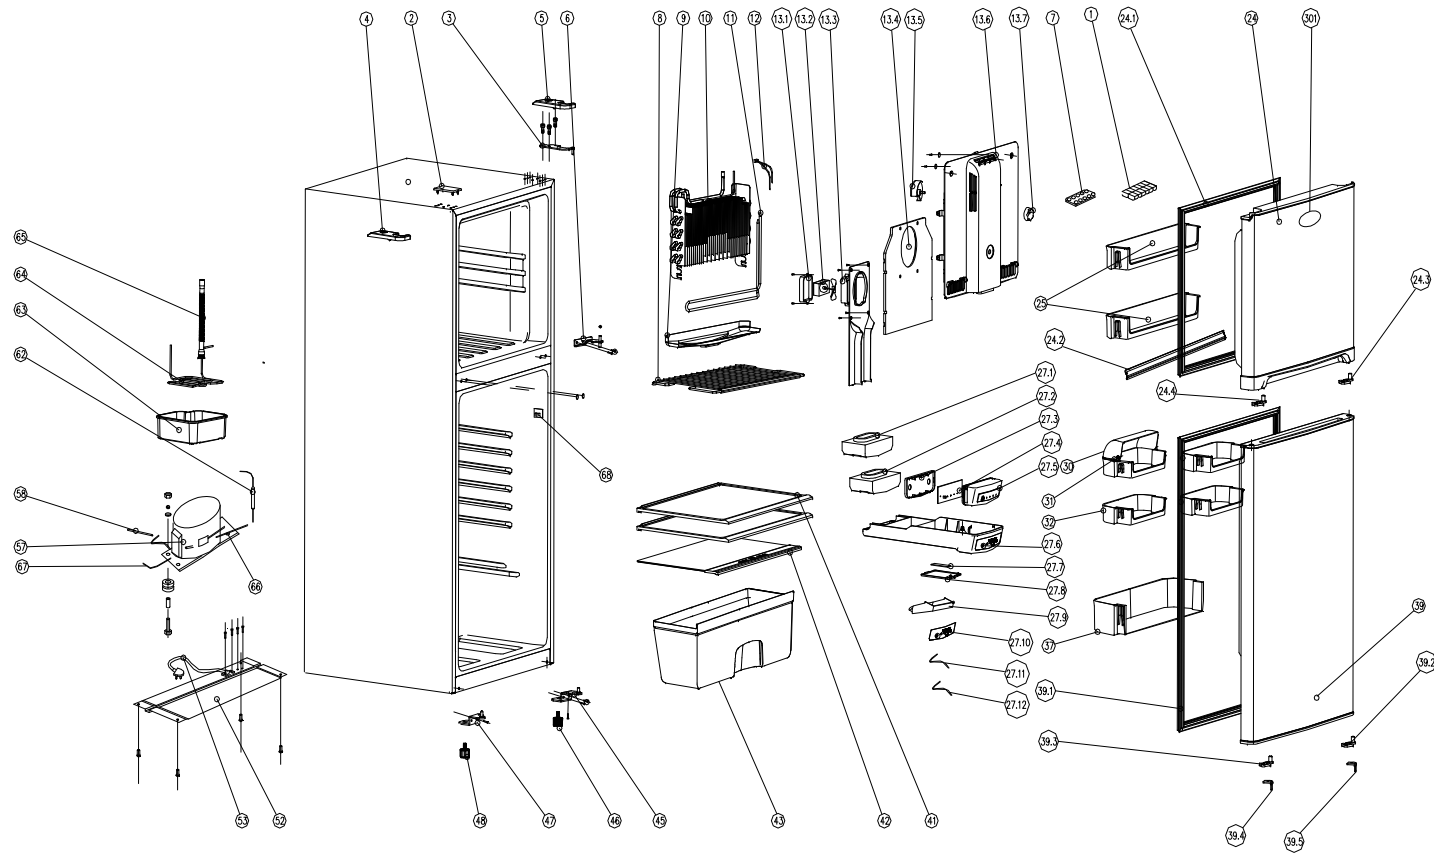

Model: ETM311W

No	Part No.	Description
1	20122990103	Ice cube tray
2	2208200126	Cover of door hinge screw hole
3	3031400197	Upper door hinge
4	20122080138	Upper door hinge,left
5	2208100313	Upper door hinge,right
6	3031400040	Middle door hinge
7	20122990129	Egg tray
8	2106100022	Shelves of freezer chamber
9	3039900316	Water channel of drain heater
10	3040300075	Fin evaporator
11	3050700023	Defrost heater
12	3050200087	Connecting wire of temperature sensor
13.1	20122990721	Installation cover of electrical motor
13.2	3059900004	Fan motor assembly of freeze wind tunnel part
13.3	2209100065	Rear cover of freeze wind tunnel part
13.4	3071000311	Foam of freeze wind part
13.5	2208200085	Adjust catch of freeze wind tunnel part
13.6	2208200052	Front cover of freeze wind tunnel part
13.7	2208100219	Knob of freeze wind tunnel part
24	2100290119	Upper door
24.1	2200200070	Upper door gasket
24.2	3029900431	Inner door gasket
24.3	2208510008	Right limit block,upper door
24.4	2208510007	Left limit block,upper door
25	2207500358	Door rack,freeze
27.1	2701000139	Foaming parts of refrigerate wind tunnel part,upper
27.2	2701000140	Foaming parts of refrigerate wind tunnel part,lower
27.3	2208200051	Installation cover of electric control board
27.4	2500300019	Electric control board
27.5	2208200050	Installation box of electric control board
27.6	2208200117	Front cover of refrigerator wind tunnel part
27.7	3050400025	LED Light
27.8	2209100066	Lamp cover
27.9	20122990726	Water rack
27.1	2209100059	Display pannel
27.11	2500200024	Connecting wire of refrigerator (weak current)
27.12	2500200025	Connecting wire of refrigerator (strong current)
30	2207500360	Lower door rack cover
31	2207500359	Lower door rack,upper
32	2207500361	Lower door rack,middle
37	2207500362	Lower door rack,lower
39	2100290071	Lower door
39.1	2200200020	Lower door gasket
39.2	2208510049	Right aid-closer,lower door
39.3	2208510050	Left aid-closer,lower door
39.4	2305400018	Iron linner of lower aid-closer,right
39.5	2305400017	Iron linner of lower aid-closer,right
41	2106100007	Shelf of refrigerator chamber

No	Part No.	Description
42	20120030165	Cover of crisper drawer
43	2106140017	Crisper drawer
45	2301400039	Lower door hinge assembly , right
46	20122990023	Short adjust leg
47	2301400040	Lower door hinge assembly,left
48	20122990812	long adjust leg
52	2107100002	Compressor support base
53	2500100017	Power supply cord plug
57	3040100333	Compressor
58	3040600005	Process tube
62	3040500011	Drier filter
63	20122990705	Drain pan
64	20114010106	Evaporative condenser
65	2207700024	Drain pipe
66	20114070006	Connecting tube
67	3050200094	Earthing wire of compressor
68	2501100002	Door switch
300	2700104399	Carton
301	2700500261	Trademark