


60cm Freestanding Gas (FSG61TCF) - Oven controls

Top cavity

This is a variable grill.
In the installation manual this is referred to as the 'grill - electric'.

To use the grill:

Turn knob **5** clockwise to past the oven temperatures to select the grill setting. This heats the number of grill elements selected.

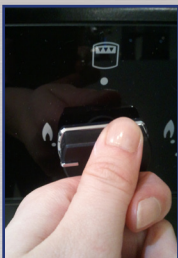

Button **1** depressed for 10 seconds while turning knobs **2, 3, 6, 7** control the cooktop.

Button **8** controls the oven light.



Main cavity

This is a fanned oven.
In the user handbook it is referred to as the 'main oven - electric'.

To use the fanned oven:

To select the temperature, rotate knob **4** clockwise until you reach the temperature you wish to set it to.

