

LOFRA®

LO06001

**USER AND INSTALLATION
INSTRUCTIONS**

For future reference please record the following information which can be found on the Rating Plate and the date of purchase which can be found in the invoice:

Model Number

Serial Number

Date of Purchase

CONTENTS

General Information	page 3
Warning and Safety Instructions	page 4
Instructions for Use	pages 5-8
Instructions for Installation	pages 9-11
Maintenance	page 12
Technical Data	page 13
Conditions of Guarantee	page 14

GENERAL INFORMATION

Please read this booklet thoroughly before you use this appliance. It is important that you understand all the control functions before commencing to cook with your new appliance.

Please remember the advice and warnings shown on page 5 which is headed 'IMPORTANT – Warning and Safety Instructions'.

This appliance is designed for domestic household use and can be built into a standard kitchen cabinet or housing unit.

NOTE: The adjacent furniture or the housing and all materials used in the installation must be able to withstand a minimum temperature rise of 85°C above ambient during periods of use. Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the above guidelines.

Installing the appliance in contravention of this temperature limit or the placing of adjacent cabinet materials closer than 4mm to the appliance, will be at the liability of the owner.

The use for any other purpose or in any other environment without the express agreement of Lofra, would invalidate any warranty or liability claim.

Your new appliance is guaranteed against electrical or mechanical defects subject to certain exclusions noted in the Conditions of Guarantee.

The foregoing does not affect your statutory rights.

In the event that you require any After Sales Service or advice, please contact the Service Department on telephone number – 1800 444 357.

For Warranty conditions in Australia please consult the enclosed Warranty card, or call our National Service on 1800 444 357.

Before using this appliance ensure that any protective packaging or coatings have been removed. To aid the protection of the environment, please sort the packing materials into different types and dispose of them in accordance with the local waste disposal laws.

Any further information on waste disposal can be obtained from your local Environmental Agency office.

When first used, an odour may be emitted by any residual protective finish or moisture, which will cease after a short period of time.

This Appliance has been Constructed and Distributed in compliance with the essential requirements of the following EEC DIRECTIVES and EUROPEAN NORMS:

CE Marking – 93/68 Low Voltage – 73/23 EMC – 89/336

Safety Standards – EN 60 335-1, EN 60 335 – 2 – 6, AS/NZS3350-1, AS/NZS3350-2-6

As the manufacturer have a policy of continued product improvement, the right is reserved to adjust and make any modifications deemed necessary without notification.

IMPORTANT NOTE – WARNING AND SAFETY INSTRUCTIONS

This appliance complies with all current European safety legislation, however the manufacturer do wish to emphasise that compliance does not remove the fact that the appliance surfaces will become hot during use and retain heat after operation.

This appliance is not intended for use by young or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure they do not play with the appliance.

If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

We also advise that great care is taken during use and cleaning operations.

Do not place heavy objects on or lean on the oven door when open as this can cause damage to the hinging.

Do not leave heated oil or fat unattended as there is a risk of fire.

Do not place pans or baking trays on the bottom of oven cavities or line any part of the oven cavity with aluminium foil.

Do not allow electrical fittings or cables to be in contact with hot areas of the appliance.

Do not use the appliance for space heating or to dry clothes.

Do not install the appliance next to curtains or soft furnishings.

Do not attempt to lift or move cooking appliances by pulling on any door or handle as this can cause damage.

During use the appliance becomes hot.

Care should be taken to avoid touching heating elements inside the oven.

A steam cleaner is not to be used on this appliance.

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

WARNING – Accessible parts will become hot when in use.

To avoid burns and scalds children should be kept away.

NOTE: this appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions.

For electrical installations, NICEIC registration is recommended.

The manufacturer declines any responsibility for injury or damage to persons or property as a result of improper use or installation of this appliance.

Heat, steam and moisture will be created during use, take care to avoid injury and ensure that the room is adequately ventilated. If prolonged use occurs, additional ventilation may be required - please consult your Qualified Installer if you are in any doubt about the amount required.

INSTRUCTIONS FOR USE

These User Instructions should be retained for future reference and for use by a person who is perhaps unfamiliar with the appliance.

The following models are covered by these instructions:

LOO6001

USING THE OVEN

Before your oven first use it is suggested to do a “burn in”. This involves turning the oven onto the fan oven setting at 200°C for 15 minutes, then select the conventional mode for a further 15 minutes. You will notice an amount of smoke come from the oven. This is the protective oil coating burning off the elements. This is quite normal. You are now ready to start cooking.

The oven is controlled thermostatically between 50°C and 250°C depending on the temperature required. The thermostat pilot light switches ON and OFF to indicate temperature control during periods of operation.

The mode of cooking desired is selected by using the multifunction control knob. The functions (dependent on model) that can be selected are as follows:



OVEN LIGHT

The oven light remains on whilst the oven is in use.



GRILL MODE

Select the required temperature by turning the thermostat regulator clockwise.



GRILL AND FAN

This provides even heating with the fan resulting in perfectly grilled meat without the need to turn. It is ideal for small cuts such as chicken pieces and racks of lamb.



FAN OVEN

This provides even heating with the fan and allows different dishes to be cooked on different levels at the same time.

WARNING

- Keep the oven door CLOSED when using the GRILL.
- The top shelf position is to be used for GRILLING ONLY.
- Do not use aluminium foil to cover the grill pan or heat items wrapped in aluminium foil under the grill – the high reflectivity of the foil can damage the grill element.
- Do not place aluminium foil or metal trays directly on the base of the oven as this will cause damage to the enamel surface and is not covered by the Warranty.

HELPFUL HINTS


- Before cooking, check that any unused accessories are removed from the oven.
- Preheat the oven at cooking temperature before use.
- Place cooking trays in the centre of the oven and allow gaps when using more than one tray for air to circulate.
- Try to open the door as little as possible to view food (the oven light remains on during cooking).
- Be careful when opening the door to avoid contact with hot parts and steam.

COOKING GUIDELINES

Please refer to the information on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, the temperatures and times can be varied to suit personal preferences.

Make sure that frozen foods are thoroughly thawed before cooking, unless instructed otherwise.


Removing the shelf supports (Only applicable for models with wire shelf supports)

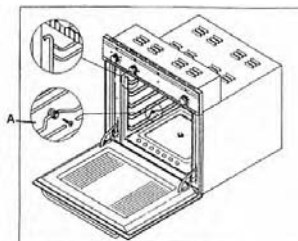

USING THE 60 MINUTES TIMER

This run-back timer can be used independently of an oven cooking cycle for up to 60 minutes of timing.

- 1) To set the timer, turn the knob fully clockwise until it stops and then back to the required time.
- 2) After expiry of the set time, the timer will have returned to position '0' and an acoustic signal will be briefly emitted.

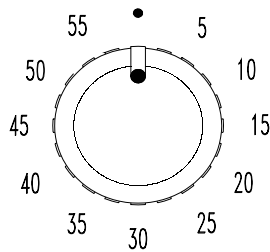

CLEANING THE APPLIANCE

Always allow the appliance to cool down before cleaning to avoid a burn injury.

Do not use caustic or abrasive agents, coarse wire wool or hard tools as these can damage the surface finishes.

Normally, wiping with a soft cloth dampened with hot detergent is sufficient, but for stubborn marks the following is recommended:

VITREOUS ENAMEL PARTS

Use only a non caustic cleaner that is recommended for this type of material – avoid chloride-based products such as bleach.

DOOR GLASS

Do not use any abrasive medium that could cause damage. Remember that if the surface of the glass panel becomes scratched, this could lead to a dangerous failure.

To facilitate cleaning, the door glass can be lifted out after removing the fixing screws.

When refitting, make sure that the glass is correctly seated in the door recess and the correct way round. **Care must be taken when cleaning between the door glasses and inside the inner frame as some of the edges maybe sharp due to the manufacturing process.**

REMOVING THE OVEN DOOR

To make easier cleaning inside the oven, the door can be removed as follows:


- 1) Ovens mounting hinges with movable bolts (as per Fig. 1): The hinges are provided with two movable bolts (B). With the bolt is raised, the hinge (A) can be released from its housing.
- 2) Hold the door on each side, then lift to unhook the hinge mechanism and pull outwards to release from the oven. Grip the sides of the door near the hinges when performing these operations.
- 3) To refit, hold the door in the fully open position and slide the hinge arms (A) into the oven recesses until the arms lock in position. On models with hinge mechanisms as per Fig.1, rotate the two movable bolts (B) and close the door fully to complete the refitting.

WARNING

- Take care not to dislodge the hinge lock system when removing the door as the hinge mechanism has a strong spring system!
- Do not immerse the door in water at any time.

Fig.1

A

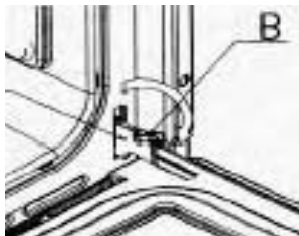

INSTRUCTIONS FOR INSTALLATION

This appliance must be installed by a competent person, in accordance with the current version of the following UK Regulations and Safety Standards or your local Regulations and Safety Standards:

Building Regulations (issued by the Department of Environment)

Building Standards (issued by the Scottish Development Department)

IEE Wiring Regulations

Electricity at Work Regulations

In Australia the installation must comply with AS/NZS3000 wiring rules

PRE-COMMISSIONING THE APPLIANCE

When unpacked, check that the following parts are included with the appliance:

- Lofra Instruction and Installation Book
- 1 oven shelf
- 1 set comprising Grill Pan, Trivet and handle.
- 4 x Screws and plastic inserts for fixing appliance into housing.


POSITIONING THE APPLIANCE (see also Figs. 2 and 3, page 13)

These appliances are classified as Class 3. All models can be built into a standard 600mm kitchen unit.

INSTALLATION NOTES

1. Ensure that the aperture for oven installation is the correct size as per Fig. 3 at page 13, including any cut-outs shown.
2. Ensure that the rear panel of the furniture housing has been removed.
3. All ovens with which this instruction book is provided may be installed without the need for any additional ventilation cut-outs.
4. Ensure that the oven has been securely fixed into the housing as per Fig. 2 at page 13.


Fig.2

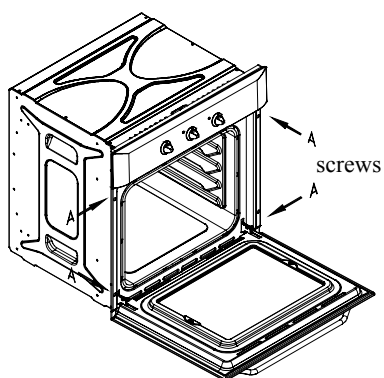

Fixing the oven on the cabinet

Using the 4 x screws and plastic inserts as provided, insert the plastic inserts into the holes located inside the door cavity and then insert a screw through each insert and tighten until secure.

Fig. 3

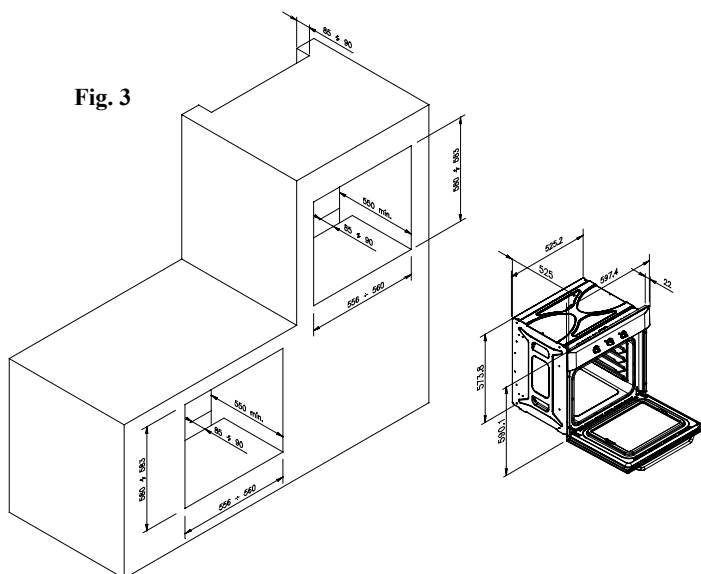

**Installation distances for 60cm wide single electric ovens.
(Shape of top casing may vary).**

ELECTRICAL CONNECTION

Before connecting the appliance, make sure the supply voltage marked on the Rating Plate corresponds with the mains supply voltage.

WARNING – THIS APPLIANCE MUST BE EARTHED

This appliance should be wired into a 15A double pole switched fused spur outlet having 3mm contact separation and placed in an easily accessible position adjacent to the appliance.

IMPORTANT

The wires in the mains supply lead are coloured in accordance with the following code:

Green and Yellow	-	Earth
Blue	-	Neutral
Brown	-	Live

The wire coloured Green and Yellow must be connected to the terminal marked 'E' or with the earth symbol (\perp) or coloured green and yellow.

The wire coloured Blue must be connected to the terminal marked 'load' and 'N'.

The wire coloured Brown must be connected to the terminal marked 'load' and 'L'.

Care must be taken to ensure that the temperature of the mains supply lead does not exceed 50°C.

REPLACING THE MAINS LEAD

In the event it is necessary to replace the mains supply lead, proceed as follows:

1. Disconnect the appliance from the supply, undo the fixing screws and remove the back panel.
2. Undo the clamp screws and terminal screws to release the existing lead.

Assemble the replacement lead, that must conform to the specification listed in the Technical Data, ensuring the correct colour code connection and that all screws are tightened correctly.


MAINTENANCE

Before carrying out any maintenance, disconnect the appliance from the electricity supply.

During the guarantee period, in case of need all service interventions should be referred back to the Service department. Please note that intervention or repair by any unauthorised personnel will invalidate such guarantee.

REPLACING THE OVEN LIGHT

(Not covered by the appliance warranty)

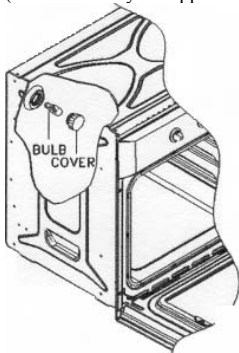

Disconnect the appliance from the electricity supply, remove the oven door (as described previously) as well as the oven shelves.

Remove the protective glass light-cover by twisting anti-clockwise.

Unscrew the old bulb and discard safely, replace with the type specified in the Technical Data and refit the cover.

NOTE – The glass cover may be tight and may therefore require a tight grip to release.

CARE AND REPLACEMENT OF CATALYTIC LINERS

(Where fitted / Not covered by the appliance warranty).

To keep the 'stay clean' liners operating effectively, the oven should be heated to at least 200°C whenever heavy soiling has occurred, in order to avoid permanent soiling.

If the liners are allowed to become black and shiny, they must be replaced by new items. Remove all internal accessories to facilitate replacement of the liners.

Replacement liners may be purchased directly from the Spares Department (details as per back cover). Please quote product-type reference B600 and/or your appliance's serial number when placing your order.

TECHNICAL DATA

DIMENSIONS

Height: 595mm
Width: 596mm (at front)
Depth: 524mm (excluding handles)

COOLING FAN

A tangential cooling fan is fitted on the following models:

LOO6001

ELECTRICAL DETAILS

Rated Voltage: 240V a.c. 50Hz

Supply Connection: 15A (double pole switched fused outlet with 3mm contact gap)

Max Rated Inputs:

LOO6001 2.38kW

Mains supply lead: 3x 1.5mm² type H05 RR-F <HAR>

Oven Light Bulb: 15W/300°C Screw type pigmy

CONDITIONS OF GUARANTEE

Dear Customer,

Included with your new appliance is a guarantee registration card, please complete this and return and your earliest convenience.

This guarantee is in addition to your statutory legal rights and will not in any way hinder any legal rights.

The conditions of the guarantee, which applies, to your appliance are as follows:

All 'Work' in relation to the Guarantee must be carried out by the manufacturer or an approved service agent of the manufacturer. Any claims made under the terms of the guarantee must be supported by the original invoice / bill of sale issued at the time of purchase.

The guarantee period starts from the date of the original purchase and the manufacturer will provide the parts and labour required to repair the appliance should breakdown occur as a result of mechanical / electrical failure. This service will be given Free of charge within the Guarantee period. An additional Insurance scheme is available should you wish to extend the warranty period.

THIS GUARANTEE DOES NOT COVER:

- Any damage caused by transit, misuse, or neglect.
- Cosmetic and perishable parts: plugs, fuses, light bulbs, light covers, cosmetic trims, cables, filters and attachments, knobs, any rubber and seals, ceramic or glass surfaces, dents, scratches, paintwork.
- Attachments / Accessories, trivets and handles, griddles, pan stands, shelves, burner caps and collars, oven liners. Plus any additions thereafter.
- Periodic maintenance, the repair or replacement of parts due to natural wear and tear.
- Material discoloration, corrosion.
- Incorrect installations, modifications or repair by any unauthorised personnel.
- Use of non-Lofra parts.
- Damage caused by foreign objects or substances.
- Appliances used for non-domestic use.
- Operation on unsuitable voltage, water or gas supplies.
- Accidents, Civil war, acts of God or any cause beyond the control of the producer.

PLEASE NOTE ALL GUARANTEES ARE NON TRANSFERABLE

For Australian Warranty, please refer to your Warranty Card.

If you require further information, please call one of the following numbers:

SALES

TEL: 1300 132 824

FAX: 1300 660 188

SERVICE

TEL: 1800 444 357

FAX: 1300 133 279

For further information or any other query you may have please contact one of the above numbers.

Thank you for buying Lofra.

