




EUROMAID TUEF54 Exploded diagram

21.1.14

1.Exploded View

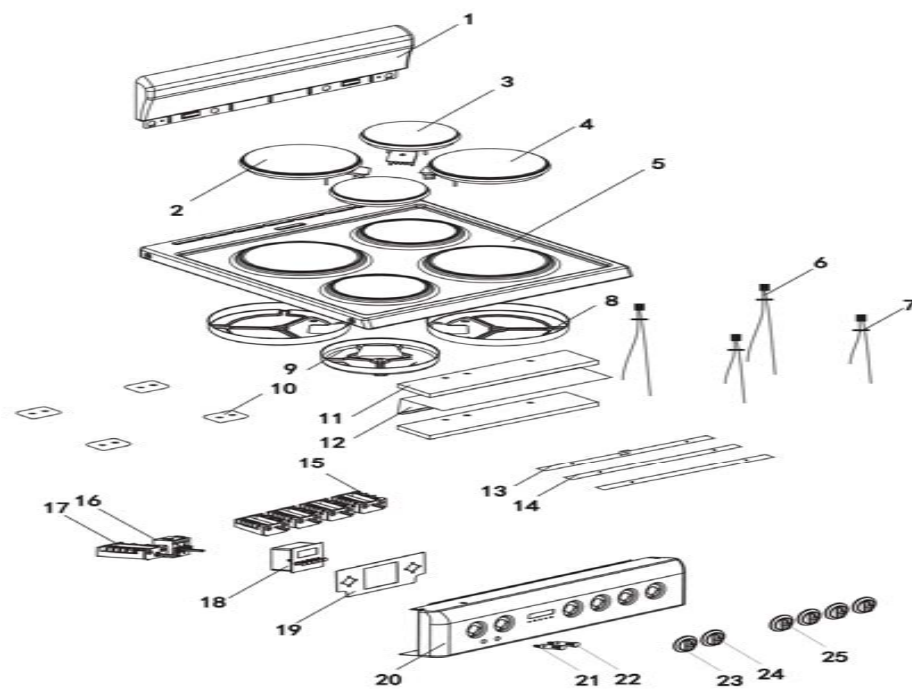

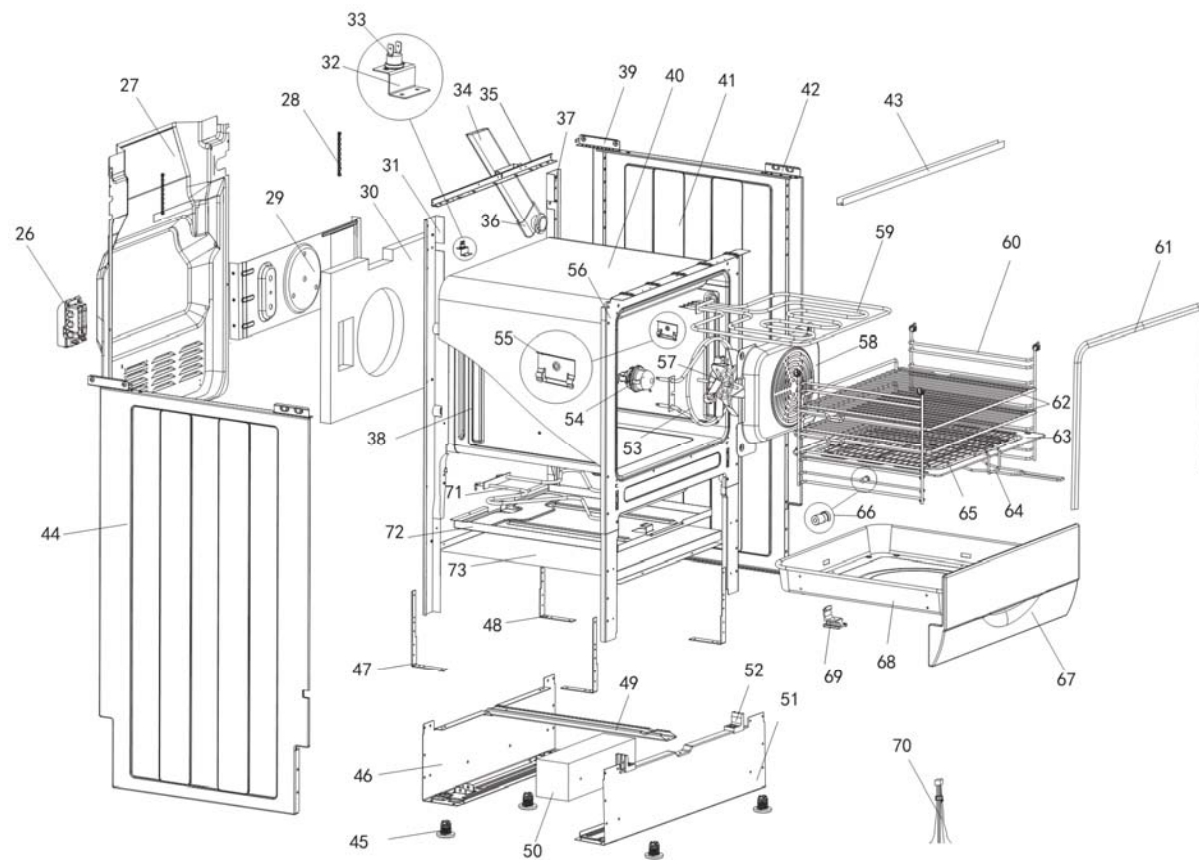

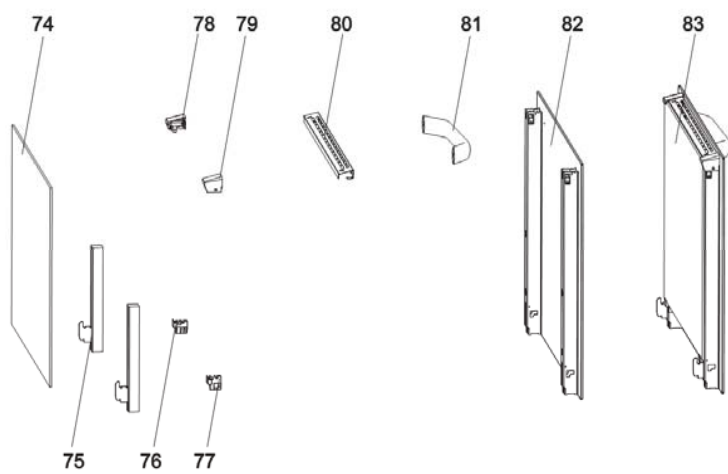

Model: TUEF54

No	Part No.	Description	Qty
1	0040800149	The short plate	1
2	0040900460	Big hot plate	1
3	0040900461	small hot palte	2
4	0040900459	Big hot plate (rapid)	1
5	0040800143	cooktop	1
6	0040900261	FS furnace plate cable assembly long	2
7	0040900262	FS furnace plate cable assembly short	2
8	0020101188	Fixer of big hot palte	2
9	0020101189	Fixer of small hot palte	2
10	0040101045	The bottom fixer of hot plate	4
11	0040801113	Fixer of Liner slide	2
12	0040100757	Furnace heat shield plate	1
13	0040801047	Grounding metal	1
14	0020100920	Grounding metal	2
15	0040900008	Hot plate control switch	4
16	0040900238	thermostat	1
17	0040900327	Oven control switch	1
18	0040900369	Electronic programmer	1
19	0040100655	The fixer of electronic programmer	1
20	0040801467	front pannel	1
21	0040900026	Oven temmpérature signal light orange	1
22	0040900025	Hot plate operation signal light red	1
23	0040200295	Oven function selection knob	1
24	0040200296	Temperature control knob	1
25	0040200294	Heating plate control knobs	4
26	0040900028	Connection box	1
27	0040101029	Back cover	1
28	0040801211	anti-overturn chain	2
29	0040801408	The fixer of rear fan	1
30	0040800026	The rear attemperator	1
31	0040101072	The rear support(left)	1
32	0040100131	Fixer of temperature limiter	1
33	0040900011	Temperature limiter	1
34	0040801464	Vent-pipe of oven	1
35	0040801042	Upper rear crosspiece	1
36	0040100027	seat of vent-pipe	1
37	0040101073	Right after the column	1
38	0040801137	Tube (elec enamel)	1
39	0040101066	The rear fixer of cooktop	2
40	0040800544	The tube attemperator	1
41	0040801091	right Side pannel	1
42	0020101205	The front fixer of cooktop	2
43	0040101332	The Support beam of cooktop	1
44	0040801087	left Side pannel	1
45	0040200024	Adjustable foot	4
46	0040801096	Lower anterior crosspiece (54Fs)	1
47	0040101070	The bottom fixer of left side pannel	2
48	0040101071	The bottom fixer of right side pannel	2
49	0020101212	Slideway of drawer	1
50	0040500004	overturn check	1
51	0040801242	Lower anterior crosspiece (54Fs)	1
52	0040200025	Limiter of drawer	2
53	0040900052	rear heater	1
54	0040900029	Oven light	1
55	0040101047	Fixer of thermostat prob	1
56	0040801095	Frame of tube (54Fs)	1
57	0040900034	rear fan	1
58	0040800027	Isolation of rear fan	1
59	0040900030	upper heater	1

No	Part No.	Description	Qty
60	0040100805	Liner slide	2
61	0040801140	Tube gasket	1
62	0040100821	Grill shelf	2
63	0040800837	Flat biscuit tray	1
64	0040100913	Tray clamp	1
65	0040100914	Embedded mesh grill	1
66	0040100820	Hanger pin	2
67	0040800356	Cover of drawer	1
68	0040800744	Drawer	1
69	0040200026	Guide of drawer	1
70	0040900371	oven wire	1
71	0040900031	lower heater	1
72	0020101216	protection part of lower heater	1
73	0020101208	isolation of lower heater	1
74	0040700004	The inside door glass	1
75	0040101079	Hinge	2
76	0040200015	Lower fixer of the inside door glass(right)	1
77	0040200013	Lower fixer of the inside door glass(left)	1
78	0040200019	Upper fixer of the inside door glass(right)	1
79	0040200017	Lower fixer of the inside door glass(left)	1
80	0010801918	Venthole of door	1
81	0040101012	H9 Handle	1
82	0040801465	The door glass has been soiled side of the fixed parts of the door	1
83	0040800350	Door assembly	1