






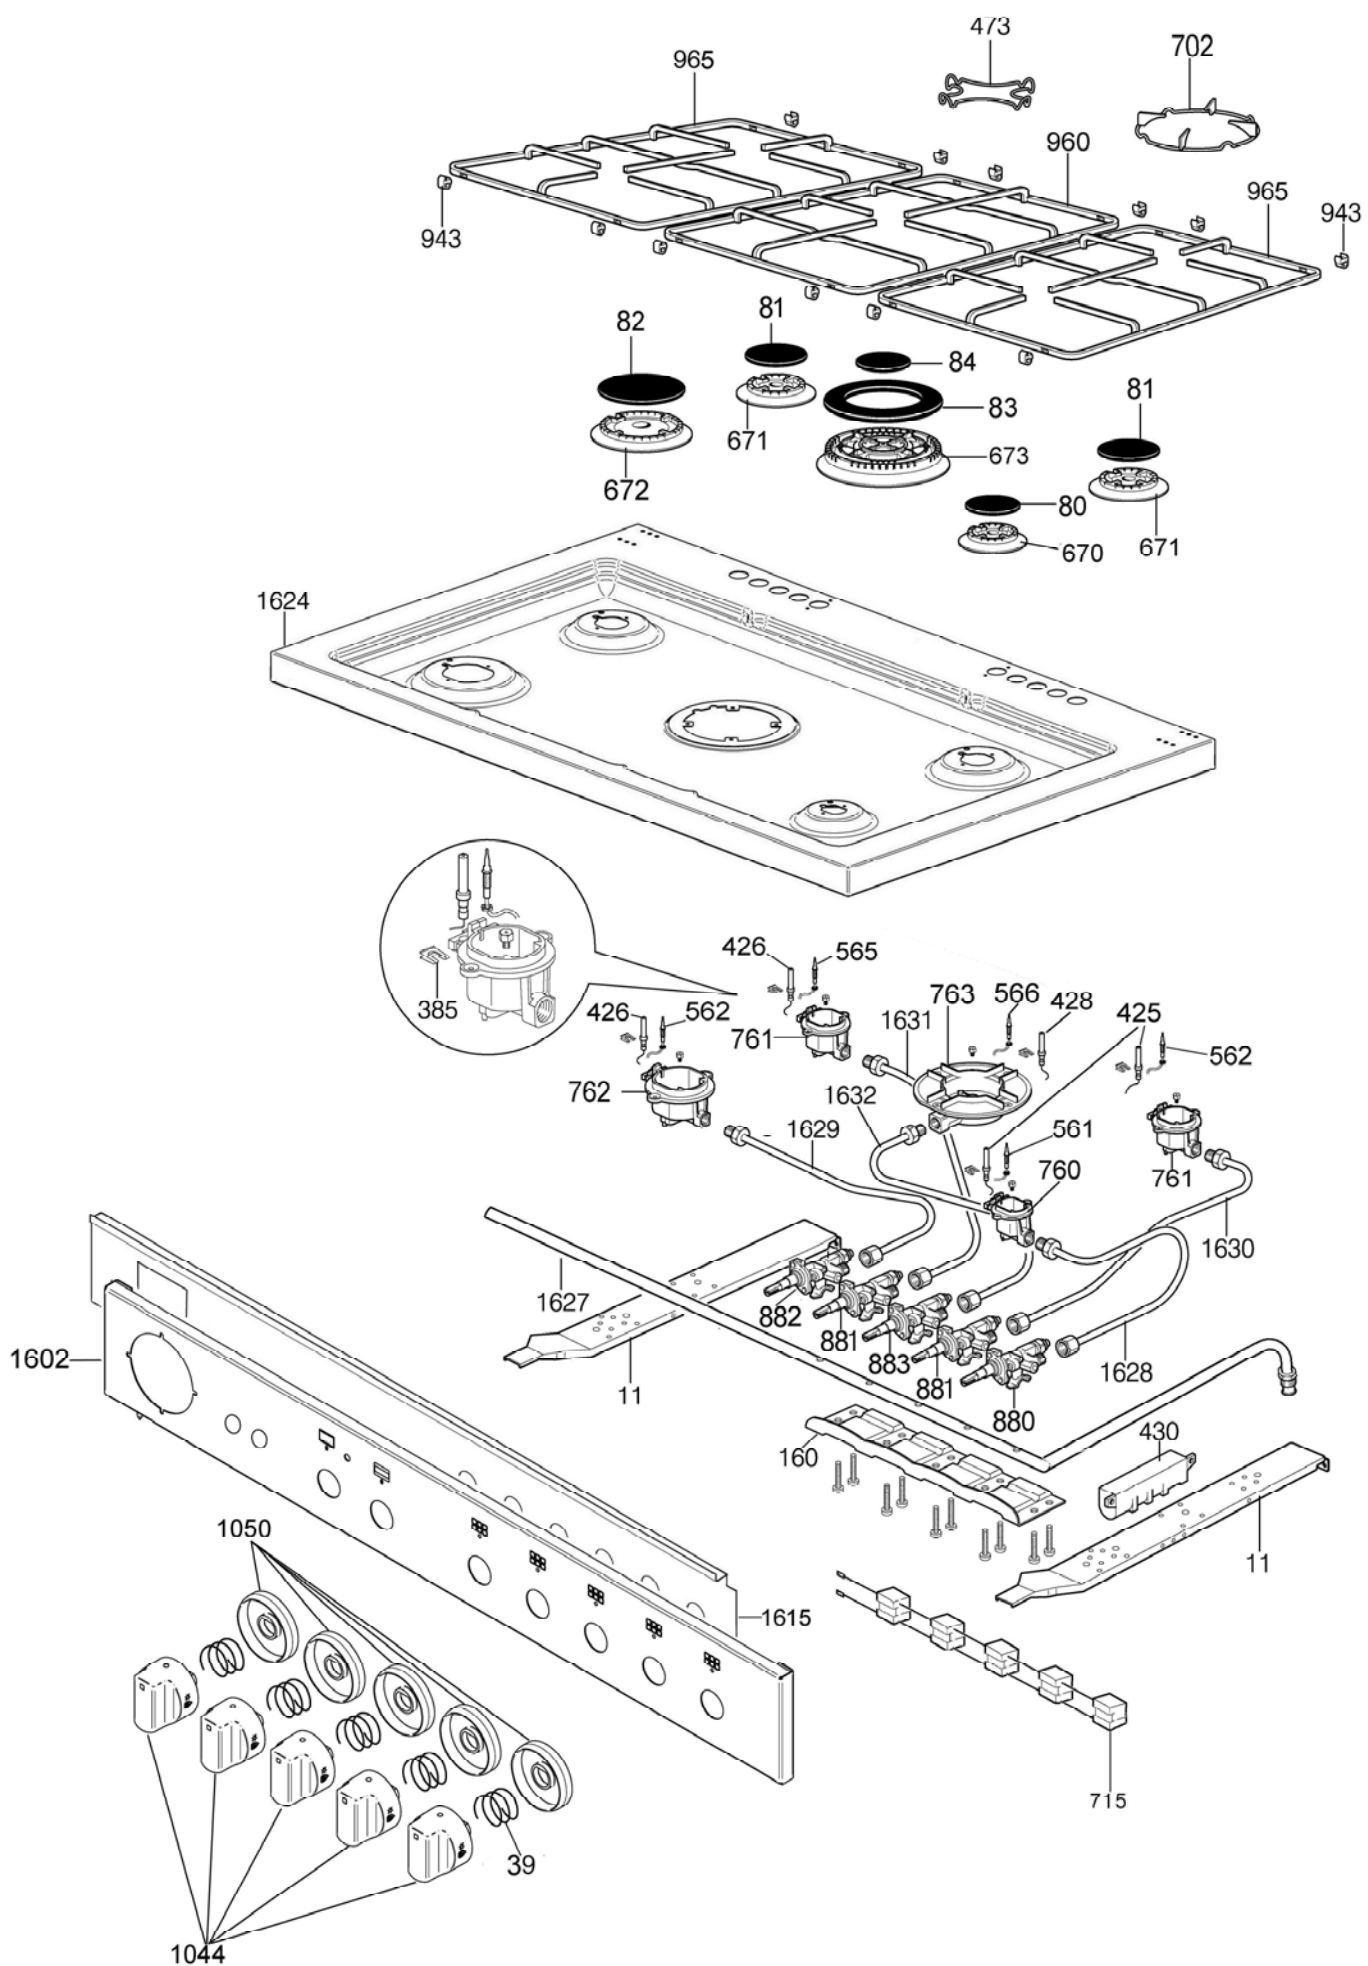

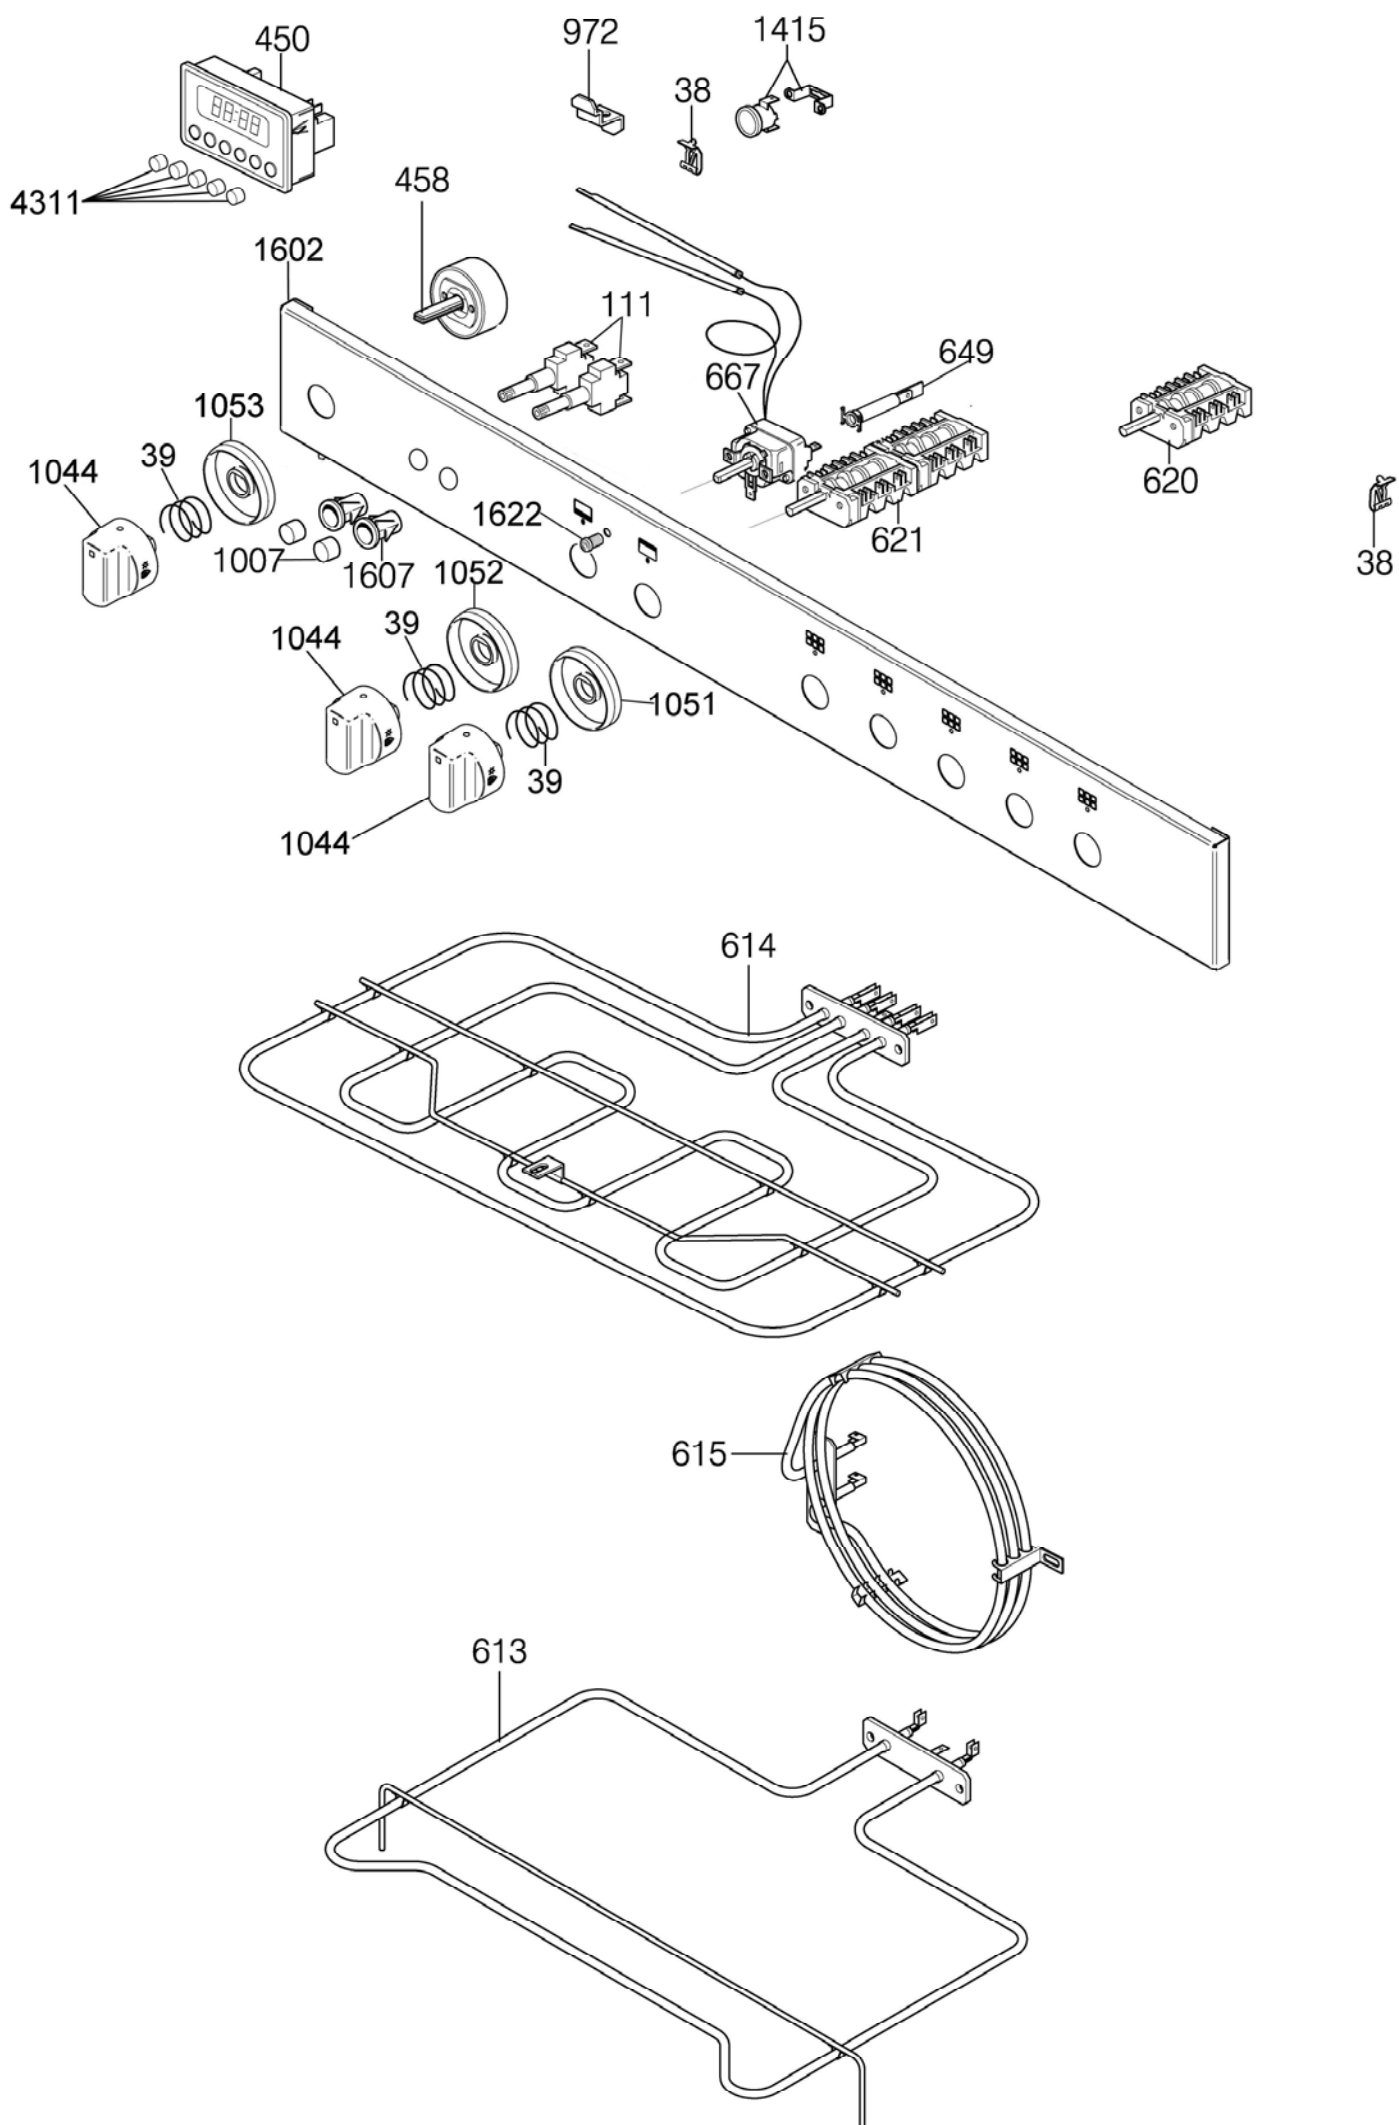

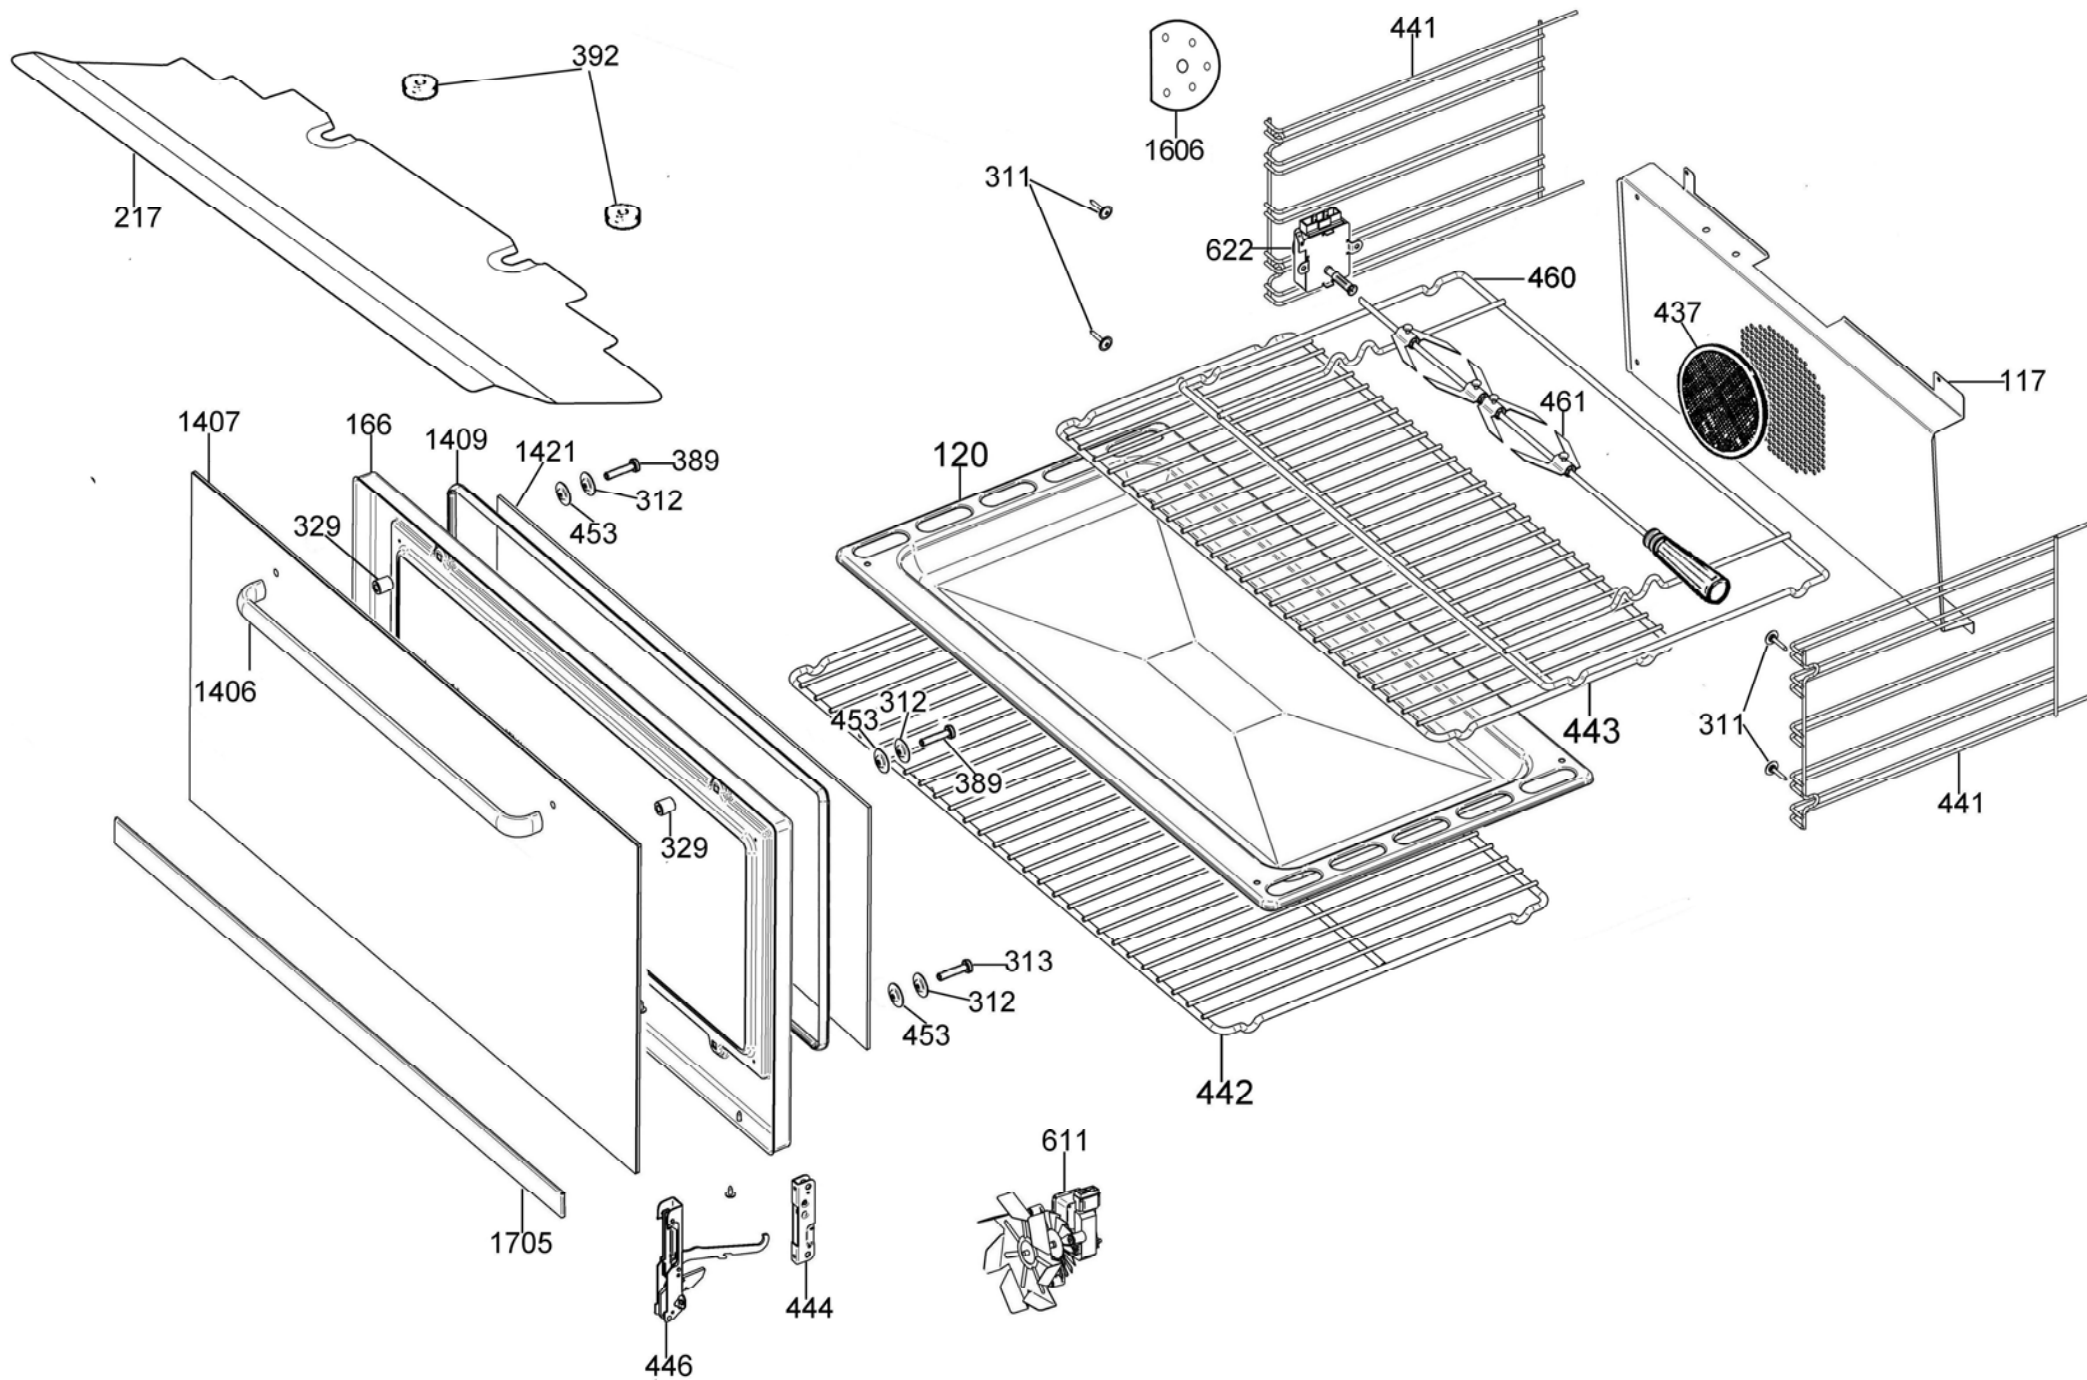

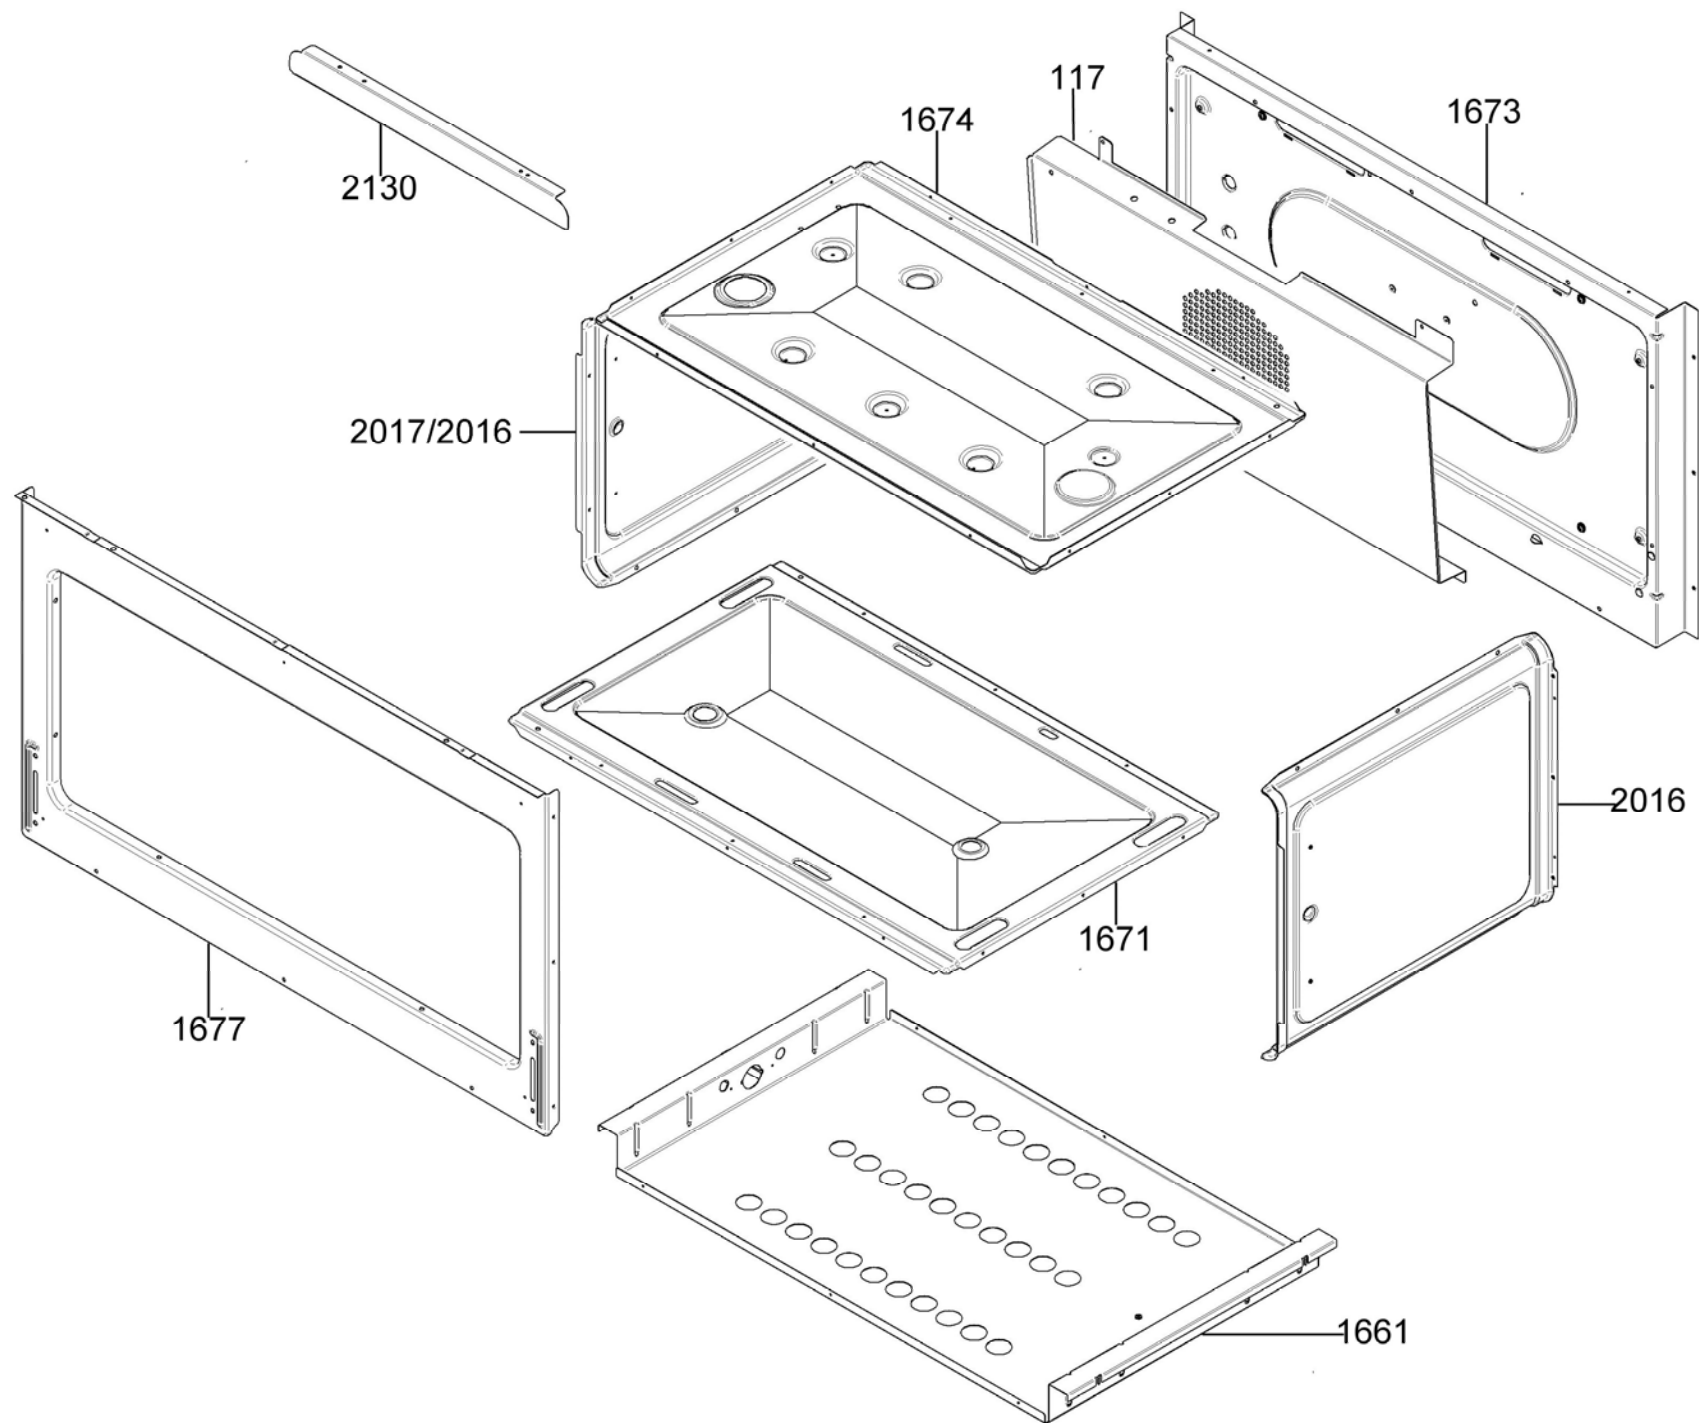

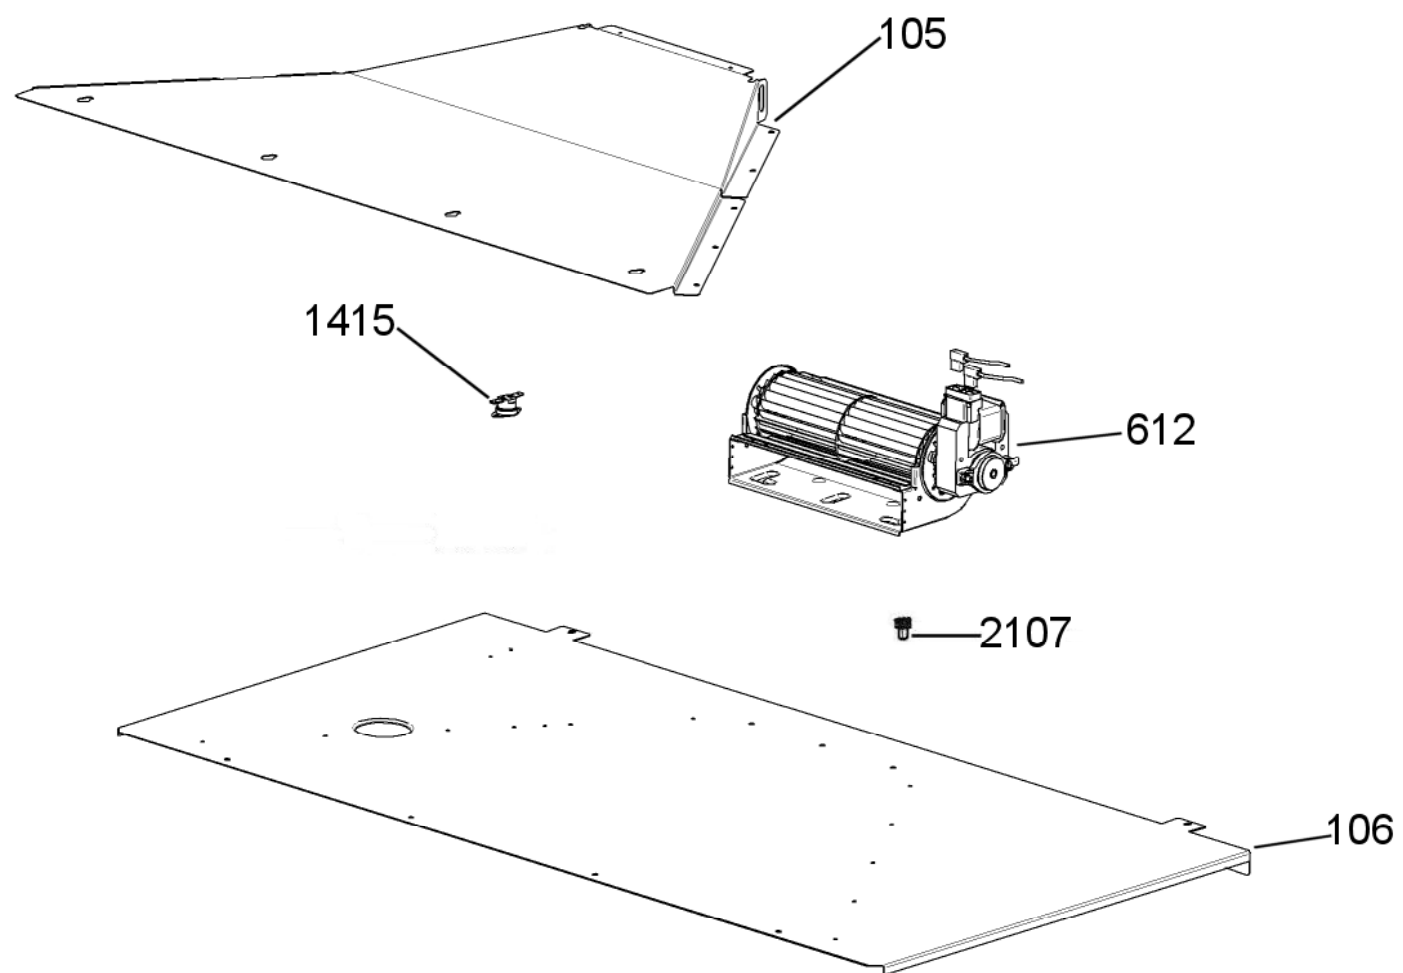

Model: VEF90.1EG

No	Part No.	Description
1	601503	CIRCUIT DIAGRAM
1	6017039	WIRING
1	800075	EXPLODED VIEW OF STRUCTURE
1	800112	EXPLODED VIEW COOLING FAN
1	800290	EXPLODED VIEW OF MUFFLE
1	800306	EXPLODED VIEW OF DOTATION
1	800307	EXPLODED VIEW OF OVEN
1	800335	EXPLODED VIEW OF WORK TABLE
1	910588	PAN SUPPORT BUMPER KIT
2	310938	USER MANUAL
11	202375	PART FOR BURNER FIXING
38	306032	THERMOSTAT CLIP
39	306002	SPRING FOR KNOB
80	504160	COVER FOR SMALL FLAME SPREADER
81	504161	COVER FOR MEDIUM BURNER
82	504162	COVER FOR RAPID BURNER
83	504800	COVER OUT FOR ULTRA RAPID FLAME SPREADER
84	504798	COVER IN FOR ULTRA RAPID FLAME SPREADER
105	2020063	UP SUPPORT FOR AXIAL COOLIN FAN
106	2020062	DOWN SUPPORT FOR AXIAL COOLIN FAN
117	101481	PROTECTION FOR FAN ASSISTED OVEN
120	101280	OVEN TRAY
138	202348	DISHWARMER BOTTOM
160	202526	BRIDLE FOR FIXING GAS VALVES
166	101297	INSIDE OVEN DOOR
274	202681	HORIZONTAL VENT
311	301156	SCREW 4,2X30
312	200145	OVEN GLASS FIXING RING
313	301073	SCREW 5MAX10 TCT
329	309116	HIGH INSIDE DOOR SPACER
385	306024	SPRING FOR SPARK PLUG
389	301077	SCREW M5X35 FOR HANDLE
389	301105	SCREW M5X45
392	309026	PART FOR KNOB PROTECTION FIXING
425	415054	SPARK PLUG 350MM
426	415057	SPARK PLUG 700MM
428	415102	SPARK PLUG FOR ULTRA RAPID BURNER
430	415081	ACCUMULATOR
436	402475	BACK FIBER GLASS
441	404042	SIDE GRID FOR OVEN
442	404154	GRID FOR OVEN
443	404151	GRID FOR TRAY
444	405003	OVEN DOOR HINGE FIX PART
446	405098	OVEN DOOR HINGE
450	409040	ELECTRONIC PROGRAMMER
453	411084	RING GASKET

No	Part No.	Description
478	200430	DISHWARMER FLAP DOOR
611	603037	MOTOVENTILATOR
612	603039	COOLING FAN
614	606062	GRILL RESISTANCE
615	606045	CIRCULAR HEATER 3000W 240V
620	602038	COMMUTATOR
623	608062	OVEN BULB WITH
648	601965	TERMINAL SEPARATOR
649	608034	SMALL WARNING LIGHT
667	602025	THERMOSTAT
670	504128	SMALL FLAME SPREADER
671	504129	MEDIUM FLAME SPREADER
672	504130	RAPID FLAME SPREADER
673	504796	ULTRA RAPID FLAME SPREADER
715	604072	DASYCHAIN SWITCH
760	510507	SMALL BURNER
761	510508	SEMI RAPID BURNER
762	510509	RAPID BURNER
763	510707	ULTRA-RAPID BURNER
880	502208	GAS
881	502209	GAS
882	502210	GAS
883	502212	GAS
917	200303	STAINLESS
929	202108	VERTICAL VENT
930	202214	FEET SUPPORT
940	405075	WORK TABLE AND
941	405076	WORK TABLE AND
943	308041	BUMPER
960	408074	CAST
965	408073	CAST
972	2020006	WORK
1044	4010199	KNOB
1050	4010200	GAS VALVE KNOB RING
1051	4010202	COMMUTATOR KNOB
1052	4010201	ELECTR.THERMOSTAT KNOB RING
1143	410816	RISER
1406	403206	OVEN DOOR HANDLE
1407	406143	OVEN DOOR GLASS STOP SOL
1409	411052	UNDER GLASS OVEN GASKET
1411	411087	GASKET FOR OVEN FRONT 4 SIDE
1411	411088	GASKET FOR OVEN FRONT ONE SIDE
1415	602037	THERMOREGULATOR
1421	406349	INTERNAL OVEN GLASS
1602	210595	CONTROL PANEL
1614	202888	BACK PROTECTION
1615	2020110	CONTROL SUPPOR

No	Part No.	Description
1616	402169	FIBER GLASS
1622	608029	SMALL YELLOW BUD
1624	200319	WORK TABLE
1627	501872	GAS COLLECTOR
1628	501836	TUBE FOR RIGHT FRONT BURNER
1629	501839	LEFT FRONT BURNER
1630	501837	TUBE FOR RIGHT BACK BURNER
1631	5010109	LEFT BACK TUBE
1632	501841	CENTRAL TUBE
1640	202223	CLAMP PROTECTION FOR FLAP
1644	414055	FEET
1645	414063	BASE FOR LEGS
1661	202127	OVEN PANEL
1671	101256	ELECTRIC OVEN PANEL
1673	101468	BACK PANEL FOR OVEN
1674	101115	OVEN TOP PANEL BLACK
1677	101423	FRONT PANEL BLACK M9
1685	201152	BACK VENT STACK
1705	200081	OVEN GLASS SUPPORT M9/D2
2016	101369	OVEN SIDE PANEL BLACK
2100	308041	BUMPER
2130	201159	GRILL PROTECTION
4301	410974	VERTICAL PROFILE RIGHT
4302	410973	VERTICAL PROFILE LEFT
4311	409008	BLACK PUSH BUTTON FOR PROGRAMMER