



NO.	Spare Parts	NO.	Spare Parts
1	front shell	36	back filter
2	screw	37	screw
3	control board	38	discharging tube
4	head cover	39	water pump box
5	screw	40	sealing ring
6	display window	41	pump box knob
7	display holder	42	screw
8	screw	43	water pump
9	display board	44	water absorbing sponge
10	screw	45	water tank cover
11	vertical louver	46	water tank
12	screw	47	power cord reel shield
13	vertical louver eccentric wheel	48	power cord reel
14	osicillating rod	49	seal ring
15	vertical louver eccentric wheel cover	50	screw
16	screw	51	power cord
17	synchronous motor	52	protecting jacket
18	outlet grid	53	wheel
19	screw	54	base
20	wind wheel	55	screw
21	screw	56	water receiver
22	power board	57	screw
23	oil bearing	58	screw
24	screw	59	starting capacitor
25	water tank lid	60	air duct
26	floater	61	combined screw
27	water channel	62	main motor
28	reed switch	63	screw
29	fixation	64	horizontal louver
30	screw	65	display PVC
31	screw	66	battery box cover
32	pressure line yards	67	battery
33	back shell	68	remote control box
34	screw	69	remote control panel
35	cooling pad	70	remote control PVC

DCEVP8BW

Part No.	Description
DCEVP8BW_REMOTE	REMOTE FOR MODEL DCEVP8BW
DCEVP8BW_PAD	COOLING PAD FOR MODEL:DCEVP8BW