

W A R N I N G

**FOR PERSONEL SAFETY,MAKE SURE THAT THE ELECTRICAL
AND GAS CONNECTIONS TO THE COOKER HAVE BEEN
DISCONNECTED BEFORE STARTING ANY PART REPLACEMENT
PROCEDURES.THE APPLIANCE MUST BE INSTALLED IN
ACCORDANCE WITH THE REGULATION IN FORCE AND ONLY
USED IN A WELL VENTILATED SPACE.**

DISASSEMBLING

1-Top Lid

- Open glass top lid to a 90° angle,
- Remove the lid from its place holding it tightly and raising it upwards,
- Reassemble by reversing the above procedure.

2-Back Cover

Caution : The back cover is a heavy item. Use caution when removing the rear wall.

- Unscrew the two screws that connect the supply cord to the rear wall.



- Seven screws that attach the back cover to the body are unscrewed.



- To remove tilt upwards to disengage the counter balance weight from the cooker base and lift outwards from the base of the cooker.
- Reassemble by reversing the above procedure.

3-Top Burner Plate

- Remove the top lid,
- Unscrew the two screws that connect the burner plate to the rear fixing sheet,



- Raise the burner plate from the back and push it slightly forward.
- Disconnect the wire connections from the burner plate,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

4-Control Panel

Remove the burner plate ,then;

- Open the top door and pull off the knobs,
- Unscrew the two screws that connect the burner sheet fixing sheet to the control panel.



- Unscrew the three screws that connect the control panel to the oven body,



- For electrical ,mix and ceran ovens remove the commutator fixing sheet group using a suitable tool,
- Reassemble by reversing the above procedure.

5-Front Door Group

- Open the top door to its fully-extended position,
- Pool the hook on the hinge back.Do this for both hinges,



- Close the door half way and holding both sides of the door.
- Lift it slightly upwards and pull it out towards you.
- Reassemble by reversing the above procedure.

6-Handle


- Open the front door group and unscrew the two screws that fasten the handle to the inside of the front door,



- Pull the handle and reassemble by reversing the procedure.

7-Front Door Outer Glass

- Disassemble the front door group and the handle,
- Unscrew the two screws that connect the outer glass to the inner sheet.

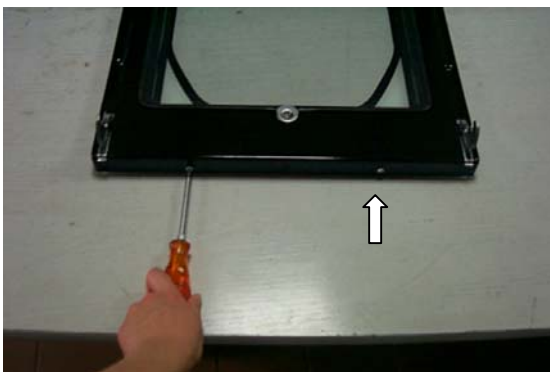

- Reassemble by reversing the above procedure.

8-Front Door Inner Glass

- Disassemble the front door group,
- Remove the upper and lower washers that fix the front door inner glass to the door by unscrewing the screws.



- Reassemble by reversing the above procedure.

9-Knob

- Hold the knob tightly and pull it slightly towards you.



- While installing a new one ensure that it fits snugly into its housing.

10-Front Door Hinge

- Disassemble the front door group and handle,
- Unscrew the two screws that connect the hinge to the inner sheet,




- Hold the inner sheet and raise it upwards and take the hinges,
- Reassemble by reversing the above procedure.

11-Dropped Down Bottom Lid Group

- Open the dropped down bottom lid,
- While carefully tugging the two wings at the bottom end of the hinge wedge,release the wedge from its holder,



- Take off the lid from the bottom lid hinge,

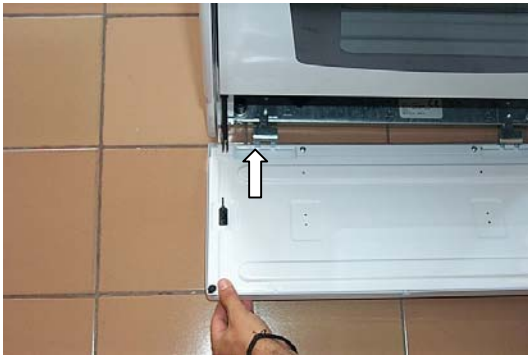

- Reassemble by reversing the above procedure.

12-Fixed Bottom Lid Group

- Remove the front door group and unscrew the two screws on the upper part of the stationary front cover,whereas the cover will fall loose,



- Open the stationary bottom cover and take off it from the bottom lid hinge,
- Reassemble by reversing the above procedure.

13-Warmer Drawer

- Pull out and remove the warmer drawer,
- Pop out the four plastic clips,
- Take out the cover along,
- Reassemble by reversing the above procedure.

14-Warmer Drawer Rail Roller

- Pull out the warmer drawer and remove it completely before carrying out this procedure,
- Separate the rollers from their connection points by prying them out.
- Reassemble by reversing the above procedure.

15-Signal Lamp

- Remove the burner plate and pull the signal lamp from the control panel and take it off,
- Remove all the connections from commutator, thermostat or energy regulator,
- To remove the plastic cap of the signal lamp push the plastic cap forward from the inner side of the control panel,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.