

For Electrical and Ceran Cookers

1-Hotplates

- Remove the hob prior to carrying out this procedure,
- Unscrew the screws under the hotplate(s),
- Disconnect the nuts under the hotplate,remove the spring washer,hotplate fixing brackets and the insulation. Withdraw the element assembly.
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

2-Commutator

- Remove the hob and the knob,
- Unscrew the two screws that connect the commutator to the control panel,



- Disconnect the the wiring of the commutator and remove the commutator,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

3-Grill Heating Element


- Remove the rear wall,
- Unplugging the sockets,unscrew the two screw found on the left and right sides,



- Open the front door and remove the grill heating element from the front(from inside the oven body),
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

4-Oven Heating Element

- Remove the rear wall,
- Unplugging the sockets of heating element and the terminal block,unscrewing the two screws that connect the terminal block to the side wall and unscrew the two screw found on the left and right sides,

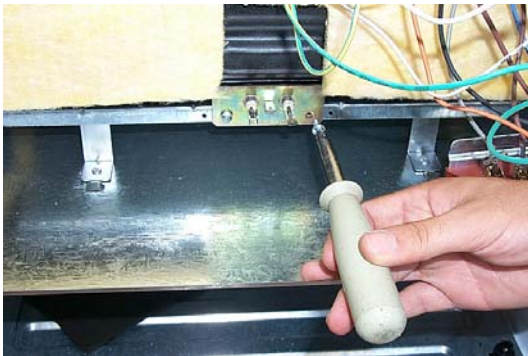

- Pull out and remove the oven heating element from the back,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

5-Turbo Heating Element

- Remove the back cover,
- Pull out the sockets and unscrew the two screws,
- Unscrew and remove the two fan protection sheet screws,
- Remove the turbo heating element,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

6-Turbo Motor

- Remove the back cover,
- Unscrew the two screws of the fan protection sheet and by rotating the the screw in the middle of the fan in the counter-clockwise direction,remove the fan,
- Remove the turbo motor cables from the rear,
- Loosen and remove the motors' three bolts,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

7-Electrical Thermostat (For Multi Ranges)


- Remove the burner plate and the knob,
- Unscrew the two screws that connect the thermostat to the control panel,



- Disconnect the the wiring of the thermostat and remove the thermostat,
- Seperate the thermostat bulb from its clips and remove the thermostat by pushing through the rear hole,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

8-Electrical Thermostat (For Electrical and Turbo Ranges)

- Remove the burner plate,
- Disconnect the the wiring of the thermostat and remove the thermostat,
- Seperate the thermostat by pulling it out of the commutator.

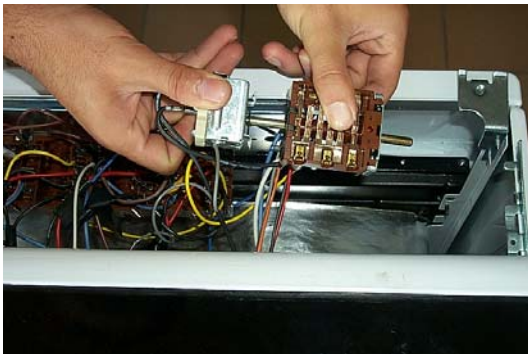

- Seperate the thermostat bulb from its clips and remove the thermostat by pushing through the rear hole,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

10-Ceran Glass Frame Group

- Unscrew the two screws that connect the hob to the rear fixing sheet,
- Raise the hob from the back and push it slightly forward,
- Disconnect all the wires from the hob and remove the hob,
- Unscrew the eight screws that connect hob protection sheet to the hob top,

Caution : Before removing the hotplates mark the position of each fixing bracket on the bottom protection sheet.



- Remove the hob bottom protection sheet,
- According to the “Replacement of the hob indicator lamp assembly” procedure take off the hob signal lamp group.
- Remove the hob hotplates with their wires.
- Reassemble the hob glass frame group.(While reassembling the hotplates be careful that the the fixing bracet of the hotplate is in the correct hole of the hob bottom protection sheet.)
- Connect the wires referring to the Electrical Wiring Diagram

11-Ceran Hotplate


- Carry out the first five step that described in “Removal of the hob” procedure,
- Disconnect all the wires of the hotplate which you will change and remove the hotplate,
- Reassemble reversing the sequence and refering to the Electrical Wiring Diagram.If the plastic connector(s) are damaged during the removal operation use new ones.

12-Hob Indicator Lamp Assembly


- Unscrew the two screws that connect the rear fixing sheet to the hob,
- Take off the hob indicator lamp assembly by pushing it from its place,
- Take of all the cables from the signal lamp group,
- Reassemble reversing the sequence and refering to the Electrical Wiring Diagram.

13-Timer

- Remove the hob,
- Disconnect all the wires from the timer,
- Unscrew the four screws that connect the timer fixing sheet to the control panel and remove the timer group,

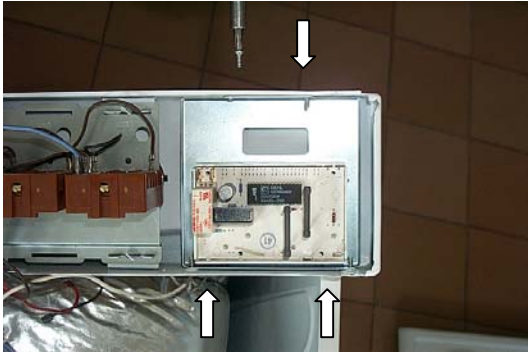


- Separate the timer from the timer fixing sheet by pushing the four brackets inwards,

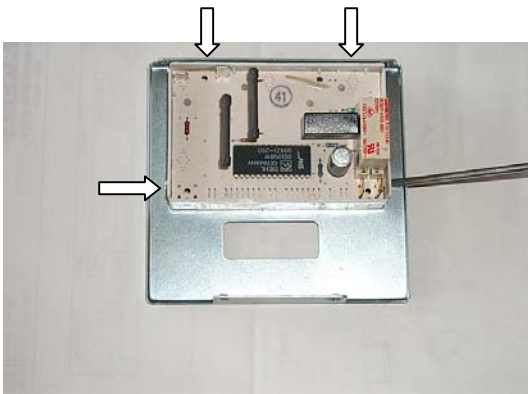

- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.

14-Turnspit Motor

- Remove the rear wall,
- Unscrew the two screws that connect the motor,

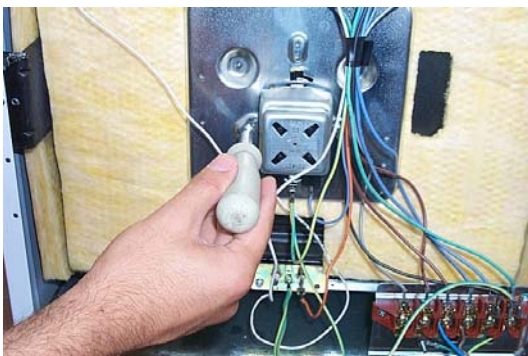

- Pull out the turnspit motor,
- Reassemble reversing the sequence and referring to the Electrical Wiring Diagram.