


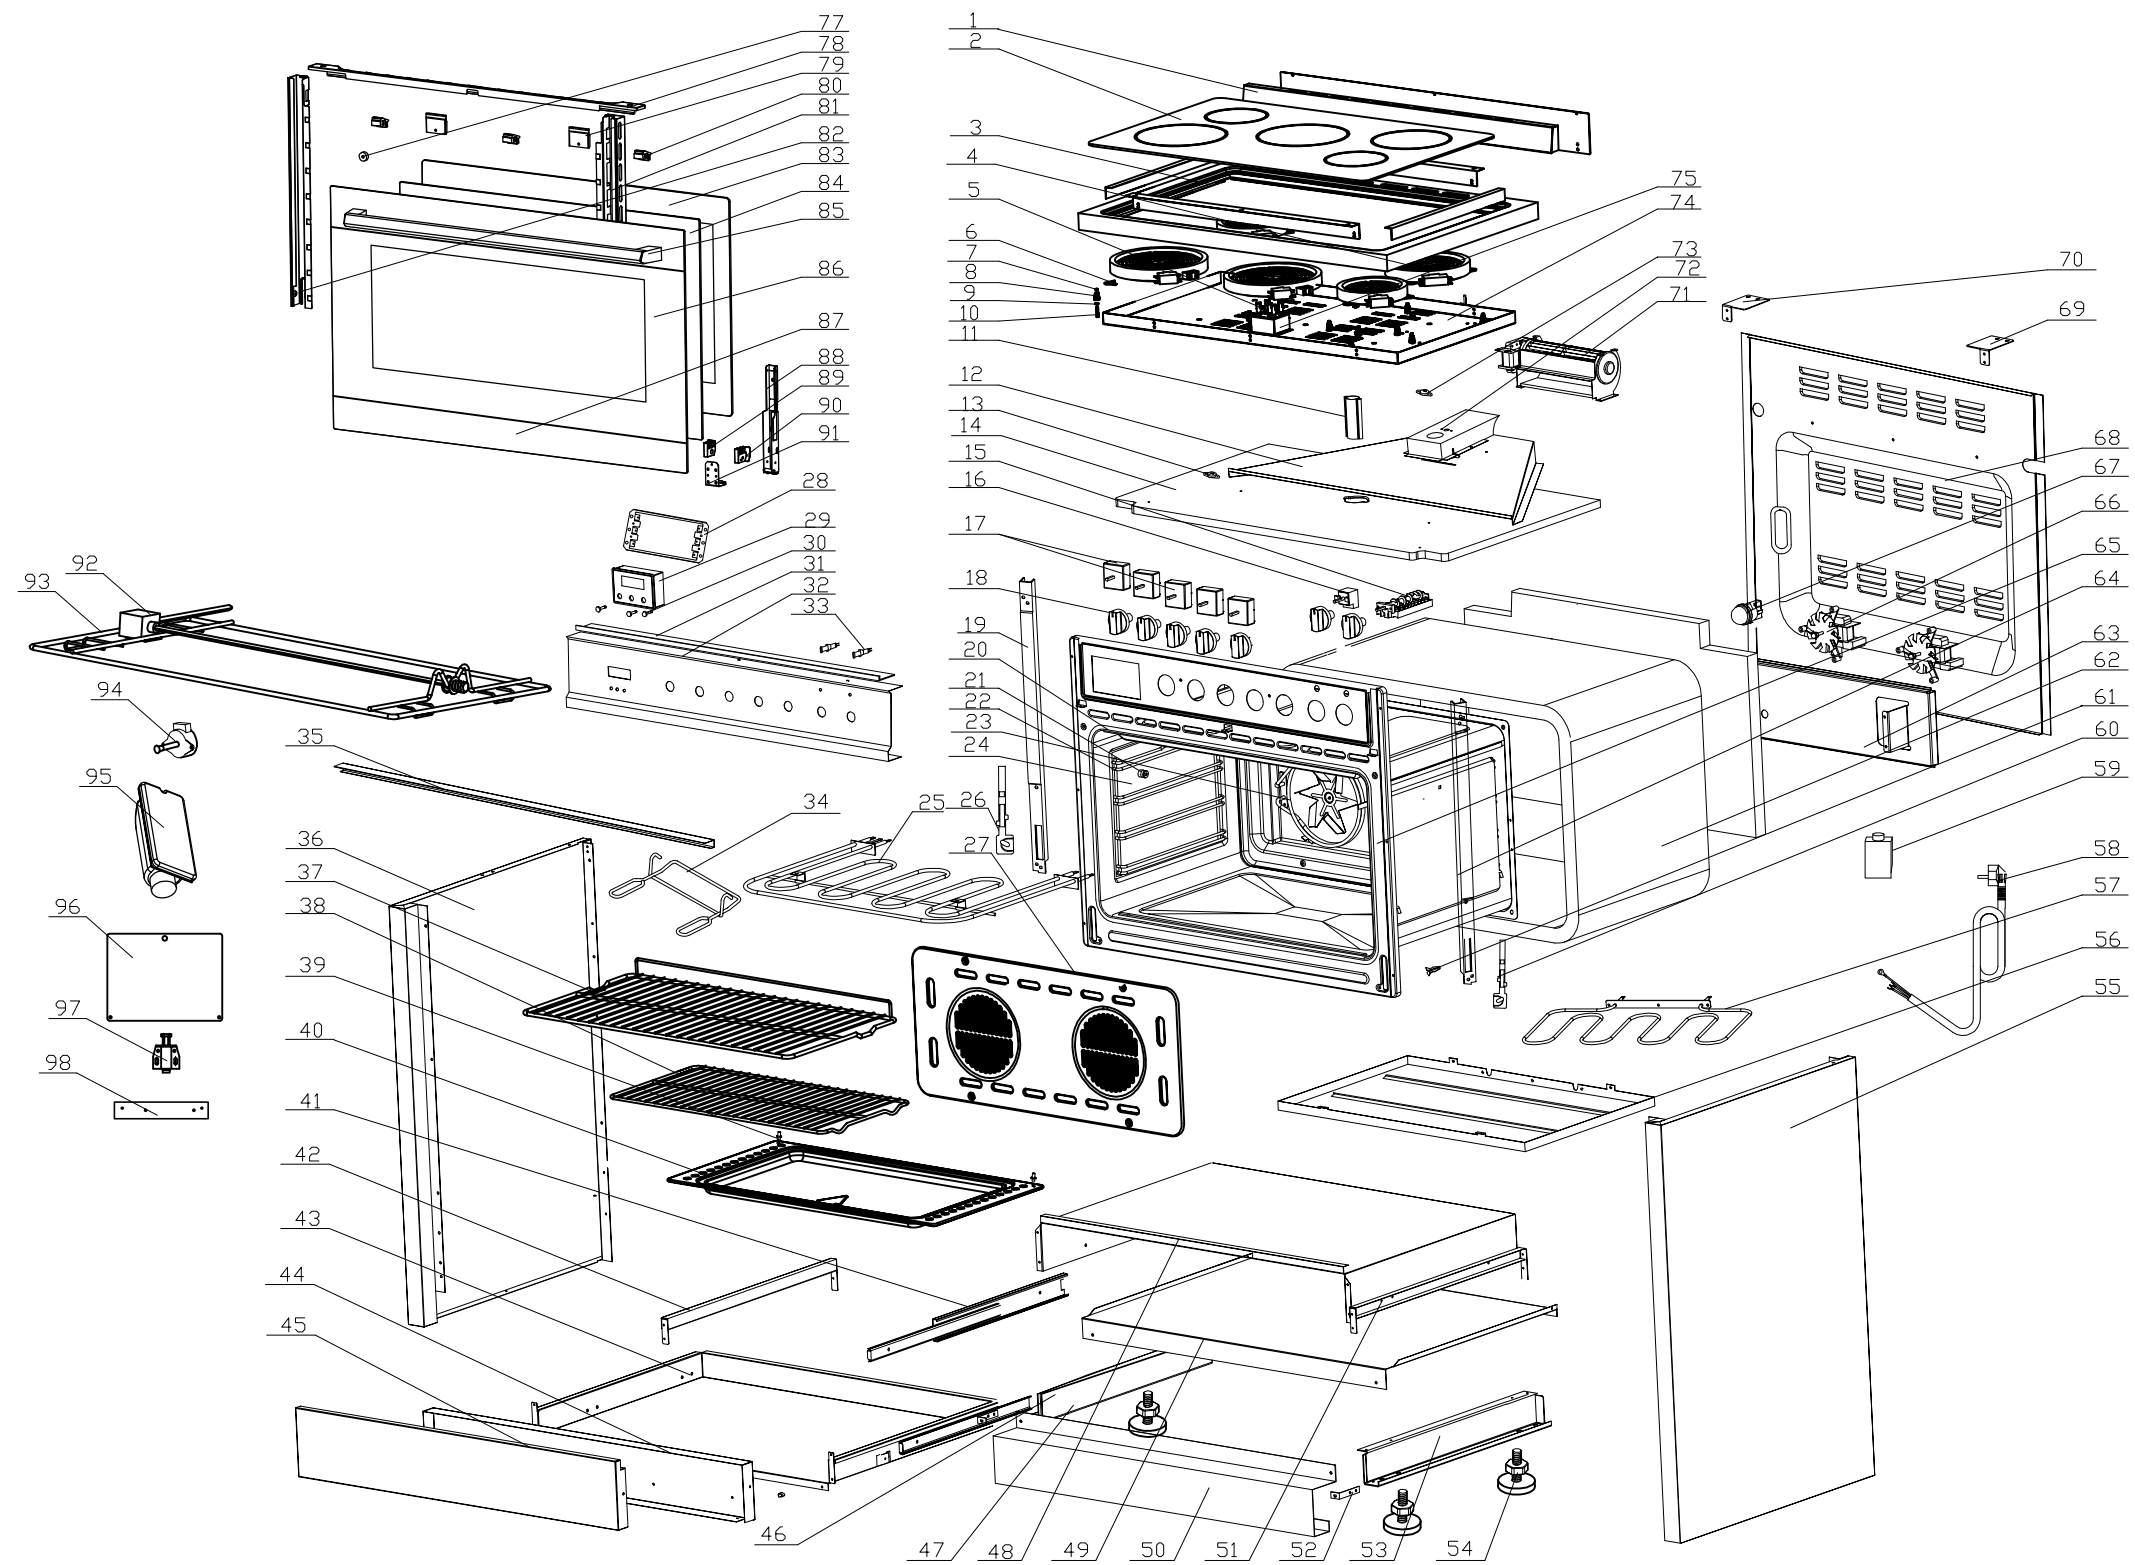

Model: FC9PS

No	Part No.	Description	Qty
1	2040600002	Splashback Cover assembly-need process	1
2	30502200191	Hob glass panle	1
3	2040500019	Hob Panel Assembly for range cooker	1
4	30102800004	Heating element 2200w/1000w	1
4.1	30102800005	Heating element-Fish	1
4.2	30102800002	Heating element 1800W	1
4.3	30102800001	Heating element 1200W	2
5	30102500001	Indicator light	5
6	30307400002	Heating element Fixture	15
7	30700400005	Nut	30
8	30401600011	Spring	15
9	30700200004	Spring washer	15
10	30700500020	Cross recessed pan head screw	15
11	30401100001	Exhaust pipe	1
12	30312600009	Cover board for smoke ven	1
13	30100700018	Limiter Temp Cutout	1
14	30301800007	Bottom cover for smoke ven	1
15	30100500031	Function Switch.8function	1
16	30100900013	Thermostat Oven	1
17	30102200008	Hot Plate Energy Switch	2
17.1	30102200007	Hot Plate Energy Switch	3
18	30402500078	Konb #67-Champagne	7
19	30302500008	Cavity Side Support-Right Hinge Plate	1
20	2041000001	Door seal-F96	1
21	30400300005	Guide bracket fixed shaft.	2
22	30400200007	Guide bracket	2
23	30101200088	Back Element	2
24	2040700046	Cavity components	1
25	30101200062	Bottom element	1
26	30302600018	Hinge fixed board 1.5mm-left	1
27	30301100007	Back Element baffle	1
28	30302900027	Hinge fixed board 0.7mm	1
29	30100200044	Timer, 3 bottoms	1
30	30209800009	Buttons For Digital Timer silver	3
31	30306500001	Fixed connection bar for panel	1
32	30305900011	Control panel	1
33	30102500003	Indicator light	2
34	30400800001	Tongs for rack	1
35	30313200010	Support for oven	1
36	2040900013	Left panel assembly for range cooker	1
37	30400100008	Rack	2
38	30401000008	Baking tray	1
39	30404200001	Guild pillar for Grill Tray	2
40	30304200001	Grill Tray	1
41	30403900007	Guide rail	1
41.1	30403900008	Guide rail	1
42	30404000001	Guide rail pipping cord	1
43	2041200001	Warming drawer bottom board for range cooker	1
44	30307100014	Warming drawer inner	1
45	30307100015	Panel-outer-drawer	1
46	30306600006	left and right stand bar	1
47	30202500001	shock pad	2
48	30307200007	Coaming	1
49	30306900006	Foot fixed plate	1
50	30306400008	Kick Panel	1
51	30404000002	Slide strip article lining	1
52	30313300013	hinge fixed block	1
51.1	30313300012	hinge fixed block	1
53	30306600007	left and right stand bar	1

No	Part No.	Description	Qty
54	30201600003	Non-slip feet	4
55	2040900014	Right panel assembly for range cooker	1
56	30301200005	Fixed board for bottom element	1
57	30101200063	Top element	1
58	30102400180	POWER CORD	1
59	30102600002	Terminal Box	1
60	30302600019	Hinge fixed board 1.5mm right	1
61	30304100001	Temperature controlled probe fixed clip	2
62	30600100006	Insulation fibre	0.02
63	30307700007	Back fixed shelf for cavity	1
64	30302500030	Cavity Side Support-left Hinge Plate	1
65	30315000009	Bottom gasket	1
66	30100300010	CIRCULATION FAN assmebly	2
67	30101000001	BULB SUB ASSEMBLY	2
68	30302200013	Back cover for shell	1
69	30302900025	Hinge fixed board 2mm	1
70	30302900026	Hinge fixed board 2mm	1
71	30301900003	Baffle for smoke ven	1
72	30100400024	Cooling fan assembly-18W	1
73	30100800003	Thermostat	1
74	30300500051	base tray	1
75	30307500003	Indicator light Fixture	1
76	30201300001	Handle fixing sleeve	2
77	30303500009	DOOR TRIM 1mm	1
78	30303600001	Handle fixed board	2
79	30201000010	Intermediate glass block	3
80	30303400011	Door Frame On The Left	1
81	30303400012	Door frame on the right	1
82	30500400069	Inner Door Glass -Low-E glass	1
83	30500300014	Middle Door Glass	1
84	30400700051	Handle	1
85	30500200009-FC9PS	Outer Door Glass	1
86	30307900012	Trim strip for range cooker	1
87	30400600008	Hinge assembly	2
88	30200900009	Inner Door Glass fixwd block-left	1
89	30200900010	Inner Door Glass fixwd block-right	1
90	30303700004	Middle Door Glass limited block	1
91	30400500003	Turnspit rack	1
92	30401200002	Turnspit stem support	1
93	30101300005	Turnspit motor	1
94	30101100001	Square lamp assembly	1
95	30304300005	Rail brakcets plate	1
96	30304300006	Rail brakcets plate	1
97	30202400001	Clasp	1
98	30302900040	Hinge fixed block	1