


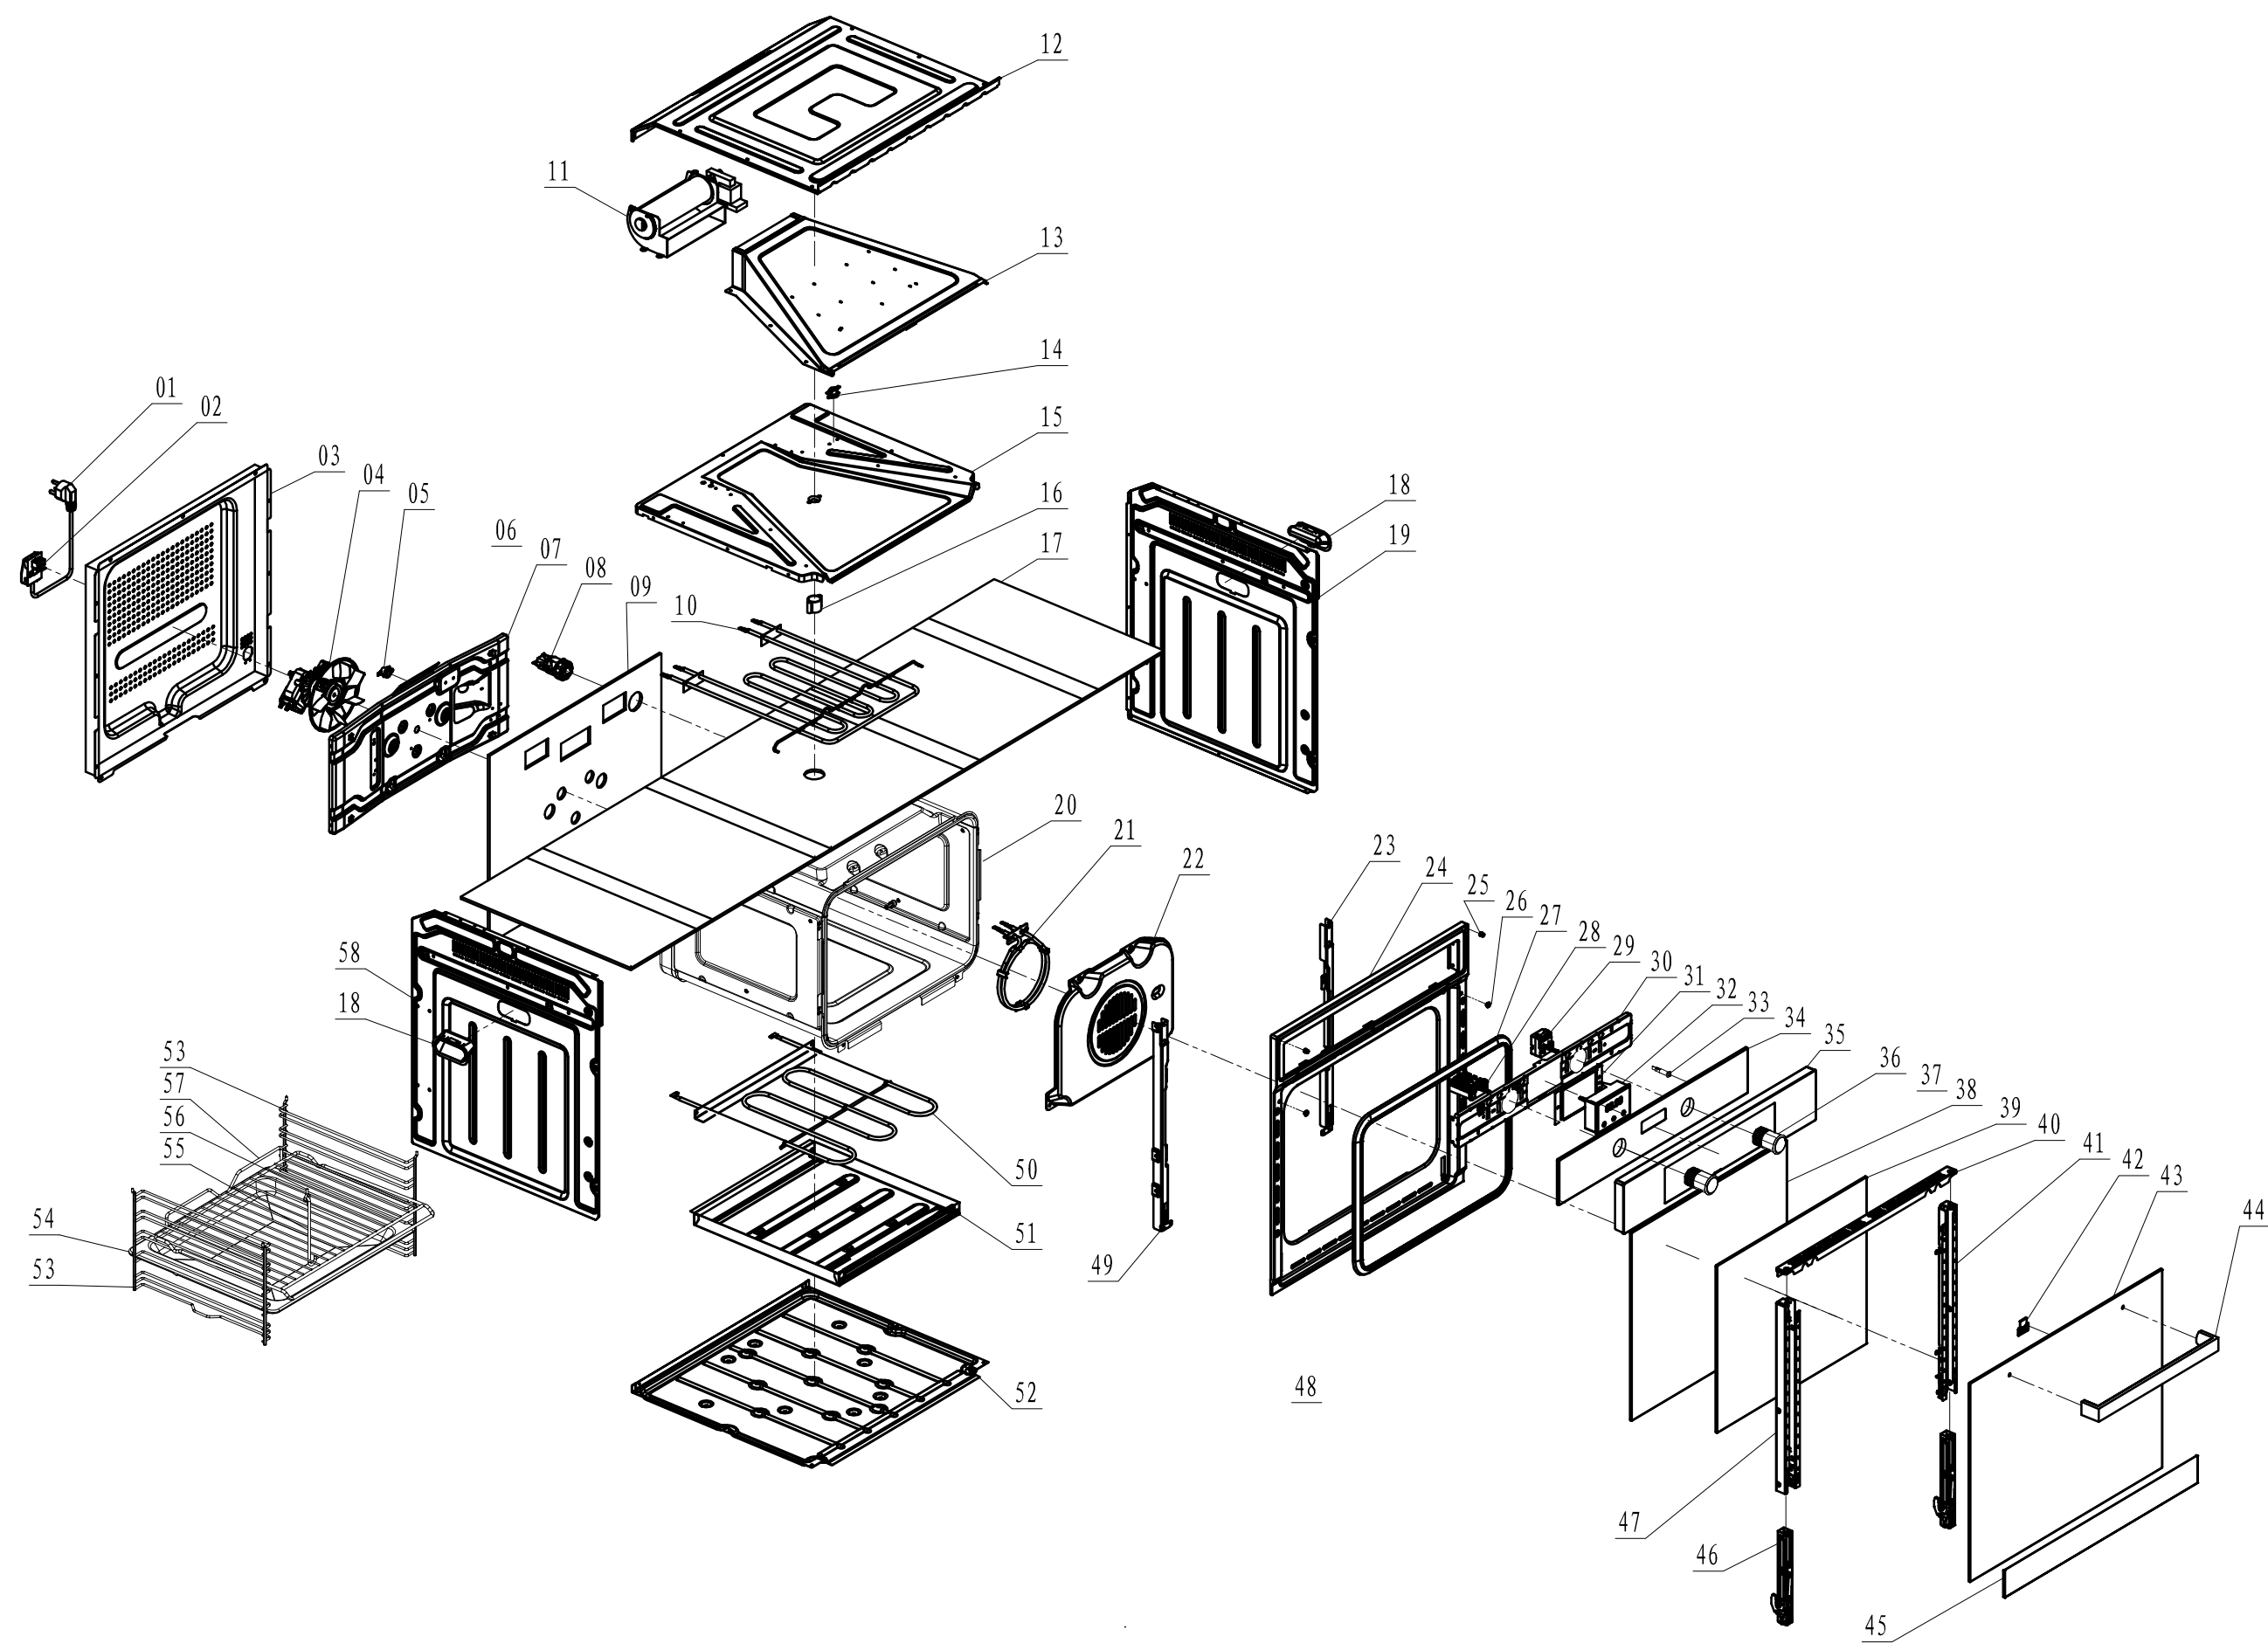

Ref No	part No.	Part Name
1	H05RR-F	power cord
2	XH-B-3	electric box
3	EB56-118-A	outer rear panel
4	HL-YJRF4-B	convection fan motor and blade
5	EB56-28-01	thermostat - 125 degree
7	EB56-109-A	Insulation rear panel
8	X555	Oven lamp
9	EB56-165-A	Insulation blanket - back
10	EB56-154-A	top element
11	HL-YZWF-C	cooling fan
12	EB56-117-A	Outer oven top panel
13	EB56-115-00	exhausting cover for cooling fan
14	EB56-31-01	thermostat - 50 degree
15	EB56-114-A	Outer top insulation panel
16	EB56-151-A	ash outlet
17	EB56-166-A	Insulation blanket - top
18	EB57-546-1	oven side handle
19	EB56-113-A	Outer oven side panel R/H
20	OC-001	Oven cavity
21	EB57-512-1	Round element
22	EB56-110-A	back cover for convection fan
23	EB-56105-2A	door hinge R/H
24	EB56-100-A-2	Oven front frame
25	EB56-122-A	Gasket for panel
26	EB56-174-A	gasket for door
27	EB56-123-A	Oven door seal
28	FD	function switch
29	WK-R11	temperature control
30	EB56-152-5A	base board for control panel
31	EB56-153-4A	bracket for display
32	BT-01	digital timer
33	EB-56ECD3G-P8BC22-01 (NO SUPPLY)	Indicator light
34	EB56-170-17A	glass for control panel
35	EB56-119-6A	Control panel
36	EB-56ECD3GP8BC22-02 (NO SUPPLY)	knob
38	EB56-136-4A	Inner oven door glass
39	EB-137-4A	Middle oven door glass
40	EB-181-A	Exhausting cover on glass door
41	EB56-180-A	Bracket for glass - right
42	EB90-44-A	Nip for the glass door
43	EB56-135-A	ourter glass
44	EB-56ECD3G-P8BC22-03 (NO SUPPLY)	door handle
45	EB-56ECD3G-P8BC22-04 (NO SUPPLY)	S.S strip on ourter glass
46	EB-56ERCDG-41	Oven door hinge L/H & R/H
47	EB56-179-A	Bracket for glass - left
49	EB56-104-2A	door hinge L/H

50	EB56-155-A	bottom element
51	EB56-103-A	Heating element base plate
52	EB56-111-A	Outer base plate
53	SR-001	side rack left/right
54	EB56-04-01	baking tray
56	SGR-001	small grill rack
57	BGR-001	big grill rack
58	CD-001	Completed door