





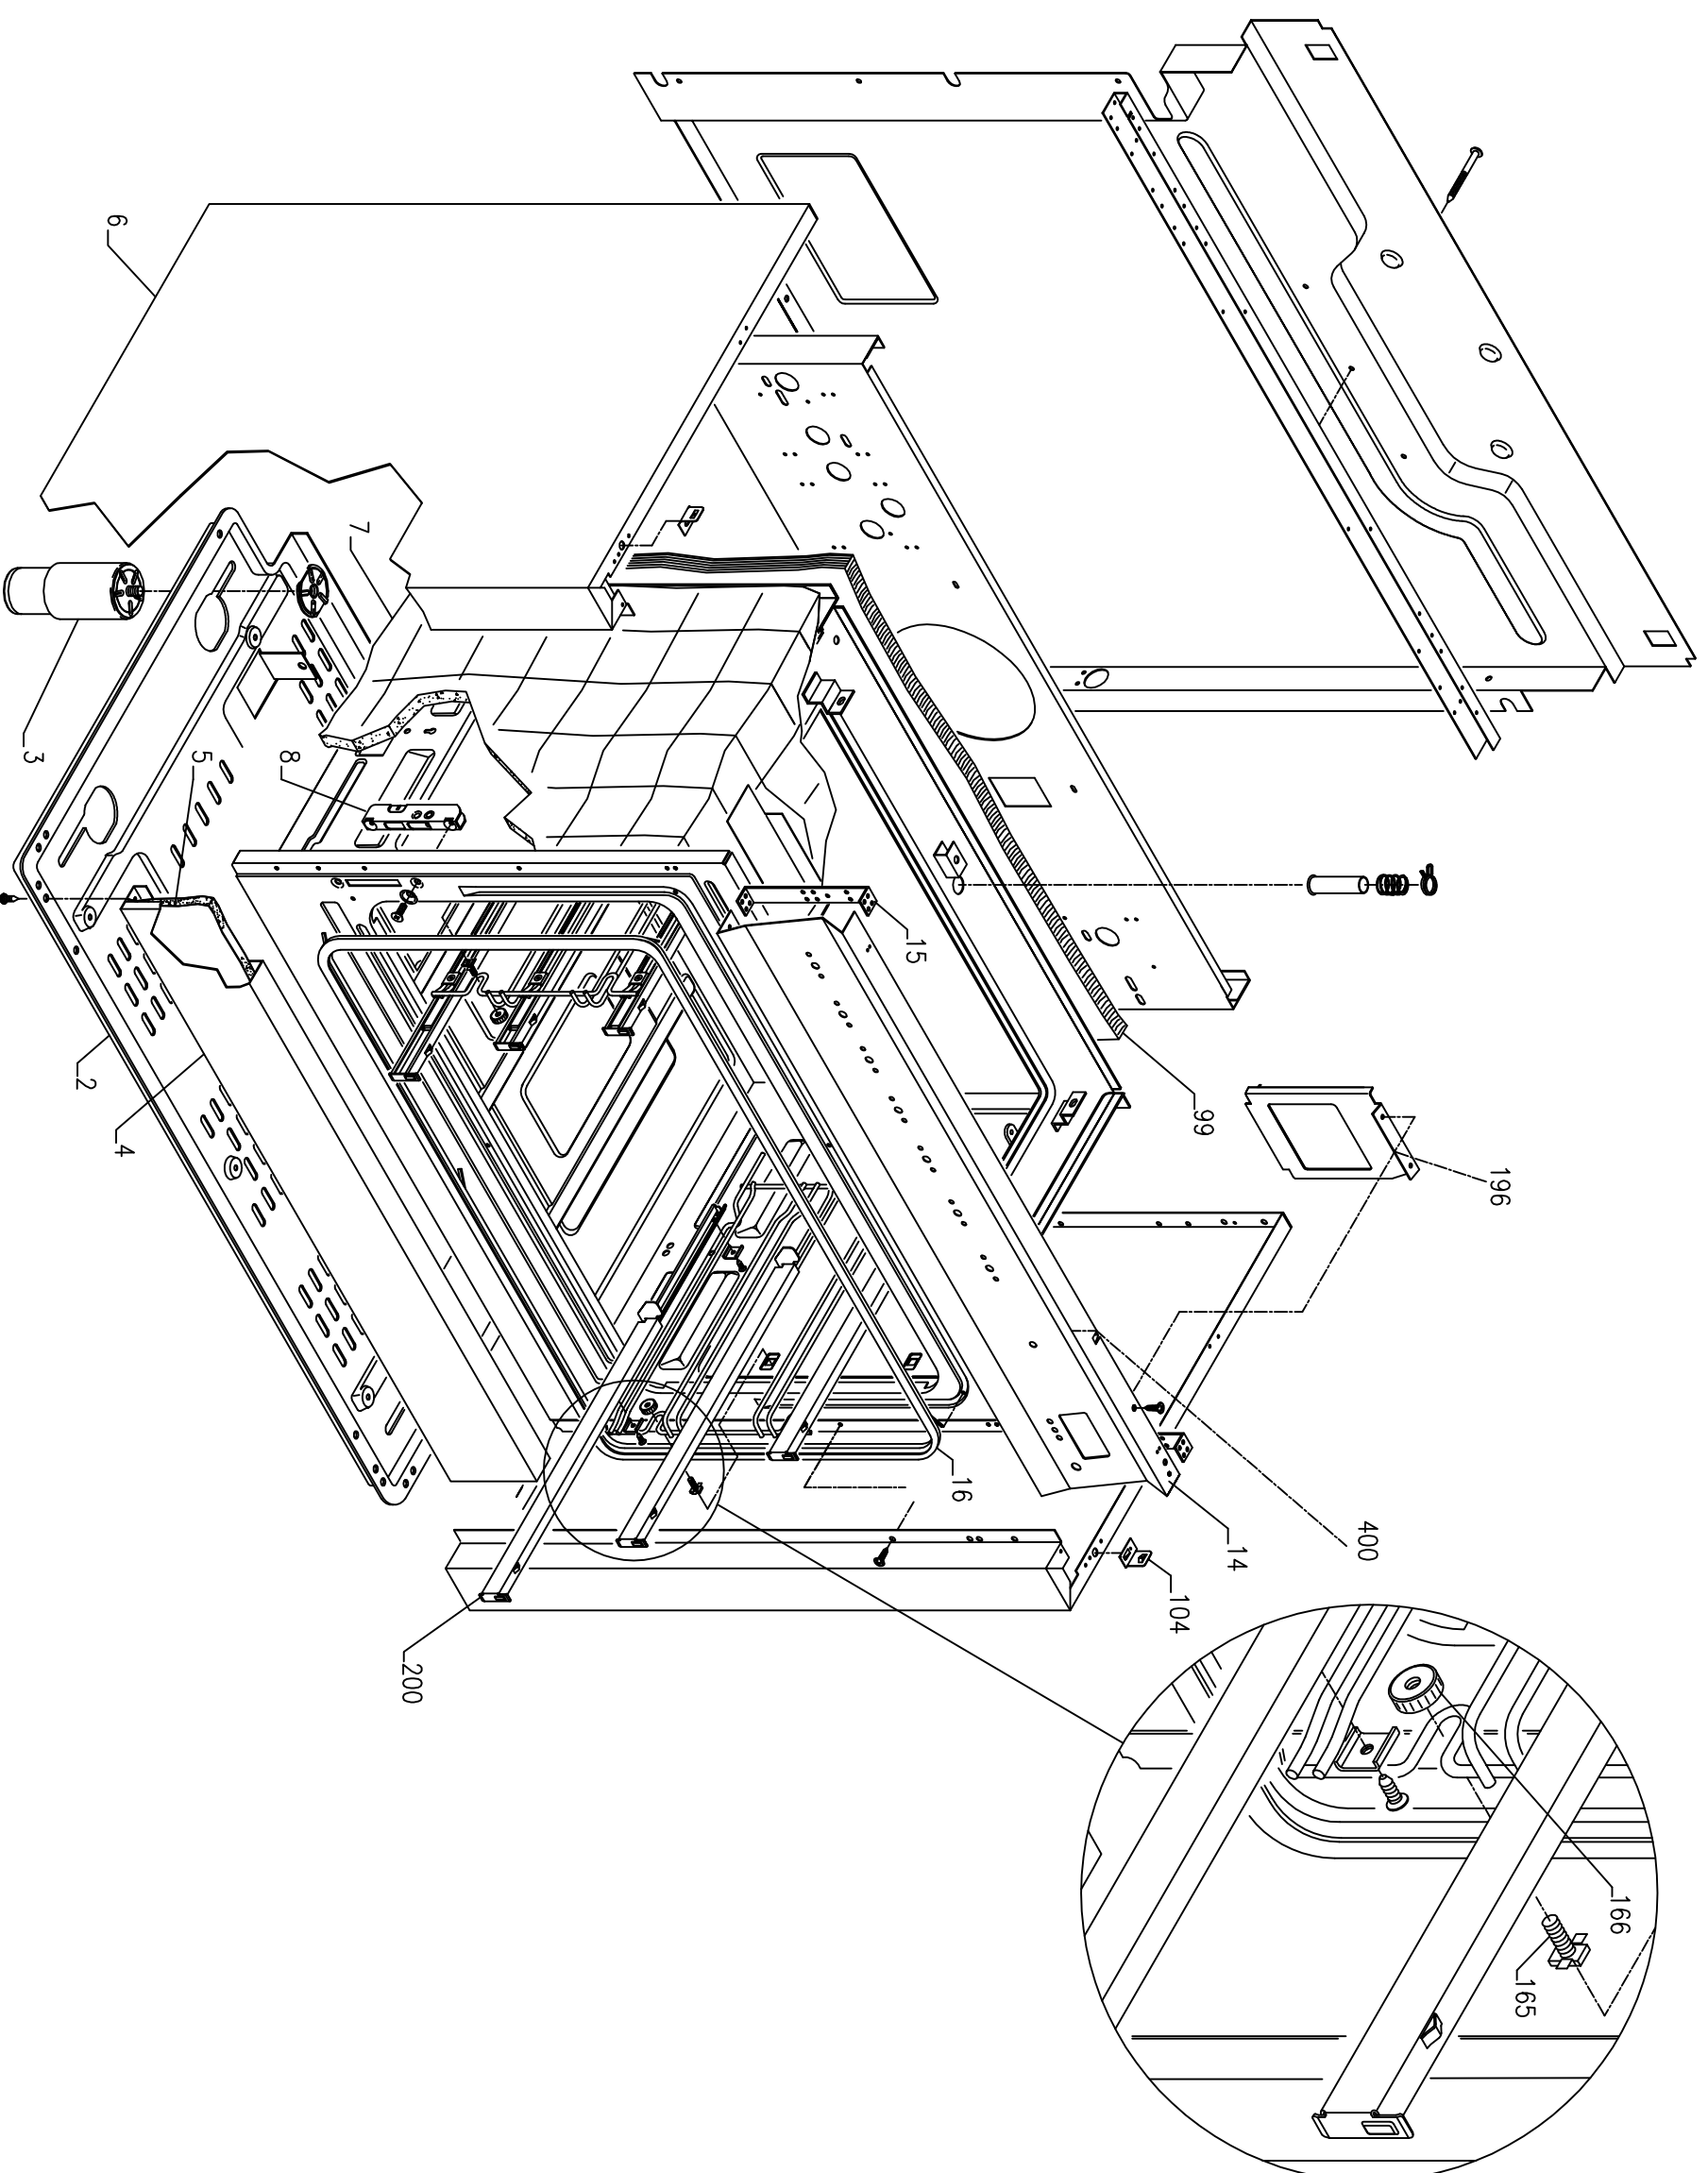

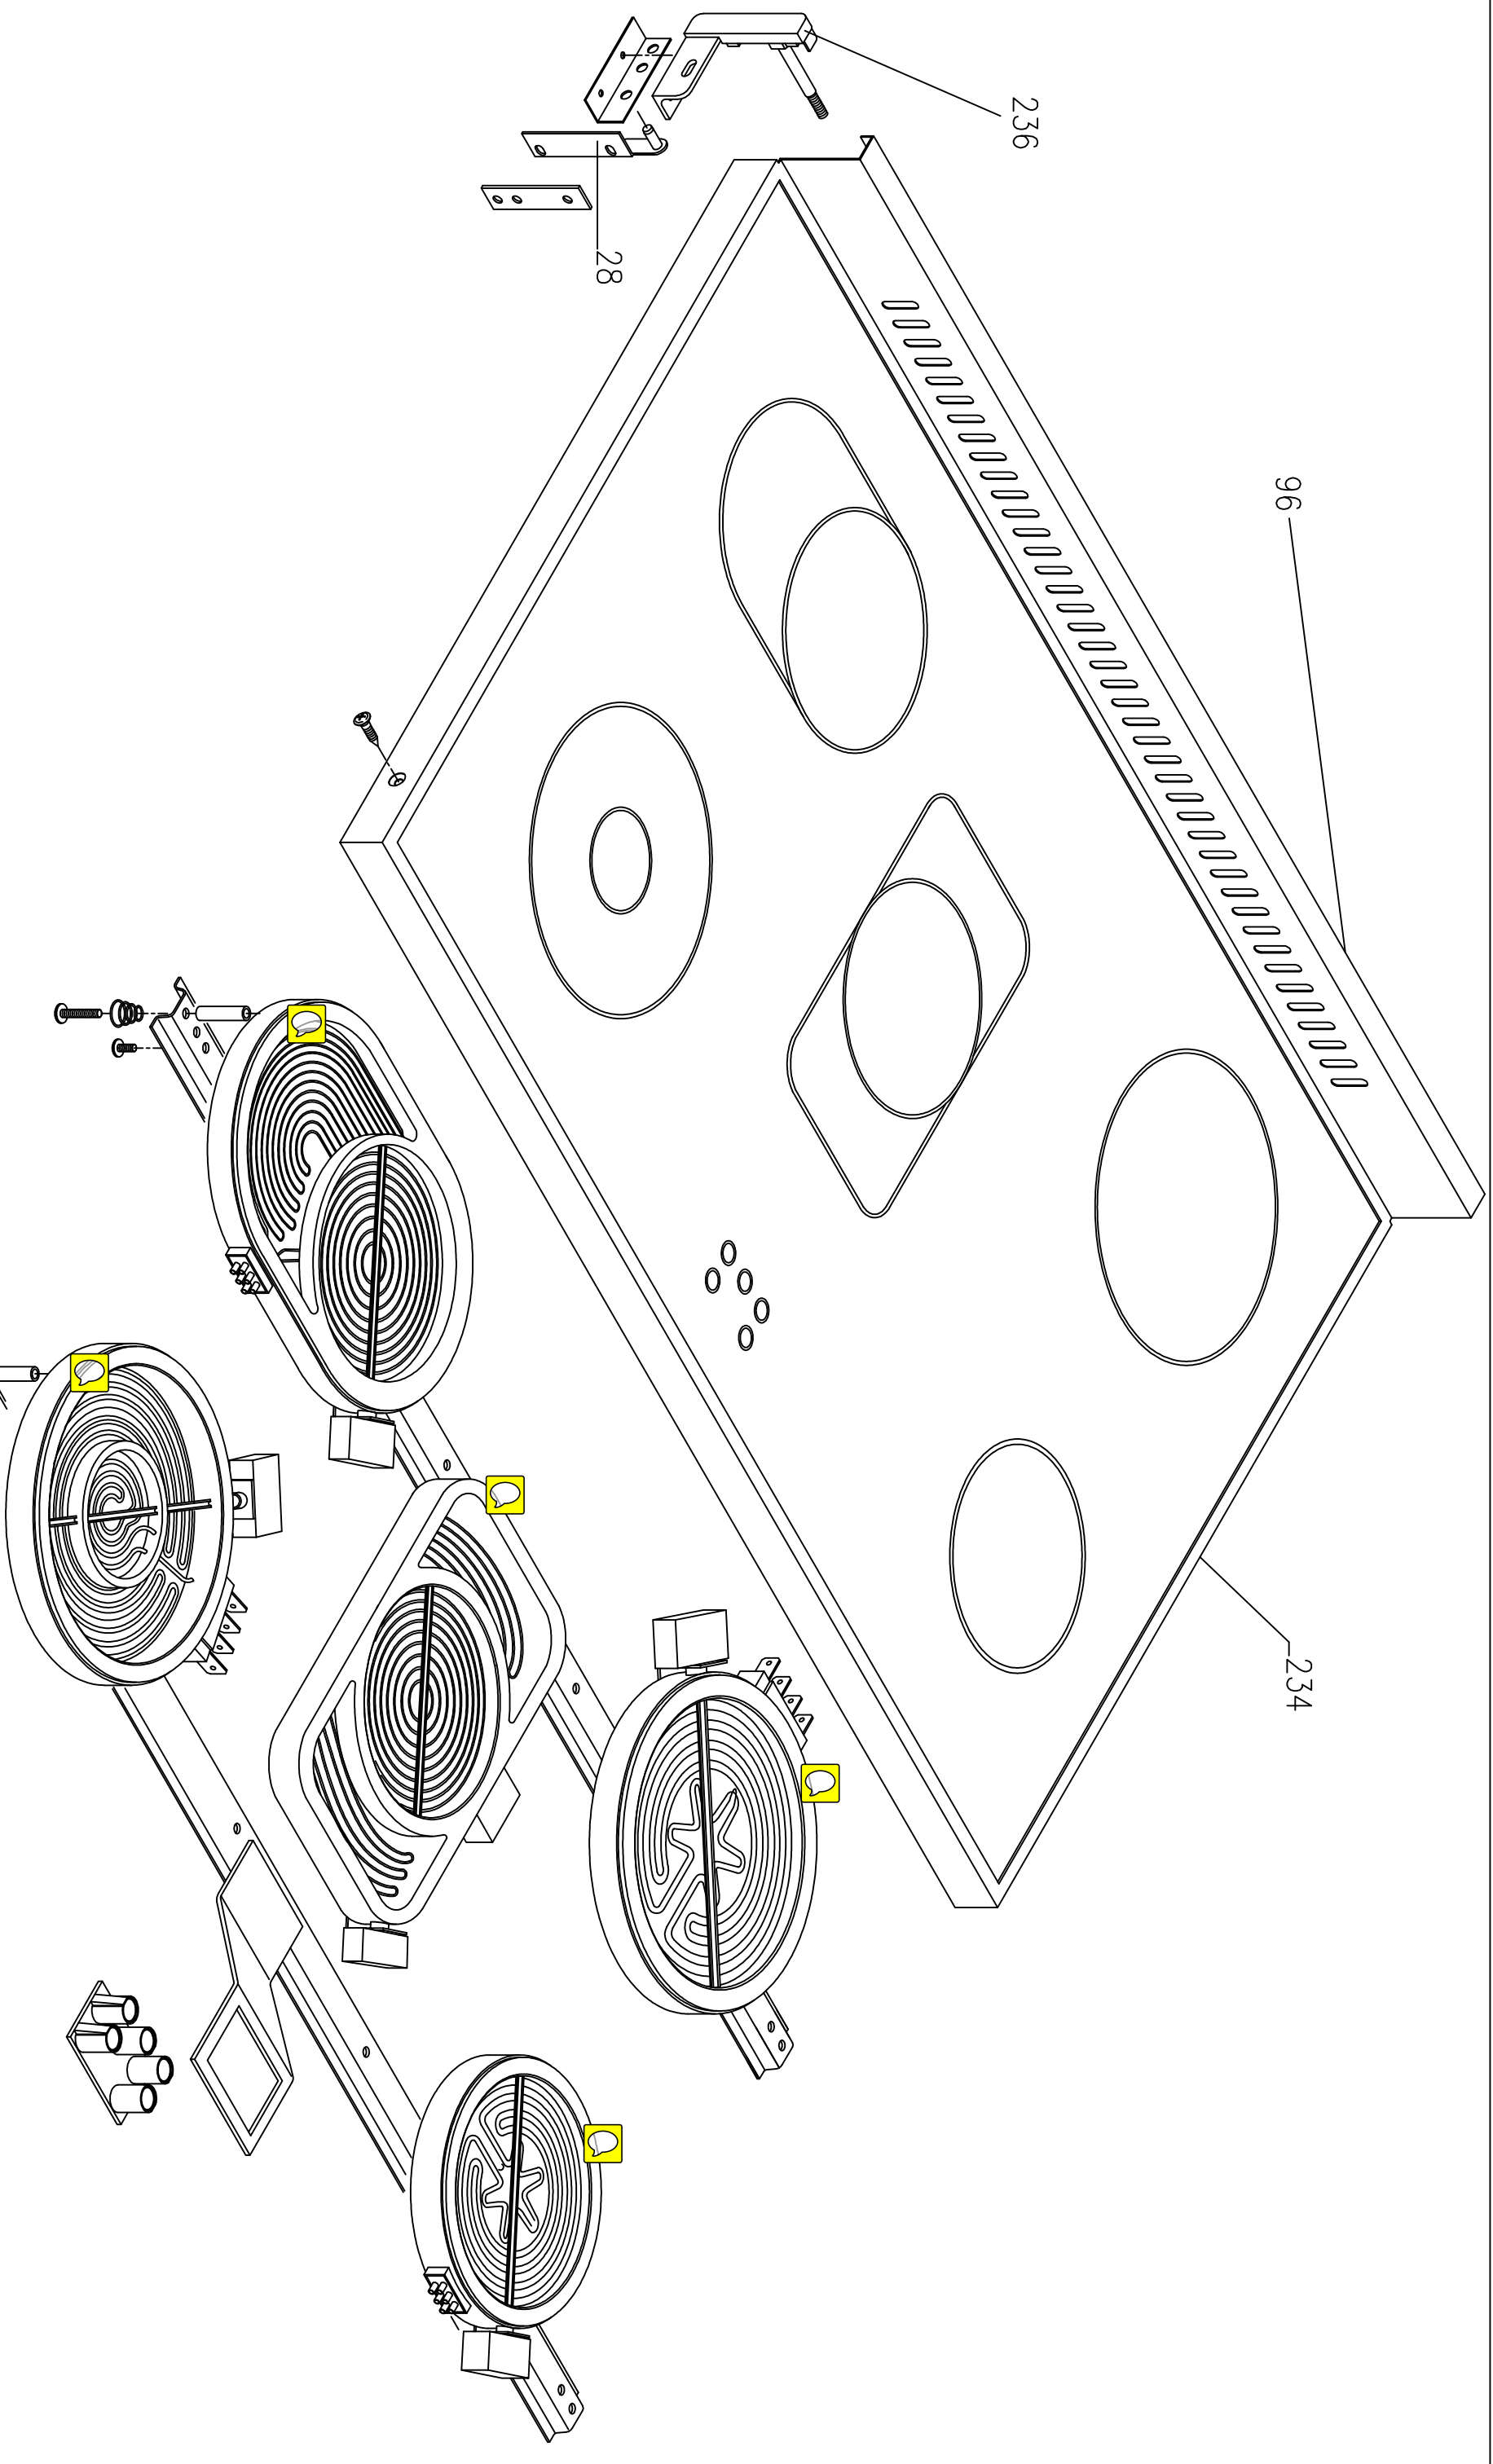

51460408-4

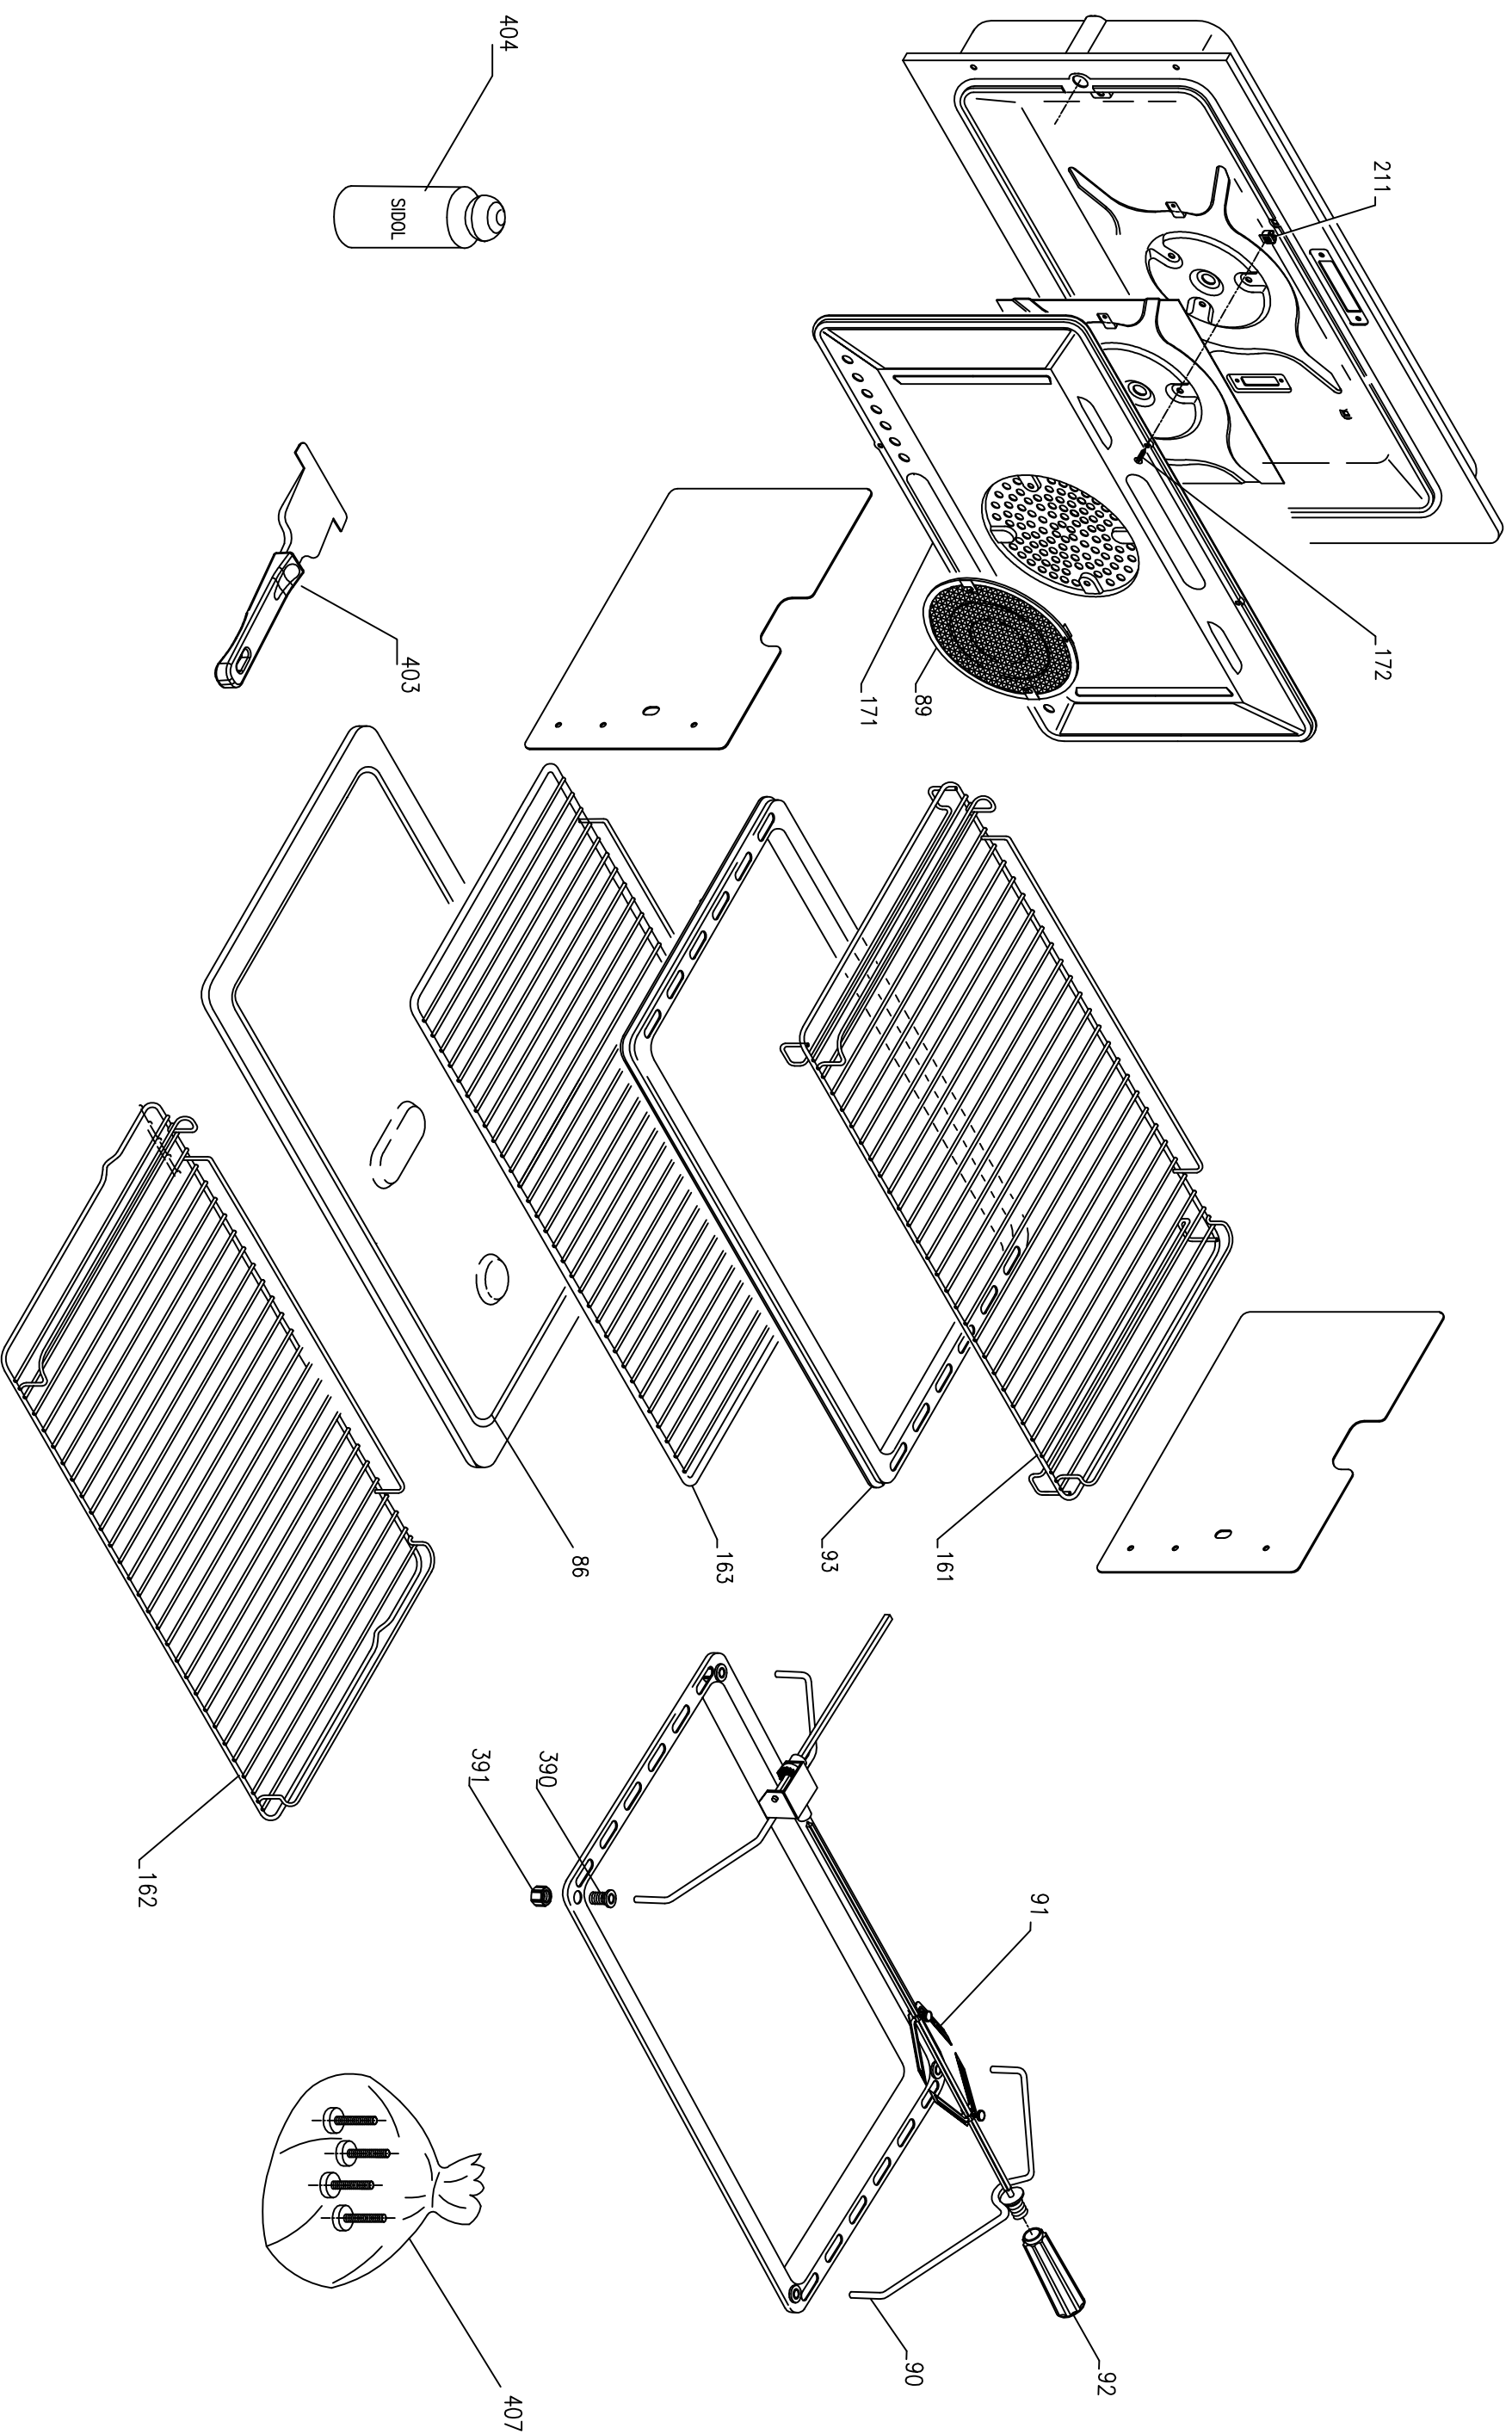

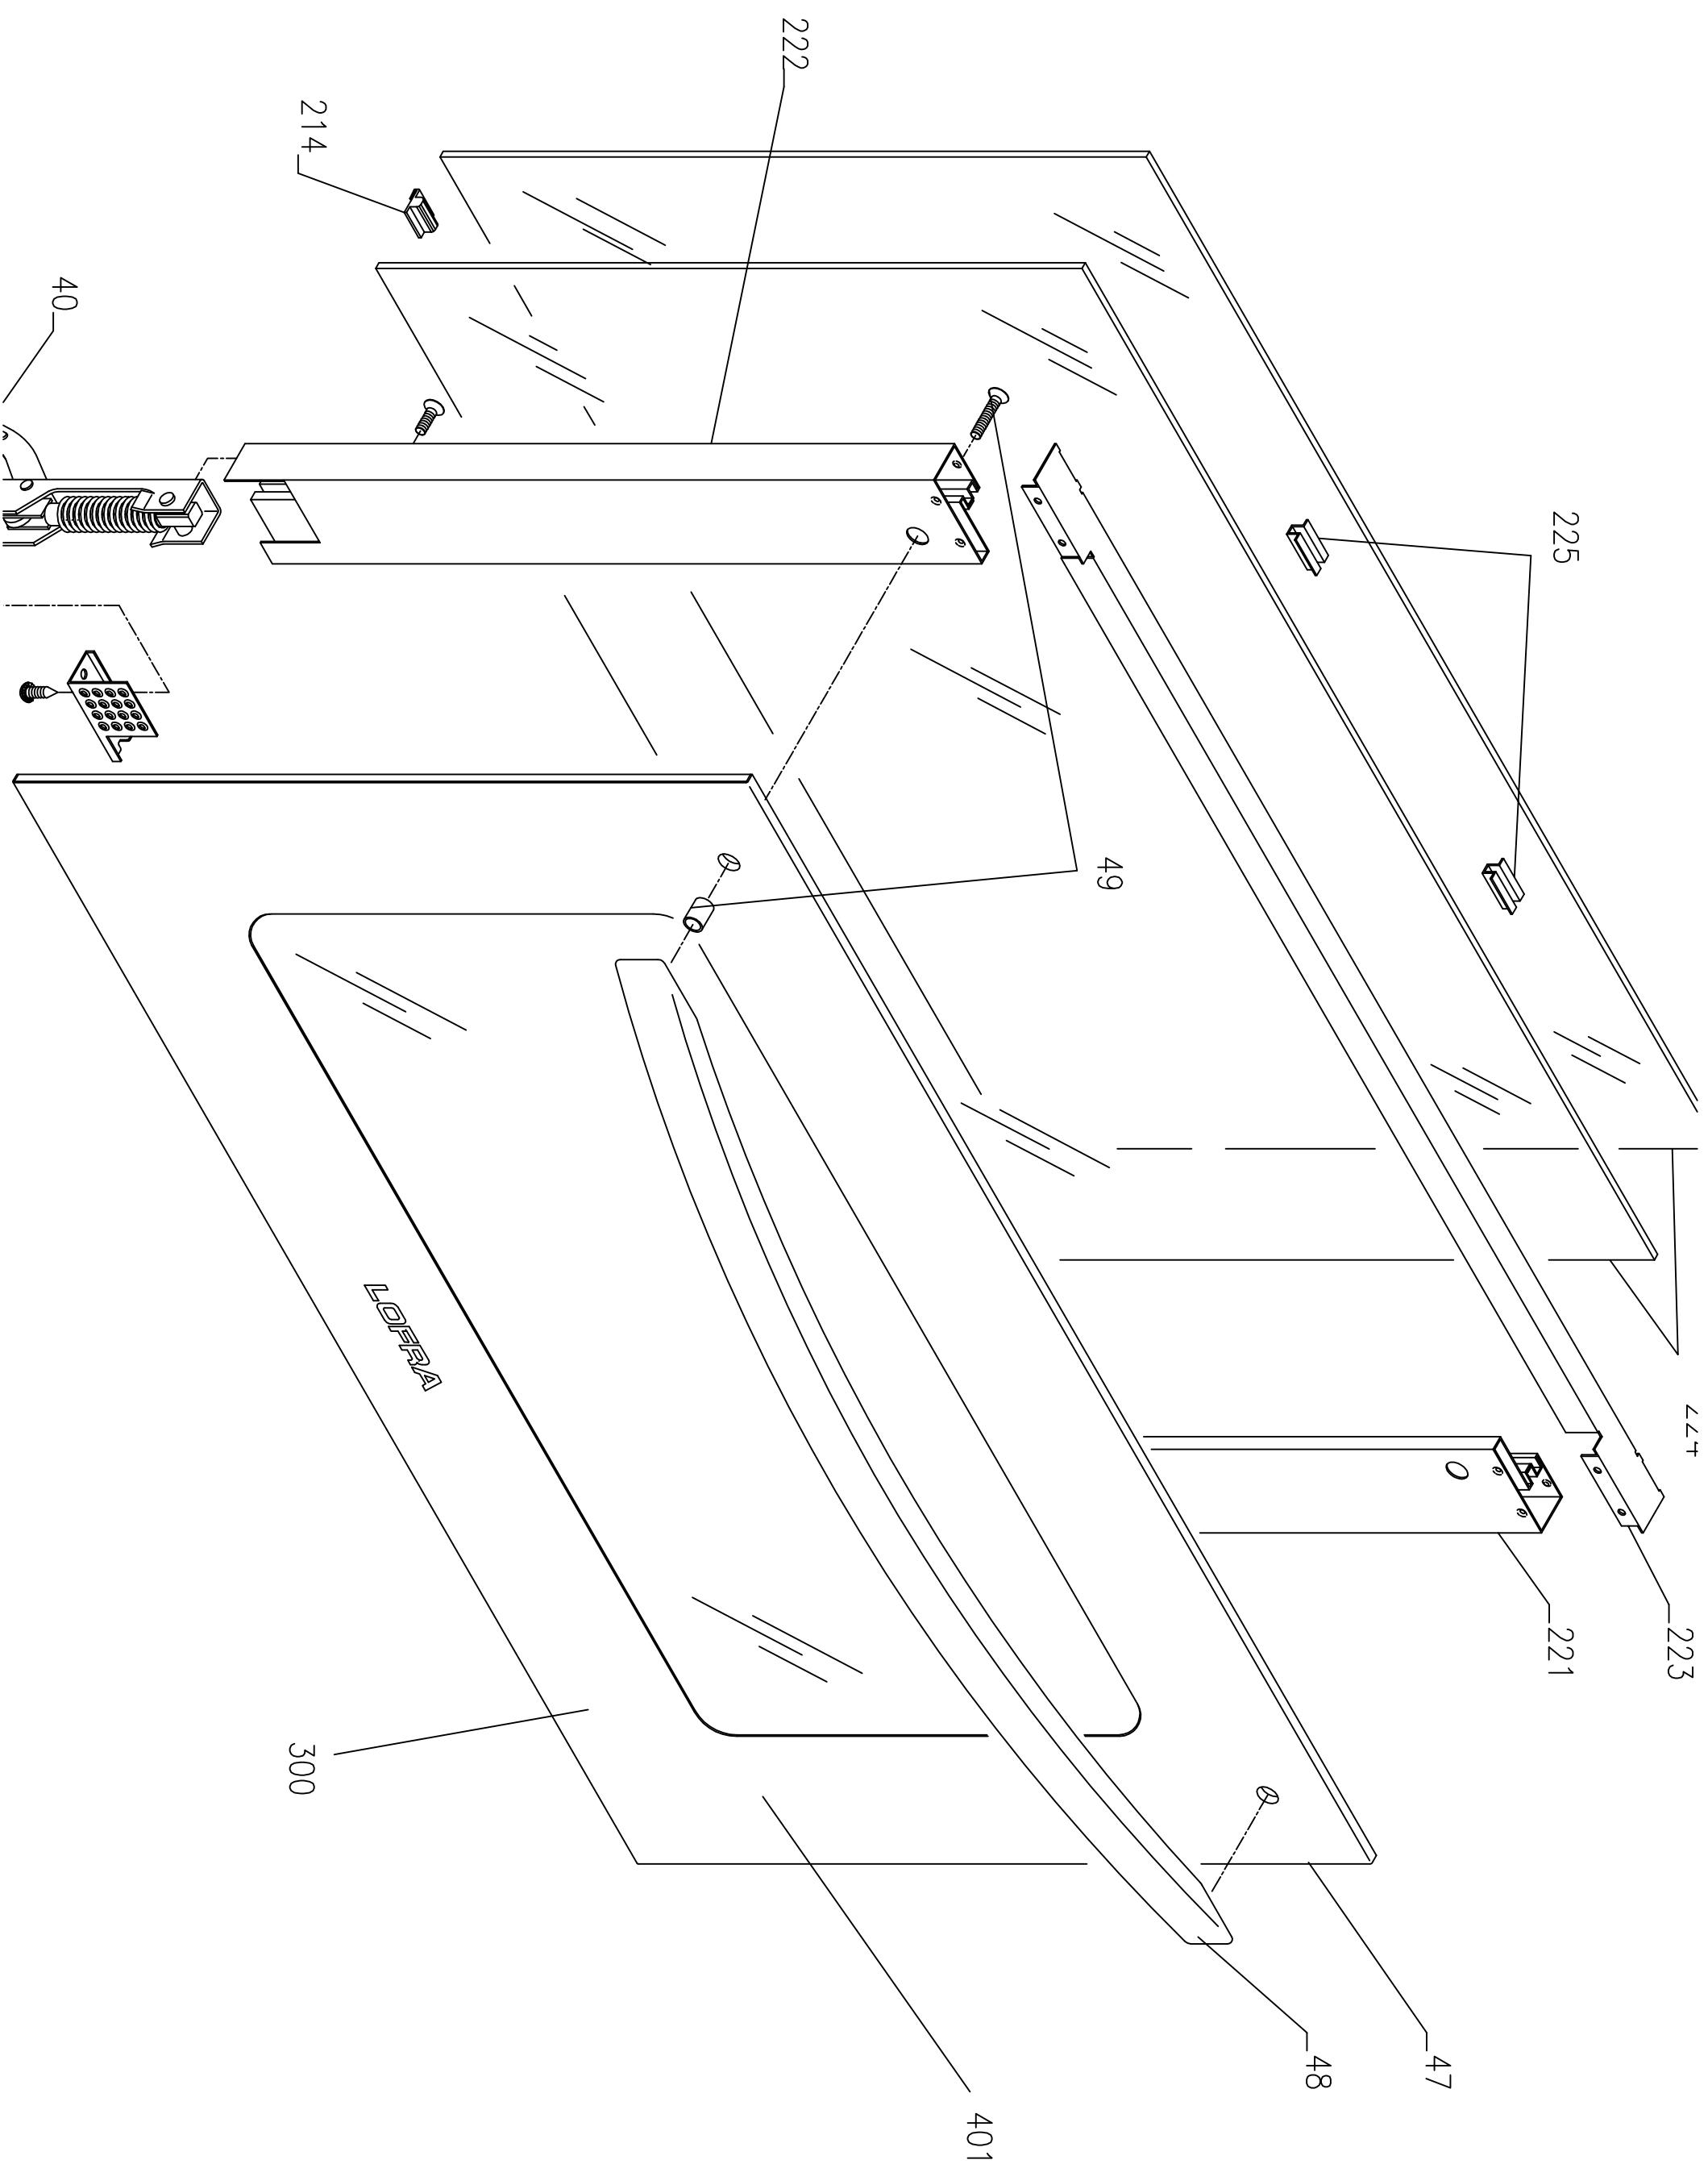

No	Part No.	Description
	03210798	FOOTSTALL
3	03170411	AUSTRALIAN FOOT MODIFIED 2011
4	03210268	UNDER OVEN DOOR
4	10020289	UNDER OVEN DOOR
5	03120273	UNDER OVEN DOOR GLASS WOOL
6	10020181	RIGHT/LEFT SIDE/BRUSHED STEEL
7	03120032	INSULATING MATTRESS
8	03040076	OVEN DOOR HINGE HOLDER
14	03111203	FRONT PANEL
15	10160059	SQUARE FIXING FRONT PANEL
16	03170190	4 SIDES OVEN GASKET
28	03040014	WORKING TOP RIGHT HINGE
28	03040015	WORKING TOP LEFT HINGE
39	03010512	THERMOREGULATOR
40	03040078	LEFT/RIGHT OVEN DOOR HINGE
47	21501057	EXTERNAL OVEN DOOR GLASS
48	03070067	OVEN DOOR HANDLE
49	03020107	SCREW FIXING OVEN DOOR HANDLE
49	03170303	UNDER HANDLE BUSH
61	03010462	HEATING ELEMENT
63	03010535	FAN MOTOR
71	03010890	MULTIF. OVEN COMMUTATOR GOTTAK
72	03010440	THERMOSTAT
76	03010209	LED
86	10500239	GIANT OVEN LOWER TRAY
89	03170266	FAN FILTER
90	03010869	TURNSPIT MECHANISM AND SUPPORT KIT
91	03010426	TURNSPIT ROD
92	03010384	TURNSPIT HANDLE
93	10500267	OVEN TRAY
96	10020259	TERMINAL WALL
99	03120165	INSULATING BACK PANEL
104	03020086	SCREW FIXING WORKING TOP
104	03020414	CLIP FIXING WORKING TOP TO SIDE
125	03010589	TURNSPIT MOTOR
136	03010355	GRILL HEATING ELEMENT+ BOTTOM PANEL
161	03060161	UPSIDE DOWN OVEN GRID
162	03060163	UPSIDE OVEN GRID
163	03060162	SIMPLE OVEN GRID
165	03020094	CAGE SCREW
166	03020225	CAGE SCREW RING M25
167	03140337	NIKEL SHINY EL.KNOB, BLACK LINE INDEX
171	10500241	FAN COVER ETC
172	03020098	SCREW FIXING FAN COVER
196	03210496	PROGRAMMER SUPPORT
197	03010711	PROGRAMMER
197	03170330	POLYCARBONATE PROGRAMMER COVER
197	03210568	METAL PROGRAMMER COVER
200	03060227	CPL SET TELESCOPIC SIDE GUIDES
201	03170230	FRONT PANEL GASKET
204	03010570	LAMP TRANSFORMER
205	03010569	LAMP HOLDER + HALOGEN LAMP
208	03010731	RADIANT GRILL

No	Part No.	Description
209	03050308	KERALITE GLASS FOR RADIANT GRILL
210	03170279	GLASS GASKET FOR RADIATING GRILL
211	03020226	CLIP FIXING FAN COVER
214	03170234	GLASS PROTECTION RUBBER
221	03080219	OVEN DOOR RIGHT FRAME
222	03080220	OVEN DOOR LEFT FRAME
223	03080228	OVEN DOOR UPPER FRAME
224	03050280	TRIPLE GLAZED OVEN DOOR ATHERMIC GLASS
225	03080234	OVEN DOOR GLASSES SPACER
229	03010590	7 FUNCTIONS COMMUTATOR
230	03010591	ENERGY REGULATOR (this is for Knob, not for Grill)
234	21170127	WORK.TOP CPL (GLASS,EL.PL,FRAMES,TERMIN.
236	03100226	BRUSHED RT TERMINAL WALL
236	03100227	BRUSHED LT TERMINAL WALL
256	03140340	PROGRAMMER KNOB
257	03010721	LED
286	03010645	GRILL ENERGY REGULATOR
300	10020299	EXTERNAL OVEN DOOR GLASS FRAME
390	03020585	OVEN TRAY BUSH FOR TURNSPIT SUPPORT
391	03020586	RING NUT FIXING OVEN TRAY BUSH
400	20170765	COMPLETE FRONT PANEL
401	21500960	OVEN DOOR
403	03170346	GLASS-CERAMIC SCRAPER
404	03170347	GLASS-CERAMIC DETERGENT
407	21501900	SMALL FEET KIT FOR PLINTH