



Nectre Mega LE

Installation Instructions



Keep these instructions for future reference



Glen Dimplex Australia proudly supports the activities of Landcare Australia through its membership of the AHHA

CONTENTS

1. INSTALLATION	1
1.1. IMPORTANT INFORMATION	1
1.2. INSTALLING THE HEATER	2
1.2.1. Positioning the Heater	2
1.2.2. Standard Installation	2
1.2.3. Corner Installation	2
1.2.4. Clearance Dimensions	2
1.2.5. Floor Protector	2
1.3. REDUCING CLEARANCES TO COMBUSTIBLES	3
1.4. INSTALLING THE FLUE	3
1.5. INSTALLING BAFFLE PLATES	4
1.6. INSTALLING FIRE BRICKS	5
1.7. INSTALLING ASH PLATE	5
1.8. TECHNICAL DRAWINGS	6
1.8.1. Mega Legs	6
1.8.2. Mega Ped	6

1. INSTALLATION

THE INSTALLATION INSTRUCTIONS IN THIS MANUAL APPLY TO THE NECTRE MEGA LE WOOD HEATER MODELS.

THEY HAVE BEEN TESTED FOR EMISSIONS AND EFFICIENCY AND COMPLY ACCORDING TO AS/NZS 4012 & AS/NZS 4013.

1.1. IMPORTANT INFORMATION

The unit must be installed according to all manufacturers' instructions included in this manual. The manufacturer is not liable for installations that do not meet the requirements outlined in this manual.

Most building regulatory authorities in Australia require any wood heater installation to comply with Installation Standard AS/NZS 2918. Different states and councils may have varying regulations. Check local building regulations before installing the appliance.

All Nectre wood heaters have been tested to ensure they will meet the appropriate safety standard requirements if the instructions in this manual are followed. As the safety and emissions performance can be affected by altering the appliance, no modifications are allowed without written permission from the manufacturer.

WE RECOMMEND THAT THE INSTALLATION OF YOUR NECTRE WOOD HEATER BE CARRIED OUT BY A QUALIFIED INSTALLER.

WARNING: THE APPLIANCE AND FLUE SYSTEM SHALL BE INSTALLED IN ACCORDANCE WITH AS/NZS 2918 AND THE APPROPRIATE REQUIREMENTS OF THE RELEVANT BUILDING CODE OR CODES.

WARNING: APPLIANCES INSTALLED IN ACCORDANCE WITH THIS STANDARD SHALL COMPLY WITH THE REQUIREMENTS OF AS/NZS 4012 & AS/NZS 4013 WHERE REQUIRED BY THE REGULATORY AUTHORITY, I.E. THE APPLIANCE SHALL BE IDENTIFIABLE BY A COMPLIANCE PLATE WITH THE MARKING 'TESTED TO AS/NZS 4012 & AS/NZS 4013'.

ANY MODIFICATION OF THE APPLIANCE THAT HAS NOT BEEN APPROVED IN WRITING BY THE TESTING AUTHORITY IS CONSIDERED TO BE IN BREACH OF THE APPROVAL GRANTED FOR COMPLIANCE WITH AS/NZS 4012 & AS/NZS 4013.

CAUTION: MIXING OF APPLIANCE OR FLUE-SYSTEM COMPONENTS FROM DIFFERENT SOURCES OR MODIFYING THE DIMENSIONAL SPECIFICATION OF COMPONENTS MAY RESULT IN HAZARDOUS CONDITIONS. WHERE SUCH ACTION IS CONSIDERED, THE MANUFACTURER SHOULD BE CONSULTED IN THE FIRST INSTANCE.

CAUTION: CRACKED AND BROKEN COMPONENTS, EG. GLASS PANELS OR CERAMIC TILES, MAY RENDER THE INSTALLATION UNSAFE.

1.2. INSTALLING THE HEATER

1.2.1. Positioning the Heater

Review the necessary clearances specified in this section before considering where to position the heater.

Also check the practicability of installing the flue system in relation to any obstructing roof beams before positioning the heater.

The clearance distances can only be reduced if the surrounding walls are made of non-combustible material such as stone, brick or concrete. If non-combustible material, distance can be reduced to 100 mm. Alternatively, shielding of the wall(s) can reduce clearances (refer to next section for more detail).

Clearances to combustible surfaces vary depending on the type of flue shielding used.


1.2.2. Standard Installation

Dimensions given in the table and image below represent the minimum clearance (in millimetres) to combustible materials.

A = Side clearance

B = Rear clearance

C = Minimum floor protector depth from door opening

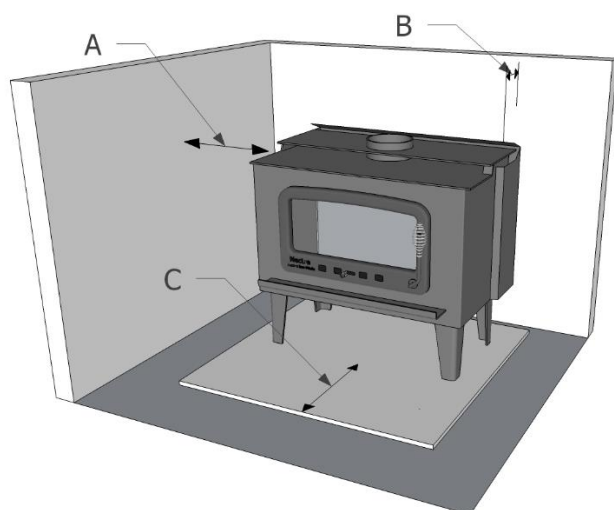


1.2.3. Corner Installation

Dimensions given in the table and image below represent the minimum clearance (in millimetres) to combustible materials.

C = Minimum floor protector depth from door opening

D = Corner clearance

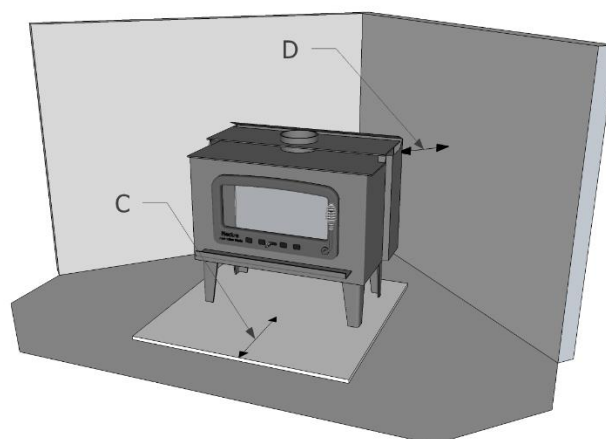

1.2.4. Clearance Dimensions

Options		Clearance (mm)			
Model	Flue Shielding	A	B	C	D
Legs and Pedestal	Rear flue shield OR Solid + Inner	800	200	300	450
	Decromesh + Inner	875	200	300	450

1.2.5. Floor Protector

Unless the heater will be standing on a heat resistant floor such as concrete slab with slate or tiles, it will be necessary to provide a floor protector.

The minimum required dimensions for the floor protector are shown in the previous section. It must extend no less than 300mm in front of the door opening, no less than 200mm either side of the door opening and extend under the heater. Minimum dimensions for the floor protector are 900mm wide by 900mm deep. It may be desirable, for example aesthetic reasons, for the floor protector to be larger than these minimum dimensions.

The floor protector shall be constructed of non-combustible material no less than 15mm thick and with a thermal conductivity not greater than 0.33W/m °K, eg. compressed cement sheet.

The floor protector may be laid directly on the combustible floor.

For more details and variations on floor protectors refer to AS/NZS 2918 Clause 2.2, 3.3.1, & 3.3.2.

1.3. REDUCING CLEARANCES TO COMBUSTIBLES

If it is necessary to install a heater closer to a combustible surface than the stated requirements in this installation manual, it must be done in accordance with Australian Standard AS/NZS 2918:2018 Section 3, Tables 3.1 & 3.2.

Shield Construction: The shield shall be constructed from a heat resistant material. The shield must be fixed to the surface that requires protection and NOT the heater.

The Standard allows three options to reduce stated clearances.

Single layer of continuous material with Minimum Air Gap of 12mm—Clearance Factor = 0.40

Single layer of continuous material with Minimum Air Gap of 25mm—Clearance Factor = 0.30

Two spaced layers of continuous material with Minimum Air Gaps of 12mm + 12mm—Clearance Factor = 0.20

The shielding must be open at the top and bottom (vented) to allow a continuous air flow. It is this air flow that keeps the surface requiring protection cool. Fixings should not impede this air flow.

The shielding needs to go far enough along and up the wall so that the original side and rear required clearances are not compromised. As the flue is now closer to the wall the shielding should also protect the wall from the flue pipe.

Example:

The side wall clearance for a heater is 875mm.

A 12mm gapped shield on the wall with a factor of 0.40.

Calculate: $875\text{mm} \times 0.40 = 350\text{mm}$. This is the new side wall minimum clearance.

The shielding needs to be large enough so that none of the original clearances of 875mm are compromised.

1.4. INSTALLING THE FLUE

The flue system used when installing the heater MUST comply with the current installation standard AS/NZS 2918.


Full instructions on the installation of the flue will be supplied with the flue kit. These MUST be adhered to, including the minimum exit height from the top of the floor protector being not less than 4.6m, and the minimum exit height above the roof line of roof ridge as detailed in the instructions.

The flue must be fitted with one of the following flue shielding options:


- **Rear Flue Shield** – 900mm long, minimum 160° arc, stainless steel unpainted rear flue shield with 25mm gap between it and the 150mm diameter active flue, OR
- **Solid non-perforated flue shield casing with inner rear shield, OR**
- **Decromesh flue shield casing with inner rear shield**

The solid or decromesh flue shield casing must be not less than 7.75" diameter, extending from the top of the flue spigot of the appliance through into the drop box penetrating the ceiling. The first length of casing must have an inner shield extending the full length and positioned so that the inner shield is between the active flue and the rear wall.

Important: The base of the solid or decromesh casing must be fitted with the vented decromesh locating ring supplied with the heater.

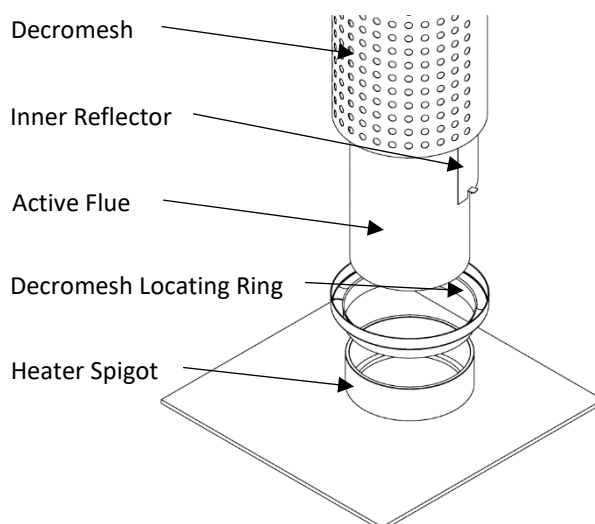

Depending on the supplier, decro-mesh can be one of three sizes – 200 mm, 7 ¾ inch, or 8 inch diameter. The Decromesh Locating Ring will fit the two smaller diameters but not the 8 inch. In this scenario, snip through the outer ring with tin-snips, as shown in the diagram below. Bend the two “arms” in a little so they ends don’t project out when fitted to the decro-mesh. Ensure that the snipped section is at the rear of the flue, out of sight.

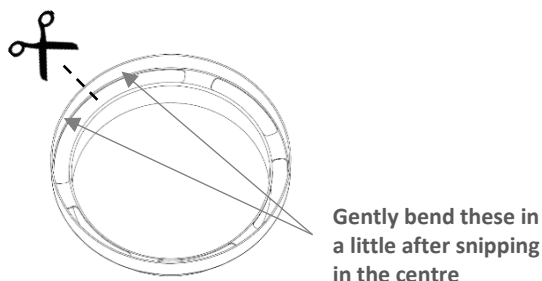


1.5. INSTALLING BAFFLE PLATES

The Nectre Mega is supplied with three baffle plates. Fit the front baffle with hooks first, the upper (smaller) baffle plate second, then the lower (larger) third.

Front baffle plate with hooks.

- 1) Orientate the front baffle so the hooks are hanging down and directed towards the rear of the heater.

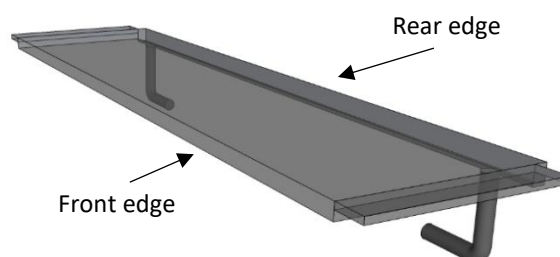


- 2) Raise the front baffle up on an angle towards to top and front of the inside of the heater. There are small slots on each side of the heater in which the front baffle can rest.
- 3) Once in place make sure that the front baffle is pushed as far forward as possible.


Upper baffle plate – 400(w) x 160(d) x 5(h) mm.

- 1) With the plate in a horizontal position, slide it up and over the shorter of the two sets of support hooks welded to the top of the firebox.
- 2) Slide the plate back so that it rests on the upper support rod on rear wall of the firebox.
- 3) The upper baffle plate should be in a horizontal orientation.

Lower baffle plate – 500(w) x 300(d) x 12(h) mm

- 1) Slide the lower baffle plate up and over the lower set of support hooks welded to the top of the firebox.
- 2) Slide the plate back so that it rests on the lower support rod on the rear wall of the firebox.
- 3) Unlike the upper baffle plate, the lower baffle plate rests on a slight angle sloping down and back to the rear of the firebox.

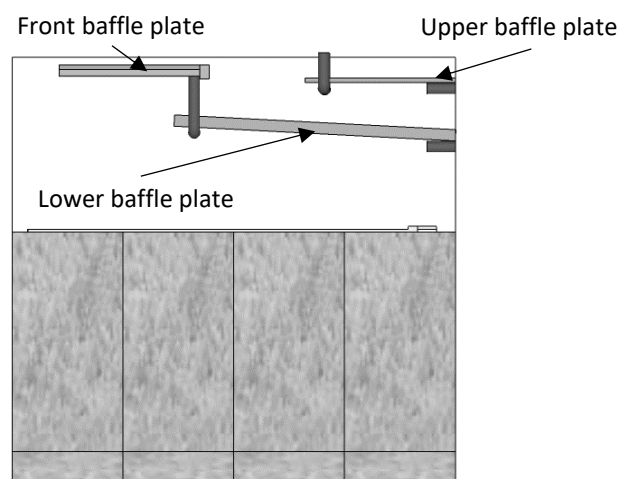

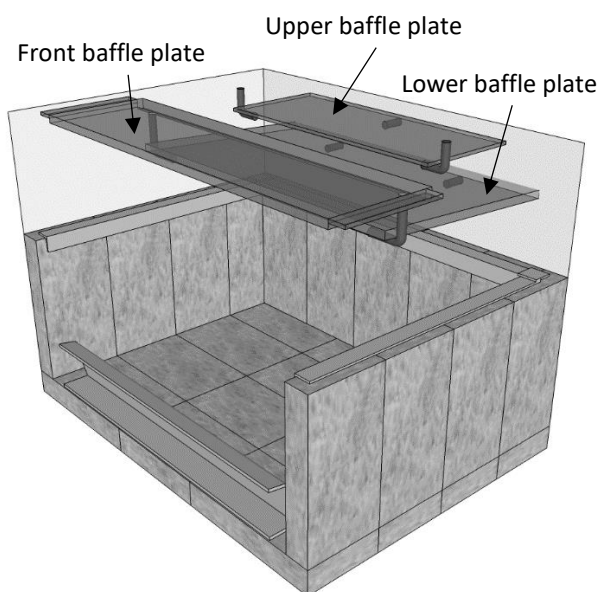


1.7. INSTALLING ASH PLATE

The ash plate acts to protect the front of the firebox below the door opening from the hot coal bed and fire.

When positioning the ash plate, ensure that the front top edge is flush against the inside edge of the firebox beneath the door opening.


1.6. INSTALLING FIRE BRICKS

- 1) The Nectre Mega comes with 21 full size bricks (230x115x38mm) and 4 smaller size bricks (175x115x38mm).
- 2) The bricks in the base of the heater should already be in place when the heater is unpacked. They consist of 8 full size bricks and 4 smaller bricks. Refer to diagram below for layout.
- 3) To install the side and rear bricks, raise the brick retainer (supplied inside the firebox) and start standing the bricks up. Four full size bricks on each side and 5 full size bricks along the rear as shown in the diagram below.
- 4) Once bricks are in place, fit the retainer over the top to hold the bricks in place. There may be some gaps left between the bricks, but this is not an issue since they will fill up with ash as the heater is used.

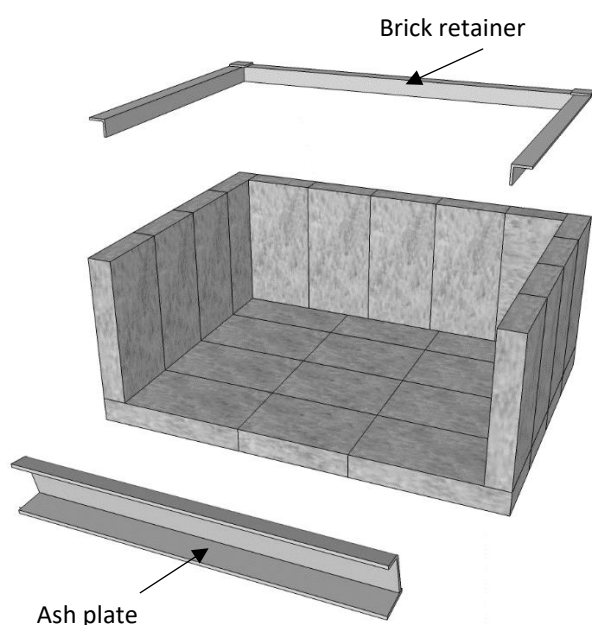


1.8. TECHNICAL DRAWINGS

1.8.1. Mega Legs

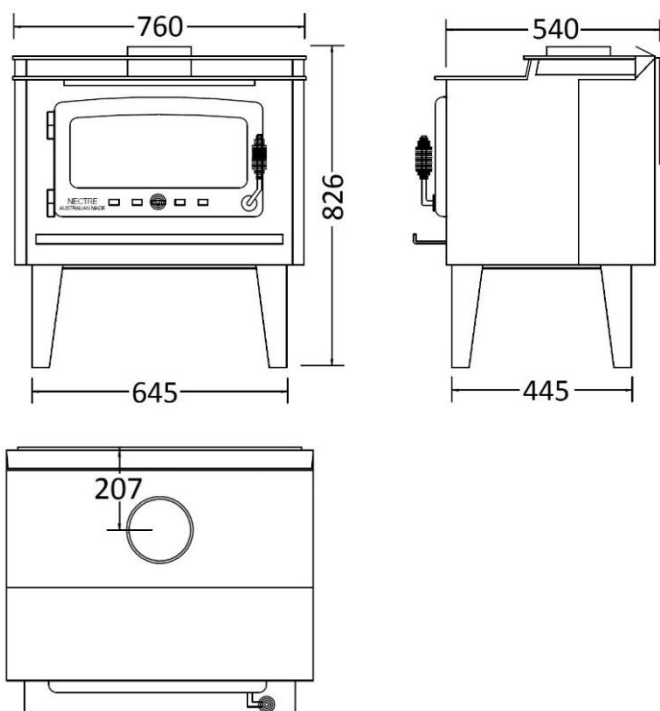

1.8.2. Mega Ped

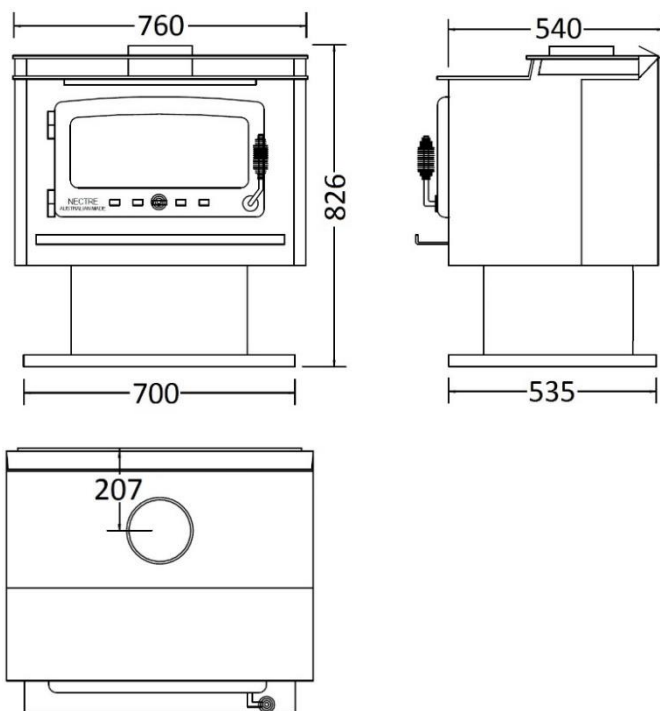



Glen Dimplex Australia Pty Ltd

8 Lakeview Drive,
Scoresby Victoria 3179
Australia

T: 1300 556 816 | F: 1800 058 900

General and Sales Enquiries: flame@glendimplex.com.au

Technical Service: service@glendimplex.com.au

www.glendimplex.com.au
