




INSTRUCTION MANUAL

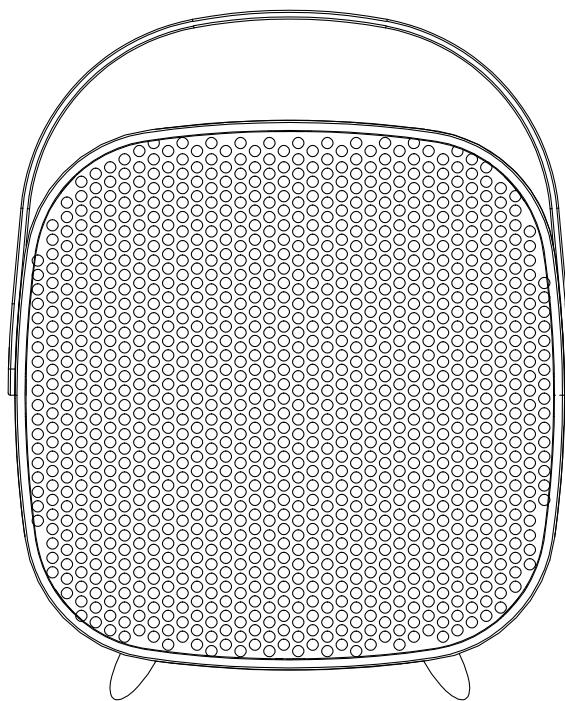

1.5kW DC Ceramic Heater

Model: DHCER15H

For domestic household use only.



IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

Note also the information presented on the appliance


CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY

Please read the operating instructions carefully before using your product for the first time and keep them in a safe place.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- **IMPORTANT:** Only use this heater on a horizontal and stable surface.
- **WARNING:** In order to avoid overheating, do not cover the heater.
-  The Heater carries this warning symbol indicating that it must not be covered.
- **DO NOT COVER** or obstruct the air inlet and outlet openings in any way.
- **DO NOT** use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** use this heater if it has been dropped.
- **DO NOT** use if there are visible signs of damage to the heater.
- **DO NOT** place the heater directly below a fixed socket outlet.
- The socket-outlet used to plug in the heater must be accessible at all times to enable the mains plug to be disconnected as quickly as possible if required.
- **DO NOT** operate the heater with the mains lead overhanging the front outlet grille.
- **WARNING:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- **WARNING:** Risk of fire - Do not use this appliance connected through an extension lead or any external switching device such as a plug-in timer or

remote control plug in adaptor. All heating appliances draw high current through the mains supply and any weakness in the design, connections or components in these devices can easily result in overheating of the connection points resulting in melting, distortion and even the risk of fire.

- **DO NOT** pull, lift, carry or move the appliance using the mains lead.
- **IMPORTANT:** If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- In the event of a fault, unplug the appliance.
- Unplug the appliance when not required for long periods.
- This product is only intended for **INDOOR RESIDENTIAL** applications only.
- **DO NOT** cover cord with carpeting, throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping hazard.
- **WARNING:** To avoid the risk of accidental strangulation from the supply cord all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.
- Although this appliance complies with safety standards, we do not recommend its use on use the heater on deep pile carpets or the long hair type of rugs, or less than 750mm away from any overhanging surface.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, soft or hard furnishings or any other flammable or heat sensitive material a minimum distance of 1m from the front air outlet of the heater.
- Keep combustible materials such as drapes and other furnishings clear from the front, sides and rear of the heater.
- Do not use heater to dry your laundry.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.
- This instruction leaflet belongs to the appliance and must be kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

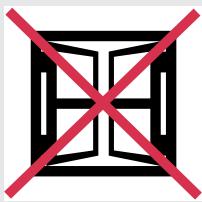

Exposed to the weather outdoors



Near water



If the power cable wires are frayed or cut



Where small children may be left unattended



If an extension lead may become overloaded



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair





If there is a risk of water falling on the unit

Specifications


Model no.	DHCER15H
Power supply	220-240V~, 50Hz
Rated power	1500W
Heat settings	2 + fan only
Thermostat	15-35°C
Timer	0-7hrs
Oscillation	-
Weight (net)	1.2kg
Dimensions (w x d x h)	195 x 124 x 200mm

For greater precision, please always refer to the rating label placed on the product.

Parts

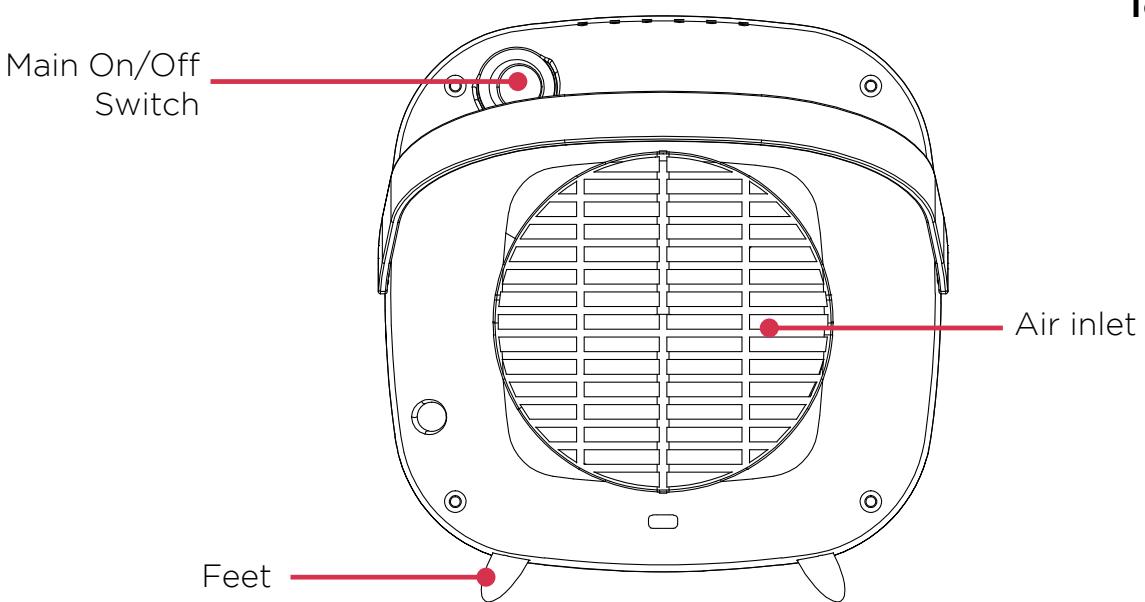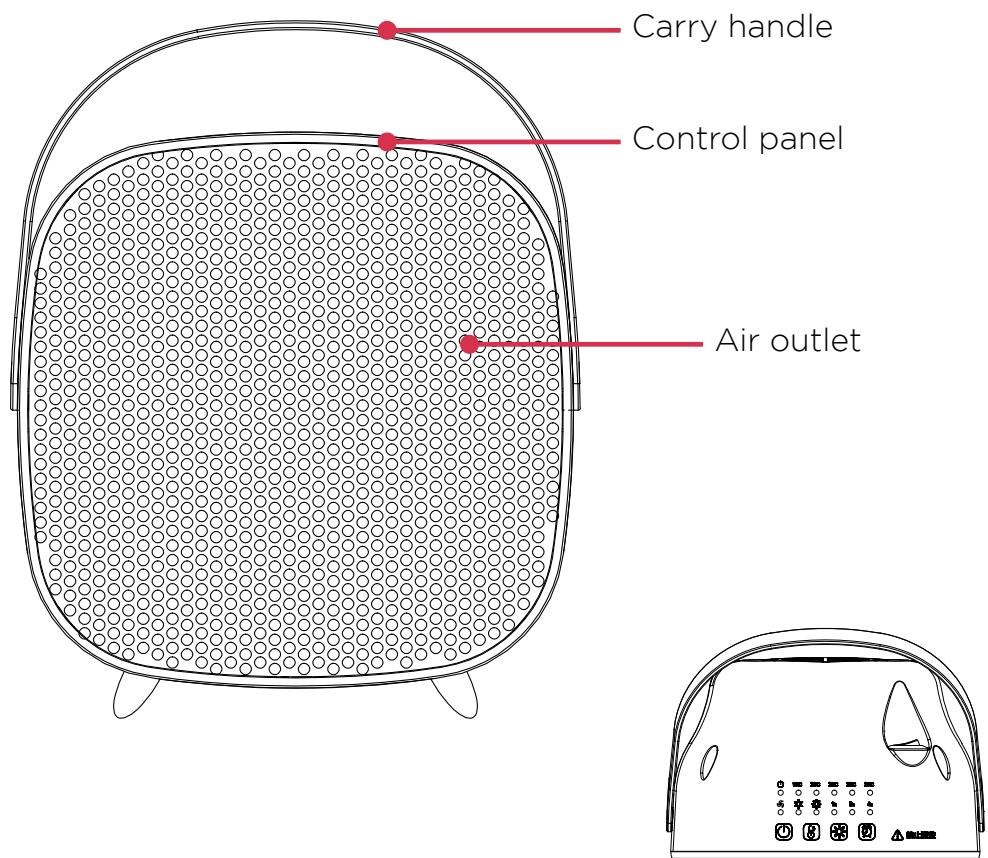

Control Panel / Display

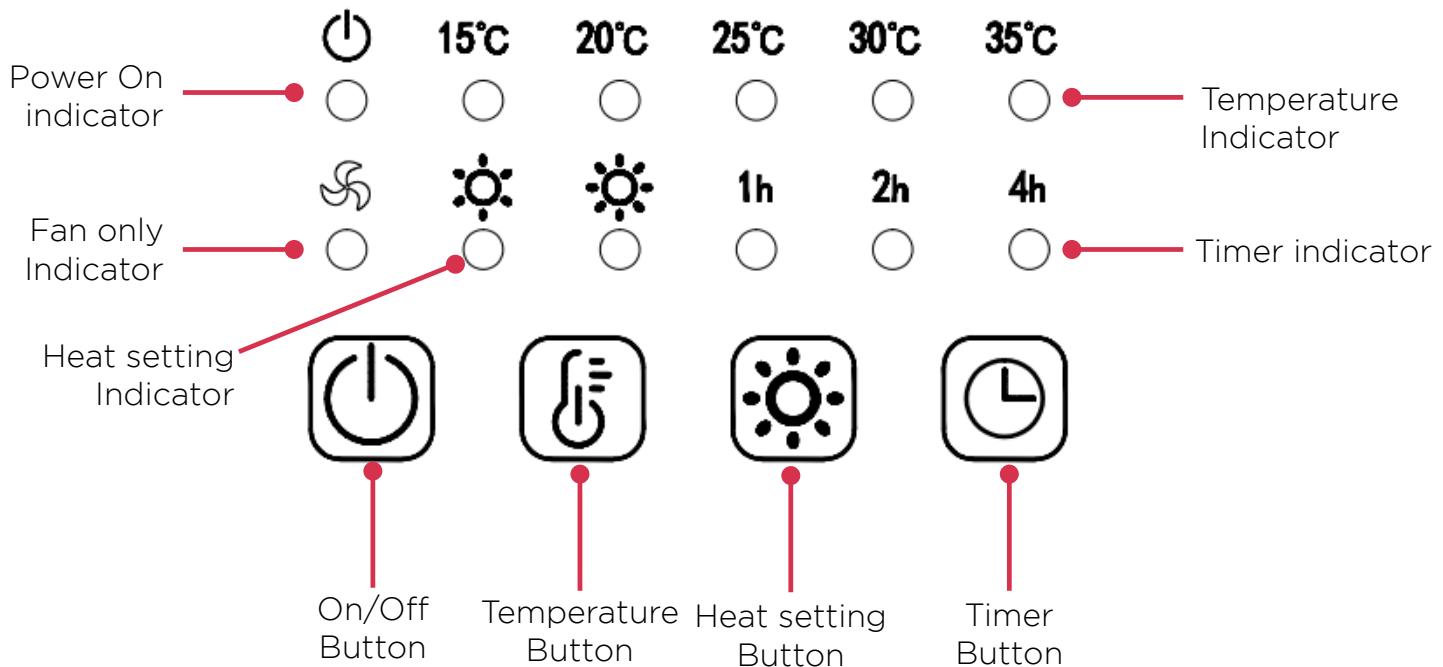

Safety Features

This appliance incorporates a number of safety devices. In addition to the 'Important Safety Advice' section your attention is drawn to the following:

Tilt Switch

The tilt switch will prevent the heater from working if it is accidentally tipped over on its side.

If the product is tipped over while it is hot, disconnect the power and allow it to cool, then stand back upright. Reconnect the power - normal operation should be resumed.

Overheat Protection

The heater is fitted with a temperature limiter which will turn the unit OFF should it overheat for any reason. The product will return to normal operation after the cause of the overheating has been rectified.

Operation

Before using this heater ensure that you read all of the Important Safety Advice at the start of this manual and that you understand and follow the instructions given.

To begin using the heater simply plug it into a corresponding power outlet.

1. Turn on the main power switch at the back of the unit. The power on LED will illuminate indicating it is in standby mode.
2. Press the On/Off button to turn the unit **ON**.
3. Press the **HEAT SETTING** button once to operate in low power (750W) or twice to operate in high power (1500W). The corresponding heat setting indicator light will illuminate on the control panel.
4. To adjust the room temperature, set the desired temperature of either 15/20/25/30/35°C by pressing the **TEMPERATURE BUTTON**. The corresponding temperature indicator light will illuminate. The unit will automatically work to reach and maintain the set temperature. **Note:** When the room reaches the set temperature the unit will stop working, it will start working again when the room temperature drops 3 degrees.
5. A **TIMER** can be set up to 7 hours, so the unit turns **OFF** automatically. Press the **TIMER** button and cycle through, in 1 hour increments, the desired time. The set time will be indicated on the control panel. To cancel the **TIMER**, cycle through until the indicator lights are off.
6. Press the power On/Off button to turn the unit **OFF**. It takes approx. 30 seconds for the unit to power **OFF** completely, this is to protect the heating element.
7. If the unit isn't being used for an extended period of time, turn off the main power switch at the rear of the unit (after the unit has turned **OFF** completely which takes approx. 30-60 seconds).

Cleaning

Over time, dust can accumulate on the heater which can effect performance. It is recommended to clean the unit at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush or vacuum cleaner with a soft brush attachment.
3. Wipe the outer surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.

Storage

If not using the unit for an extended period of time. After cleaning please:

- Ensure control switch is OFF and remove plug from the power outlet.
- Cover the unit and store it upright in a location where it will not receive direct sunlight. NB- Prolonged exposure to direct sunlight will discolour the unit.

Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Warranty


Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd

1340 Ferntree Gully Road,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824

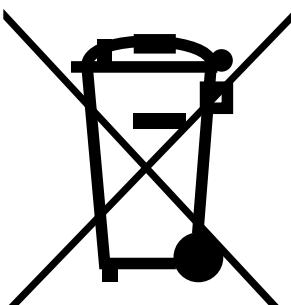

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.



Customer Care: 1300 556 816
customer.care@glendimplex.com.au
www.dimplex.com.au

Supplied by Glen Dimplex Australia
1340 Ferntree Gully Road, Scoresby, Victoria, 3179

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.