


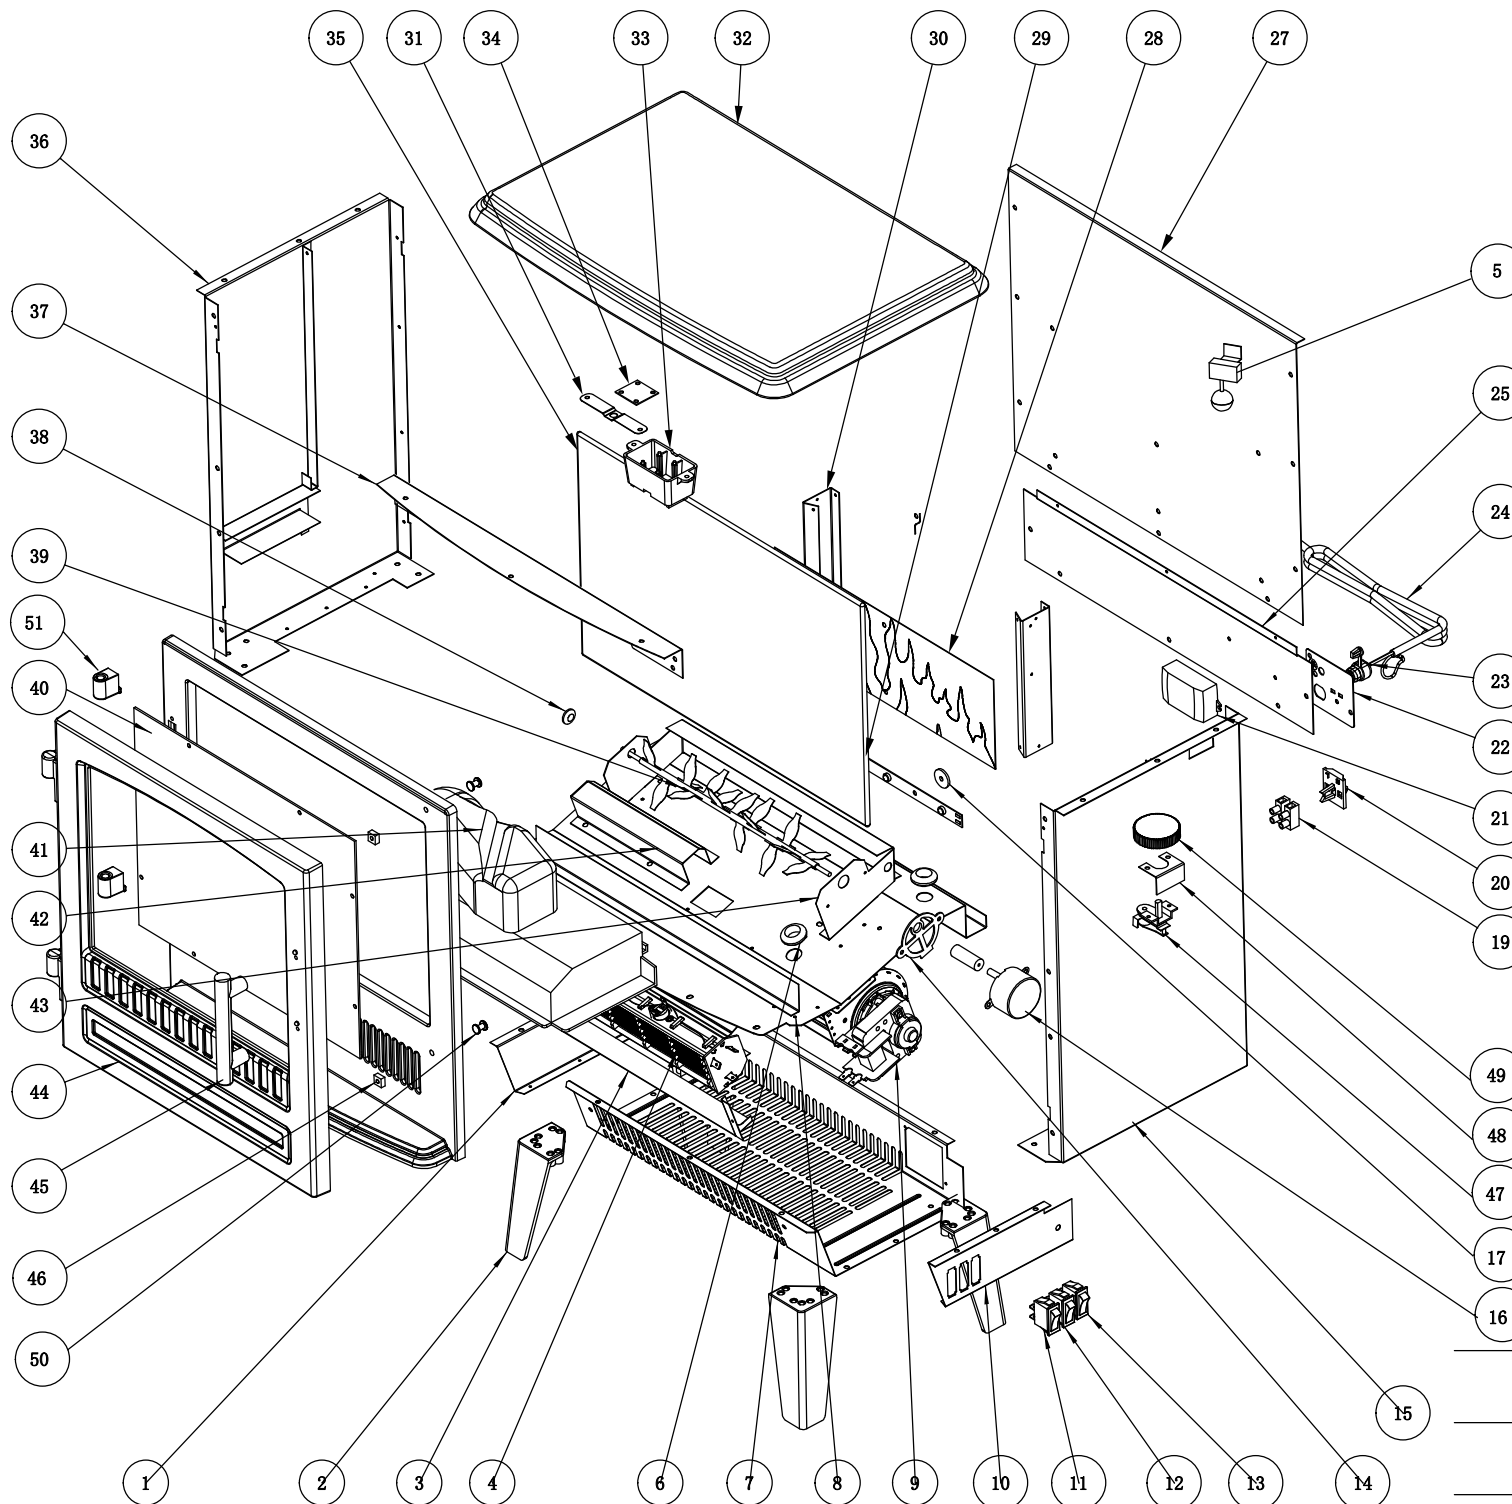

1	05.03.015.004	Base side plate	1
2	02.04.004.005	Foot	4
3	05.03.010.003	Air channel	1
4	06.03.001.008	Heating assy	1
5	03.02.003.001	Fall in the switch	1
6	02.01.016.004	ø16 wires bush	2
7	05.03.013.001	Base	1
8	05.04.003.003	Base top plate	1
9	06.02.001.008	Blower assy	1
10	06.03.015.006	Switch sides	1
11	03.02.001.001	Rocke switch 0-1	1
12	03.02.001.003	Rocker switch 1	1
13	03.02.001.002	Rocker switch 2	1
14	02.02.002.003	Rubber cushion	1
15	05.05.013.005	Right panel	1
16	03.01.001.048	Gear motor	1
17	02.01.037.008	washer	2
19	03.10.004.001	Terminal	1
20	02.01.039.003	Plastic gasket	1
21	03.20.002.011	Power supply	1
22	05.03.017.002	Power cord place	1
23	02.01.008.003	Strain relief	1
24	03.21.013.001	Power cord	1
25	05.03.060.040	Bottom rear cover	1
27	05.03.031.059	Upper cover	1
28	08.02.001.093	Flame plate	1
29	03.18.004.021	LED strip	1
30	05.03.007.003	Flame panel cover	2
31	05.03.019.055	Ceiling press	1
32	02.04.018.010	Stove top	1
33	02.01.038.017	top light box	1
34	03.18.004.012	LED Light board	1
35	04.05.001.011	Curtain wall glass	1
36	05.04.009.008	Left panel	1
37	06.03.006.436	Top bracket	1
38	02.01.016.005	ø8 wires bush	2
39	08.01.001.004	Rotisserie	1
40	02.01.015.046	Transparent board	1
41	06.04.003.201	Fuel effect	1
42	05.04.027.004	cover	1
43	05.03.004.032	Lamp holder	1
44	02.04.005.097	The door	1
45	02.04.010.012	Shake handshandle	1
46	03.13.001.003	Magnetic steel	2
47	03.06.001.002	temperature control	1
48	05.01.005.620	Temperature control bracket	1
49	02.05.023.001	knob	1
50	09.07.099.012	The lock nut	2
51	02.04.004.046	door pin	2
ITEM	Part No.	Description	QTY

BAR20-AU

BAR20-AU

REV.

A00

211514

Model: BAR20-AU

No	Part No.	Description
2	02.04.004.005	Club foot
45	02.04.010.012	Handle
49	02.05.023.001	Knob

Remote control not applicable for this model