



Before using your tumble dryer, please read this manual carefully and keep it for future reference.

Tumble Dryer

OWNER'S MANUAL

Read This Manual

Inside you will find many helpful hints on how to use and maintain your tumble dryer properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your tumble dryer. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.



CAUTION: HOT SURFACE !



CAUTION: RISK OF FIRE !

Contents

Safety information.....	1
Installation.....	6
Part description.....	7
Attention and advice.....	9
Description of controls.....	10
Operation instruction.....	11
Programme table.....	12
Specialty drying function.....	13
Cleaning and routine maintenance.....	15
Alarm function.....	16
Precautions.....	17
Technical specifications	18

Safety information

Dry care symbols

Please pay attention to use the drying machine if the materials of your clothes can not be dried by it or contain the symbols as follows:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

Safety notes

 To prevent any damages to your and others' life or property, you have to follow the safety notes.

1. This product belongs to Category I electrical appliances, and only for drying textiles which have been washed with water in the household. Please pay attention to the safety of power use during the operation!
2. The power source with reliable earthing must be used. Its earth wire must be buried under the ground and shall not be connected with the public utilities such as city water pipe or gas pipe etc. The earth wire and null wire shall be distinguished and shall not be connected together.
3. The power wire shall be met national standard and must be able to withstand the current above 16A. To ensure your and your family's safety, please make improvement immediately if any power use at your home does not comply with the above-mentioned requirements.
4. The maximum mass of dry textile material is 7 kilograms to be used in the appliance.

Safety information

5. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
6. The lint trap has to be cleaned frequently.
7. Lint must not be allowed to accumulate around the tumble dryer.
8. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliance burning other fuels, including open fires.
9. Do not dry unwashed items in the tumble dryer.
10. Items that have been soiled with substance such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with a extra amount of detergent before being dried in the tumble dryer.
11. Items such as foam rubber (latex form), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
12. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
13. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature the ensures that the items will not be damaged.
14. **WARNING:** never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
15. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels.

Safety information

16. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer. In such a way that a full opening of the tumble dryer door is restricted.
17. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
18. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard.
19. The appliance should not be overturned during normal use or maintenance.
20. Remove all objects from pockets such as lighters and matches.
21. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. **(This warning is only for EUROPEAN market)**

Safety information

- 22.If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 23.This appliance is for indoor use only.
- 24.The openings must not be obstructed by a carpet.
- 25.Children of less than 3 years should be kept away unless continuously supervised.
- 26.Keep pets away from this appliance.
- 27.If the appliance appear high temperature abnormally , please draw the mail plug immediately.
- 28.The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.(This warning is not for EUROPEAN market)

Correct Disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Safety information

Electric shock hazard

1. Do not draw the power cord forcefully to pull out the mains plug.
2. Please do not plug/draw the mains plug with wet hands.
3. Do not damage the power cord and the power plug.

Injury danger

1. Do not disassemble and install the dryer under no instruction or supervision.
2. Do not stack this dryer on washing machine without stacking kits. (if want stacking on washing machine, please purchase the Independent parts and it must be installed by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.)
3. Do not lean on the opened door of the dryer.
4. Do not put any pyrotoxin on the dryer, such as the candle, electric cooker.

Damage danger

1. Do not dry over the rated capacity.
2. Do not operate the dryer without the lint filter.
3. Do not dry the clothes before being spun.
4. Do not expose the dryer directly under the sun, and indoor use only.
5. Do not install the dryer in the humid and drenching environment.
6. At the cleaning and maintenance, please do remember to pull out the power plug and do not directly wash the dryer with water.

Explosion danger

Please do not dry the clothes with some flammable substances such as the coal oil, alcohol or there will be the explosion.


Installation

Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door can not be used as the handle for delivery.


Installation position

1. Please install the dryer on solid and flat ground.
2. Please do not place the dryer on the slope, soft carpet or wooden floor.
3. Please do not install the dryer outdoors, to prevent the dryer from being frozen to damage of machine parts.

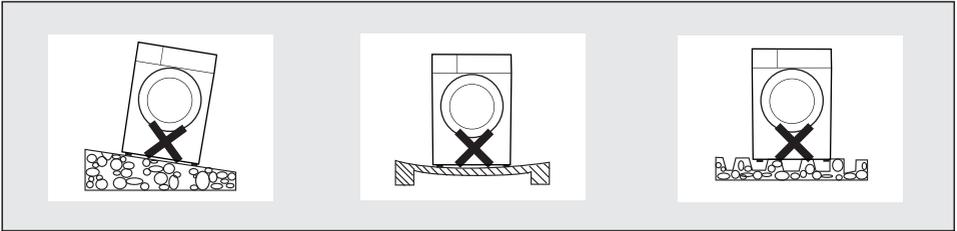

Level adjusting

If the floor is obviously uneven, it needs to be adjusted. It vibrates the machine, causing machine to move from its position. Using tools to adjust the height of four machine legs to adjust the levelness of this dryer.

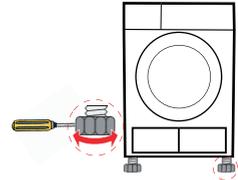


Power supply connection

1. Make sure that the voltage of the power supply is the same as the electric specification of the dryer.
2. Please do not connect it with the power connection board, the universal plug or socket.

Part description


Part description

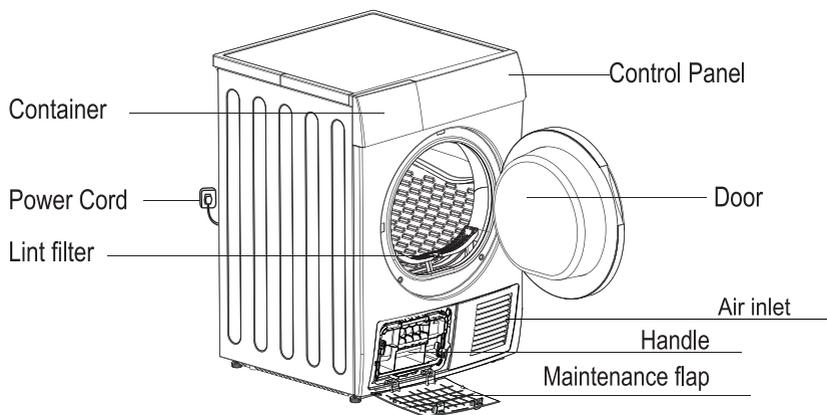


Accessories

The following parts are optional for specific models.


If your dryer has following parts, please wear gloves and install them following the instruction below .

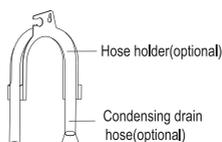

Installation step:

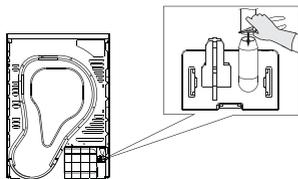



Step 1: removing the drain hose from the hose connector using plier.

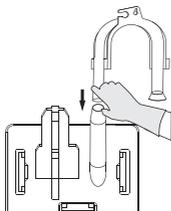


Step 2: insert the external drainage hose.

Part description

Step 3: put the hose holder on the washing basin or any other sink.

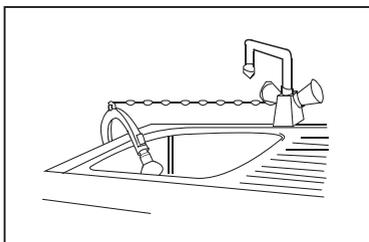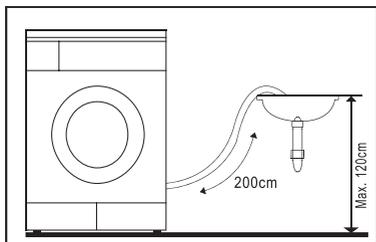

Quick start

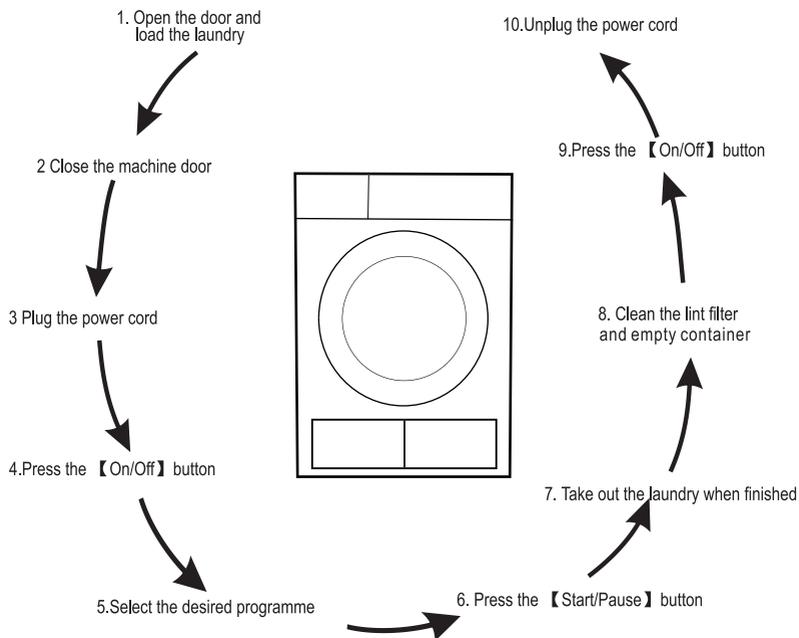

Attention & Advice

Attention

⚠ Before the first cycle, the dust and grease may remain in this dryer during the period of manufacture and transportation, to avoid contaminating your clothes, please follow these steps:


- a) Put some clean rags into the drum.
- b) Plug the power.
- c) Press “On/Off” button, select the “Quick” programme, and press “Start/Pause” button.
- d) After finishing this programme, please follow the “cleaning and routine maintenance” to clean the lint filter and air condenser on page 15.

Advice

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
2. For uniform drying result, sort the laundry according to fabric type and drying programme.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, because over dried clothes can easily get creases or shrinkage.
5. Do not dry the articles containing rubber or similar elastic materials such as raincoats, bicycle covers and feather products.
6. The door can be opened only after the programme of the drying machine is completed. Do not open the door before the programme finished, as the skin may be scalded by steam or hot surface.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
8. Do not dry these clothes after dry-clean process.
9. The weight references as follows:

	Blended Coats (about 800g)		Jackets (about 800g in cotton)		Jeans Trousers (about 800g)		Towel Quilts (about 900g in cotton)
	Single Sheets (about 600g in cotton)		Work Clothes (upper and lower) (about 1120g in cotton)		Pajamas (about 200g)		Shirts (about 300g in cotton)
	Undershirts (about 180g in cotton)		Underpants (about 70g in cotton)		Socks (about 30g in blended material)		

Description of controls

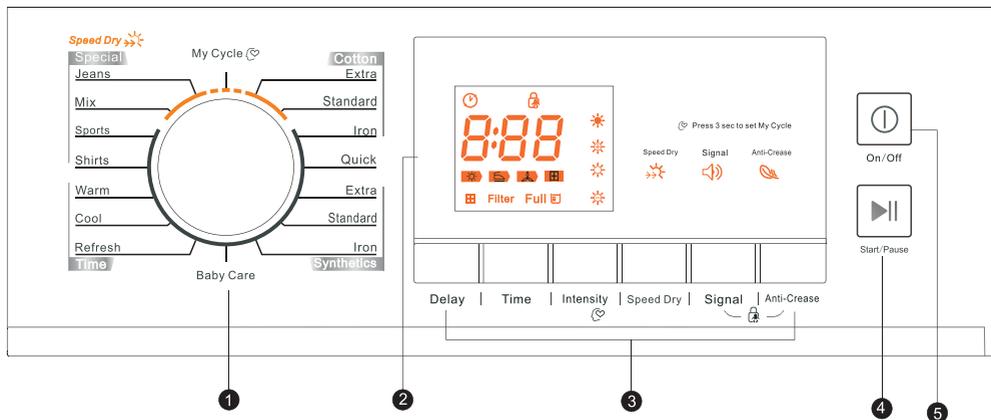

1. Programme Selection knob
2. Display
3. Specialty function buttons
4. Start/Pause button
5. On/Off button

Display

	Delay start
	Child lock
	Remaining Time indicator/Error message
	Cycle phase status
	Clean filter (warning)
	Empty water container (warning)
	Dryness level (four grades)
	Speed dry indicator
	Signal indicator
	Anti-crease mode

Operation instruction

Select the programme

1. Press the **【On/Off】** button, when the LED display screen brightens up, rotate the programme knob to select the desired programme.
2. Select the **【Delay】**, **【Time】**, **【Intensity】**, **【Speed Dry】**, **【Signal】** or **【Anti-Crease】** functions for additional option.
3. Press the **【Start/Pause】** button.

Programme start

The drum will keep rotating after the programme starts, the state light in the display area will flash in sequence, the remaining time displayed will change automatically.

Programme end

1. The drum will stop running after the programme ends, the display will show "000", the last cycle phase status light will flash. The dryer will start **【Anti-crease】** function if user doesn't remove the load in 1 minute (refer to page 14). Please press **【On/Off】** key to cut off power and pull the plug out.
2. Deal with the problem according to "Malfunction display and solutions", if there is an unexpected stop during the drying procedure and the dryer shows information (refer to page 16).

Programme table

Programme	Weight (max)	Application/Properties	Delay	Time
For cottons and coloureds made of cotton or linen.				
Cotton	Extra	To dry cotton pieces of clothing. Drying level: extra dry.	Y	N
	Standard	To dry cotton pieces of clothing. Drying level: cupboard dry.		
	Iron	To dry cotton pieces of clothing. Drying level: applicable to iron.	Y	N
Quick	Quick	For washing which is to be dried quickly, eg, made of acrylic fibres or for individual small items. Also for subsequent drying.	Y	N
For non-iron washing made of synthetic and blended fabrics, cotton.				
Synthetics	Extra	To dry thick or multi-layered synthetic fabrics. Drying level: extra dry.		
	Standard	To dry thin synthetic fabrics which are not ironed, such as easy care shirts, table linen, baby clothes, socks.	Y	N
	Iron	To dry thin synthetic fabrics which are also to be ironed, such as knitwear, shirts.		
Baby Care	Baby Care	To dry the clothes of the baby.	Y	N
Special	Jean	To dry jeans or leisure clothes that are spun at high speeds in the washing machine.		
	Mix	If you can not determine what the clothing's material is, please choose Mix.	Y	N
	Sports	To dry sportswear, thin fabrics, polyester, which are not ironed.		
My Cycle	Shirts	For easy care clothes such shirts and blouses with anti-crease mechanism for minimum ironing effort. Place clothes loosely in the dryer. Once dried, hang it on a clothes hange		
	My Cycle	Define and save your favorite programme.	Y	—
	Warm	To warm clothes from minimum 10 min. to maximum 120 min. (in 10 min. steps).		
Time	Cool	To air clothes without blowing hot air from minimum 10 min. to maximum 30 min. (in 10 min. steps).	Y	Y
	Refresh	To refresh the clothes that have been kept at closed environments for a long time from minimum 20 min. to maximum 150 min. (in 10 min. steps).		

Note: 1. "Cotton + Extra" is for AS/NZS energy program..

2. The programmes above are only recommended for using, users can choose the appropriate programme according to the personal habits. Thick and multi-layered fabrics, e.g. bedlinen, jeans, jackets etc, are not easy to dry, you'd better choose Jeans programme and maximum drying intensity level..

Specialty drying function

Specialty drying function

1. Instruction to the **【Delay】** drying procedure

To delay the drying programme from 0 hour to 24 hours. The delay time means the programme will start after x hours. When the delay programme starts, the time starts to decrease on the display and the  icon blinks.

Steps in details

- (1). Load your laundry and make sure the machine door is closed.
- (2). Press the **【On/Off】** button, then to turn the programme selector knob and select a desired programme.
- (3). You can select the **【Anti-Crease】** or **【Signal】** functions according to your need.
- (4). To press the **【Delay】** key.
- (5). Continue to press the **【Delay】** to select the delay time.
- (6). After the **【Start/Pause】** button is pushed, the dryer is at the run condition. The drying procedure will be automatically performed when the delay time is over.
- (7). If you push the **【Start/Pause】** button again, the delay function will be paused.
- (8). If you want to cancel the "Delay" function, please press the **【On/Off】** button.

2. Instruction of the **【Time】** function

When the warm or cool or refresh programme is selected, the **【Time】** button can be used to adjust the drying time in 10 min. steps.

3. Instruction of the **【Intensity】** function

Used to adjust the dryness level of the laundry. The level has four grades * * * * .

The drying time increases 3 minutes in every grade.

- (1). The intensity function can be activated only before the programme start.
- (2). Press the **【Intensity】** button repeatedly to select the drying time.
- (3). Except the **【Cotton Iron】** **【Quick】** **【Synthetic Iron】** **【Baby Care】** **【Warm】** **【Cool】** **【Refresh】** , all the other programmes can be setted the **【Intensity】** function.

4. Instruction of the **【My Cycle】** function

Used to define and save your favorite programmes that are used frequently.

- (1). Use the programme selector to select the required programme and other drying functions.
- (2). Press and hold the **【Intensity】** button for 3 seconds until the display flashing and the required programme has been saved.
- (3). Turn the programme selector to the **【My Cycle】** position, you can start your favorite programmes. If you want to change the **【My Cycle】** settings, repeat the steps (1) and (2).

Special drying function

5. Instruction of the 【Speed dry】

Used to curtail the time of drying.

6. 【Signal】

Set up the buzzer on or off. In the general condition, the buzzer is on. Please press it if needed.

When the buzzer on:

(1) The dryer will give the leading sound if press the extra function buttons.

(2) If the dryer is running, rotate the function choosing knob, the dryer will remind the operator it is an invalid choose.

(3) When the drying programme is end, the buzzer will also remind the user.

7. Instruction of the 【Anti-Crease】 function

At the end of the drying cycle, the anti-crease operation time is 30 minutes (default) or 120 minutes (selected).

The 【Anti-Crease】 light shall illuminate when the anti-crease function is selected. This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except

【Cool】 , 【Refresh】 and 【Baby Care】 , all the other programmes have this function.

8. Instruction of the 【Child Lock】 feature

(1). This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.


(2). When the dryer is at the operation state, press the 【Anti-Crease】 and 【Signal】 buttons at the same time for over 3 seconds to start child lock function. When child lock function is set, the display will show “” icon and no key can effect to the dryer except 【On/Off】 button. Under the start state of the child lock, the 【Anti-Crease】 and 【Signal】 buttons shall be pressed at the same time for over 3 seconds to release the child lock function.

Cleaning and routine maintenance

Clean the lint filter

Leave the dryer to cool down

1. Open the machine door.
2. Take out the lint filter, pull upward to take it out.
3. Clean the lint filter; wipe off the scrap threads accumulated on the lint filter, with your hand or rinse with water and dry thoroughly.
4. Reinstall the lint filter.

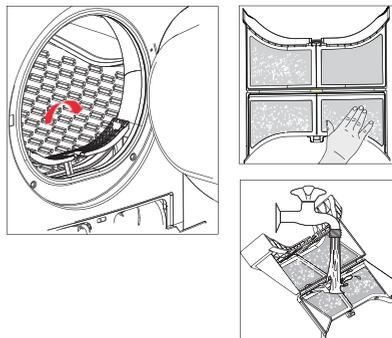

NOTE!

1. The lint filter accumulated on the filter will block the air circulation, which will cause the extension of drying time and consumption; therefore, the scrap thread filter shall be cleaned after each use.
2. Do not disconnect the power cord before cleaning!
3. Do not operate the dryer without the lint filter !
4. Clean the lint filter after each use to prevent lint accumulation inside the dryer.

Wash air condenser


- Leave the dryer to cool down.
 - Residual water may escape, place an absorbent cloth under the maintenance flap.
1. Unlock the maintenance flap.
 2. Completely open maintenance flap.
 3. Screw both locking levers toward each other.
 4. Pull out the air condenser.
 5. Clean the air condenser completely, drain thoroughly.
 6. Clean the seals.
 7. Re-insert the air condenser, handle at the button!
 8. Unscrew both locking levers.
 9. Close the maintenance flap until it locks into position.
Please clean the air condenser approx. once every 3 months if frequently used.

Do not damage the air condenser!

- ⚠** 1. Clean with water only; do not use hard/sharp-edged objects!

Do not operate the dryer without the air condenser!



2. During drying, water may collect between the window and the seal, but this does not affect the function of your dryer!

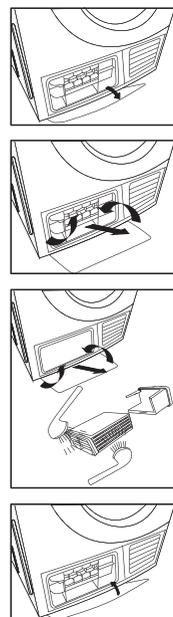

Cleaning and routine maintenance & Alarm function

Empty the water container

1. Hold and pull out the water container with two hands.
2. Tilt the water container, pour out the condensed water.
3. Insert the water container.

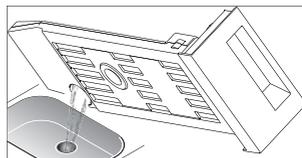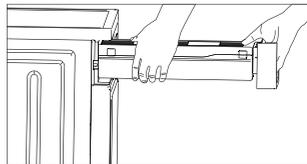

WARNING:

1. Empty the water container after each use, the programme will be paused and the “” icon will flash if the water container is full during the drying process. After the container emptied, the dryer can be restarted by pressing **【Start/Pause】** button.
2. Do not drink the condensed water.
3. Do not use the dryer without the water container.

Alarm function

Display	Reason	Solutions
“  ” is on	Container is full	Empty container
	Water pump failure or water level sensor failure	Please contact your local service center if the problem persists
“E30”	Heater failure	
“E32”	Humidity sensor failure	
“E33”	Temperature sensor failure	

Precautions

Precautions

⚠ Only authorised technicians can carry out repairs.

Before you call customer service, please check if you have deal with the faulty by yourself or if you have follow the user instructions.

A technician will charge you for advice, even during the warranty period.

Problem	Solution
•Display does not come on	<ul style="list-style-type: none">•The mains plug is inserted.•Check the programme selected.•Check fuse in the house.
•“  ”is flashing	<ul style="list-style-type: none">•Empty condensation container.•If failure, check hose for condensation outlet.
•“  ”is flashing	<ul style="list-style-type: none">•Clean air cooler.•Clear lint filter.
•Dryer does not start	<ul style="list-style-type: none">•Check the start button has selected .•Check the the door has closed.•Check the programme has set.
•Water is running out	<ul style="list-style-type: none">•Align dryer horizontally.•Clear air condenser and door seals.
•Door is open by itself	<ul style="list-style-type: none">•Press door until it “clicks”into position.•Check the clothes is over load .
•Humidity in the room is increase significantly	<ul style="list-style-type: none">•Ventilate room adequately.•Clean the cool grille.•Ensure that the air condenser has been inserted.
•Degree of dryness was not reached or drying time too long	<ul style="list-style-type: none">•Clean lint filter and wash condenser.•Empty container.•Check water outlet.•Dryer installation too restricted.•Clean the moisture sensors.•Use next higher drying programme or using Timer programme.

⚠ If you cannot deal with the fault by yourself and need help:

- 1.Press the **【On/Off】** button.
- 2.Pull out the mains plug and call the service.

Technical specification

Specification

Power supply	220-240V~ 50Hz
Rated input Power	2000W
Ambient temperature	+5c ~+35c
Overall Size	595×615×845(mm)
Rated Drying Capacity	7.0kg
Net Weight	42kg

Note:

- 1.The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.
- 2.Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- 3.There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container.

