

INSTALLATION INSTRUCTIONS

USER INSTRUCTIONS

COOKER MODEL

GEF90EG

GEF91EG

90X60 cm

Important information

Introducing your new cooker

We thank you and congratulate you on your choice.

These instructions cover four cooker models:

These carefully designed products, manufactured with the highest quality materials, have been carefully tested to satisfy all your cooking demands.

We therefore request that you read and follow these easy instructions which will allow you to obtain excellent results right from the start.

All cookers feature a gas hotplate containing 5 cooktop burners, including one central wok burner, and the multi-function ovens.

The cooker's data plate is accessible even with the cooker fully installed. It is positioned on the inside of the oven door, centre bottom. A copy of the data plate is also reproduced on last page of this booklet. Always quote the details from it to identify the appliance when ordering spare parts or requesting a service.

Notes on disposal

Old appliances still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Before you dispose of your old appliance, make sure that it has been rendered inoperable.

Your new cooker was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environmentally friendly and suitable for recycling.

Please make a contribution to protecting the environment by disposing of the packaging appropriately.

Do not spray aerosols in vicinity of this appliance while it is operation.

Where this appliance is installed in a marine environment or in caravans, for safety reasons it shall not be used as a space heater.

This appliance is unsuitable for installation in marine craft, caravans or mobile homes, unless each burner is fitted with a flame safeguard.

DO NOT MODIFY THIS APPLIANCE

DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THIS APPLIANCE.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the

appliance.

Warning: Accessible parts will become hot when in use. To avoid burns or scalds children should be kept away.

Warning: In order to prevent accidental tipping of the appliance, for example by a child climbing onto the oven door, the stabilising means must be installed. Refer to the instructions for installation.

Before connecting your new cooker

Before using your new cooker, please read these 'Instructions for Use' carefully. They contain important information concerning your personal safety as well as on use and care of the oven.

Please keep the operating and installation instructions in a safe place; this important documentation may also be of use to a possible subsequent owner.

Do not use the cooker if it is damaged in any way.

Installation and connection of the cooker should be performed according to the instructions and connection diagram provided, and should be entrusted to a licensed specialist. In the event of a damage that occurs as a result of improper connection, the warranty will be void.

Our appliances meet the applicable safety regulations for electrical appliances, Repairs may be performed only by authorised persons. Inexpert repairs may entail serious injury to you, the user

Safety considerations

Never leave the appliance unattended when cooking with fat or oil. It could ignite if overheated.

In case of a defect, switch off at the mains.

Do not clean the oven with steam or high pressure cleaners

Ensure that the power cord does not get caught in the hot oven door. The plastic insulation could melt.

Do not use loose greaseproof paper in the oven (e.g. when heating the oven). The paper could be drawn to the fan and damage the fan and the element

Do not insert a baking sheet or aluminium foil sheet at the bottom of the oven. A heat build-up could result and cooking times and temperatures could change or enamel could be damaged.

Do not pour water on the hot oven floor. Damage to enamel could result

Always place a baking tray below a roast to prevent juices from dripping on the oven lining

Do not place heavy items on the oven door when open as this may result in damage to the door hinges

To ensure correct cooking the oven door must close properly.

Keep the door sealing surfaces clean at all times

Installation instructions

Statutory regulations

This appliance shall be installed in accordance with the manufacturer's installation instructions, local gas fitting regulations, municipal building codes, electrical wiring regulations, AS 5601 the Australian Standard for gas installations. Refer also to AS 5601

for pipe sizing tables

Gas supply

Check that the data plate shows the appliance is suitable for the available gas supply. The data plate is located on the inside of the oven door, centre bottom. A copy of the data plates is reproduced on the last page of this booklet.

Electrical supply

All three models require connection to a **15 Amp** wall socket

Instructions

1. The model number and the type of appliance, gas pressure and gas type are found on the inside of the oven door, centre bottom. A copy of the data plates is reproduced on the last page of this booklet.
2. The appliance requires connection to a 240 V, 50 Hz electric supply. The power point must be installed by an authorized person.
3. Before commencing any work, make sure that the power point switches are turned off and the three pin plug is removed
4. If the appliance cannot be adjusted to perform correctly contact your local gas utility.
5. Instruct the user in the operation of the appliance before leaving.

Vertical clearances:

The cooker shall be installed so that a vertical clearance of at least 600 mm is maintained between its burners and any combustible material, and where this is not practicable, the underside of a combustible material less than 600 mm above the burner shall be protected by noncombustible millboard at least 6 mm thick which is covered with sheet metal not less than 0.4 mm thick, or shall be protected by an equivalent material, extending at least 225 mm beyond the sides of the cooker.

Overhead clearances:

Range hoods and exhaust fans shall be installed in accordance with the manufacturer's instructions. However, in no case shall the clearance between the top of the highest burner of the cooking appliance and the underside of a range hood be less than 600mm, or an overhead exhaust fan, 750 mm


Side clearances to vertical surface:

If the distance measured from the periphery of the nearest burner to any vertical combustible surface, is less than 200 mm, the surface shall be protected in accordance with clause 5.12.1.1 and 5.12.1.2 of AS 5601.

Installation

Make sure the minimum clearances to combustible materials are maintained during the installation including adequate space for the operation and servicing of the cooker. For height limitations use the dimensions as shown in the drawing.

Overall dimensions (with legs adjusted to 180mm).

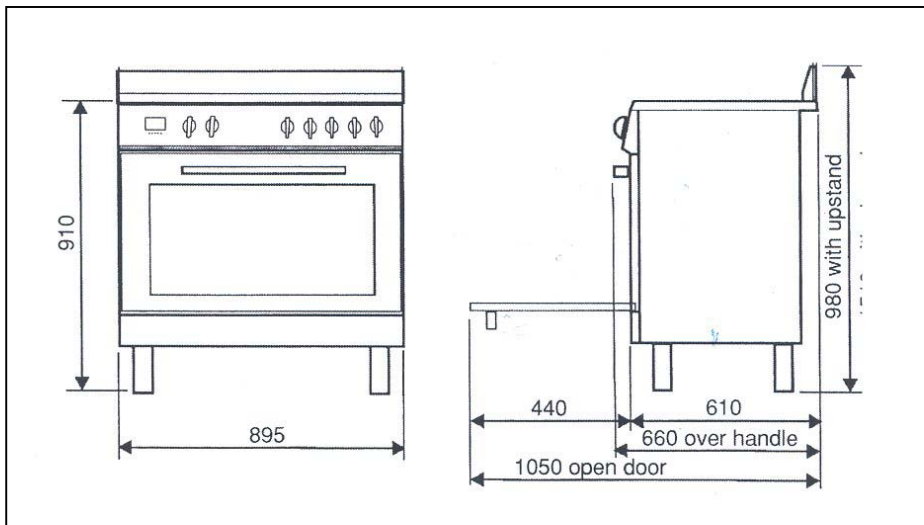

Height over upstand:	980 mm
Width:	895mm
Depth: (incl. oven door handle & knobs):	660mm
Depth: (flush with oven door):	610mm

Gas and electric connection

Electrical connection

The electric lead and plug are for connection onto a **15 Amp** socket. A **15 Amp** socket is to be within 1 m of the appliance. The lead is situated at the left hand side of the cooker.

Gas regulator

The gas connection is via 1/2" compression. Connect the cooker to the gas supply and check for gas soundness

If using a flexible connection

This appliance is approved for connection with a Flexible Hose, which complies with AS/NZS 1869 (AGA Approved), 10mm ID, class B or D, between 1 - 1.2m long . Connection shall be in compliance with AS 5601, clause 5.12.1.8

When installing the hose restraint device, the appliance anchor point is the rear panel securing.

If using copper connection

To allow cooker to be moved forward for service make a loop in the copper tube before connecting onto regulator.

Gas connection

The cooker must be connected to the gas supply with upstream connection of an isolation valve in accordance with the respectively valid regulations. We recommend that the isolation valve be fitted prior to the cooker to enable isolation of the cooker from the gas supply. The valve must be easily accessible at all times
To find out the factory set gas type, see label at rear of cooker

The gas connection is via 1/2" compression. Connect the cooker to the gas supply and check for gas soundness. NEVER use a naked flame to check for gas leaks.

Gas inlet (mm)- Nat gas


From RH rear side: 35 mm

Up from floor: 590 mm

Gas inlet (mm)- LPG

From RH rear side: 35mm

Up from floor: 675 mm

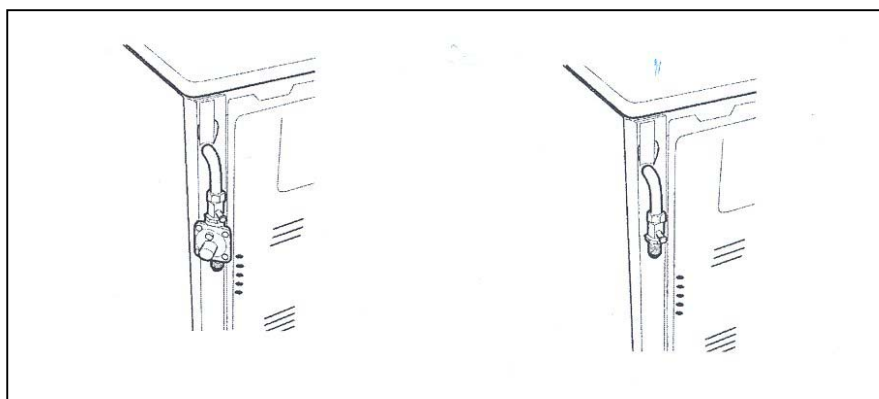

Gas inlet with different leg heights – mm

Min NG: 560 LP: 645

Ref NG: 590 LP: 675

Max NG: 595 LP: 680

Energy consumption					
Burners	Gas type	Pressure (kPa)	Injector (mm)	Mj/hr	Watts
Small	Natural	1.0	0.90	3.85	3000 W
	U-LPG	2.75	0.54	3.75	
Medium	Natural	1.0	1.18	7.12	
	U-LPG	2.75	0.70	6.20	
large	Natural	1.0	1.55	12.5	
	U-LPG	2.75	0.92	11.25	
Wok	Natural	1.0	1.65	13.1	
	U-LPG	2.75	0.98	13.1	
Oven/Grill					

Test the operation of the cooker before leaving

Note: These burners have no aeration adjustment

Check correct operation of the ignitions system and operation of burners individually and in combination. Burner flames should be clear blue, with no yellow tipping. If the burners show any abnormality check that the burners are correctly located. If satisfactory performance can not be obtained, contact the local gas utility.

Important


Before leaving instruct the owner in the use of the cooker it should be expressly noted that we cannot accept any liability for direct or indirect damage caused by wrong connection or improper installation. When being repaired, the appliance must always be disconnected from the mains supply; if required, notify our customer service

Support legs

The cookers are supplied with four transit supports. (One for each corner).

4 support legs are supplied separately and are fitted on location to the four corners of the lower support frame. Each support leg is pushed over the relevant transit support until flush with the support frame.


Each leg is adjusted by screwing the lower section in or out as required for fitting to a 900mm bench height. For lower bench tops adjust the height as required. The adjustment range for the leg is 150-185mm. With the legs adjusted to a height of 180mm the hob is located 10mm above the horizontal combustible surface, ref. AS5601

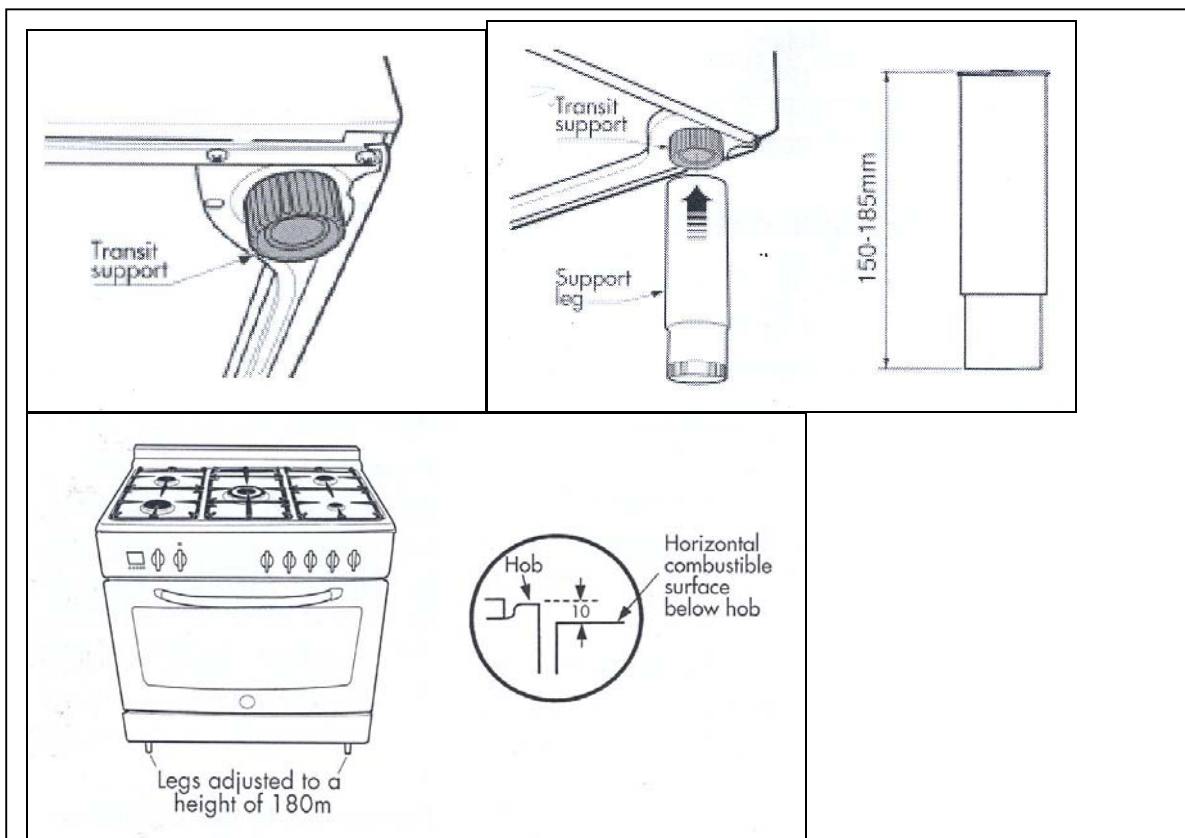


If the legs are not used and the cooker is mounted onto a plinth, fit transit legs to allow for clearance.

Once legs are adjusted to a nominal cooker height of 910mm, fit the antitilt restraint bracket.


1. Fit flat strap to rear of cooker at the centre point on lower edge using supplied screw

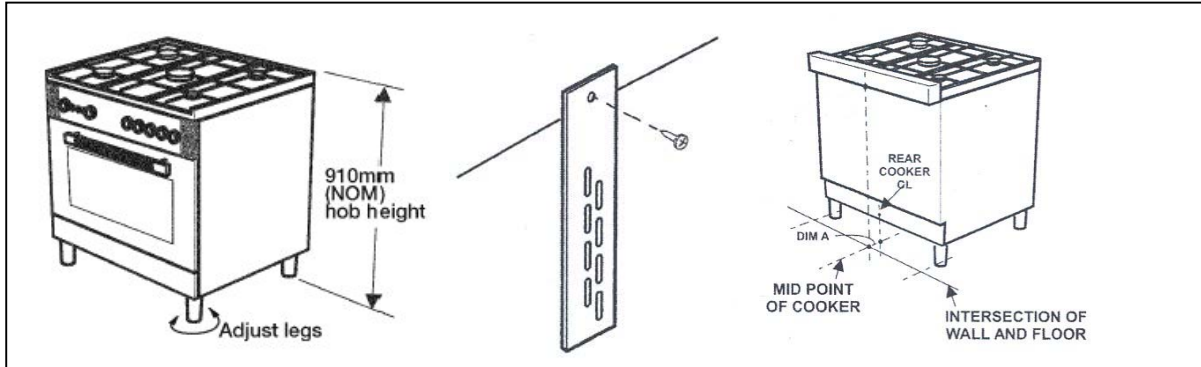

2. Mark centre position of the cooker installed position on floor

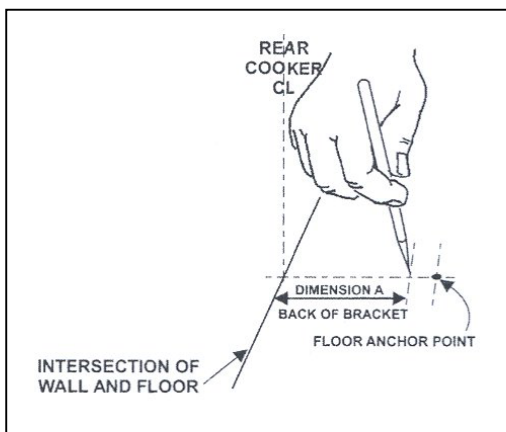

3. Measure from rear most point hob to mount point of strap. (Dimension A), then using Dimension A mark back edge of the bracket on centre line. Use bracket to mark fixing point.

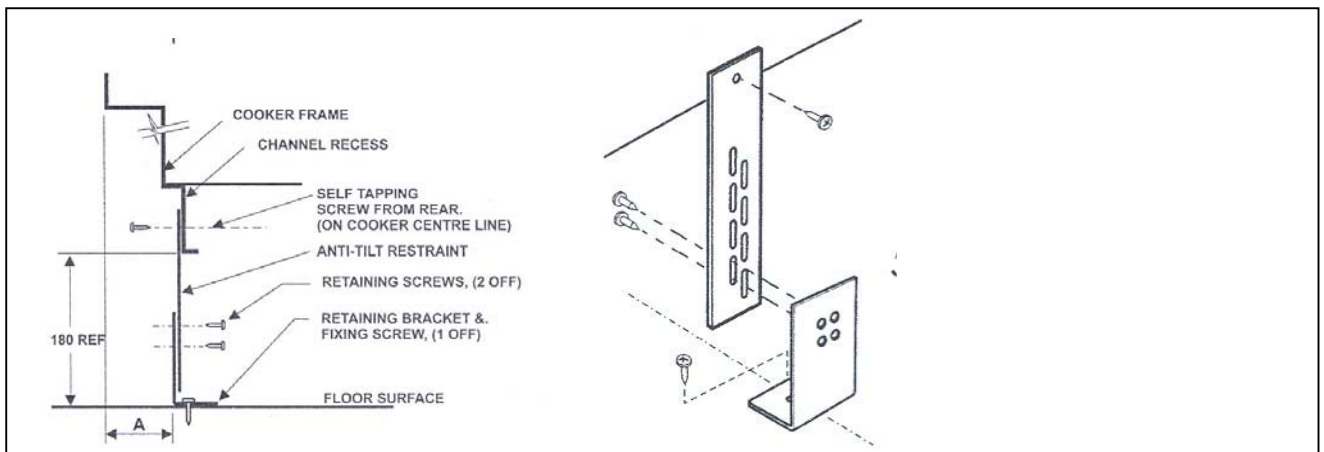

4. Fix restraint bracket to floor at position marked. Use suitable fixing.

Note: For concrete floor, use anchor provided. For other construction use a suitable


fastener.

5. Locate the cooker into the correct and final position. Then from the underside front, secure into position with self tapping screw provided.


WARNING - IN ORDER TO PREVENT ACCIDENTAL TIPPING OF THE APPLIANCE, FOR EXAMPLE BY A CHILD CLIMBING ONTO THE OVEN DOOR, THE STABILISING MEANS MUST BE INSTALLED. REFER TO THE INSTRUCTIONS FOR INSTALLATION

Upstand installation

All stainless steel hob models are fitted with an upstand. The upstand is packaged at the top rear of the cooker. The upstand is fixed along the rear of the cooker hob. Fixing points for locating the upstand are at either end of the hob

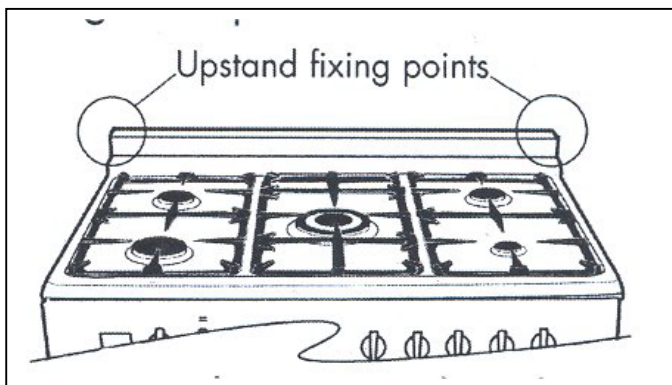


1. Remove the upstand retaining brackets either side of the hob by removing the top and rear fixing screws in each bracket

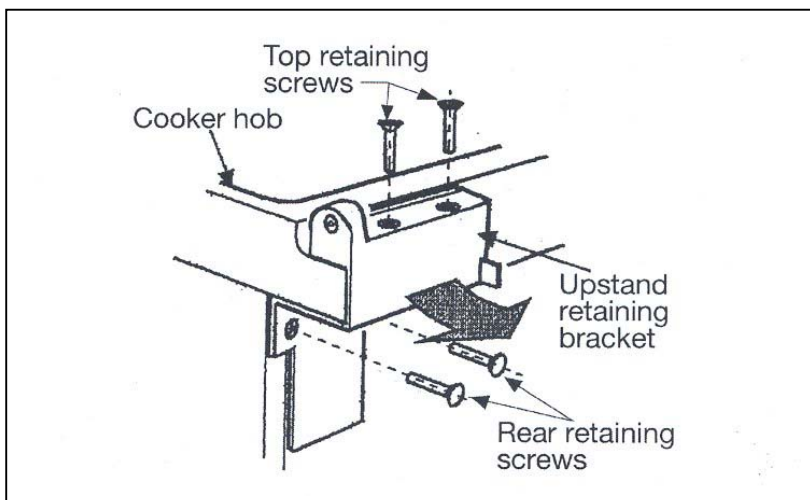

2. Peel away protective film from the underside of the upstand and locate onto the cooker

top.


3. Line up the bracket holes with the upstand fixing holes. Relocate the upstand brackets and secure with the retaining screws.
4. Remove the remaining protective film from the upstand and secure end caps using M4 CSK screws, one each end.

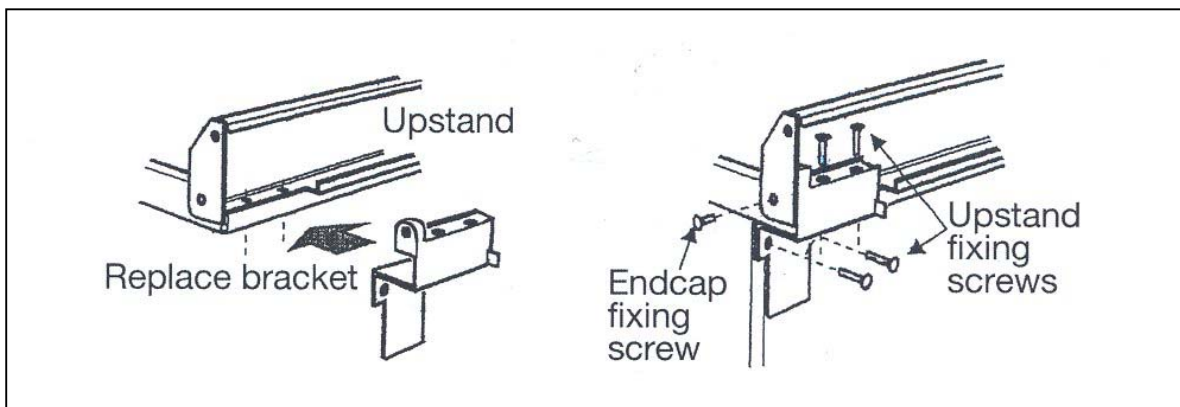

Hob & control panel lay-out


GEF90EG

1. Minute minder
2. Thermostat control knob
3. Function selector control knob
4. Thermostat indicator light
5. Left front burner control knob
6. Left rear burner control knob
7. Central (wok) burner control knob
8. Right rear burner control knob
9. Right front burner control knob

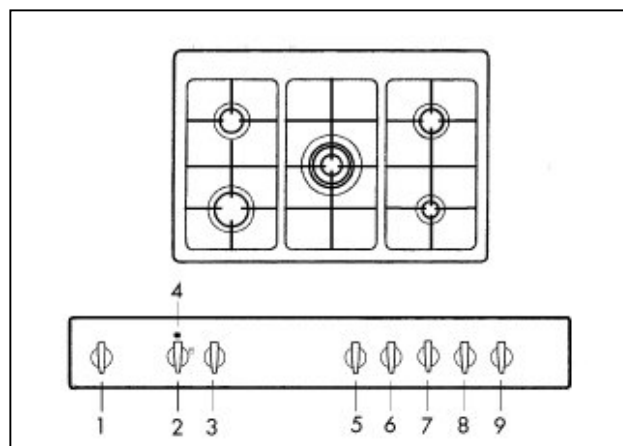

GEF91EG

1. Electronic clock
2. Timer button
3. Duration of cooking button
4. End of cooking button
5. Advance time button
6. Reduce time button
7. Thermostat indicator light
8. Thermostat control knob
9. Function selector knob
10. Left front burner control knob
11. Left rear burner control knob
12. Central (wok) burner control knob
13. Right rear burner control knob
14. Right front burner control knob

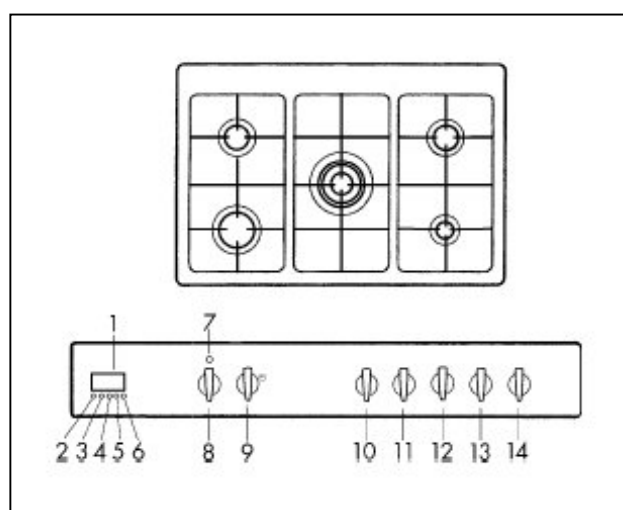

Cooktop burner operation


For cookers fitted with the optional glass lid the glass lid must always be in the open position when the cooktop burners are operating.

First time use

Thoroughly clean cooktop with warm soapy water prior to first use.

Cooktop burner operation

The individual burner position on the cooktop is indicated by a graphic placed above the burner control knob. Two further graphics indicated the 'full on' and 'turn down ' positions.

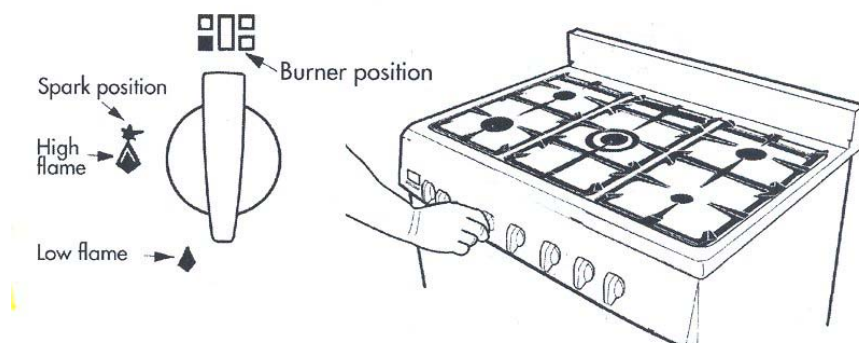

*Note: If the burner does not ignite within 5 seconds, please wait 5 minutes before reigniting

Ignition

1. To operate the individual cooktop burners depress the appropriate control knob and turn anti-clockwise to the spark symbol. Push to activate the electronic ignition.
2. Once flame is established turn the knob to the desired setting.*
3. If the flame goes out repeat the procedure.

Cooktop burner adjustments

The control knob is used to adjust the flame of the gas burner.

'High flame' graphic = highest output

'low flame' graphic = lowest output


Use 'High flame' setting to bring the pan to the boil, then adjust the flame to maintain the required pan temperature. Burner flames should be clear blue, with no yellow tipping. If the burners show any abnormality check that the burner heads are correctly located. If satisfactory performance cannot be obtained after consulting the trouble shooting guide, contact the authorised service provider. Please state the cooker model number to the service agent. The model number is stated on the data plate. The data plate is located on the inside of the oven door, centre bottom. A copy of the data plate is also reproduced on the last page of this booklet

Ventilation

The use of gas burners leads to the production of heat and moisture in the kitchen. For this reason make sure that the room is properly ventilated. Keep ventilatin openings, such as windows, open or provide a mecnanical ventilation device (e.g. a range hood of overhead exhaust fan)


Minute minder (model GEF90EG)

The minute minder control knob is positioned on the left hand side of the control panel. To activate the timer, rotate the knob clock-wise through 360°, then return the knob anti-clockwise to required cooking time

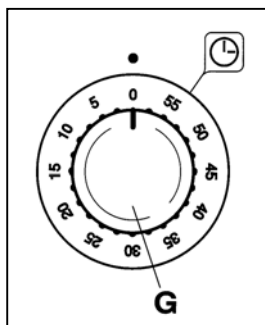



Electronic clock (model GEF91EG)

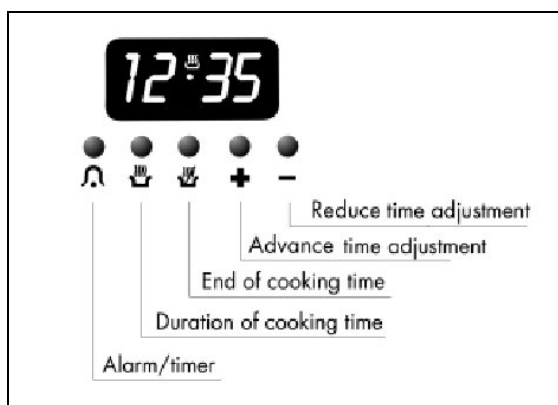To program the cooker press the desired function button and adjust the required time using the + and - buttons






Setting time of day

When first switching on power to the appliance, or after a power failure, the timer display flashes 0.00. To set the correct time of day press the  and the  symbols simultaneously and adjust the time using the + and - buttons




Oven will not switch on/to clear a program

If the oven will not switch on and the 'A' symbol is illuminated on the display, a program is still running. To clear a program press the  and the  symbols simultaneously. The 'A' symbol will switch off and the  only will be illuminated.




Manual operation

1. Turn the function selector control knob to the required mode.
2. Then turn thermostat control knob to the desired temperature.


NOTE: only the  symbol should be illuminated



Manual operation with timer

1. Turn the function selector control knob to the required mode.
2. Then turn thermostat control knob to the desired temperature.
3. Press the  symbol and adjust the required cooking time using the + and – buttons.

NOTE: the  and the 'A' symbols should be illuminated.

At the completion of the cooking time an audible signal will sound. To turn off the signal press the  symbol.



Semi automatic operation with end cooking.

In this mode the oven will turn itself off when the preset end of cooking time is reached.

1. Press the symbol and using the + and - buttons adjust the time you wish the cooking to stop
2. Turn the function selector control knob to the required mode.
3. Then turn thermostat control knob to the desired temperature.

NOTE: the 'A' and the symbol should be illuminated.

At the conclusion of the cooking time the signal will sound and the 'A' symbol will flash.

The will turn off and the oven will also turn off. To stop the signal press the button.



Automatic operation with end cooking

In this mode the oven is programmed to start and stop at a predetermined time.

1. Press the symbol and using the + and - buttons adjust the time you wish the cooking to stop.
2. Press the symbol and adjusting the + and - buttons adjust the cooking duration time.
3. Turn the function selector control knob to the required mode 4. Then turn thermostat control knob to the desired temperature.

NOTE: The oven will turn on at the 'end of cooking' time minus the 'duration of cooking time'. If the start of the cooking time is still ahead of the current time the 'A' symbol only will be illuminated.

At the conclusion of the 'end of cooking time' the signal will sound and the 'A' symbol will flash. The will turn off and the oven will also turn off. To stop the signal press the button.


'The time to run' can be verified at any time by pressing the appropriate button.

To clear a program

To clear a program press the and the symbols simultaneously.

Use of cooktop burners

For safety and economic gas usage you should always use the correct pan on the correct burner. Flames should not protrude beyond the base of the pan. You will save energy, time and money by always placing the correct pan size on the correct gas ring

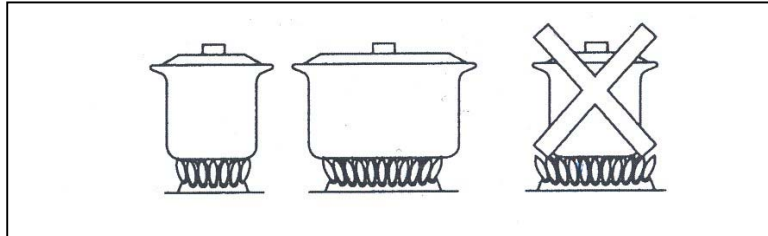

Oven /grill operation

Accessories

1 wire shelves

1 enamel baking tray


Foods being grilled must be monitored at all times, especially high fat content foods such as sausages, chops, etc.

First time use

Thoroughly clean the appliance and accessories with warm soapy water before using them for the first time. Operate the oven for about 30 minutes at 200°C on fan forced or fan assisted in order to eliminate any odours from all oven elements.

Oven /grill use for model GEF90EG

Thermostat and function selector control knobs

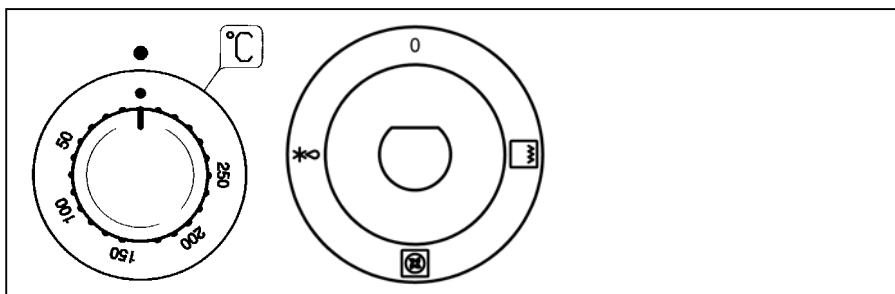

Oven heat distribution

The electric oven is heated by 2 elements; one the roof of the oven and one circular element around the fan. The function selector control knob controls the elements relative to the graphic symbols on the control panel.

The elements cycle on and off as required to reach and maintain the set temperature. The oven and grill functions are both contained within the one oven compartment and can be used in conventional mode or with the fan. In order to operate the grill or the oven, both the thermostat control knob and the function selector control knob must be activated. Turning only one control knob will not have any effect on the oven except to turn on the oven light or the electric fan. The thermostat controls the oven at settings up to 250°C.

Oven functions

Grill heating element (radiant grill)

Rear circular heating element with fan. (fan forced cooking)

Fan on only (defrost)

Switching the oven ON

1. Turn the function selector control to the required cooking mode. The orange 'power on' thermostat indicator light illuminates.
2. Set the temperature control to the required cooking temperature. The selected temperature will be maintained automatically

The orange thermostat indicator light illuminates when the oven is first turned on, and extinguishes when the required temperature is reached. The indicator light will cycle ON and OFF as the element cycles ON and OFF to maintain the oven temperature


Grill operation

Note: due to the operation of the cooling fan, all methods of grilling in this oven require the oven door to be closed during grill operation.

When the grill is used in the following 'fan forced' mode set the thermostat knob no higher than 175°C, which is between the 150°C and 200°C setting, to avoid overheating the front of the appliance.

Shelf positions

The oven features 5 shelf positions. The levels are counted from top to bottom.

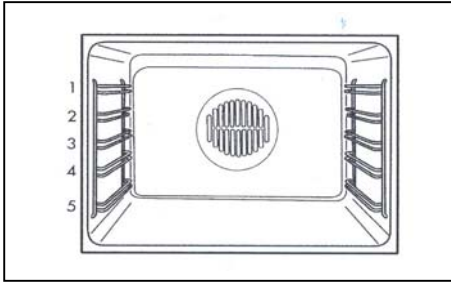

Description of oven functions

When the function selector control knob is set to one of these 3 positions the orange thermostat indicator light activates, indicating that the oven is being energised and the light turns on and off as the elements cycle on and off to maintain the required temperature.

Personal experience will help determine any variations in the values reported in the table. In any case, it is recommended to follow the instructions of the specific recipe used.

Oven light

Oven light will also be activated on all cooking functions

Radiant grilling

Thermostat setting from 50°C – 175°C

These modes use radiant heat provided by the centre part of the grill element and centre plus outer element respectively. Shelf positions 2 or 3 should be used. Ideal for quick browning of small quantities of food such as cheese on toast.

Always use the grill pan and wire grid together

Turn the food after approximately two thirds of cooking time

Lightly brush food with oil to avoid it sticking

Always monitor food being grilled in these two modes

Fan forced cooking

Thermostat setting from 50°C – 250°C

Moderate oven 170°C

In this mode the rear circular heating element provides heat whilst the fan distributes the heat evenly throughout the oven interior. It is possible to cook several dishes simultaneously on different shelves and food can be placed on any shelf position. Meat cooked in fan forced mode will brown on all sides, eliminating the need for a separate rotisserie function. It is particularly suitable for roasting cuts of meat weighing more than 150g. Place meat on the wire grid in the universal pan and roast at approximately 170°C.

Advantages of this mode are:

Shorter pre-heating time

Cooking with lower temperatures

Shorter cooking times ideal for all multi-level cooking including: Bread, Roasts, Cakes, Pastries


Defrosting

Thermostat setting 0°C

In this mode the fan circulates cold air inside the oven. In this way frozen food can be evenly defrosted. For best results when defrosting place the food on the wire rack in the universal pan

Oven /grill use for models GEF91EG

Thermostat and function selector control knobs

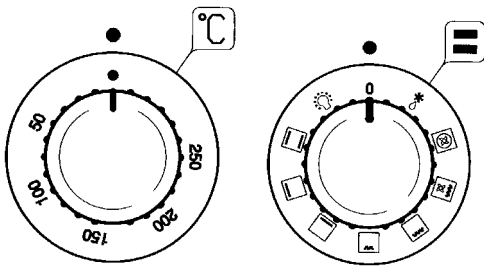

Cooling fan operation

The cooling fan operates when the oven is switched on and will continue to operate until the oven is switched off. The cooling fan ensures that the control knobs and the surrounding fascia are always cool to touch.

Oven heat distribution

The electric oven is heated by 4 elements; one concealed in the bottom of the oven, two against the roof of the oven and one circular element around the fan. The function selector control knob controls the elements relative to the graphic symbols on the control panel.

The elements cycle on and off as required to reach and maintain the set temperature.

The oven and grill functions are both contained within the one oven compartment and can be used in conventional mode or with the fan.

In order to operate the grill or the oven, both the thermostat control knob and the function selector control knob must be activated. Turning only one control knob will not have any effect on the oven except to turn on the oven light or the electric fan. The thermostat controls the oven at settings up to 250°C.

Switching the oven ON

1. Turn the function selector control to the required cooking mode. The orange 'power on' thermostat indicator light illuminates.
2. Set the temperature control to the required cooking temperature. The selected temperature will be maintained automatically.

The orange thermostat indicator light illuminates when the oven is first turned on, and extinguishes when the required temperature is reached. The indicator light will cycle ON and OFF as the element cycles ON and OFF to maintain the oven temperature.

Grill operation

Note: due to the operation of the cooling fan, all methods of grilling in this oven require the oven door to be closed during grill operation.


When the grill is used in the following 'fan forced' mode set the thermostat knob no higher than 175°C, which is between the 150°C and 200°C setting, to avoid overheating the front of the appliance.

Indicates that both the top external element and the inner grill element, as well as the fan, are turned on. In this fan forced mode the oven door needs to be closed.

This fan forced mode is a special function to ensure excellent grilling. Place the oven shelf in the middle position and the oven tray should be inserted at the bottom.

Shelf positions

The oven features 5 shelf positions. The levels are counted from top to bottom.

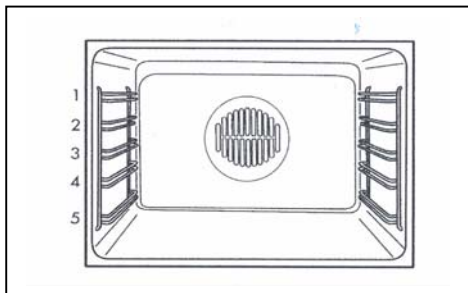

Description of oven functions

When the function selector control knob is set to one of these nine positions the orange thermostat indicator light activates, indicating that the oven is being energised and the light turns on and off as the elements cycle on and off to maintain the required temperature.

The cooking chart lists the shelf positions for specific types of food. Personal experience will help determine any variations in the values reported in the table. In any case, it is recommended to follow the instructions of the specific recipe used.

Oven light

Oven light will also be activated on all other cooking functions.

Conventional cooking

Thermostat setting from 50°C – 250°C.

Moderate oven 180°C.

This mode uses upper and lower heating elements to cook. Cooking is possible on one shelf position only and food should be placed towards the centre of the oven on shelf position 3. This mode of cooking is suitable for:

Baking rich fruit cakes

Pavlova

Meringues

Souffles

Casseroles

Large cakes

Upper element

Thermostat setting from 50°C – 200°C

In this mode heat is provided from the upper element only. Food should be placed towards the centre of the oven and cooking should be done on one level only. This function is ideal for finishing foods which require additional surface cooking such as moist cakes.

Lower element

Thermostat setting from 50°C – 200°C.

In this mode heat is provided by the lower element only and food should be placed on shelf 4 or 5. Ideal for foods which require additional cooking of the base such as: Quiches

Apple pies
Pizzas

Radiant grilling

Thermostat setting from 50°C – 175°C

These modes use radiant heat provided by the centre part of the grill element and centre plus outer element respectively. Shelf positions 2 or 3 should be used. Ideal for quick browning of small quantities of food such as cheese on toast.

Always use the grill pan and wire grid together.

Turn the food after approximately two thirds of cooking time.

Lightly brush food with oil to avoid it sticking.

Always monitor food being grilled in these two modes.

Fan grilling

Thermostat setting from 50°C – 175°C

In this mode both grill elements as well as the fan are activated. The heat generated by the grill elements is evenly distributed throughout the oven interior, eliminating the need to turn the food. This mode can be used for grilling meat and vegetables. At 170°C, this mode will also give an effect similar to spit roasting, especially for poultry or pork where a crisp skin is desired. It is also ideal for foods which require additional browning such as au gratin or pork crackling.

Fan forced cooking

Thermostat setting from 50°C - 250°C.

Moderate oven 170°C.

In this mode the rear circular heating element provides heat whilst the fan distributes the heat evenly throughout the oven interior. It is possible to cook several dishes simultaneously on different shelves and food can be placed on any shelf position. Meat cooked in fan forced mode will brown on all sides, eliminating the need for a separate rotisserie function. It is particularly suitable for roasting cuts of meat weighing more than 150g. Place meat on the wire grid in the universal pan and roast at approximately 170°C. Advantages of this mode are:

Shorter pre-heating time

Cooking with lower temperatures

Shorter cooking times

Ideal for all multi-level cooking including:

Bread

Roasts

Cakes

Pastries

Defrosting

Thermostat setting 0°C

In this mode the fan circulates cold air inside the oven. In this way frozen food can be evenly defrosted. For best results when defrosting place the food on the wire rack in the universal pan

Oven cooking tips

Preheat oven until the temperature indicator light extinguishes. (The indicator light will cycle on and off as the element cycles on and off to maintain the oven temperature).

Refer to cooking chart for shelf positions. Personal experience will help determine any variations in the positions reported in the chart. In any case, it is recommended to follow the instructions of the specific recipe used.

Open door as little as possible during operation

When opening the oven door during operation turn to a non fan function to minimise heat loss

If necessary to cover food with foil or baking paper whilst cooking in fan mode, ensure that the foil or paper is firmly secured.

For easy viewing and a more even cooking result bring the dishes and trays forward to the front of the oven shelf. Avoid placing food too close to rear of oven.

For even heat circulation ensure that dishes and trays do not touch each other or the sides of the oven. Best results when baking, roasting and multi level cooking will be obtained by cooking with the fan in operation

Do not place foil, baking trays, dishes or any other items directly on the base of the oven

Note: When oven is operating the glass door will become hot

Trouble shooting guide

Problem	Possible cause	Action
Burners don't light	Power to appliance turned off	Turn on power supply
Cooktop burner difficult to light	Burner cap damp or incorrectly positioned	Dry and reposition cap
	Spark ignitor clogged with grease	Clean ignitor
	Burner ports blocked	Clean ports
	Spark igniter does not function	Phone service number for service or advice
Grill element/browner smoking when on	Top of oven compartment soiled	Clean top of oven compartment
Food is not cooking to expectation	User may still be using settings of previous cooker - all ovens have different characteristics	Check cooking chart - consumer will become familiar with use If problem persists phone service number for advice
Food cooking too quickly	Oven temperature set too high	Check oven chart, lower temperature
	Pan used larger than recipe required	Allow less time or use smaller pan
	Thermostat too high - faulty	Phone service number for service or advice
Food taking too long to cook	Opening oven door too frequently or far too long	Avoid opening door and minimise time open
	Oven not preheated sufficiently	Allow to preheat, especially for high temperature cooking
	Temperature set too low	Check chart and / or raise temperature
	Food was chilled or partially frozen	Allow to thaw completely or allow longer time for cooking
	Heat loss from oven	Phone service number for service or advice
	Thermostat too low - faulty	Phone service number for service or advice
Food is cooking unevenly	Tray or pan pushed too far to the back or sides of oven	Allow 5 cm airflow all around Use fan setting
	Tray too large	Use smaller tray

	Tray or oven overloaded	Reduced items on tray or number of trays in oven
	Oven temperature too high	Reduce temperature slightly
Cakes not cooked through to centre	Temperature too high	Reduce temperature
	Oven overloaded	Cook fewer items
	Incorrect shelf position	Check cooking chart
Food pale on top	Temperature too low	Raise temperature - refer to chart
	Insufficient cooking time	Increase cooking time
	Sides too high on cake tin	Use smaller tin
	Incorrect position	Refer to cooking chart
	Tray too large	Allow 5 cm airflow around items
Cake cracking on top	Oven too hot	Reduce temperature
	Batter too thick	Check recipe or add more liquid
Minute minder does not ring	Control knob has not been sufficiently wound up	Even if setting for a short time it is recommended to wind the knob through 360° (to 60 mins) then turn back to the required time

Cleaning

Cleaning hob

Once the appliance is cold, clean it with a sponge and soapy water. Remove any spills immediately. This will avoid unnecessary effort later

Allow burners and trivets to cool down before cleaning them.

The burners and trivets must be cleaned regularly to keep them in good condition. This is done by submerging them in soapy water and scrubbing them with a non-metal brush to keep the ports and slots free from obstructions so they give a perfect flame. Dry the burner caps and trivets whenever wet or damp. Do not wash the burner caps and trivets in a dishwasher.

After cleaning and drying ensure that the burner heads and caps are replaced correctly on the burner body

For cookers fitted with a stainless steel hob the high temperatures generated by using the wok burner may cause the stainless steel hob of your hotplate to become discoloured over time. THIS IS NORMAL. Clean the hob with a product suitable for cleaning stainless steel

Never use abrasive products, sharp objects, steel scouring pads, knives, etc., to remove stubborn food remains from the hob surface, trivets, burners and oven interior

Do not allow acidic products such as vinegar, lemon juice etc., to come into contact with the hob

Cleaning oven interior


Clean the oven enamelled floor, wire shelves and shelf supports with hot detergent suds. This oven is fitted with self cleaning linings on the roof, sides and back of the oven. The liners are covered with a special micro-porous enamel that absorbs and removes fat residue during baking. Should any liquid fat splatter onto the liners, self cleaning action may not be adequate. In this case the liners may be wiped with a damp sponge. Mild detergent may be used but no chemical cleaners. After this, heat the oven to the maximum temperature for a period of 30 minutes. If the stains persist wait until the oven has cooled down and repeat the above procedure. Important: always clean the

enamelled surfaces and wire components prior to starting the 30 minute heat cleaning cycle.

It is recommended that the oven interior be cleaned regularly as excessive build-up of fat can become a fire hazard.

Cleaning oven shelf supports


To remove the shelf supports remove the knurled knobs either side, lift the wire rack and swing forwards

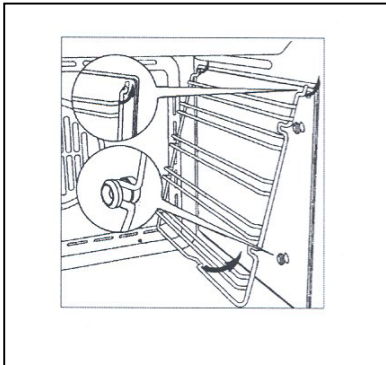

Cleaning oven glass door

The oven door may be removed for cleaning. To remove the oven door follow the steps below:

1. Open the door fully
2. Lift the two levers forward as shown in figure below left
3. Close the door as far as the first stop (created by the raised levers).
4. Lift the door upwards and outwards to remove it from its mounting as shown in figure below right.
5. To replace the door, fit the hinges on their mountings and lower the levers
6. Close the door.

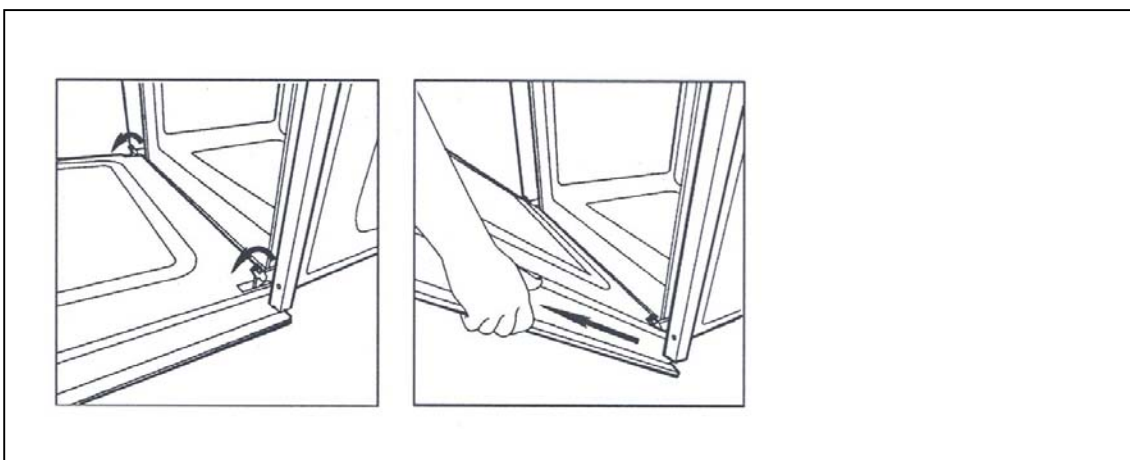


Use a window cleaner to clean the exterior glass panel.

Replacing the oven light bulb

Type: E 14, 25W, heat resistant to 300°C.

You may obtain this bulb from our service department

1. Disconnect the appliance from the main electricity supply.
2. To prevent damage place a teacloth in the bottom of the oven.
3. Unscrew the glass cover of the light.
4. Unscrew the old lightbulb and replace it with a new one.
5. Replace cover
6. Reconnect the power supply.

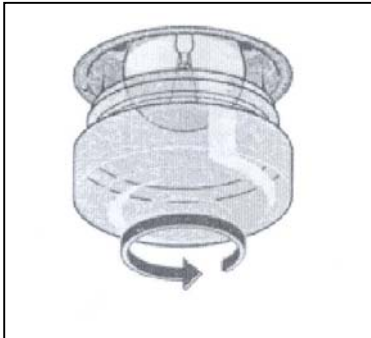

Service information

Service and maintenance must only be carried out by an authorised person

This appliance shall not be modified.

Always disconnect the gas supply and power before servicing the cooker.

After service always check connections for gas soundness at connections with soapy water. NEVER use a naked flame to check for leaks.

To remove the upstand (for cookers fitted with upstand)

1. Pull cooker forward
2. To remove the upstand retaining brackets undo the 2 top and 2 rear retaining screws securing each bracket.
2. Lift the upstand from the cooker hob.

To clean or replace a cooktop burner injector



1. Remove pan support, burner cap and burner head.
2. Using a 7mm socket spanner unscrew and clean or replace the cooktop burner's injector.
3. Replace burner head, cap and pan support. Ensure that the burner head and cap are in the correct position.

Access to the under hob area


Pull cooker forwards to gain access to the rear of the cooker

1. Remove upstand
2. Remove pan supports, burner caps and burner heads
3. Using a torx T20 head driver remove the screws securing the burners to the hob. 2 per boiling burner and 4 for the wok burner.
4. Remove the lower 2 screws of each upstand bracket
5. lift hob at rear and slide out of position.

Wiring diagrams model GEF90EG

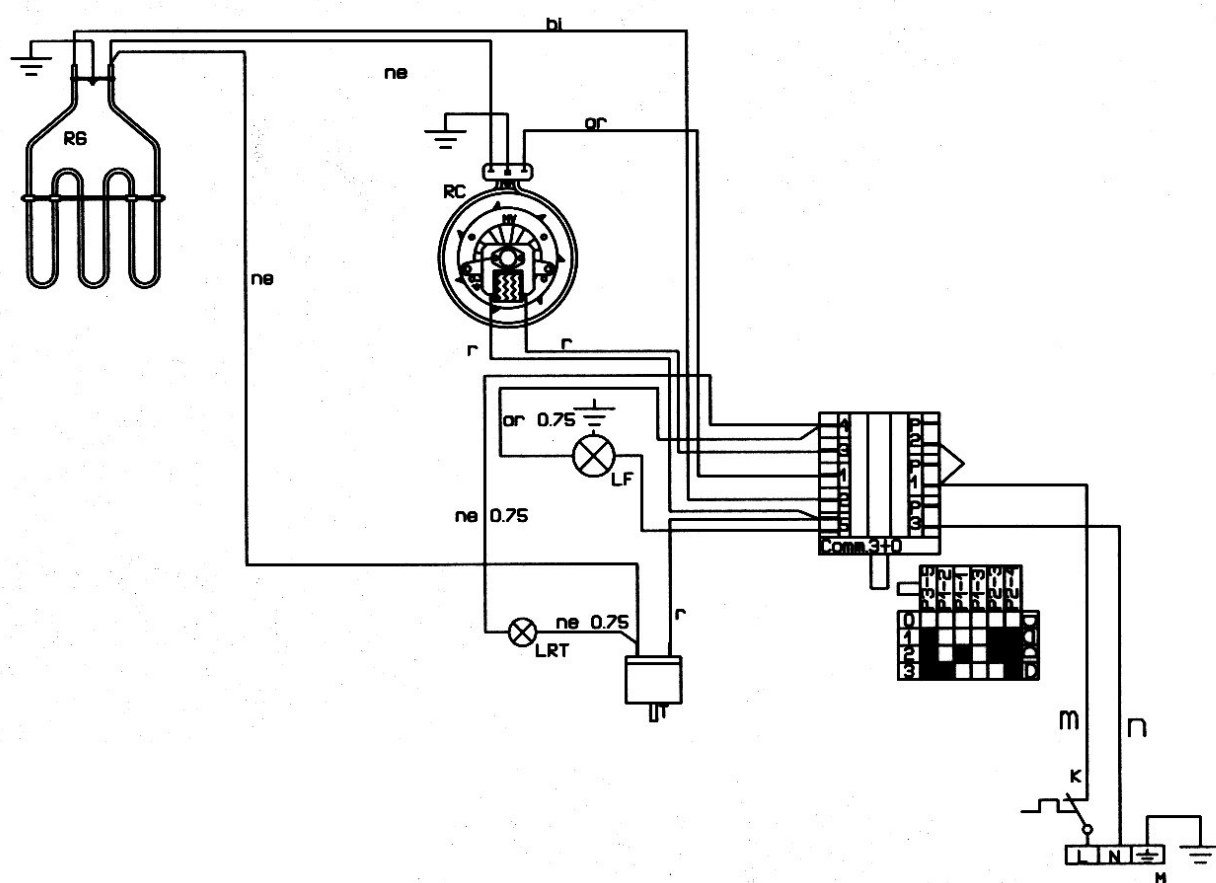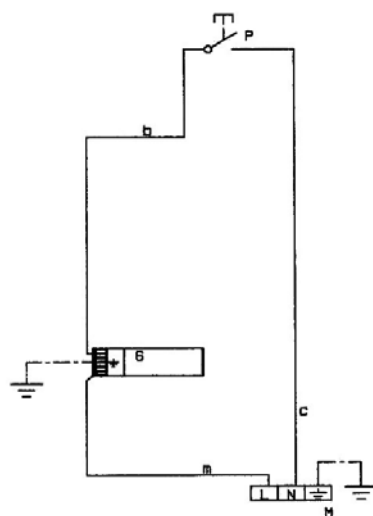

Wiring diagrams model GEF91EG

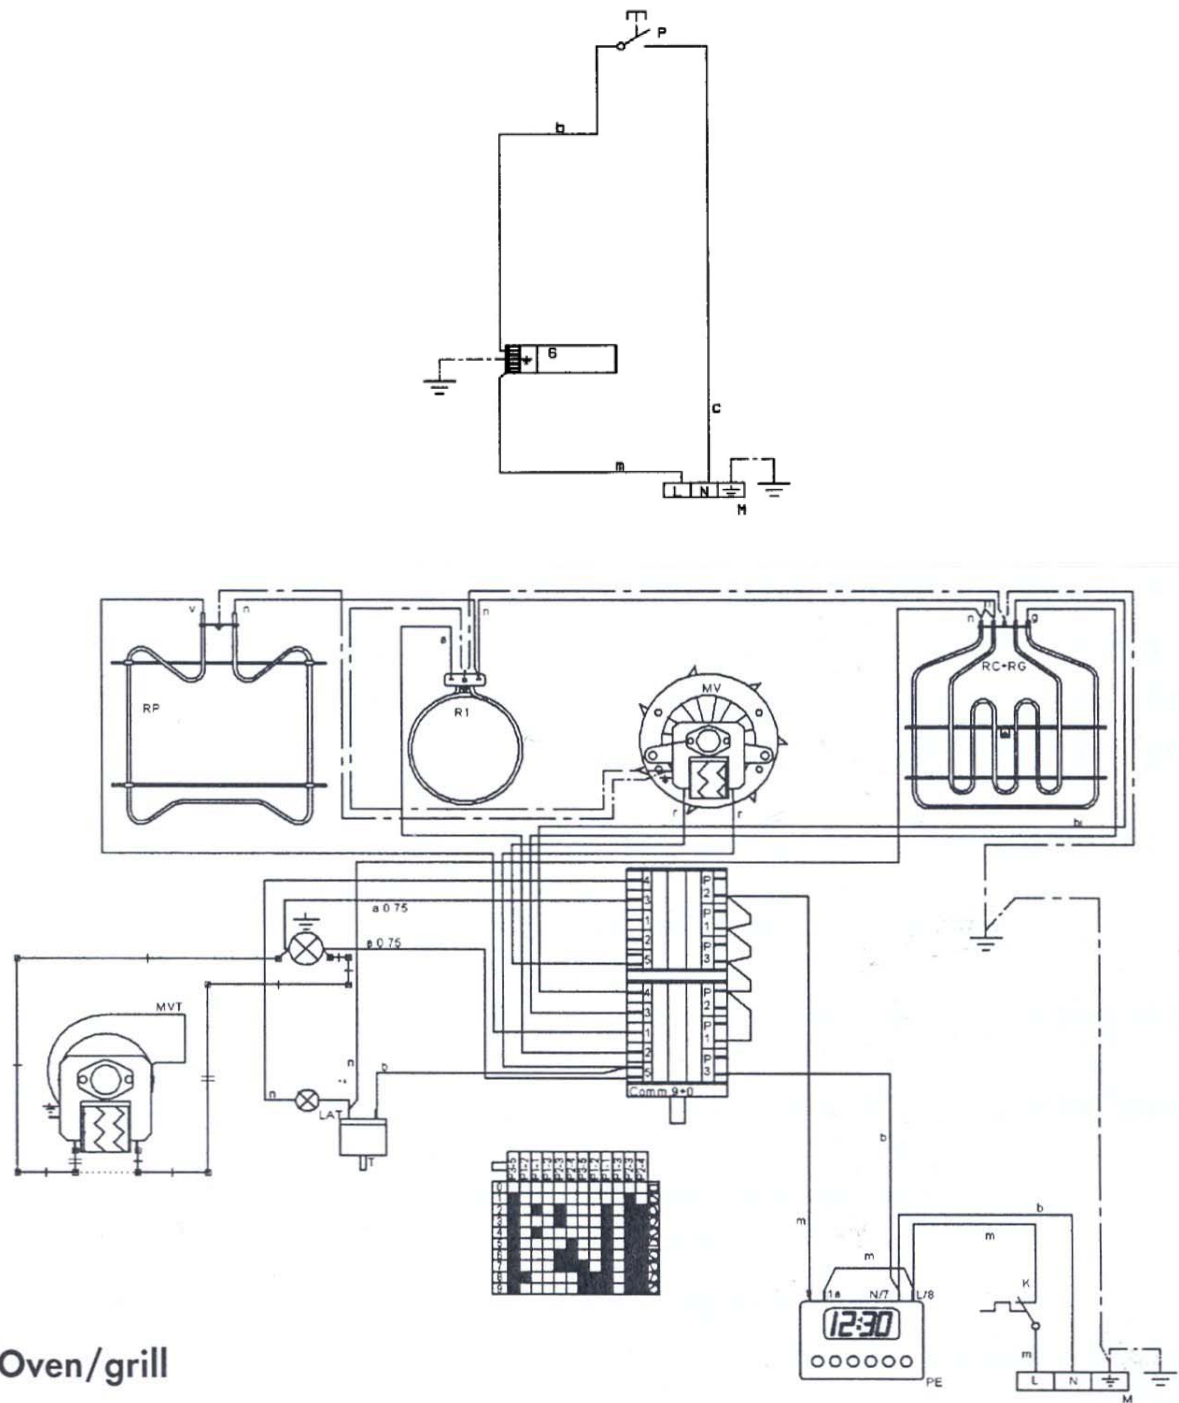

Oven/grill

A copy of those diagrams is situated on the back panel of the cooker.

Data plates

The data plates reproduced below cover all three cookers. You will find your particular model number on the data plate attached to the inside of the oven door, centre bottom. Always quote your model number when requesting a service call.

note:

Refer to cover page for duplicate data label applicable to your appliance.

SPARE PARTS LIST				
NUMBER	COMPONENT	DESCRIPTION	QUANTIT	PRICE
		M9108BN6X5CBT GEF90EG - free-standing cooker		
1	601503	CIRCUIT DIAGRAM	1	
1	601726	WIRING	1	
1	800019	EXPLODED VIEW OF STRUCTURE	1	
1	800290	EXPLODED VIEW OF MUFFLE	1	
1	800306	EXPLODED VIEW OF DOTATION	1	
1	800307	EXPLODED VIEW OF OVEN	1	
1	800335	EXPLODED VIEW OF WORK TABLE	1	
2	310436	USER MANUAL	1	
11	202375	PART FOR BURNER FIXING	2	1,41
38	306003	THERMOSTAT CLIP	4	0,15
39	306002	SPRING FOR KNOB	8	0,15
80	504160	COVER FOR SMALL FLAME SPREADER	1	4
81	504161	COVER FOR MEDIUM BURNER	2	5
82	504162	COVER FOR RAPID BURNER	1	6
83	504158	COVER OUT FOR ULTRA RAPID FLAME SPREADER	1	5
84	504191	COVER IN FOR ULTRA RAPID FLAME SPREADER	1	5
117	101413	PROTECTION FOR FAN ASSISTED OVEN	1	6,5
120	101280	OVEN TRAY	1	15
138	202348	DISHWARMER BOTTOM	1	9,72
160	202526	BRIDLE FOR FIXING GAS VALVES	1	2,23
166	101297	INSIDE OVEN DOOR	1	19,86
176	202351	CARTER MOTORVENTILATOR	1	8,04
274	202505	HORIZONTAL VENT	3	4,5
311	301122	SCREW 4,2X30	4	0,4
312	200145	OVEN GLASS FIXING RING	4	0,99
313	301073	SCREW 5MAX10 TCT	2	0,05
329	309116	HIGH INSIDE DOOR SPACER	2	1,32
385	306024	SPRING FOR SPARK PLUG	5	0,15
389	301109	SCREW M5X32 FOR HANDLE	2	0,1
392	309026	PART FOR KNOB PROTECTION FIXING	2	0,6
425	415054	SPARK PLUG 350MM	2	3
426	415057	SPARK PLUG 700MM	2	3
428	415073	SPARK PLUG FOR ULTRA RAPID BURNER	1	5
430	415081	ACCUMULATOR	1	12
436	402090	BACK FIBER GLASS	1	9,35
441	404042	SIDE GRID FOR OVEN	2	8
442	404154	GRID FOR OVEN	1	14
444	405003	OVEN DOOR HINGE FIX PART	2	4
446	405039	OVEN DOOR HINGE M9/D2	2	8
453	411084	RING GASKET	4	0,36
458	409044	TIMER	1	6
478	200318	DISHWARMER FLAP DOOR	1	15
611	603025	MOTOVENTILATOR 220/240V 50/60HZ	1	25
614	606062	GRILL RESISTANCE	1	29,99
615	606045	CIRCULAR HEATER 3000W 240V	1	29,99
620	602038	COMMUTATOR	1	15
623	608018	OVEN BULB WITH HOLDER	1	12
648	601965	TERMINAL SEPARATOR	1	9,85
649	608034	SMALL WARNING LIGHT	1	1,66
667	602025	THERMOSTAT	1	15
670	504128	SMALL FLAME SPREADER	1	5
671	504129	MEDIUM FLAME SPREADER	2	6
672	504130	RAPID FLAME SPREADER	1	8
673	504182	ULTRA RAPID FLAME SPREADER	1	19,99
715	604072	DASYCHAIN SWITCH	1	12


760	510507	SMALL BURNER	1	8
761	510508	SEMI RAPID BURNER	2	8
762	510509	RAPID BURNER	1	8
763	510707	ULTRA-RAPID BURNER	1	9,99
880	502208	GAS VALVE BY PASS 034	1	9,99
881	502209	GAS VALVE BY PASS 036	2	9,99
882	502210	GAS VALVE BY PASS 052	1	9,99
883	502212	GAS VALVE BY PASS 065	1	9,99
917	200303	STAINLESS STEEL SIDE	2	19,99
929	202108	VERTICAL VENT	2	4,61
930	202214	FEET SUPPORT	2	8,04
940	405075	WORK TABLE AND TOP COVER HINGE RIGHT	1	8
941	405076	WORK TABLE AND TOP COVER HINGE LEFT	1	8
943	308019	BUMPER FOR GRIDS	16	0,2
960	404199	CENTRAL GRID	1	15
965	404190	GRID FOR 2 BURNERS	2	15
972	202360	WORK TABLE FIXING	3	0,07
1044	401933	ELECTRIC KNOB	8	3
1050	4010078	GAS VALVE KNOB RING	5	2,99
1051	4010053	COMMUTATOR KNOB	1	2,99
1052	4010009	ELECTR.THERMOSTAT KNOB RING	1	2,99
1053	4010021	TIMER KNOB RING	1	2,99
1143	410532	RISER	1	29,99
1406	403185	OVEN HANDLE	1	15
1407	406167	OVEN DOOR GLASS BLACK M9D2	1	29,99
1409	411052	UNDER GLASS OVEN GASKET	1	6,11
1411	411087	GASKET FOR OVEN FRONT 4 SIDE	1	9,99
1411	411088	GASKET FOR OVEN FRONT ONE SIDE	1	3
1415	602037	THERMOREGULATOR	1	7
1421	406349	INTERNAL OVEN GLASS	1	19,99
1602	210488	CONTROL PANEL	1	25
1614	201160	BACK PANEL	1	12
1615	202238	CONTROL SUPPORT	1	7,16
1616	402169	FIBER GLASS	1	9
1622	608029	SMALL YELLOW BUD	1	0,5
1624	200319	WORK TABLE	1	39,99
1627	501872	GAS COLLECTOR	1	8
1628	501836	TUBE FOR RIGHT FRONT BURNER	1	5
1629	501839	LEFT FRONT BURNER	1	5
1630	501837	TUBE FOR RIGHT BACK BURNER	1	5
1631	501838	LEFT BACK TUBE	1	5
1632	501841	CENTRAL TUBE	1	5
1640	202223	CLAMP PROTECTION FOR FLAP DOOR	1	1,4
1644	414044	FEET	4	5
1645	414031	BASE FOR LEGS	4	1
1661	202127	OVEN PANEL	1	9,49
1671	101256	ELECTRIC OVEN PANEL	1	11,15
1673	101409	BACK PANEL FOR OVEN	1	15
1674	101115	OVEN TOP PANEL BLACK	1	13,24
1677	101299	FRONT PANEL BLACK M9/D2	1	15,55
1685	201152	BACK VENT STACK	2	2,37
1705	200081	OVEN GLASS SUPPORT M9/D2	1	3
2016	101369	OVEN SIDE PANEL BLACK	2	8,05
2130	201159	GRILL PROTECTION	1	1,1
4301	410540	RIGHT VERTICAL PROFILE	1	8
4302	410541	LEFT VERTICAL PROFILE	1	8


NUMBER	COMPONENT	SPARE PARTS LIST	QUANTIT	PRICE
		DESCRIPTION		
		M9106SG6X5DBT GEF91EG - free-standing cooker		
1	601503	CIRCUIT DIAGRAM	1	
1	601734	CIRCUIT DIAGRAM	1	
1	800019	EXPLODED VIEW OF STRUCTURE	1	
1	800112	EXPLODED COOLING FAN	1	
1	800290	EXPLODED VIEW OF MUFFLE	1	
1	800306	EXPLODED VIEW OF DOTATION	1	
1	800307	EXPLODED VIEW OF OVEN	1	
1	800335	EXPLODED VIEW OF WORK TABLE	1	
1	910588	PAN SUPPORT BUMPER KIT	1	7,99
2	310436	USER MANUAL	1	
11	202375	PART FOR BURNER FIXING	2	1,41
38	306003	THERMOSTAT CLIP	4	0,15
39	306002	SPRING FOR KNOB	7	0,15
80	504160	COVER FOR SMALL FLAME SPREADER	1	4
81	504161	COVER FOR MEDIUM BURNER	2	5
82	504162	COVER FOR RAPID BURNER	1	6
83	504158	COVER OUT FOR ULTRA RAPID FLAME SPREADER	1	5
84	504191	COVER IN FOR ULTRA RAPID FLAME SPREADER	1	5
105	202431	UP SUPPORT FOR AXIAL COOLIN FAN	1	21,53
106	202659	DOWN SUPPORT FOR AXIAL COOLIN FAN	1	24,05
117	101413	PROTECTION FOR FAN ASSISTED OVEN	1	6,5
120	101280	OVEN TRAY	1	15
138	202348	DISHWARMER BOTTOM	1	9,72
160	202526	BRIDLE FOR FIXING GAS VALVES	1	2,23
166	101297	INSIDE OVEN DOOR	1	19,86
176	202351	CARTER MOTORVENTILATOR	1	8,04
274	202505	HORIZONTAL VENT	3	4,5
311	301122	SCREW 4,2X30	4	0,4
312	200145	OVEN GLASS FIXING RING	4	0,99
313	301073	SCREW 5MAX10 TCT	2	0,05
329	309116	HIGH INSIDE DOOR SPACER	2	1,32
385	306024	SPRING FOR SPARK PLUG	5	0,15
389	301109	SCREW M5X32 FOR HANDLE	2	0,1
392	309026	PART FOR KNOB PROTECTION FIXING	2	0,6
425	415054	SPARK PLUG 350MM	2	3
426	415057	SPARK PLUG 700MM	2	3
428	415073	SPARK PLUG FOR ULTRA RAPID BURNER	1	5
430	415081	ACCUMULATOR	1	12
436	402090	BACK FIBER GLASS	1	9,35
441	404042	SIDE GRID FOR OVEN	2	8
442	404154	GRID FOR OVEN	1	14
444	405003	OVEN DOOR HINGE FIX PART	2	4
446	405039	OVEN DOOR HINGE M9/D2	2	8
450	409040	ELECTRONIC PROGRAMMER	1	49,99
453	411084	RING GASKET	4	0,36
478	200318	DISHWARMER FLAP DOOR	1	15
561	508025	THERMOCOUPLE MM300	1	8
562	508021	THERMOCOUPLE MM600	2	8
565	508027	THERMOCOUPLE MM800	1	8
566	508034	THERMOCOUPLE ULTRA-RAPID BURNER	1	8
611	603025	MOTOVENTILATOR 220/240V 50/60HZ	1	25
612	603021	COOLING FAN	1	25
613	606049	RESISTENCE 1800W 240V	1	29,99
614	606060	UPPER+GRILL RESISTANCE	1	29,99
615	606045	CIRCULAR HEATER 3000W 240V	1	29,99
621	602031	COMMUTATOR 9+0	1	15
623	608018	OVEN BULB WITH HOLDER	1	12
648	601965	TERMINAL SEPARATOR	1	9,85
649	608034	SMALL WARNING LIGHT	1	1,66


667	602025	THERMOSTAT	1	15
670	504128	SMALL FLAME SPREADER	1	5
671	504129	MEDIUM FLAME SPREADER	2	6
672	504130	RAPID FLAME SPREADER	1	8
673	504182	ULTRA RAPID FLAME SPREADER	1	19,99
715	604072	DASYCHAIN SWITCH	1	12
760	510507	SMALL BURNER	1	8
761	510508	SEMI RAPID BURNER	2	8
762	510509	RAPID BURNER	1	8
763	510708	ULTRA-RAPID BURNER	1	9,99
880	502217	GAS VALVE BY PASS 034	1	19,99
881	502218	GAS VALVE BY PASS 036	2	19,99
882	502221	GAS VALVE BY PASS 052	1	19,99
883	502223	GAS VALVE BY PASS 065	1	19,99
917	200303	STAINLESS STEEL SIDE	2	19,99
929	202108	VERTICAL VENT	2	4,61
930	202214	FEET SUPPORT	2	8,04
940	405075	WORK TABLE AND TOP COVER HINGE RIGHT	1	8
941	405076	WORK TABLE AND TOP COVER HINGE LEFT	1	8
943	308031	BUMPER FOR C.I. GRIDS AND DISHWARMER	4	0,2
960	408074	CAST IRON PAN SUPPORT 1 BURNER	1	22
965	408073	CAST IRON PAN SUPPORT 2 BURNERS	2	22
972	202360	WORK TABLE FIXING	3	0,07
1044	401933	ELECTRIC KNOB	7	3
1050	4010078	GAS VALVE KNOB RING	5	2,99
1051	401990	COMMUTATOR KNOB RING	1	2,99
1052	4010009	ELECTR.THERMOSTAT KNOB RING	1	2,99
1143	410532	RISER	1	29,99
1406	403185	OVEN HANDLE	1	15
1407	406167	OVEN DOOR GLASS BLACK M9D2	1	29,99
1409	411052	UNDER GLASS OVEN GASKET	1	6,11
1411	411087	GASKET FOR OVEN FRONT 4 SIDE	1	9,99
1411	411088	GASKET FOR OVEN FRONT ONE SIDE	1	3
1415	602037	THERMOREGULATOR	1	7
1421	406349	INTERNAL OVEN GLASS	1	19,99
1602	210595	CONTROL PANEL	1	29,99
1614	201160	BACK PANEL	1	12
1615	202508	CONTROL SUPPORT	1	24,1
1616	402169	FIBER GLASS	1	9
1622	608029	SMALL YELLOW BUD	1	0,5
1624	200319	WORK TABLE	1	39,99
1627	501872	GAS COLLECTOR	1	8
1628	501953	FRONT RIGHT TUBE	1	5
1629	501827	LEFT FRONT TUBE	1	5
1630	501833	RIGHT BACK TUBE	1	5
1631	501826	TUBE FOR LEFT BACK BURNER	1	5
1632	501828	CENTRAL TUBE	1	5
1640	202223	CLAMP PROTECTION FOR FLAP DOOR	1	1,4
1644	414044	FEET	4	5
1645	414031	BASE FOR LEGS	4	1
1661	202127	OVEN PANEL	1	9,49
1671	101256	ELECTRIC OVEN PANEL	1	11,15
1673	101409	BACK PANEL FOR OVEN	1	15
1674	101115	OVEN TOP PANEL BLACK	1	13,24
1677	101423	FRONT PANEL BLACK M9	1	31,13
1685	201152	BACK VENT STACK	2	2,37
1705	200081	OVEN GLASS SUPPORT M9/D2	1	3
2016	101369	OVEN SIDE PANEL BLACK	2	8,05
2130	201159	GRILL PROTECTION	1	1,1
4301	410540	RIGHT VERTICAL PROFILE	1	8
4302	410541	LEFT VERTICAL PROFILE	1	8


SPARE PARTS LIST				
NUMBER	COMPONENT	DESCRIPTION	QUANTIT	PRICE
		M9106SP6X5DBT GEF92EG - free-standing cooker		
1	601503	CIRCUIT DIAGRAM	1	
1	601734	CIRCUIT DIAGRAM	1	
1	800019	EXPLODED VIEW OF STRUCTURE	1	
1	800112	EXPLODED COOLING FAN	1	
1	800290	EXPLODED VIEW OF MUFFLE	1	
1	800296	EXPLODED VIEW OF WORK TABLE	1	
1	800460	EXPLODED VIEW OF OVEN	1	
1	800461	EXPLODED VIEW OF DOTATION	1	
1	910588	PAN SUPPORT BUMPER KIT	1	7,99
2	310436	USER MANUAL	1	
11	202375	PART FOR BURNER FIXING	2	1,41
38	306003	THERMOSTAT CLIP	4	0,15
39	306002	SPRING FOR KNOB	7	0,15
80	504160	COVER FOR SMALL FLAME SPREADER	1	4
81	504161	COVER FOR MEDIUM BURNER	2	5
82	504162	COVER FOR RAPID BURNER	1	6
83	504158	COVER OUT FOR ULTRA RAPID FLAME SPREADER	1	5
84	504191	COVER IN FOR ULTRA RAPID FLAME SPREADER	1	5
105	202431	UP SUPPORT FOR AXIAL COOLIN FAN	1	21,53
106	202659	DOWN SUPPORT FOR AXIAL COOLIN FAN	1	24,05
117	190049	PROTECTION FOR VENTILATED OVEN	1	10
120	101280	OVEN TRAY	1	15
138	202448	DISHWARMER BOTTOM	1	39,85
160	202526	BRIDLE FOR FIXING GAS VALVES	1	2,23
176	202351	CARTER MOTORVENTILATOR	1	8,04
205	108966	PROFILE FOR GLASS DOOR	1	15
206	108967	PROFILE FOR GLASS DOOR	1	15
274	202505	HORIZONTAL VENT	1	4,5
311	301122	SCREW 4,2X30	4	0,4
329	309139	INSIDE DOOR PAN COMPARTMENT SPACER	2	1,44
385	306024	SPRING FOR SPARK PLUG	5	0,15
392	309026	PART FOR KNOB PROTECTION FIXING	2	0,6
425	415054	SPARK PLUG 350MM	2	3
426	415057	SPARK PLUG 700MM	2	3
428	415073	SPARK PLUG FOR ULTRA RAPID BURNER	1	5
430	415081	ACCUMULATOR	1	12
436	402090	BACK FIBER GLASS	1	9,35
441	404042	SIDE GRID FOR OVEN	2	8
442	404154	GRID FOR OVEN	1	14
444	405071	OVEN DOOR HINGE FIX PART	2	4
446	405070	OVEN DOOR HINGE	2	8
450	409040	ELECTRONIC PROGRAMMER	1	49,99
478	200318	DISHWARMER FLAP DOOR	1	15
561	508025	THERMOCOUPLE MM300	1	8
562	508021	THERMOCOUPLE MM600	2	8
565	508027	THERMOCOUPLE MM800	1	8
566	508034	THERMOCOUPLE ULTRA-RAPID BURNER	1	8
611	603025	MOTOVENTILATOR 220/240V 50/60HZ	1	25
612	603021	COOLING FAN	1	25
613	606049	RESISTENCE 1800W 240V	1	29,99
614	606060	UPPER+GRILL RESISTANCE	1	29,99
615	606045	CIRCULAR HEATER 3000W 240V	1	29,99
621	602031	COMMUTATOR 9+0	1	15
623	608018	OVEN BULB WITH HOLDER	1	12
648	601965	TERMINAL SEPARATOR	1	9,85
649	608034	SMALL WARNING LIGHT	1	1,66
667	602025	THERMOSTAT	1	15
670	504128	SMALL FLAME SPREADER	1	5


671	504129	MEDIUM FLAME SPREADER	2	6
672	504130	RAPID FLAME SPREADER	1	8
673	504182	ULTRA RAPID FLAME SPREADER	1	19,99
715	604072	DASYCHAIN SWITCH	1	12
760	510507	SMALL BURNER	1	8
761	510508	SEMI RAPID BURNER	2	8
762	510509	RAPID BURNER	1	8
763	510708	ULTRA-RAPID BURNER	1	9,99
880	502217	GAS VALVE BY PASS 034	1	19,99
881	502218	GAS VALVE BY PASS 036	2	19,99
882	502221	GAS VALVE BY PASS 052	1	19,99
883	502223	GAS VALVE BY PASS 065	1	19,99
917	200303	STAINLESS STEEL SIDE	2	19,99
929	202108	VERTICAL VENT	2	4,61
930	202214	FEET SUPPORT	2	8,04
940	405075	WORK TABLE AND TOP COVER HINGE RIGHT	1	8
941	405076	WORK TABLE AND TOP COVER HINGE LEFT	1	8
943	308031	BUMPER FOR C.I. GRIDS AND DISHWARMER	4	0,2
960	408074	CAST IRON PAN SUPPORT 1 BURNER	1	22
962	201158	FRONT SUPPORT PANEL	2	5,23
965	408073	CAST IRON PAN SUPPORT 2 BURNERS	2	22
972	202360	WORK TABLE FIXING	3	0,07
1031	4010174	COMMUTATOR KNOB	1	2,99
1031	4010175	THERMOSTAT KNOB	1	2,99
1041	4010142	GAS VALVE KNOB	5	2,99
1058	4010105	KNOB RING	7	2,99
1143	410532	RISER	1	29,99
1406	403495	OVEN HANDLE	1	25
1407	406431	OVEN DOOR GLASS	1	29,99
1411	411087	GASKET FOR OVEN FRONT 4 SIDE	1	9,99
1411	411088	GASKET FOR OVEN FRONT ONE SIDE	1	3
1415	602037	THERMOREGULATOR	1	7
1421	406417	OVEN DOOR GLASS	1	19,99
1425	406416	OVEN GLASS	1	19,99
1602	210595	CONTROL PANEL	1	29,99
1614	201160	BACK PANEL	1	12
1615	202508	CONTROL SUPPORT	1	24,1
1616	402169	FIBER GLASS	1	9
1622	608029	SMALL YELLOW BUD	1	0,5
1624	200319	WORK TABLE	1	39,99
1627	501872	GAS COLLECTOR	1	8
1628	501953	FRONT RIGHT TUBE	1	5
1629	501827	LEFT FRONT TUBE	1	5
1630	501833	RIGHT BACK TUBE	1	5
1631	501826	TUBE FOR LEFT BACK BURNER	1	5
1632	501828	CENTRAL TUBE	1	5
1640	202223	CLAMP PROTECTION FOR FLAP DOOR	1	1,4
1644	414044	FEET	4	5
1645	414031	BASE FOR LEGS	4	1
1661	202127	OVEN PANEL	1	9,49
1671	101256	ELECTRIC OVEN PANEL	1	11,15
1673	101409	BACK PANEL FOR OVEN	1	15
1674	101115	OVEN TOP PANEL BLACK	1	13,24
1677	101423	FRONT PANEL BLACK M9	1	31,13
1685	201152	BACK VENT STACK	2	2,37
1710	200401	OVEN GLASS SUPPORT	1	22,6
1720	108762	OVEN DOOR SUPPORT	1	22,5
2016	190040	OVEN SIDE PANEL BLACK RIGHT	2	15
2130	201159	GRILL PROTECTION	1	1,1
4301	410205	RIGHT VERTICAL PROFILE	1	12
4302	410206	VERTICAL LEFT PROFILE	1	12

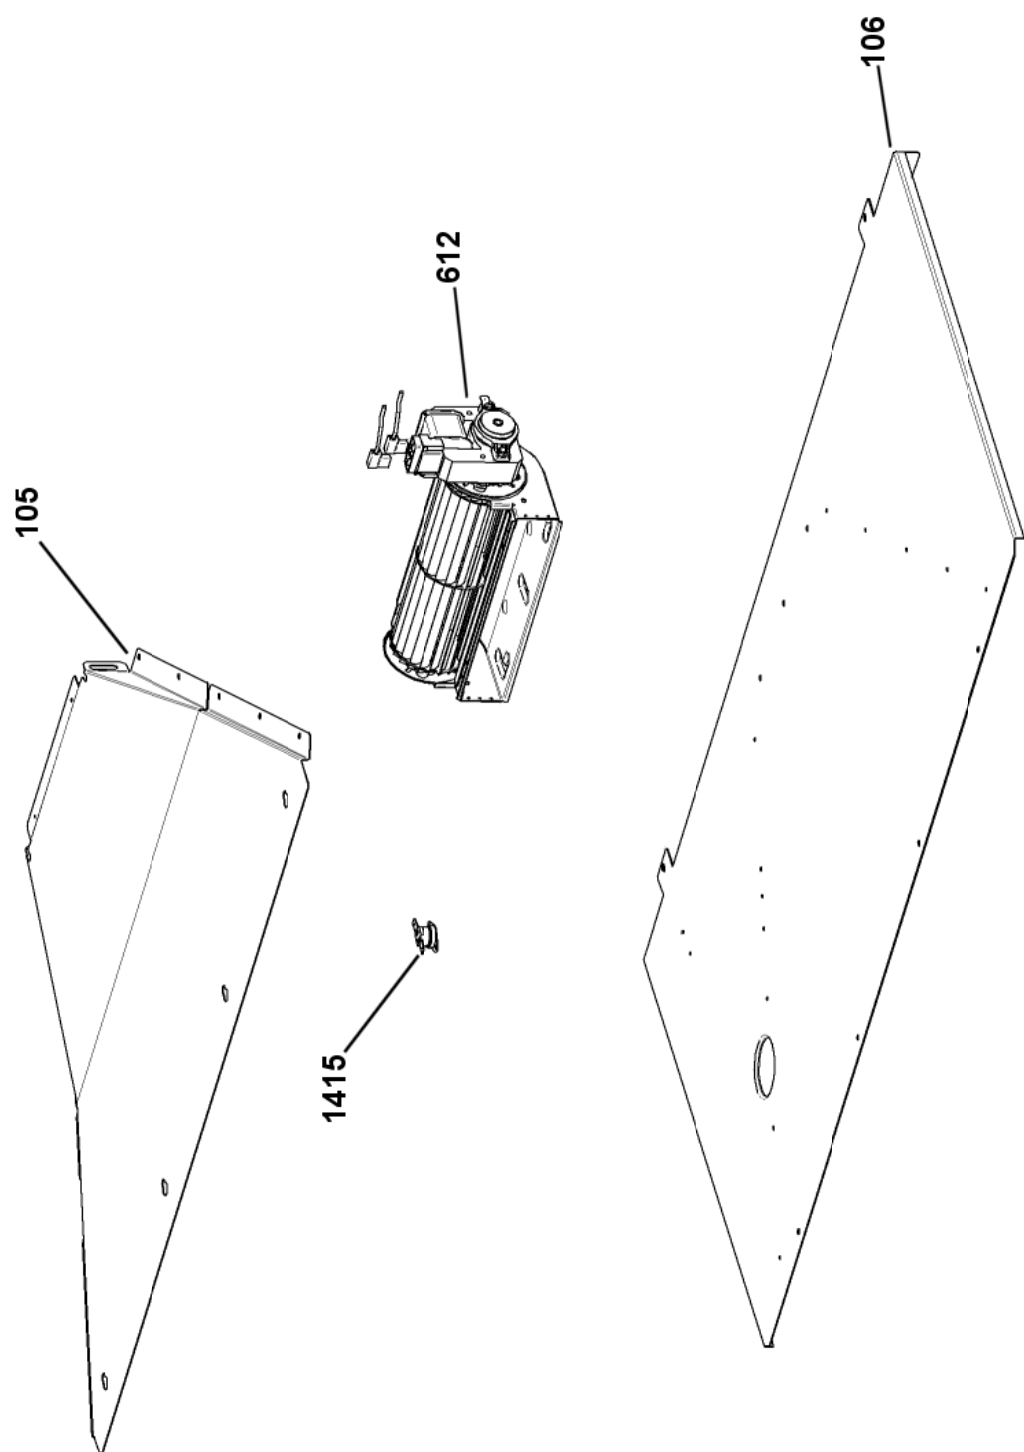


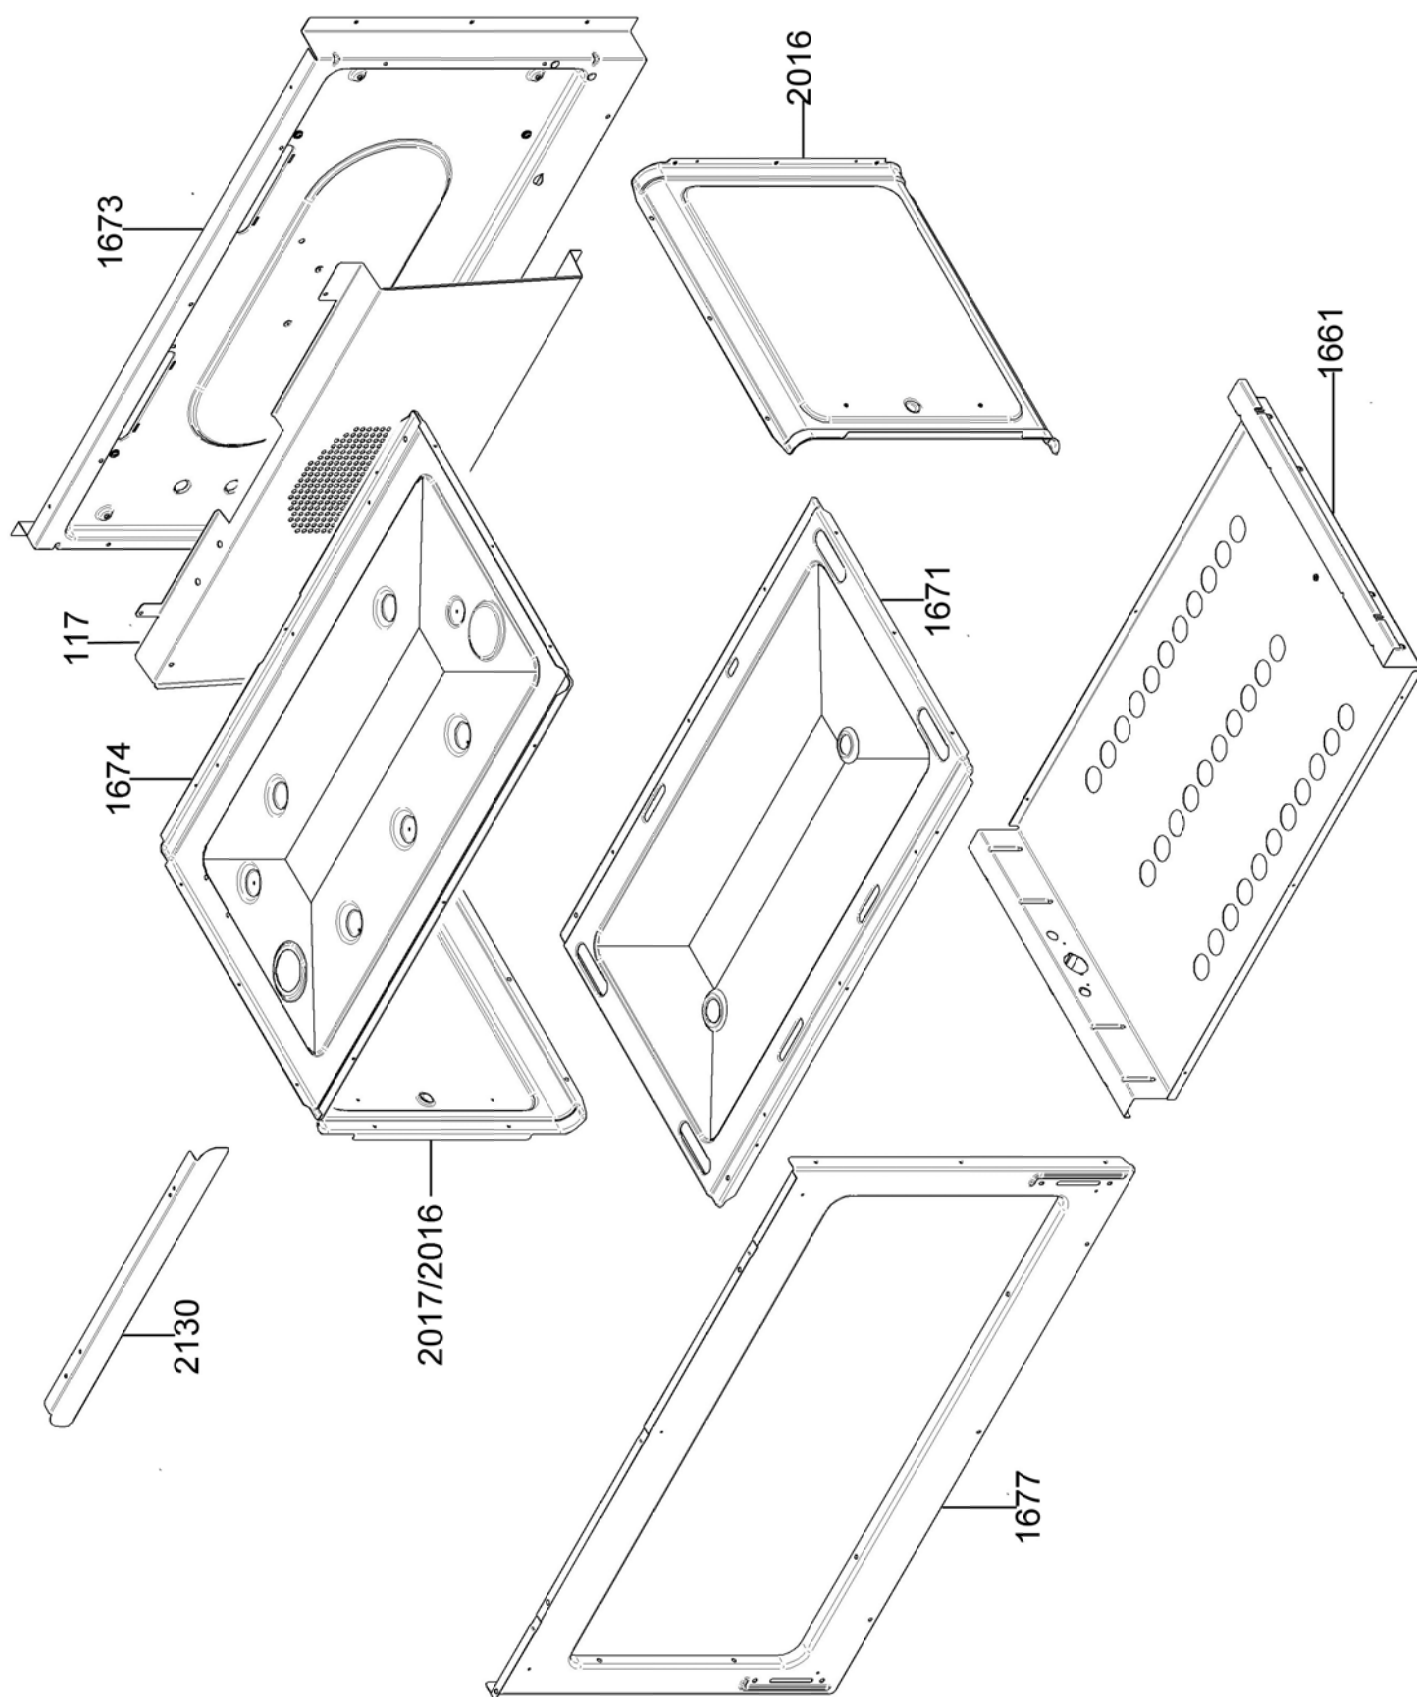

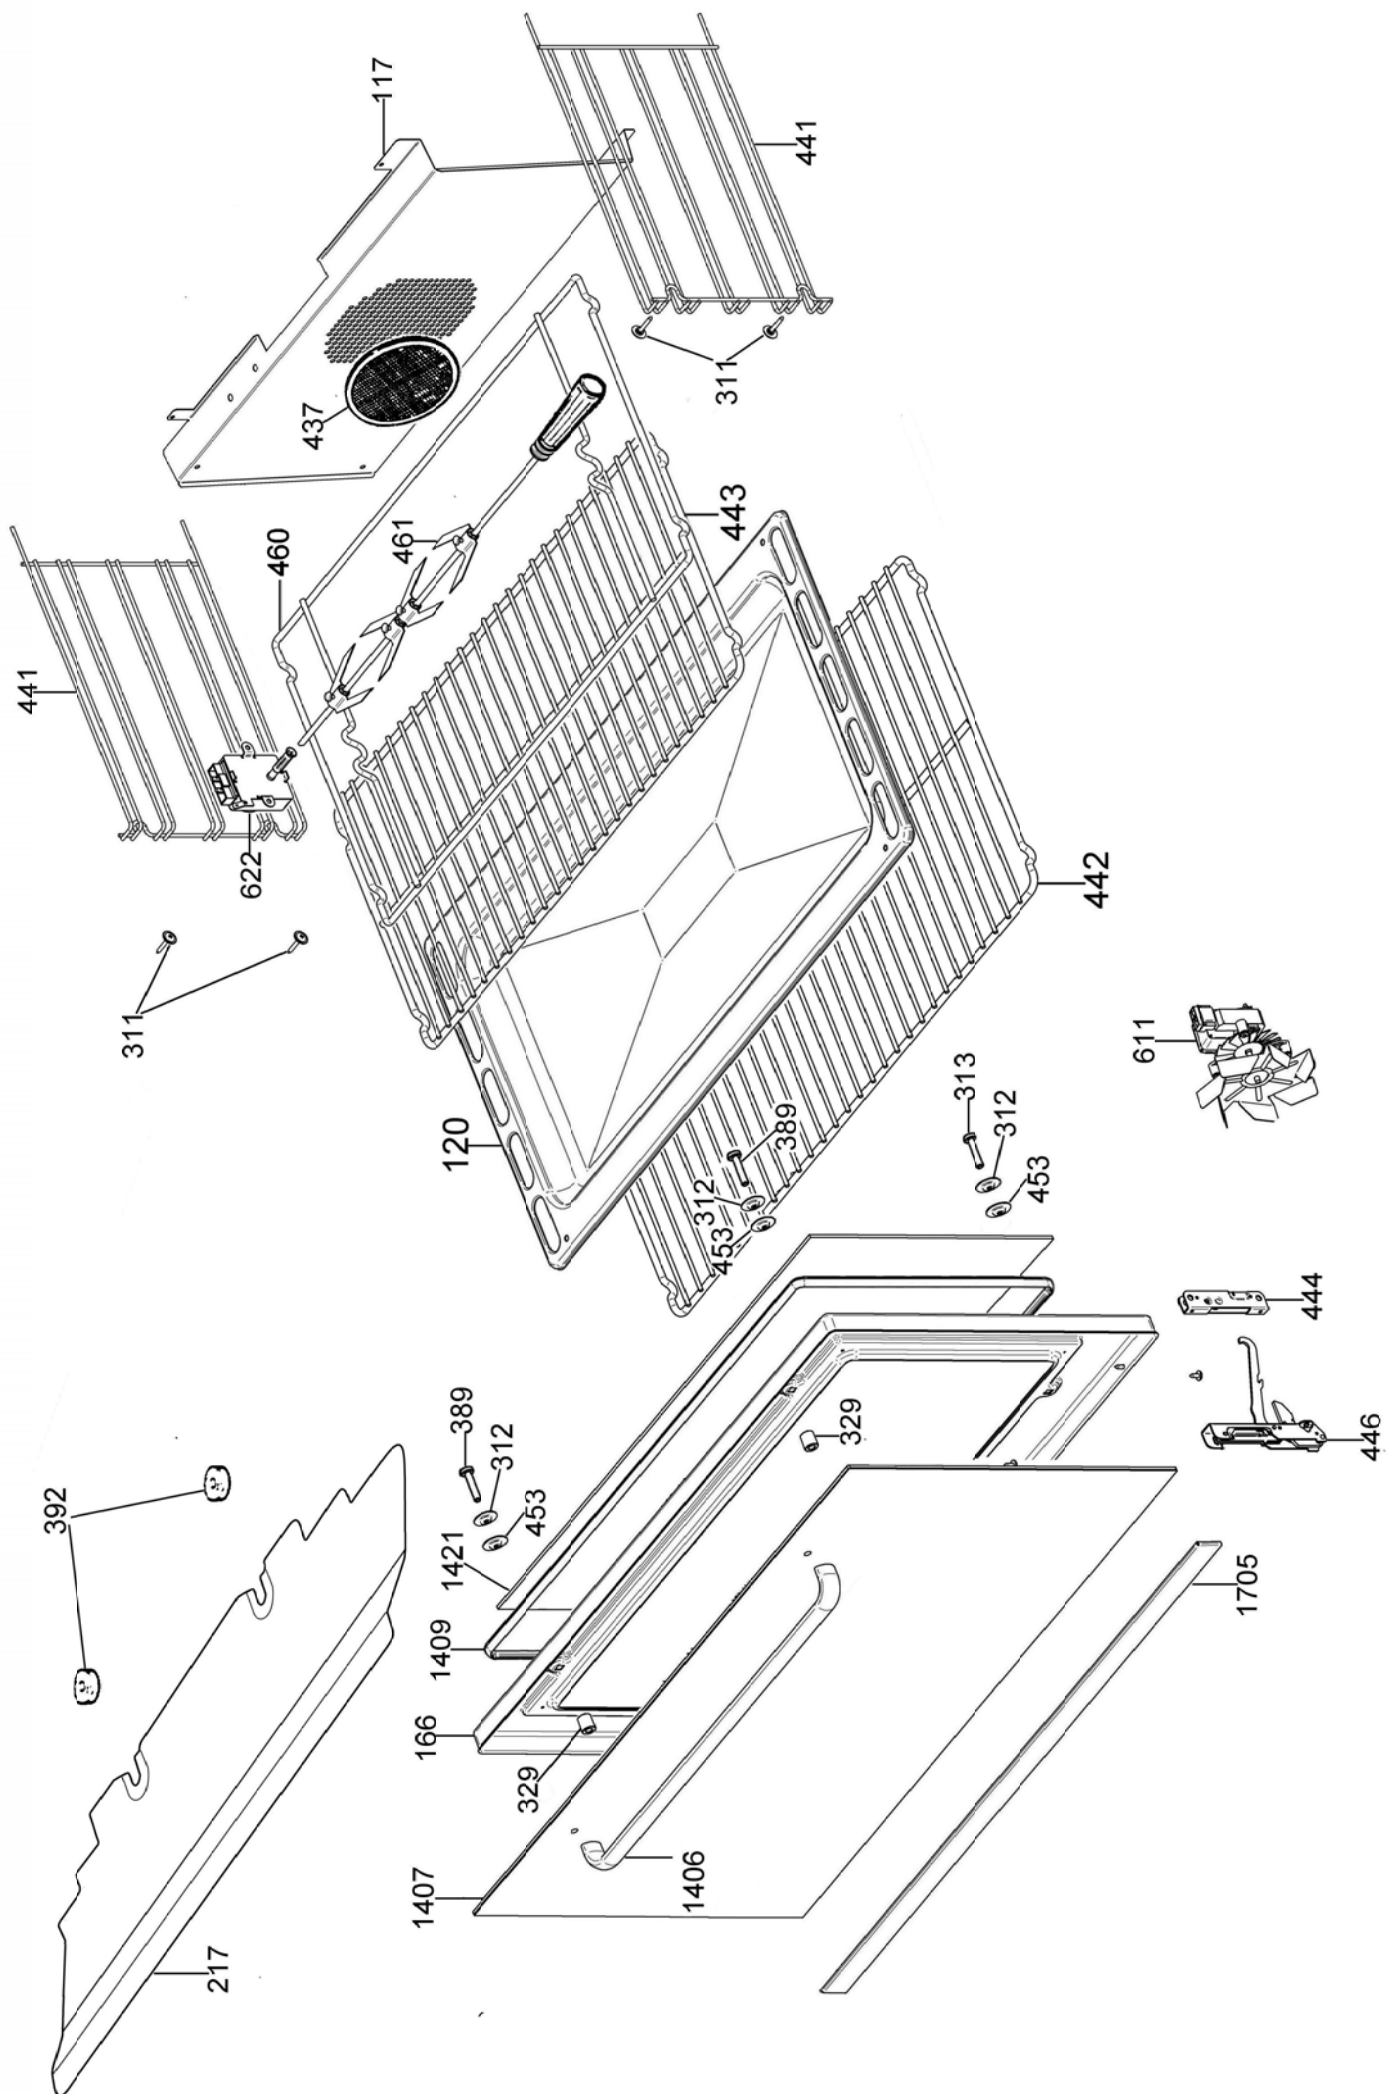

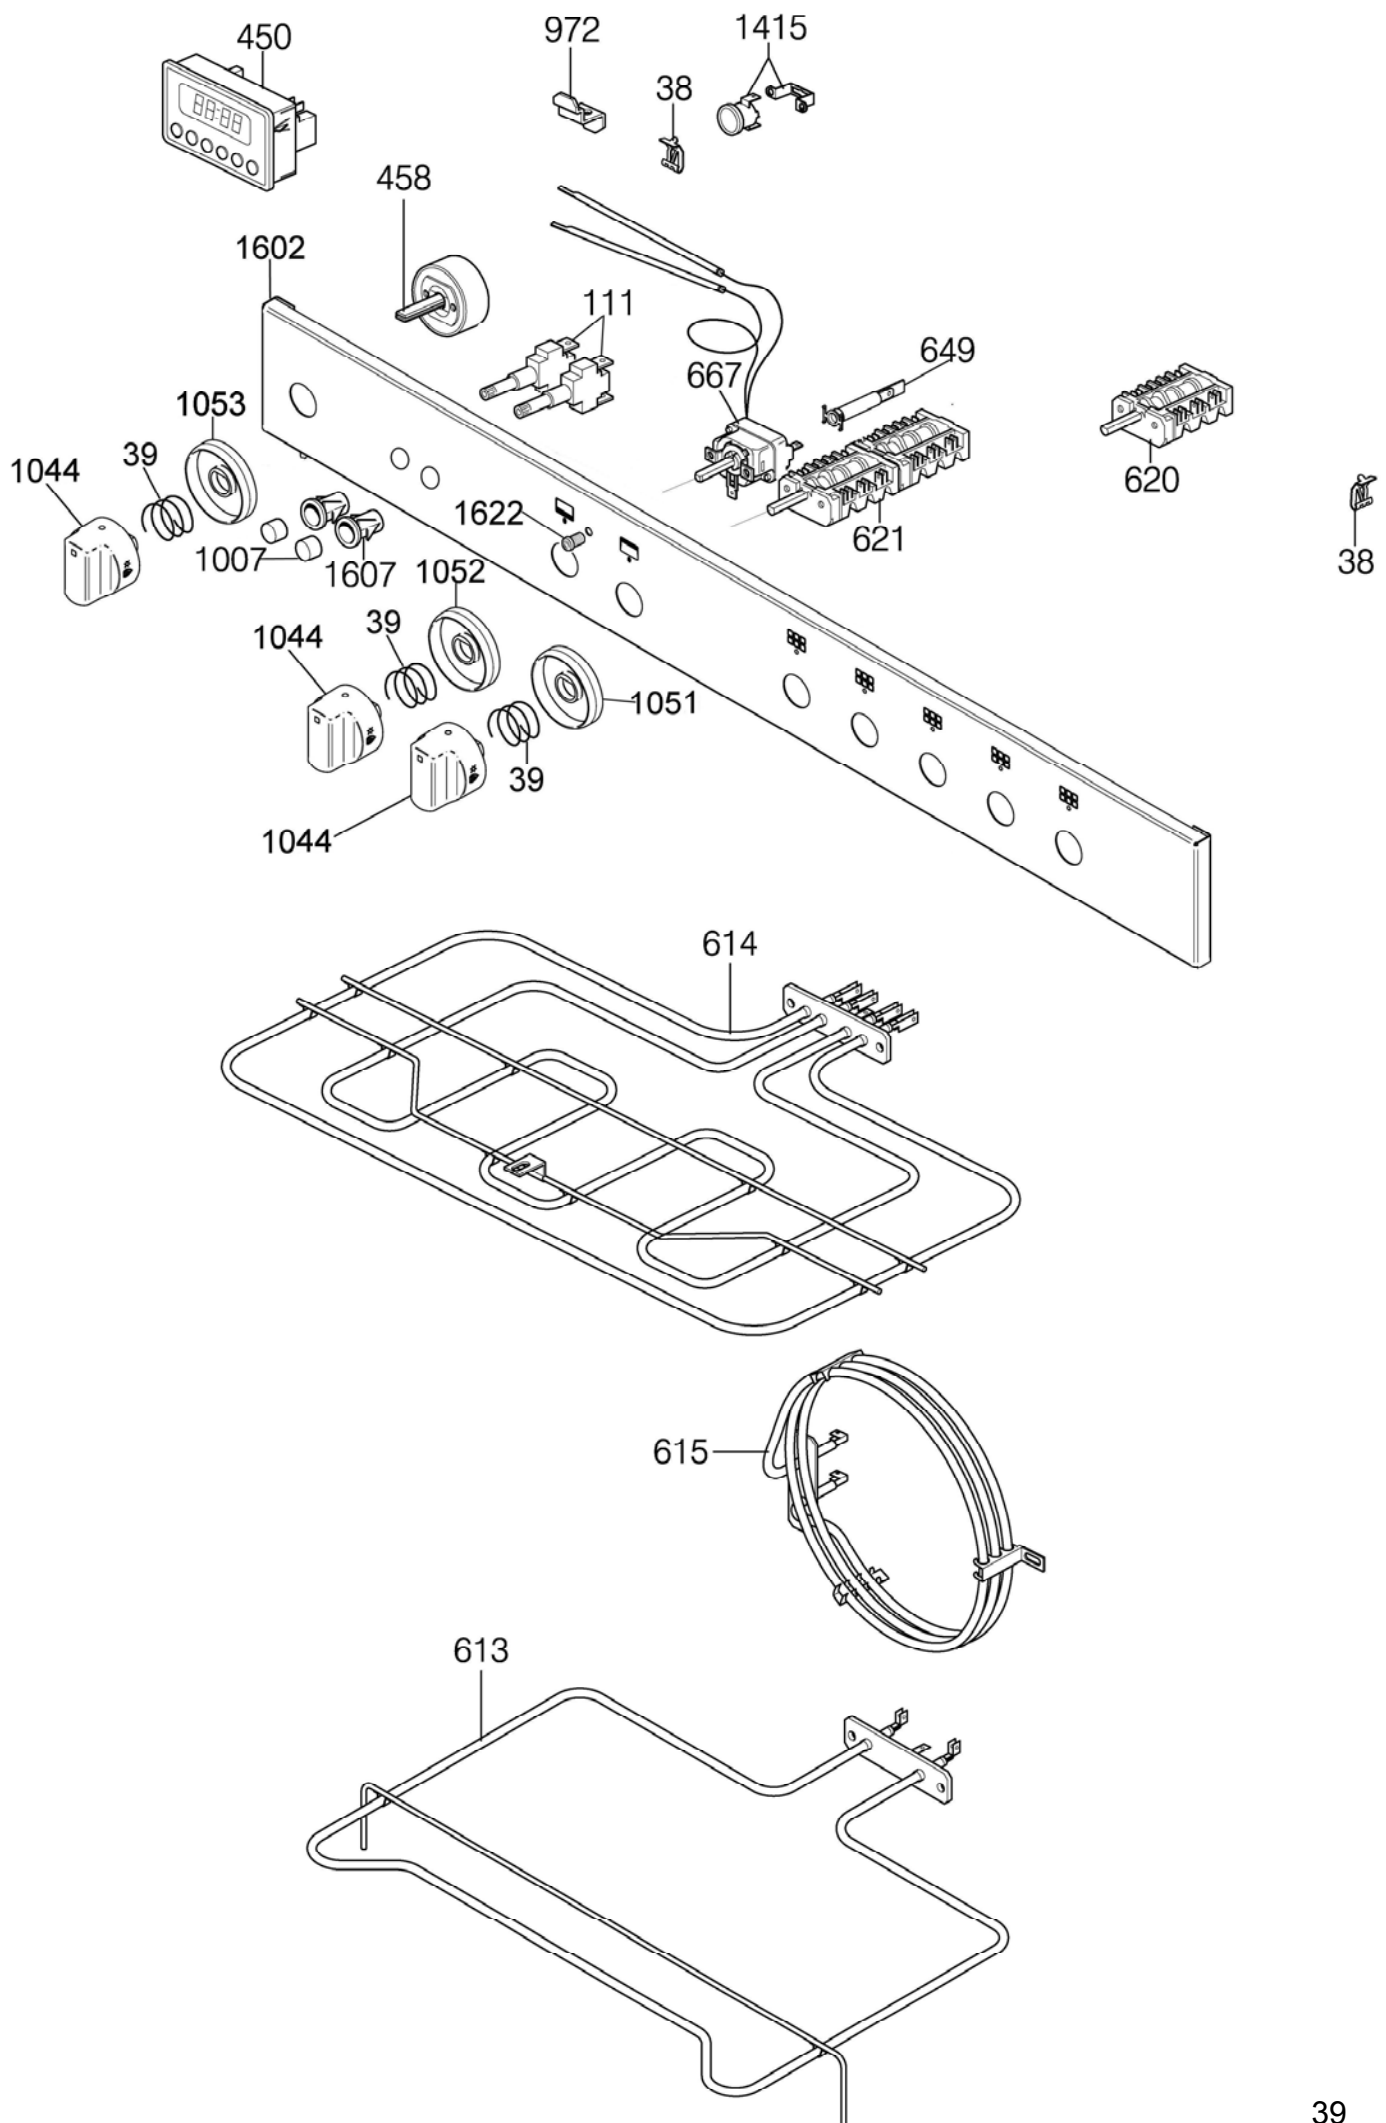

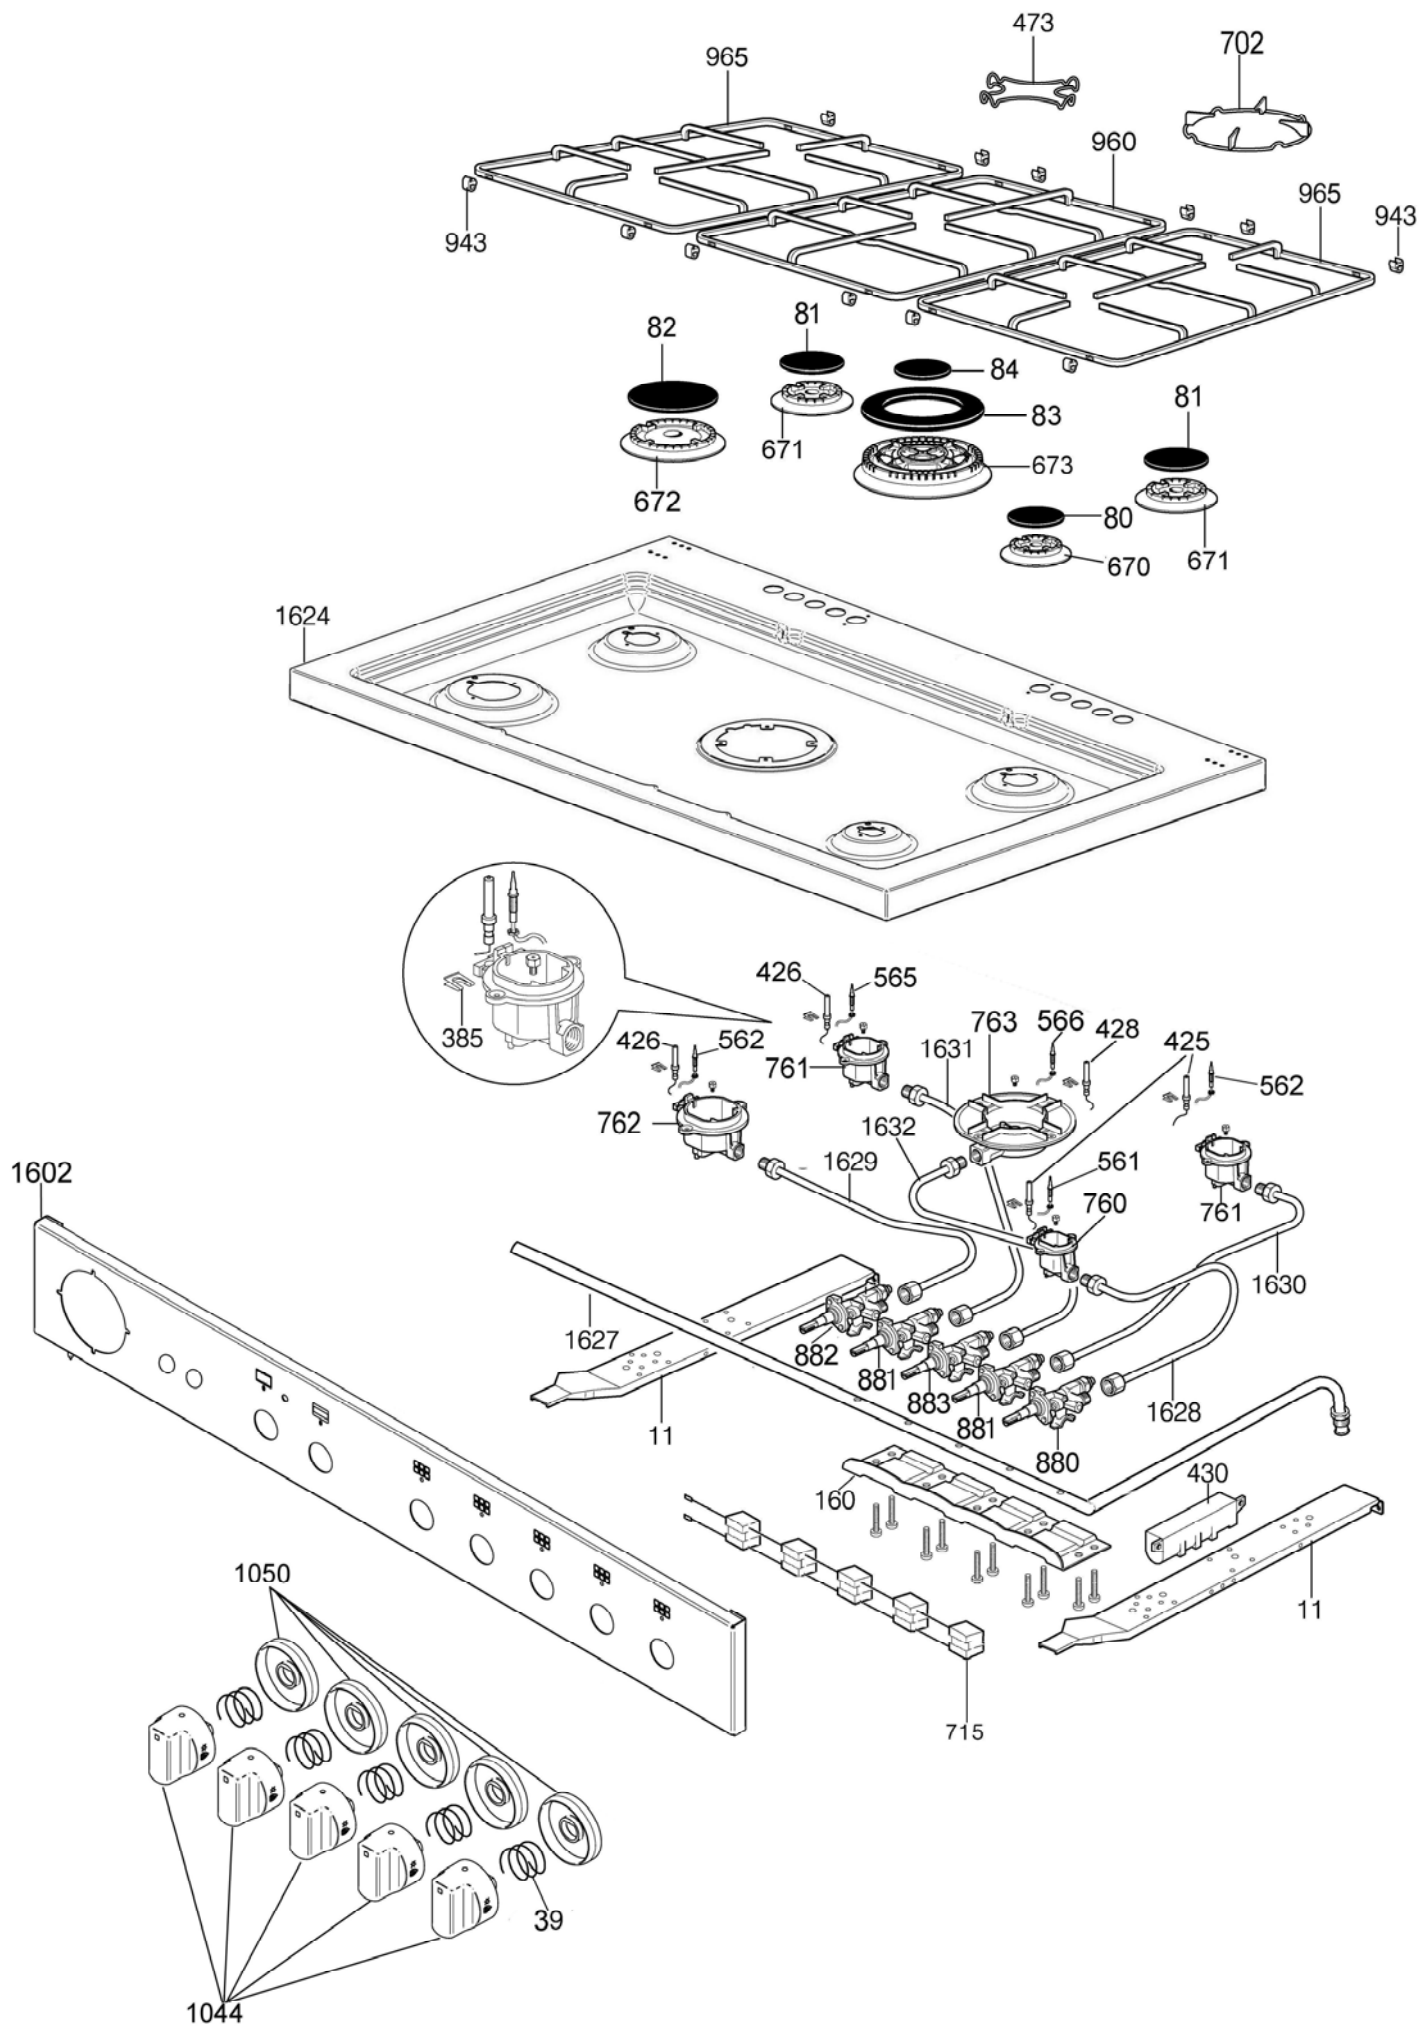

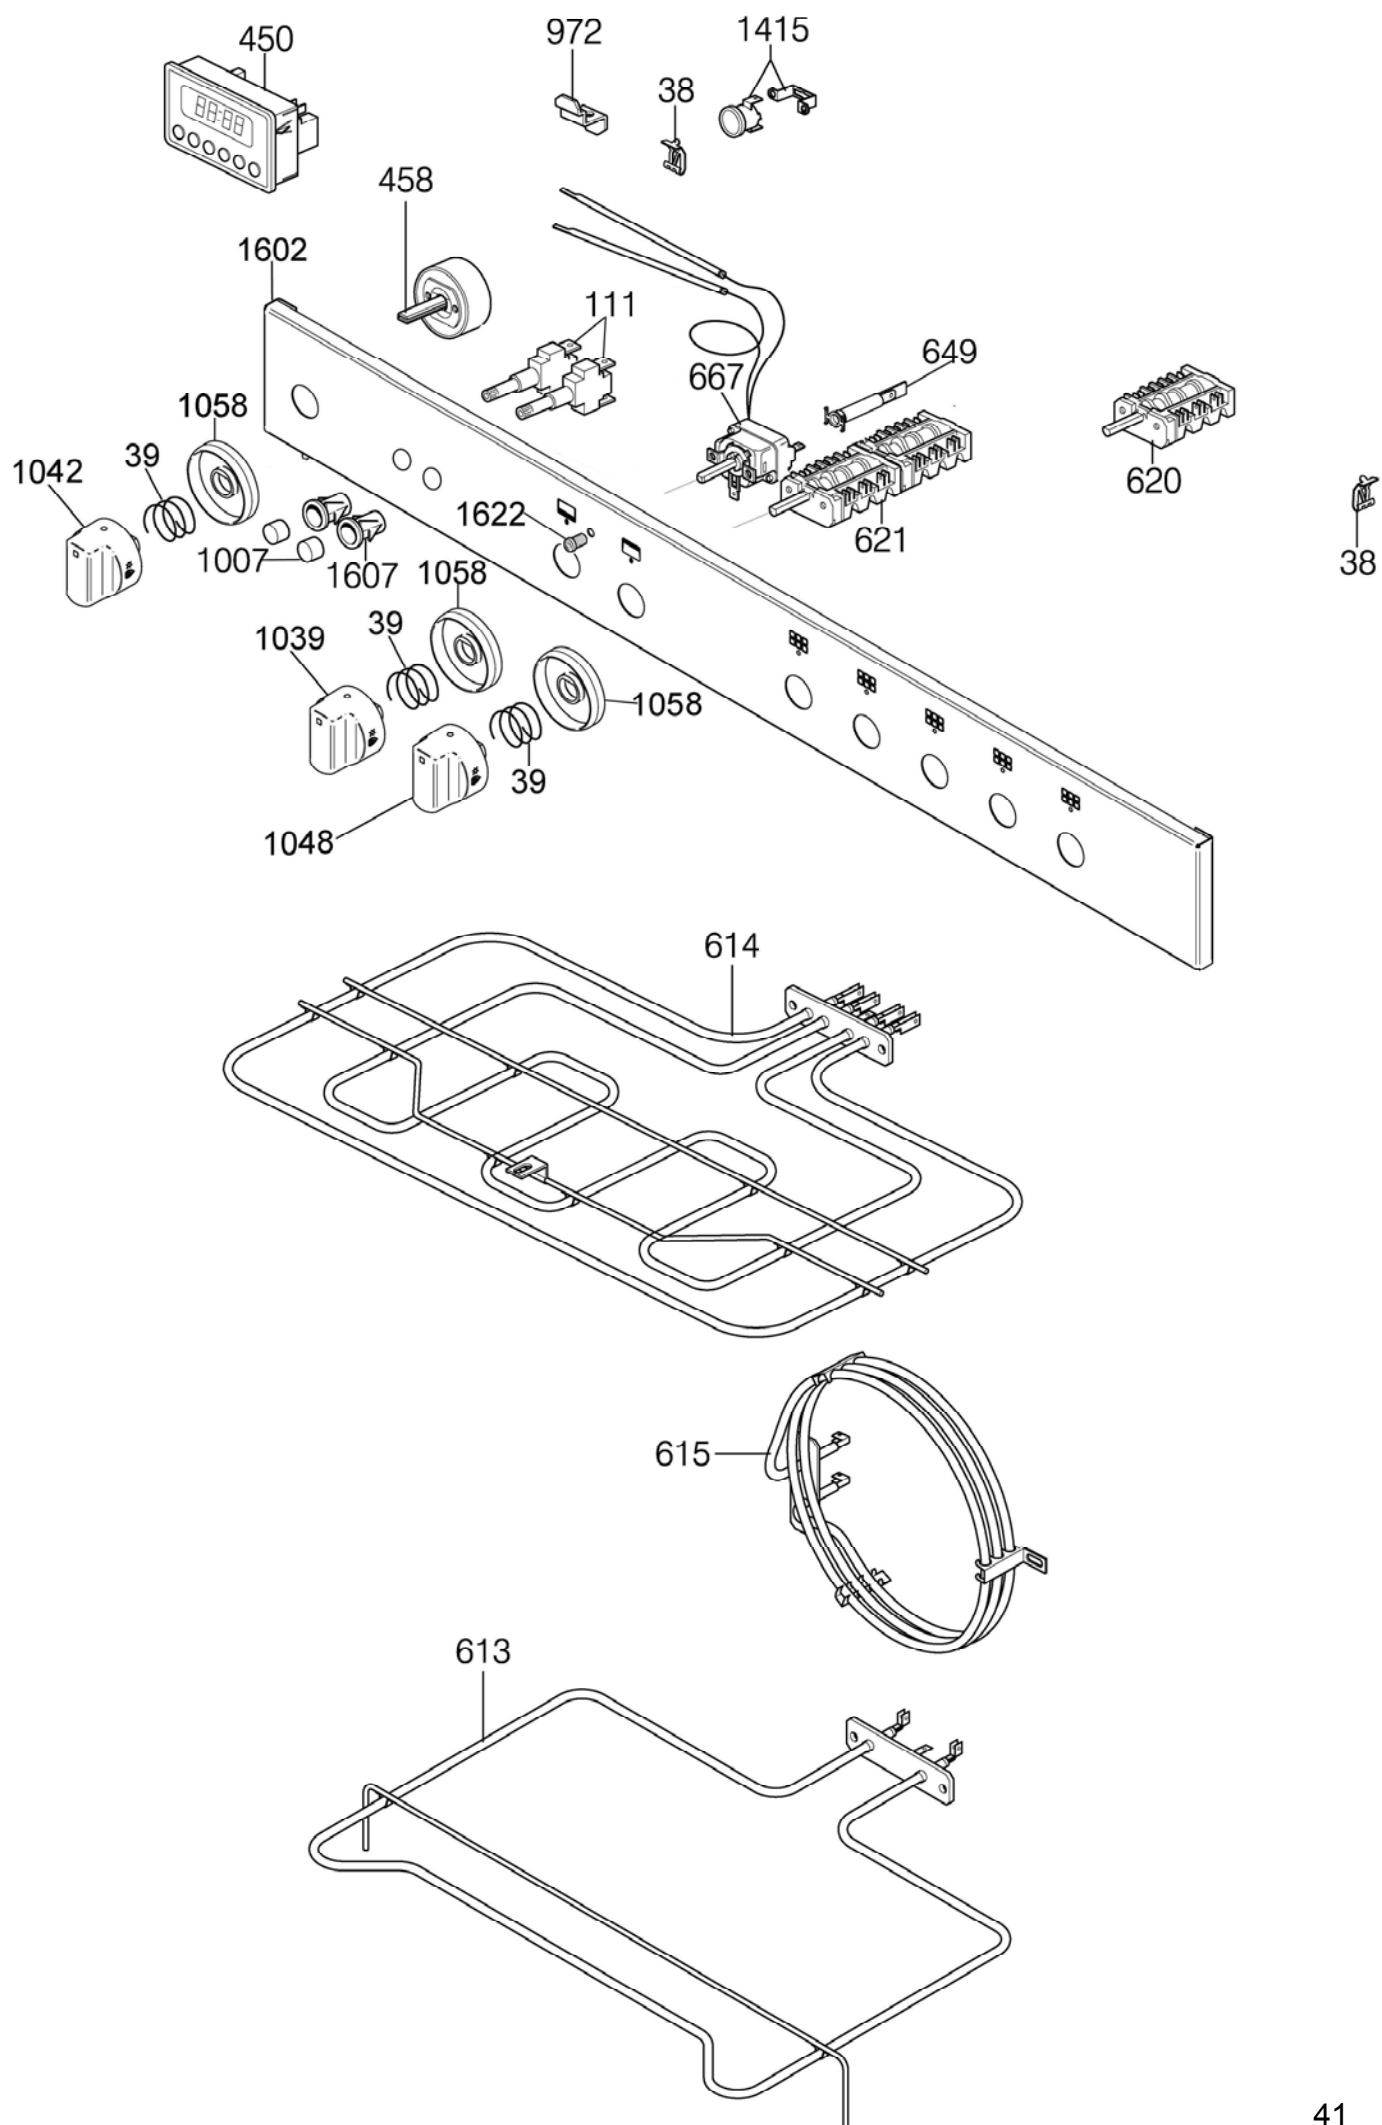

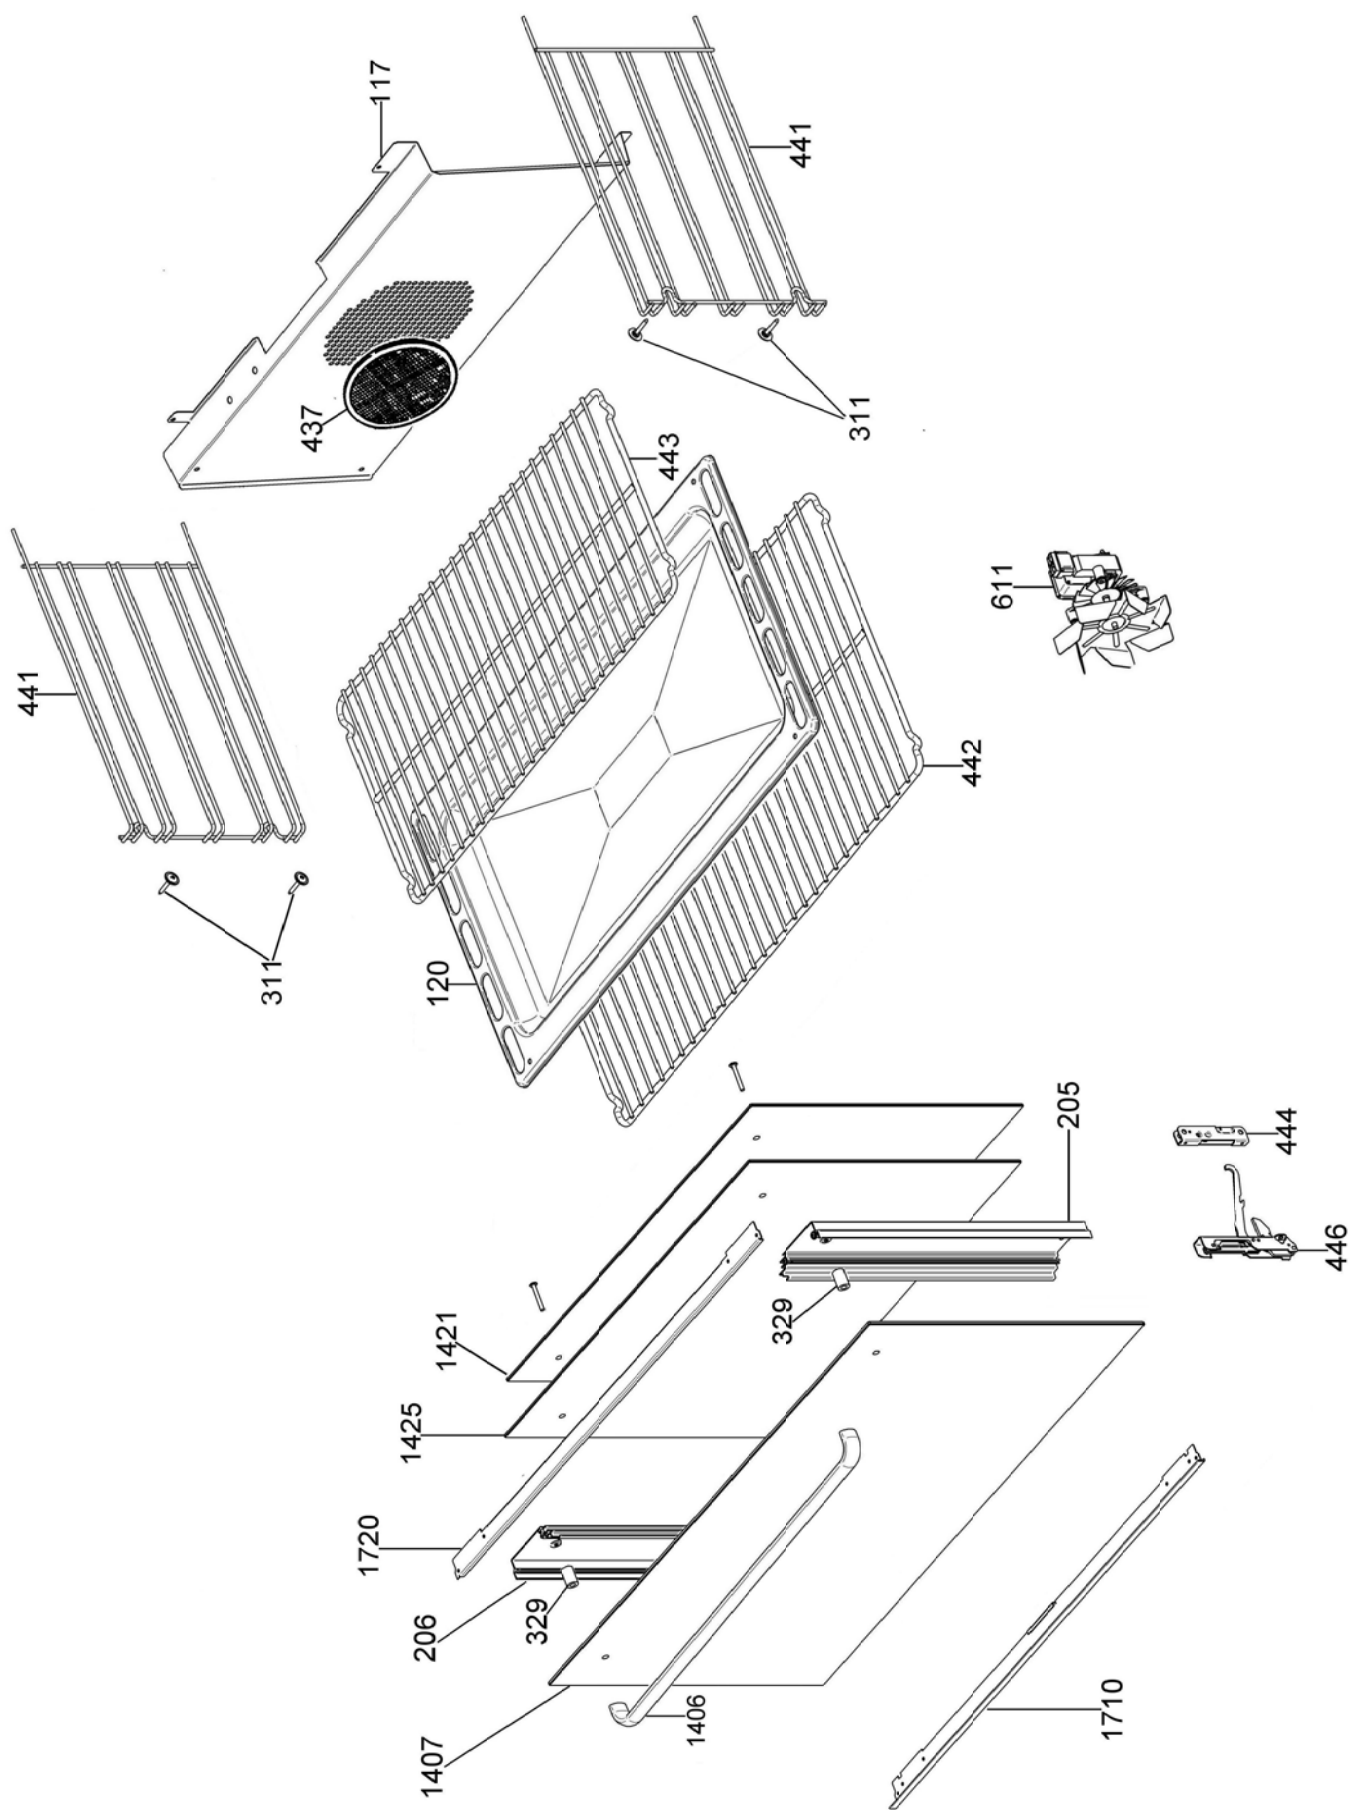


TABLE OF NOZZLES CONVERSION				
BURNER	NATURAL (G20/10)		LPG (G31/27,5)	
	DIAM.	CODE	DIAM.	CODE
SMALL	90	506161	54	506162
MEDIUM	118	506166	70	506016
RAPID	155	506171	92	506173
WOK	165	506152	98	506239