User Manual

D099MS



D'AMANI

Dear Customer,

Congratulations on purchasing your new product from Think Appliances.

To register your parts and labour warranty (some conditions apply please refer to your warranty card for more details) please contact out Customer Care team on:

1800 444 357

Our Customer Care centre is there to ensure you get the most out of your appliance. For example, should you want to learn more about recommended cooking temperatures, the various cooking functions available, how to set and program your LED clock, and importantly taking care of your appliance when cleaning, please call us because we are here to help you.

It is important that you read through the following use and care manual thoroughly to familiarize yourself with the installation and operation requirements of your appliance to ensure optimum performance.

We also carry a complete range of spare parts for all Think products. For all your spare parts enquiries please contact our team at Pronto Parts on:

1300 306 973

Again, thank you for choosing an appliance brought to you by Think Appliances and we look forward to being of service to you.


Kind regards

Management

Think Appliances

Oven Description


Model DO99MS

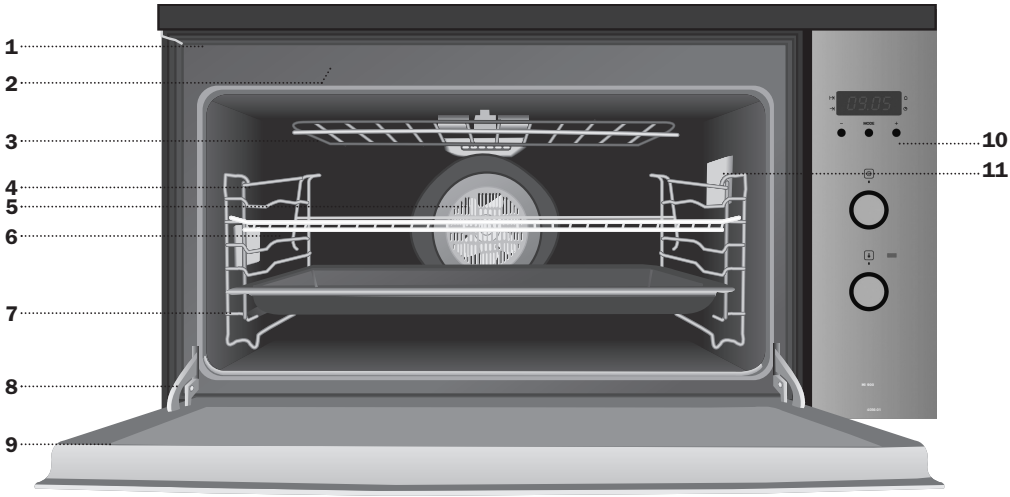

1 Fixing to Unit
2 Air Outlet
3 Fold-down Grill element
4 Chromed Support
5 Fan
6 Grid
7 Cake Tray
8 Hinge
9 Door
10 Control Panel
11 Light

Control Panel

Model DO99MS

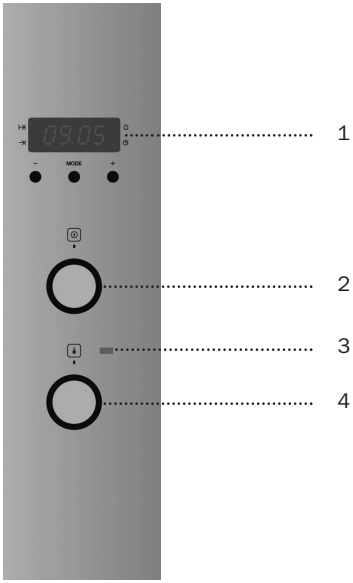

1 Electronic clock.

2 Function selector.

3 Heating indicator light. Indicates that heat is being passed to the food and it goes out when the set temperature is reached.

4 Temperature selector.

Switch off oven



Conventional

It is used for sponges and cakes where the heat received must be uniform to achieve a spongy texture.



Conventional with fan

Appropriate for roasts and cakes. The fan spreads the heat uniformly inside the oven.



Grill

For preparing dishes with superficial roasting. It allows the outer layer to be browned without affecting the inside of the food. Ideal for flat food, such as steaks, ribs, fish, toast.



MaxiGrill

Allows greater surfaces to be prepared, than with the grill, together with higher power reducing the time required for browning of the food.



MaxiGrill with fan

Allows uniform roasting at the same time as surface browning. Ideal for grills. Special for large volume pieces, such as poultry, game etc. It is recommended to put the item on a rack with a tray beneath to collect the stock and juices.

Caution

While using the Grill, MaxiGrill or MaxiGrill with fan, the door must be kept closed.



Turbo

The fan distributes the heat produced by an element located at the rear of the oven. Due to the uniform heat distribution, it allows roasting and baking to take place at two heights at the same time.

This cooking mode allows defrosting of food. To do this, set the temperature selector to position.



Lower element

Heats only from beneath. Suitable for heating dishes and raising pastry and similar.



Lower element with fan

It distributes the heat from the lower part of the oven and is ideal for cakes with jam or fruit filling, which only require heating from beneath. Pre-heating is always necessary.



Grill and Lower element

Special for roasts. It can be used for any piece, whatever its size.

Note

The pilot light remains on in any cooking function.

Setting the time on the clock

On connecting the oven, you will notice that 12:00 appears on the clock and that a light begins to flash above the ◷ symbol. Pressing the "+" and "-" buttons the correct time can be set on the clock, which is subsequently stored and the flashing light goes out.

Manual use

After setting the correct time, the oven is ready for use. Select a temperature and a cooking function.

To switch off the oven, set the controls to the position ☐.

Functions of the Electronic Clock Programmer

Warning function: This function generates a warning tone at a specified time.

Cooking time: This function allows to programme the oven to cook for a specified time, after which it will switch itself off.

End of cooking time: This function allows to establish the exact hour, after which the oven will switch itself off.

Duration and automatic stop: This function is used to control the duration and the time at which the oven will turn itself off. This function allows the oven to start and stop automatically.

Warning function

1. Press the MODE button until the signal above the 🔔 symbol begins to flash.
2. Choose the time when you want the alarm to sound, pressing the "+" or "-" buttons.
3. Subsequently, the light will remain on indicating that the alarm is programmed.
4. At the end of the programmed time, an alarm will sound and the light will begin to flash.
5. Press any button to turn off the alarm and the screen shows the current time again.

Programming the cooking time

1. Press the MODE button until the indicator above the |→| symbol begins to flash.
2. Select the length of time, pressing the "+" or "-" buttons.
3. Subsequently, the indicator that was flashing will light, indicating that the oven will switch itself off automatically.
4. The clock will then show the current time.
5. Select a temperature and cooking function.
6. When the set time has elapsed, the oven will disconnect, an alarm will sound and the indicator will begin to flash.
7. Press any button to switch off the alarm, reconnecting the oven.
8. Set the controls in the position ☐ to switch off the oven.

Programming the end of cooking time for the oven

1. Press the MODE button until the indicator above the →| symbol begins to flash.
2. Select the time that cooking is to finish, pressing the "+" or "-" buttons.
3. Subsequently, the indicator that was flashing is lit, indicating that the oven will switch itself off automatically.
4. The clock will then show the current time.
5. Select a temperature and a cooking function.
6. When the programmed time is reached, the oven will disconnect, an alarm will sound and the indicator will begin to flash.
7. Press any button to switch off the alarm and the oven will reconnect.
8. Set the controls to the position ☐ to switch off the oven.

This function may be used even though you are already cooking in your oven. To do so, follow the instructions given except № 5.

Programming the duration and automatic stop

1 Press the MODE button until the indicator above the |→| symbol begins to flash.

2 Select the length of cooking time pressing the “+” or “-“ buttons.

3 Subsequently, the indicator that was flashing will remain lit.

4 Press the mode button until the indicator above the →| symbol begins to flash.

5 Select the time that cooking should finish pressing the “+” or “-“ buttons.

6 Subsequently, the indicator that was flashing will remain lit.

7 Select a function and cooking temperature.

8 The oven will remain disconnected with the indicators above the |→| and →| symbols lit. Your oven is programmed.

9 When the time to begin cooking is reached, the oven will switch itself on and will continue cooking during the programmed time.

10 When the programmed finishing time is reached, the oven will disconnect, an alarm will sound and the light above the →| symbol will begin to flash.


11 Press any button to switch off the alarm and the oven will reconnect.

12 Set the controls to the position ☐ to switch of the oven.

Caution

Pressing the MODE button the display on the screen shows any function programmed. It can be changed by pressing the “+” or “-“ buttons. On selecting the desired function, the indicator above the corresponding signal will light.

In the event of a power cut, all the programming of the electronic clock will be erased. The correct time has to be reset and the watch reprogrammed.

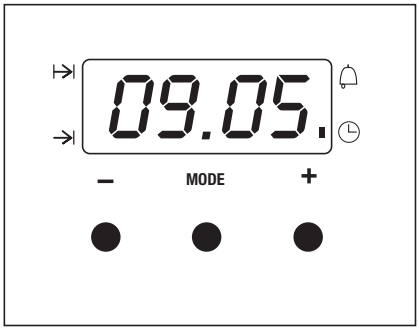



Think Appliances Pty Ltd.
416-424 Barry Rd
Coolaroo VIC 3048

Sales Telephone
1300 132 824

Service Telephone
1800 444 357

Website
www.thinkappliances.com