




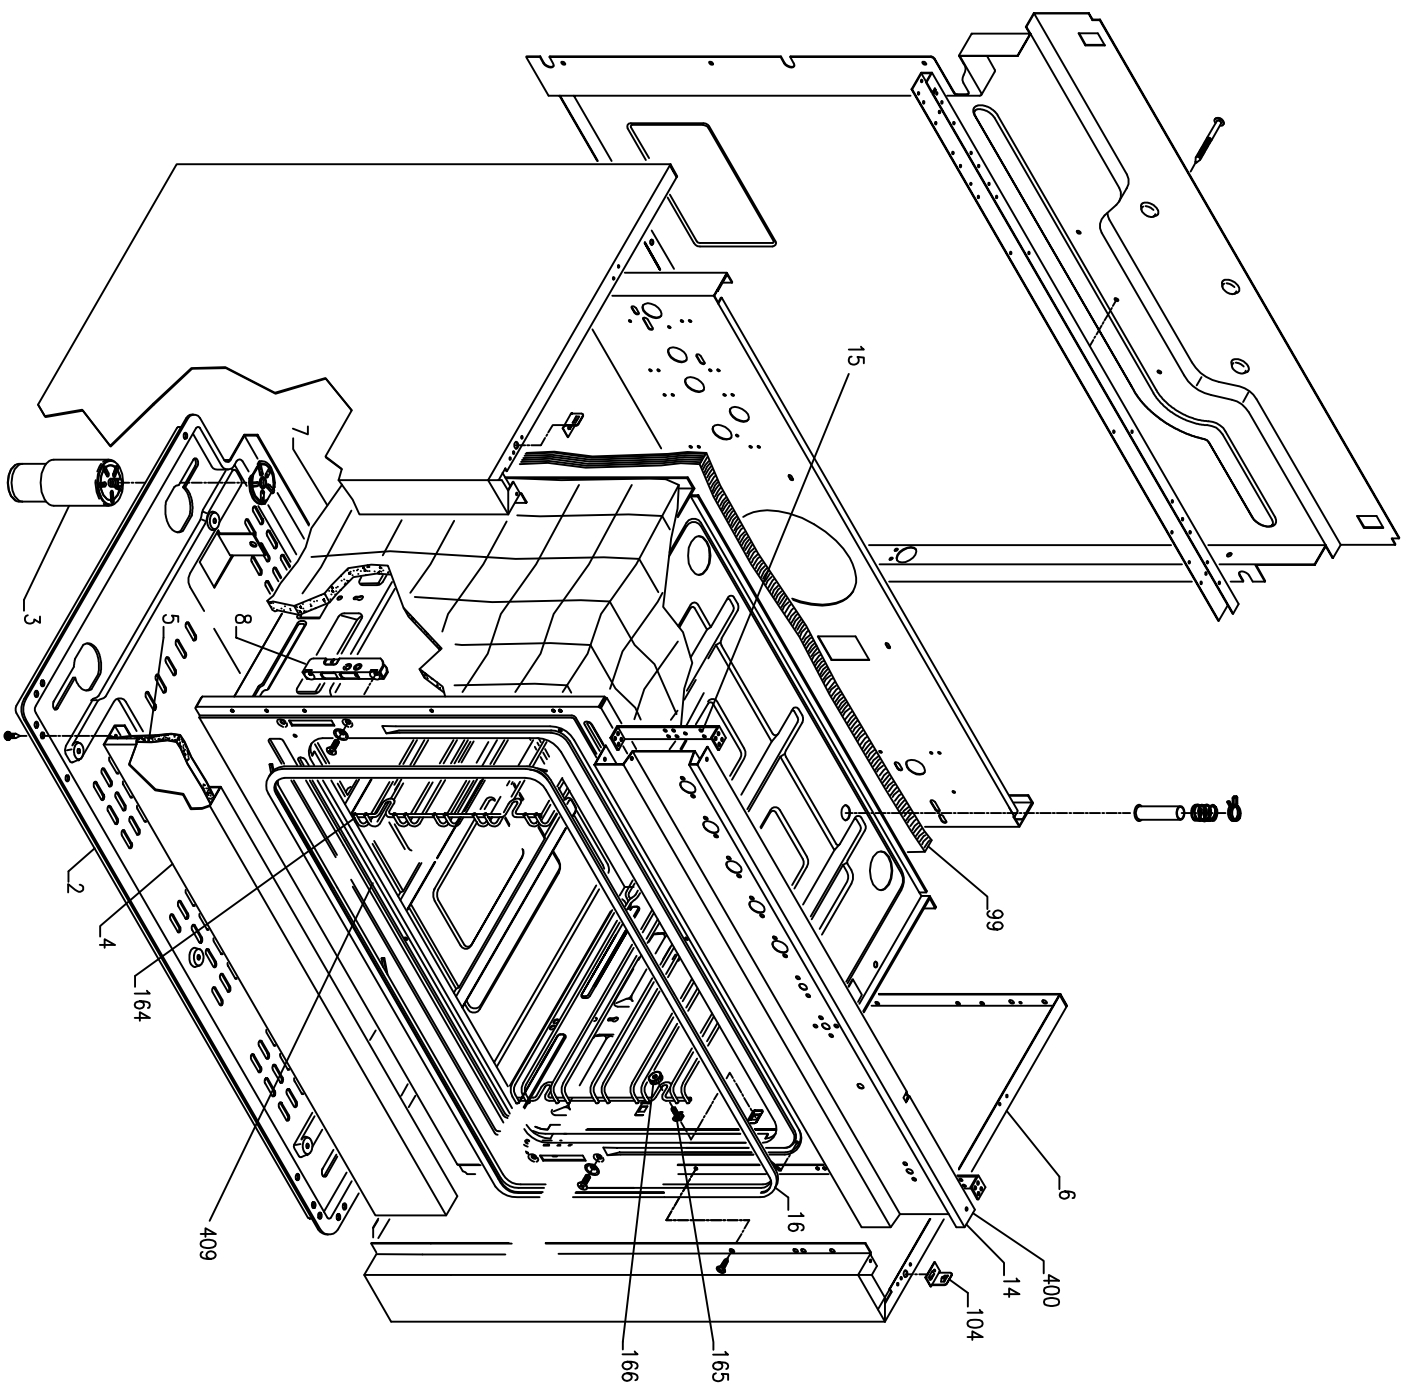


51460411-2


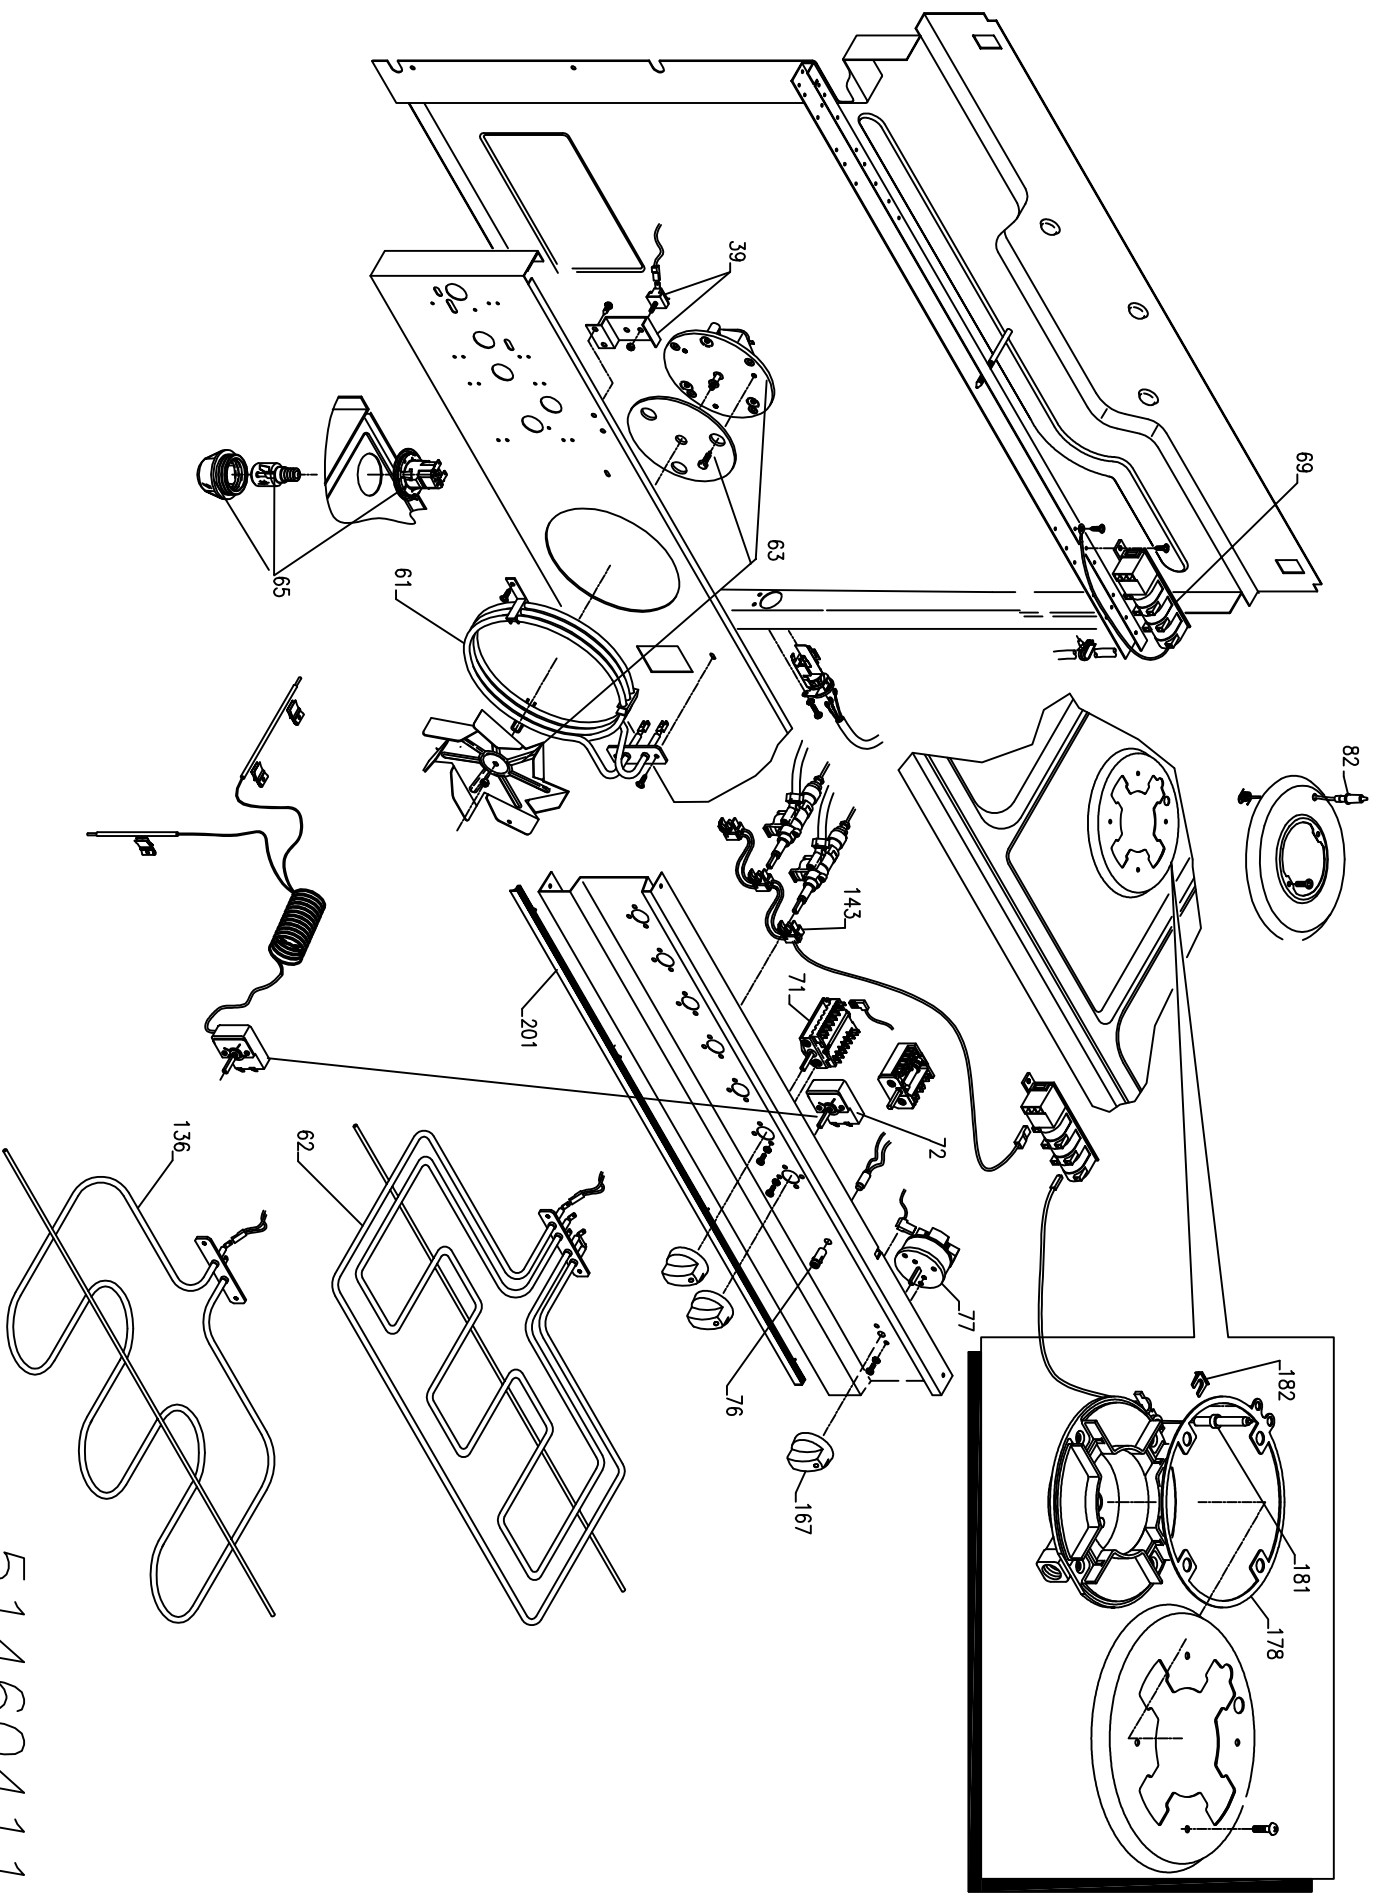


51460411-3

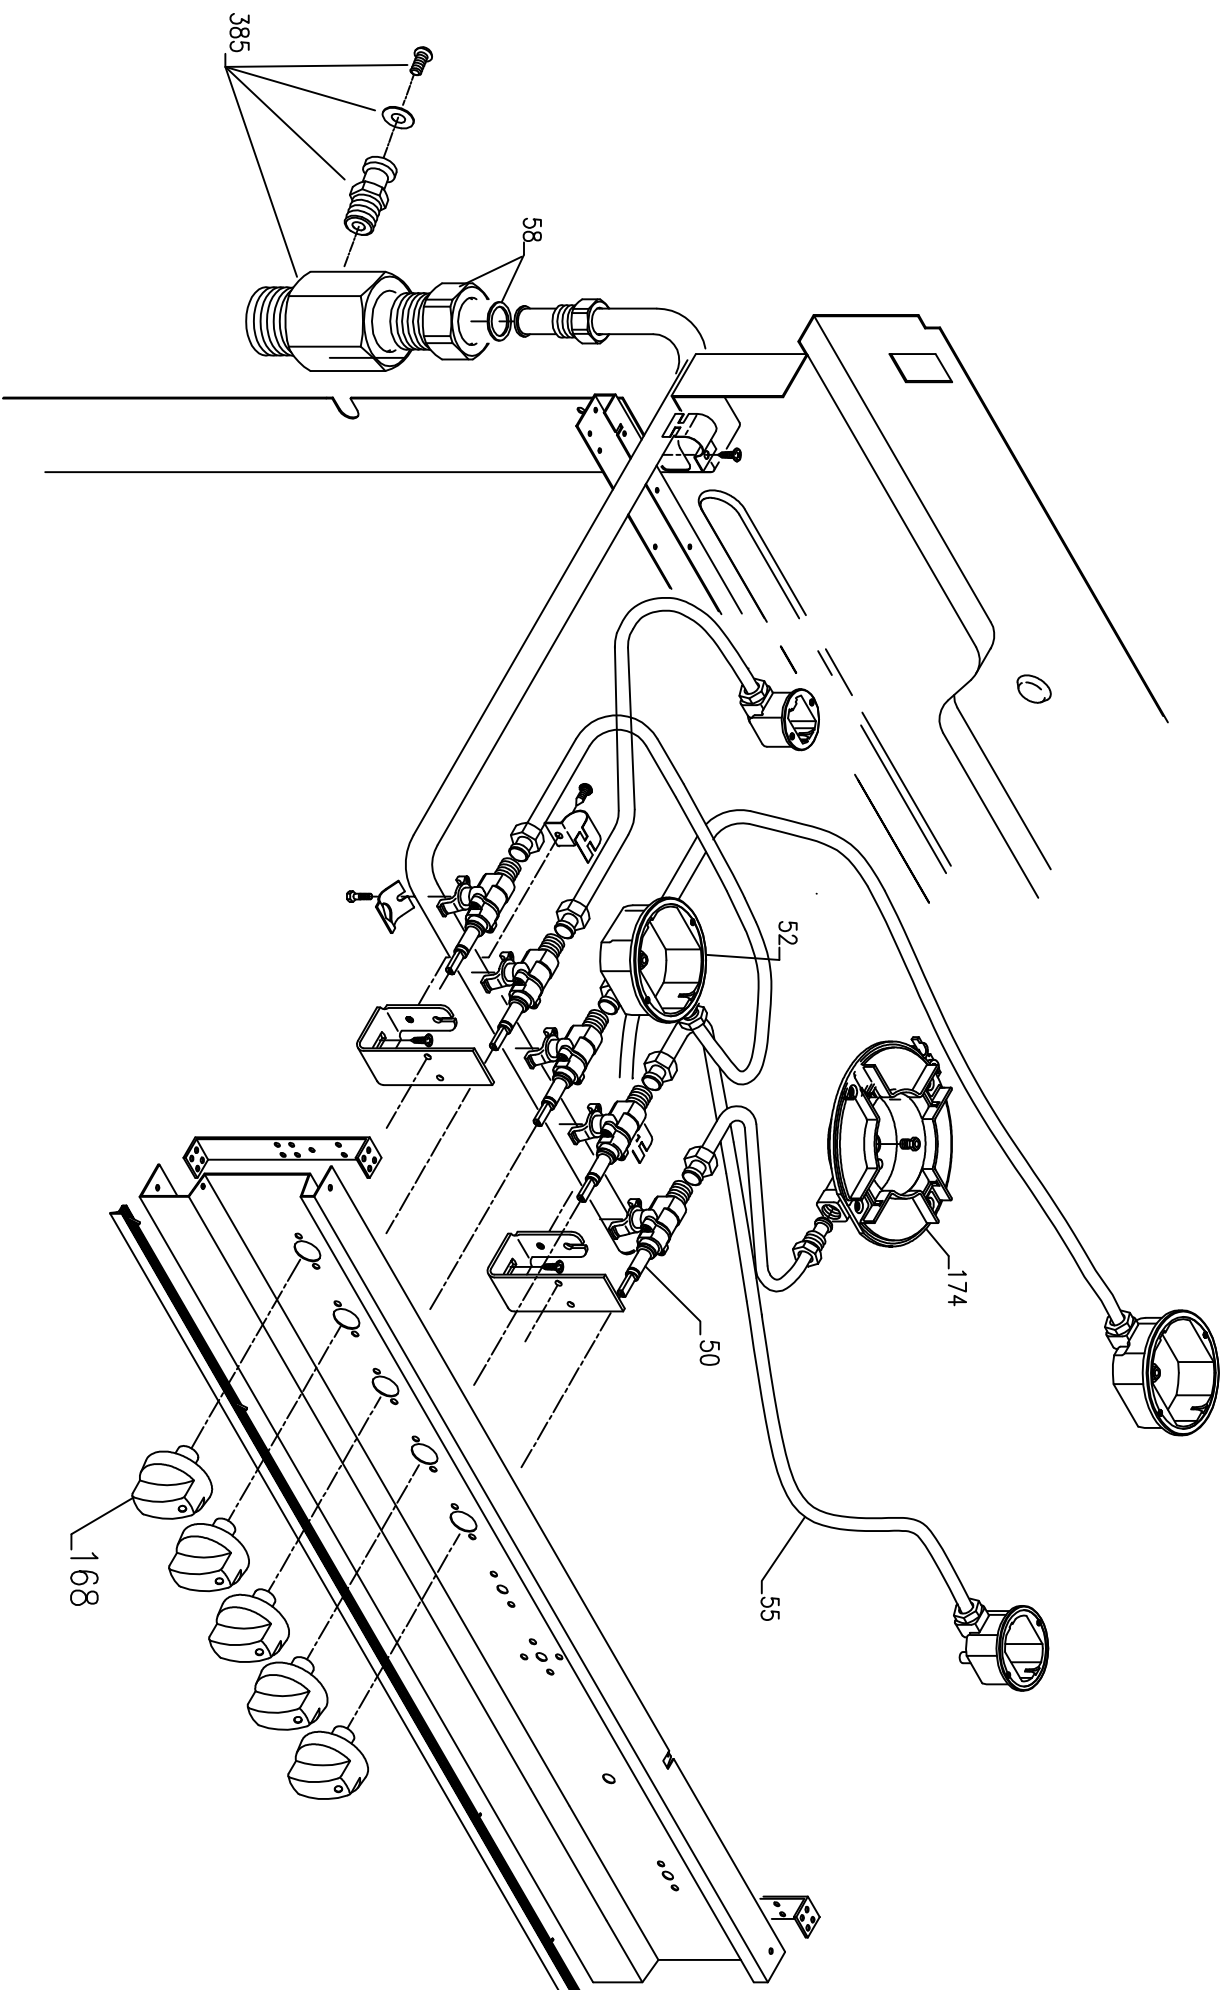


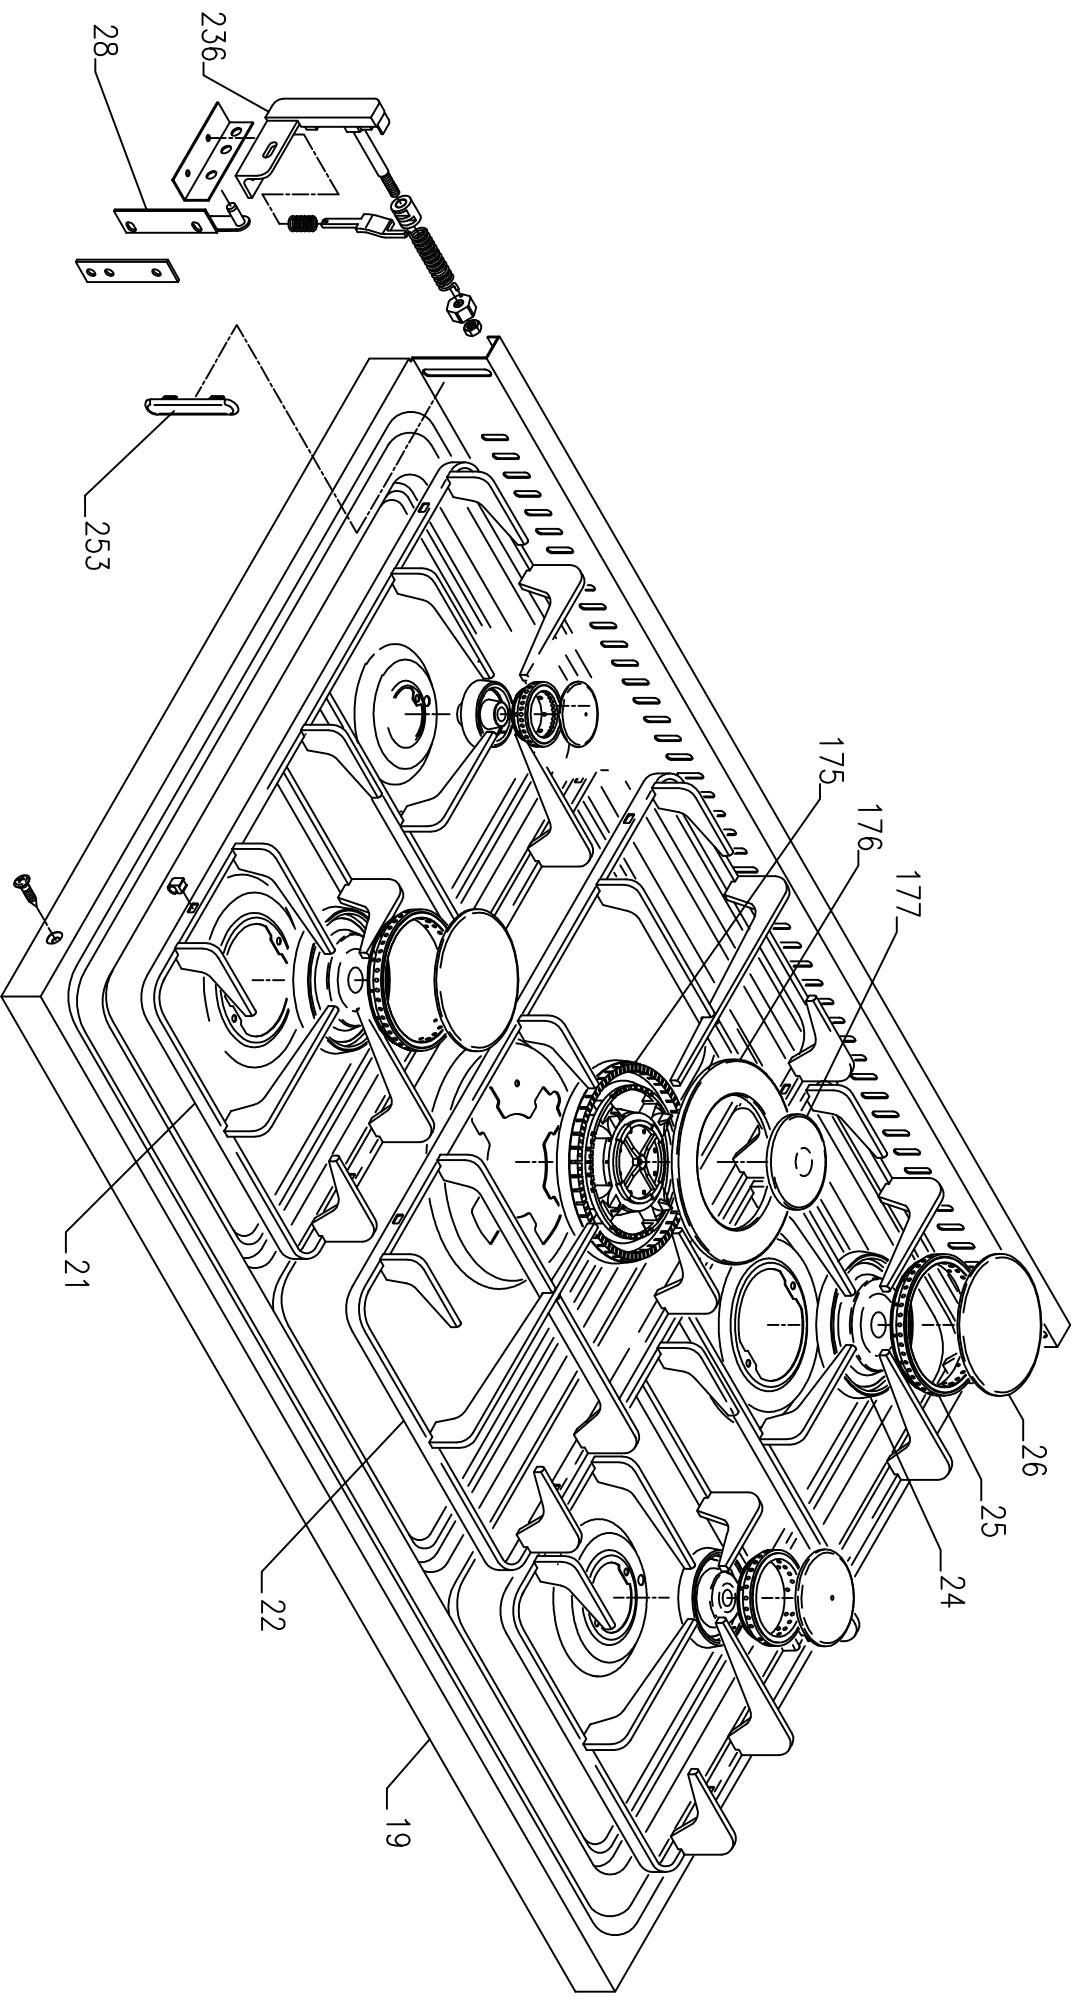

51460411-5

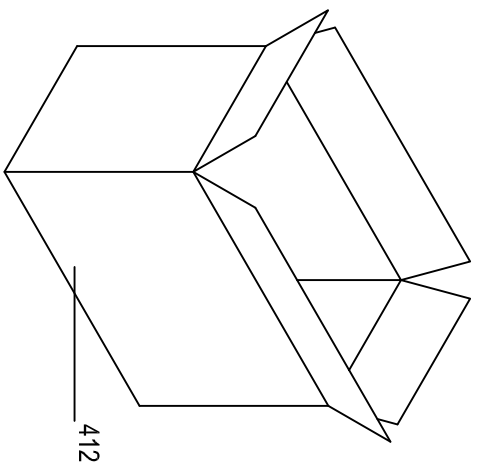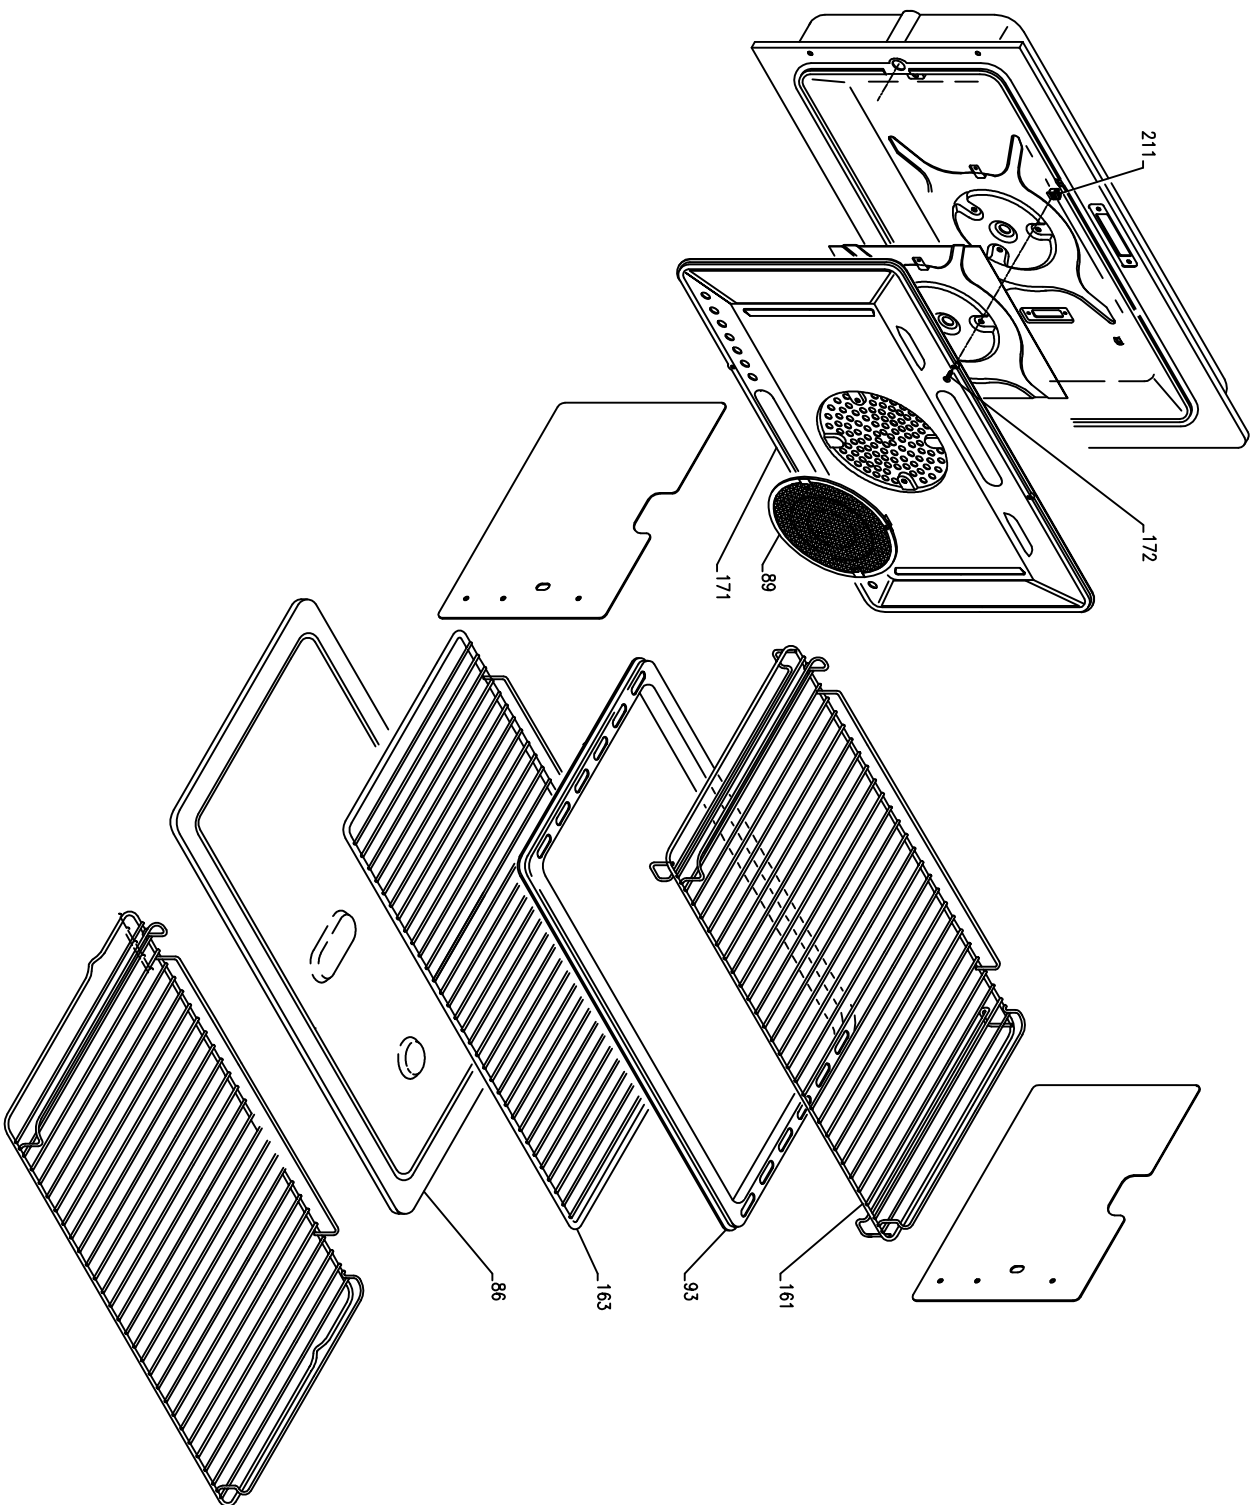

51460411-1

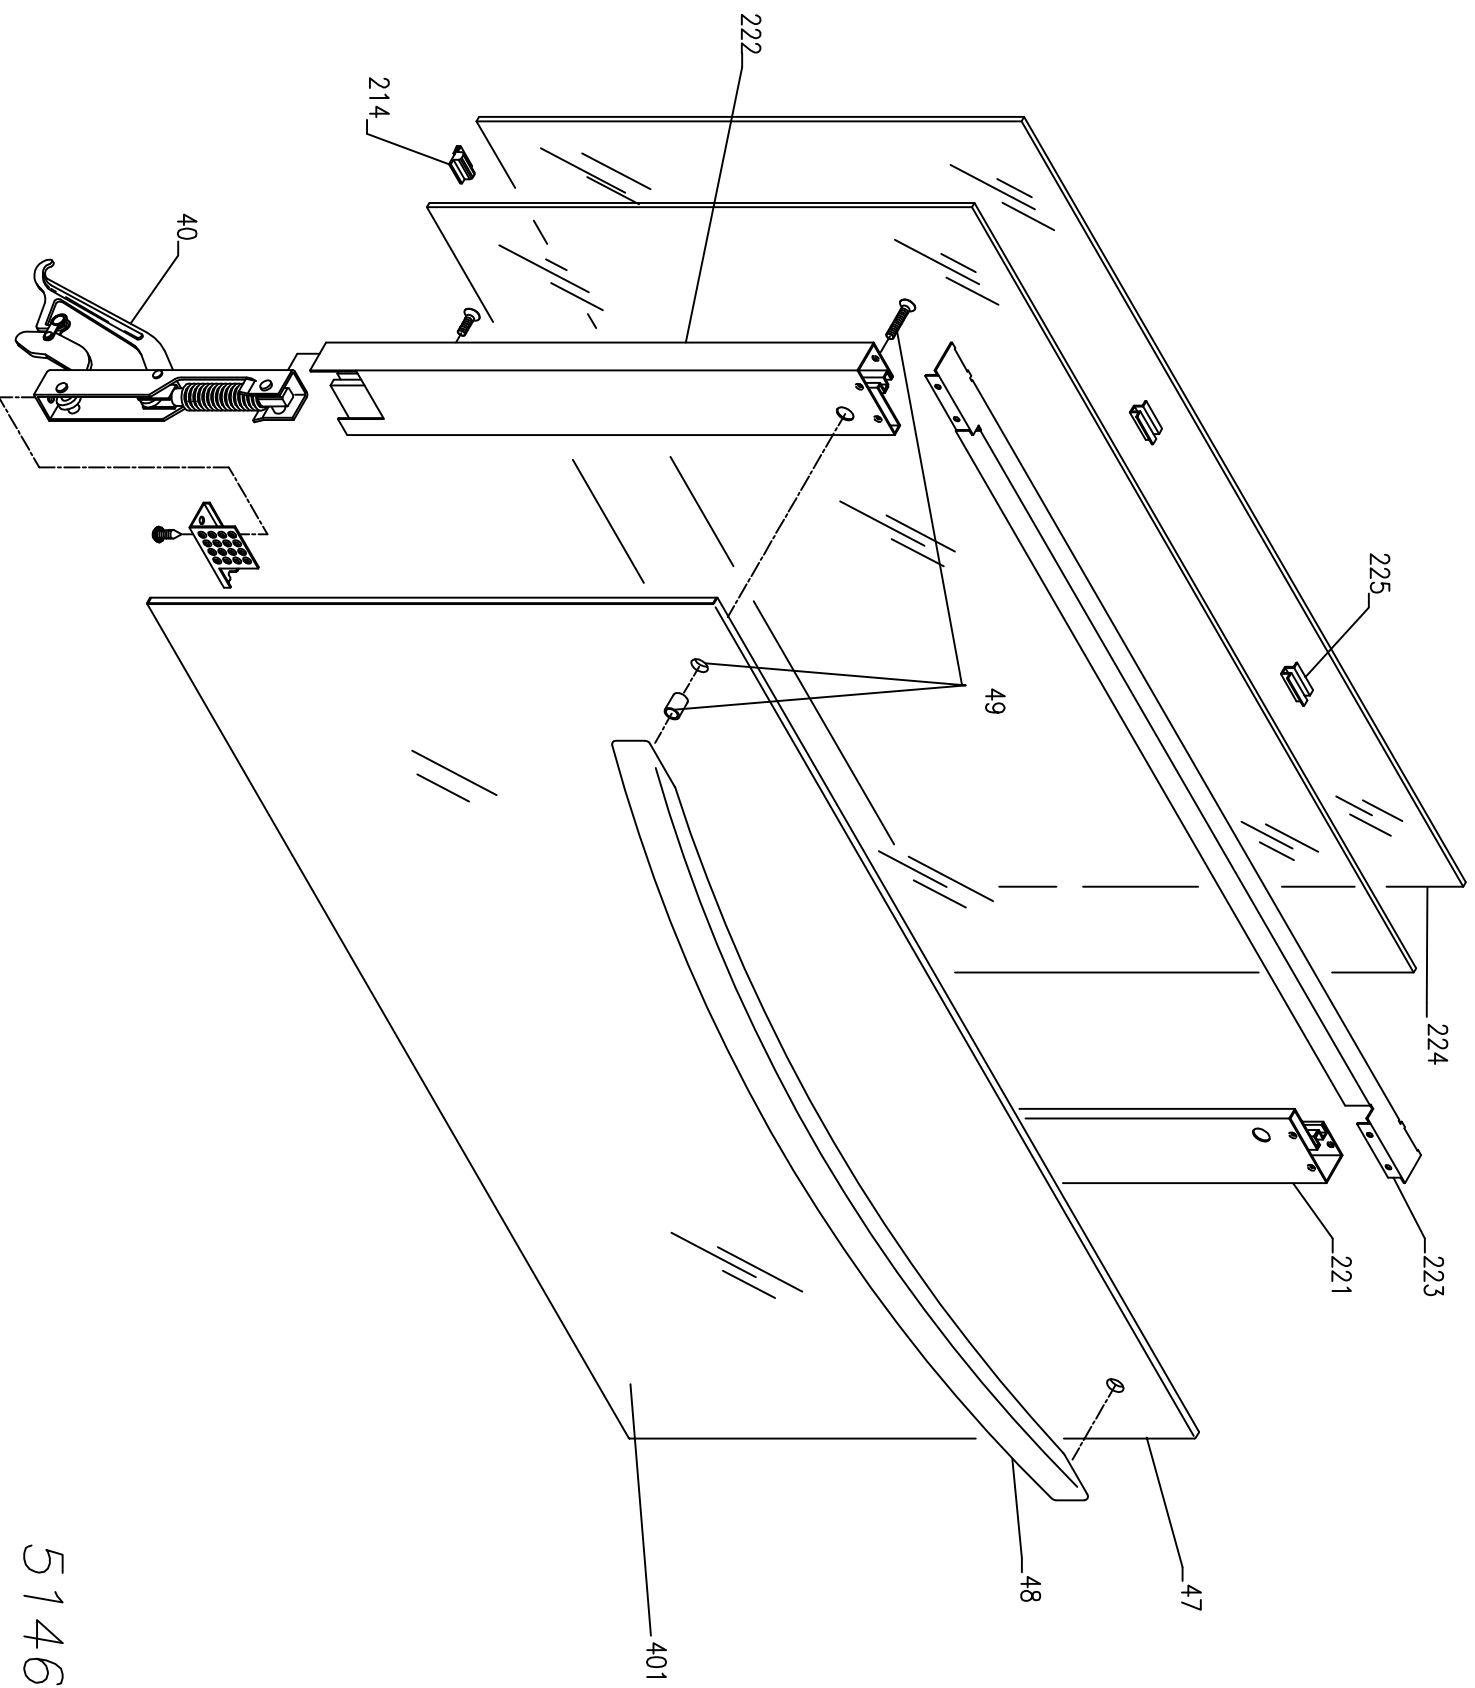

COOLING FAN PArt Number 21502011T

No	Part No.	Description
2	03210798	FOOTSTALL
3	03170411	ADJ. FOOT
4	10020289	UNDER OVEN DOOR
5	03120273	UNDER OVEN DOOR GLASS WOOL
6	10020181	RIGHT/LEFT SIDE/BRUSHED STEEL
7	03120022	INSULATING MATTRESS
8	03040076	OVEN DOOR HINGE HOLDER
14	03110922	FRONT PANEL MXG96AMF/C ESSENTIAL
14	03111080	FRONT PANEL FOR MXG96AMF/C
14	03111214	FRONT PANEL
15	10160059	SQUARE FIXING FRONT PANEL
16	03170190	4 SIDES OVEN GASKET
19	10580213	WORKING TOP
21	03060200	2 FLAMES GRID
22	03060201	5TH FLAME GRID
24	03100108	SMALL FLAME DISTRIBUTOR SUPPORT
24	03100109	MEDIUM FLAME DISTRIBUTOR SUPPORT
24	03100110	LARGE FLAME DISTRIBUTOR SUPPORT
25	03090016	SMALL CROWN FLAME DISTRIBUTOR
25	03090017	MEDIUM CROWN FLAME DISTRIBUTOR
25	03090018	LARGE CROWN FLAME DISTRIBUTOR
26	03190085	RAF SMALL FLAME DISTRIBUTOR COVER
26	03190086	RAF MEDIUM FLAME DISTRIBUTOR COVER
26	03190087	RAF LARGE FLAME DISTRIBUTOR COVER
28	03040014	WORKING TOP RIGHT HINGE
28	03040015	WORKING TOP LEFT HINGE
39	03010512	THERMOREGULATOR
40	03040078	LEFT/RIGHT OVEN DOOR HINGE
48	03070062	OVEN DOOR HANDLE/GIANT OVEN
49	03020100	SCREW M5X25 FIX.OVEN DOOR HANDLE
49	03170220	UNDER HANDLE BUSH WASHER
49	03170297	UNDER HANDLE BUSH, ROUND HANDLE
50	03090466	GAS COCK 0,65
50	03090513	GAS COCK 0,35
50	03090514	GAS COCK 0,48
50	03090515	GAS COCK 0,57
52	03100147	SMALL BURNER CUP DIAM.0,90
52	03100148	MEDIUM BURNER CUP DIAM.1,20
52	03100149	LARGE BURNER CUP DIAM.1,55
52	03100149	LARGE BURNER CUP DIAM.1,55
55	21500859	FRONT LEFT GAS PIPE
55	21500860	BACK LEFT GAS PIPE
55	21500861	FRONT RIGHT GAS PIPE
55	21500862	BACK RIGHT GAS PIPE
55	21500863	TRIPLE RING GAS PIPE
58	03090072	RAMP CONNECTION WASHER
58	03090350	RAMP CONNECTION (NIPLES)
61	03010462	HEATING ELEMENT
62	03010498	CEILING HEATING ELEMENT
63	03010535	FAN MOTOR
65	03010329	LAMP HOLDER WITH LAMP
68	03010133	WIRING
69	03010615	GENERATOR

No	Part No.	Description
71	03010890	10 FUNCTIONS OVEN COMMUTATOR
72	03010440	THERMOSTAT
76	03010209	LED
77	03010755	TIMER
82	03010424	IGNITION CANDLE (HOB BURNERS)
86	10500214	LOWER BLACK TRAY
89	03170266	FAN FILTER
93	10500266	OVEN TRAY
99	03120165	INSULATING BACK PANEL
104	03020086	SCREW FIXING WORKING TOP
104	03020414	CLIP FIXING WORKING TOP TO SIDE
127	03090104	LPG INJECTOR 0,90 (S/222)
136	03010355	GRILL/BOTTOM HEATING ELEMENT 1750W
143	03010579	CATENARY
161	03060155	UPSIDE DOWN OVEN GRID
163	03060156	SIMPLE OVEN GRID
164	03060079	LEFT/RIGHT OVEN SHELVES HOLDER
165	03020094	CAGE SCREW
166	03020225	CAGE SCREW RING M25
167	03140366	SOFT TOUCH GAS KNOB
168	03140365	SOFT TOUCH GAS KNOB
171	10500232	FAN COVER
172	03020098	SCREW FIXING FAN COVER
174	03100150	TRIPLE RING CUP
175	03100181	TRIPLE RING BURNER FLAME DISTRIBUTOR
176	03190067	TRIPLE RING BURNER EXTERNAL RAF COVER
177	03190068	TRIPLE RING BURNER INTERNAL RAF COVER
178	03170239	TRIPLE RING BURNER CUP GASKET
181	03010609	TRIPLE RING ELECTRIC IGNITION CANDLE
181	03010623	IGNITION CANDLE (3,9KWTRIPLE RING BURN.)
182	03020566	SPRING FIX.TRIPLE RING IGNITION CANDLE
201	03170230	FRONT PANEL GASKET
211	03020226	CLIP FIXING FAN COVER
214	03170234	GLASS PROTECTION RUBBER
221	03080219	OVEN DOOR RIGHT FRAME
222	03080220	OVEN DOOR LEFT FRAME
223	03080228	OVEN DOOR UPPER FRAME
224	03050280	OVEN DOOR INTERNAL GLASS
225	03080234	OVEN DOOR GLASSES SPACER
236	03100190	RT BRUSHED TERMINAL WALL
236	03100191	LT BRUSHED TERMINAL WALL
253	03170276	CAP CLOSING COVER HINGE SPLIT
385	03090517	LPG PRESSURE DETECTOR CAP
385	03090518	LPG PRESSURE TEST NIPPLE
385	03090519	PRESSURE DETECTOR GASKET
400	20170500	COMPLETE FRONT PANEL
401	21501220	OVEN DOOR
402	21500887	LPG INJECTORS KIT
409	03120169	THERMOINSULATING PANEL CLASS A
412	03130074	CARDBOARD PACKAGING 90x60
413	03090499	GAS REGULATOR
47	21501260	EXT.OVEN DOOR GLASS/SILC.SQUARES