


TU950TLE8

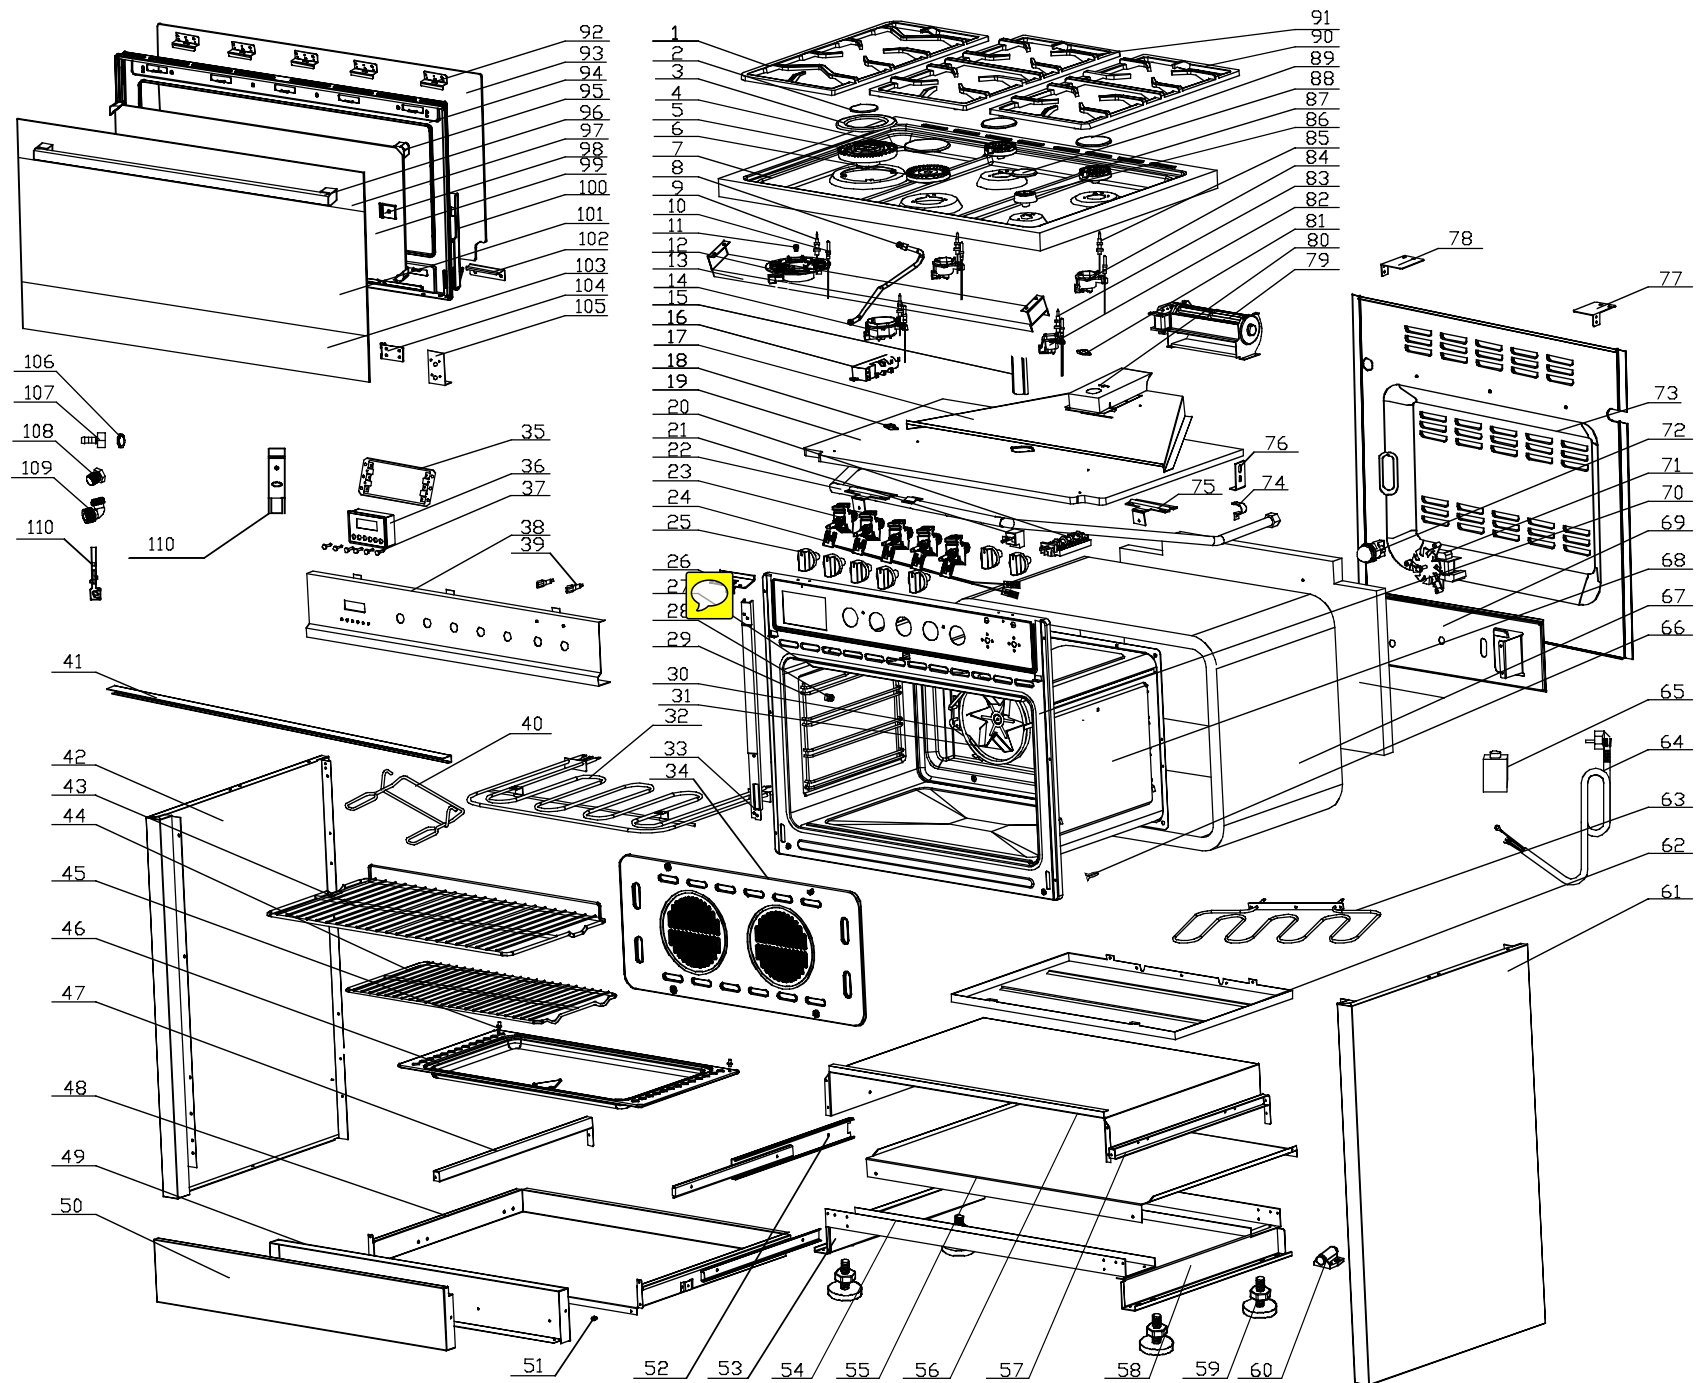

Change to EGO function switch March 2021 for Technika models:

TU950TLE8	GHE09TDSS-4	TEG95TBK
TU950TLE8G	TEG95DUA	
TU950TME8	TEG95DUA-2	
TU950TME8BG	TEG95HUA	

Original EGO switch PA210032015

8 Brown –
- Active to thermostat

7 Double Brown
- Active to Oven lights
- Active to Neon indicator.

P8 Red – Main active from timer

P7 - BLANK

***Terminals 7 & 8 connected together on top**



***Terminals P7 & P8 connected together underneath**



New EGO switch 30100500060

8 - BLANK

7 Triple Brown
- Active to thermostat
- Active to Oven lights
- Active to Neon indicator.

P8 - BLANK

P7 Red – Main active from timer

***Terminals 7 & 8 NOT connected**



***Terminals P7 & P8 NOT connected**



TU950TLE8

Position	Part No.	Description	QTY
1	PA210004000	Wok Trivett	1
2	PA210003002	inner lid for triple ring burner	1
3	PA210003004	outer lid for triiple ring burner	1
4	PA210003000	Rapid fire burner iron cover	1
5	PA210001000	flame spreaderfor rapid burner	1
6	PA210001001	lid for rapid burner	1
7	XZ200012001	panel	1
8	PA210016003	aluminuim pipe	5
9	PA210006003	thermocouple	1
10	PA210005002	spark pin	1
11	PA210007012	nozzle	5
12	PA210002005	triple ring burner base	1
13	SP200008000	burner support	1
14	PA210002006	burner base	1
15	PA210029000	Row chimneys	1
16	PA210034000	OVEN SPARK PACK 5 BURNER	1
17	SP200025000	OVEN COOLING FAN DUCT	1
18	PA210031000	OVEN OVERTEMP SWITCH 125 DEG.	1
19	SP200026002	bottom board for duct	1
20	PA210032013	Selector switch	1
20	PA210032015	Selector switch EGO	1
21	PA210036000	OVEN THERMOSTAT SINGLE BULB	1
22	PA210012000	MAIN FEED PIPE FOR GAS	1
23	PA210015000	valve	5
24	PA210038000	microswitch	1
25	PA210039000	knob	7
26	SP20007700	Panel fixed connection board	3
27	PA210044000	DOOR SEAL	81
28	PA210042000	fixing axies for side rack	2
29	PA210049000	side rack frame	2
30	PA210008009	FAN ELEMENT (1550W)	2
31	PA210010000	COOKING FAN ASSEMBLY	2
32	PA210008002	GRILL ELEMENT	1
32	PA21008048	GRILL ELEMENT EGO	1
33		Hinge connecting plate	1
34	SP220001000	Back heating tube platens (Dual)	1
35	SP200002000	Program-controlled device fixed board	1
36	PA210035051	Timer	1
37	PA210077000	Timer buttons	6
38	SP20001400	Control Panel	1
38	SP20000709	Control Panel EGO	1
39	PA210037000	indicator	2
40	PA210028000	rack	1
41	SP200063000	stent	1
42	SP200041015	side board	1
43	PA210027000	WIRE SHELF	2
44	PA210026000	grilling rack for deeper backing tray	1
45	PA210057000	support for baking tray	2
46	SP220027000	baking tray	1
47	SP200005001	Slippery course lining the	1
48	SP240018000	Smoke door inside bottom storehouse	1
49	SP240020000	Smoke inside warehouse door panel	1

USE PA210008037 (1250W)
90081000

SP220001006 (Single)

Position	Part No.	Description	QTY
50	SP200019000	Smoke appearance board in warehouse	1
51	PA210056000	Thrust pad	2
52	PA210049001	Slippery course	1
53	SP200029003	bottom support-left	1
54	SP200006000	fixing frame for adjustable feet	1
55	SP240021000	Storehouse floor within	1
56	SP240022000	Surrounded board in warehouse	1
57	SP200005000	Slippery course lining the	1
58	SP200029002	bottom support-right	1
59	PA21001800	Antiskid feet	4
60	SP200041014	side board	1
61	SP200003000	Bottom fixation electric heating tube	1
62	PA210008000	BOTTOM ELEMENT	1
63	PA210025000	power cord	1
64	PA210055000	connctor	1
65	PA210040001	hinge	2
66	PA210033000	temperature sensor probe	2
67	PA210046000	glass fibre	1
68	SP220024000	cavity	1
69	SP200023000	back support for cavity	1
70	SP220035000	front board for cavity	1
71	PA210009009	Circulation fan	2
72	PA210053000	bulb	2
73	SP200004000	back board	1
74	SP200057001	holder	2
75	SP200057000	holder	2
76	SP200056000	inlet pipe holder	2
77	SP200016000	fixing frame for panel-right	1
78	SP200016001	fixing frame for panel-left	1
79	PA210009008	OVEN COOLING FAN 18W	1
80	PA210072000	guard board for duct	1
81	PA210030000	65 DEG THERMAL SWITCH FOR COOLING F	1
82	PA210002008	Auxiliary burner base	1
83	PA210005000	spark pin	4
84	PA210002007	rapid burner base	2
85	PA210006000	thermocouple	4
86	PA210001003	flame spreader for auxiliary burner	1
87	PA210001002	flame spreader for semi-rapid burner	2
88	PA210003003	lid for auxiliary burner	1
89	PA210003001	lid for semi-rapid burner	2
90	PA210004003	Middle Trivett	1
91	PA210004001	RHS Trivett	1
92	PA210017002	"C" inner glass	1
93	PA210017002	Panel fixed frame	1
94	SP220010000	door frame "C" Hinge	1
95	PA21002100	fixing bucket for middle glass "C"	4
96	PA210052000	handle	1
97	SP200012000	top s.s frame for oven door	1
98	SP20001000	Shake handhandle support block	2
99	PA21001700	"C" middle glass	1
100	PA21004000	"A" hinge	2
101	XZ210017005	outer glass	1
102	PA210064000	removable fixing bucket for inner glass	3

XZ210017004 "A" Hinge Inner Glass

SP220010005 "A" Hinge

PA210021002 "A" Hinge

PA210017030 "A" Hinge Middle Glass

PA210023000L & PA21002300R "C" Hinge

PA210017002 "A" Hinge Outer Glass

Position	Part No.	Description	QTY
103	SP200013000	bottom s.s frame for oven door	1
104	SP20001100	Panel fixed frame	6
105	SP20000900	Panel fixed frame under	3
106	PA210014000	silicon washer	3
107	PA210058001	inlet connector	1
108	PA210095001	block	1
109	PA210011000	elbow pipe	1
110	SP200078002		1
111	SP200078005		2
112	PA210054003		1
	XZ200001025		
	XZ200001001		
		SP200046000	
	UP010612	Upright Hinge Kit	1