


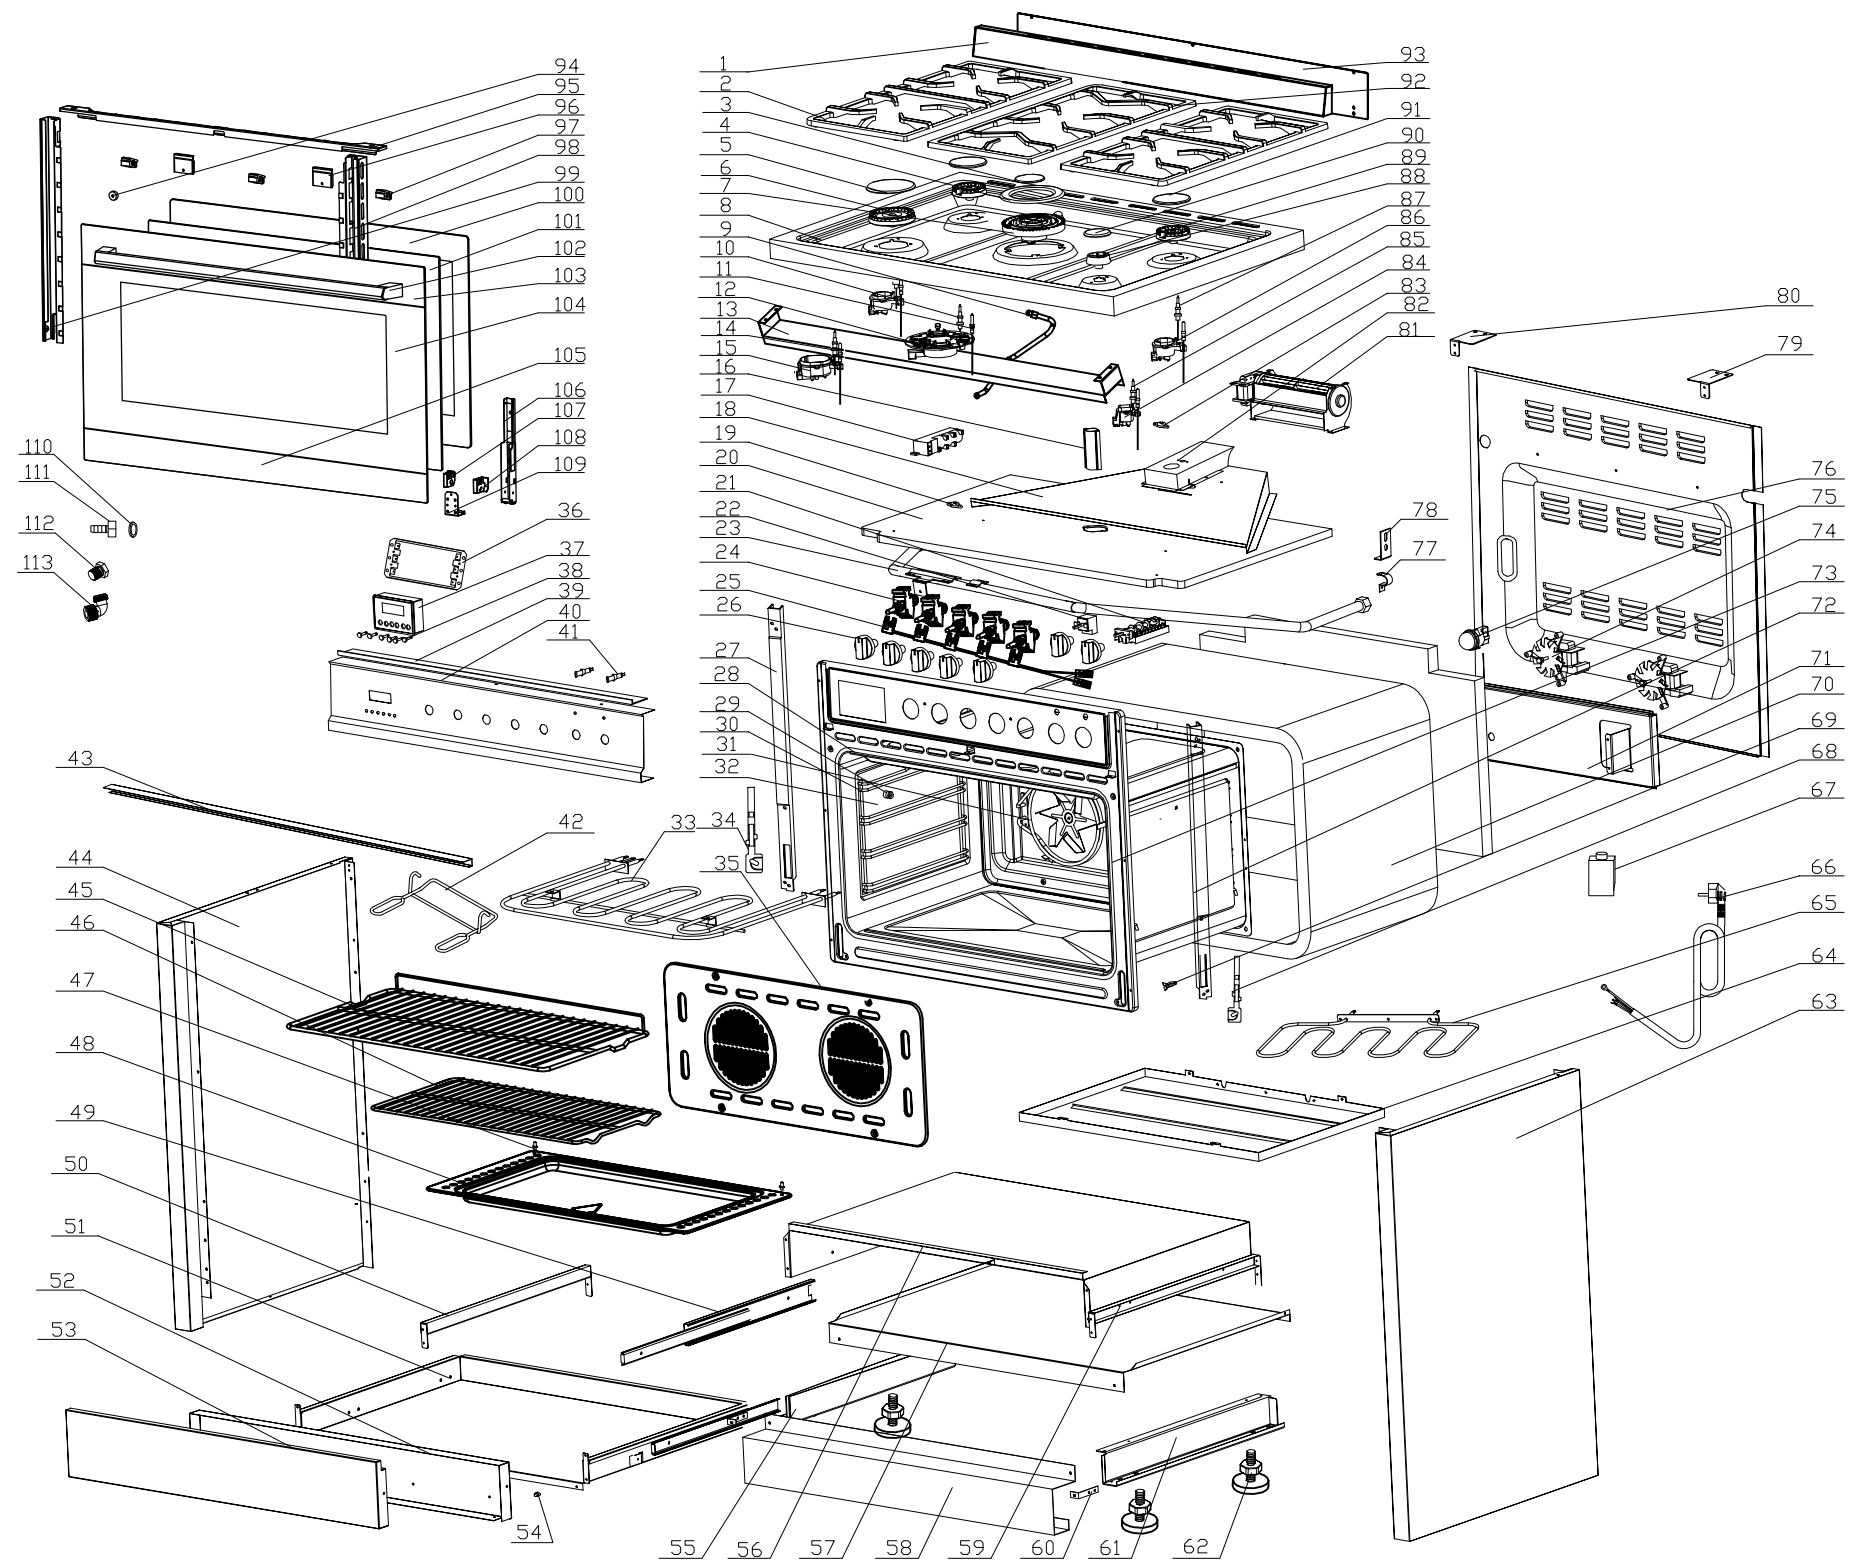

Change to EGO function switch March 2021 for Technika models:

TU950TLE8	GHE09TDSS-4	TEG95TBK
TU950TLE8G	TEG95DUA	
TU950TME8	TEG95DUA-2	
TU950TME8BG	TEG95HUA	

Original EGO switch PA210032015

8 Brown –
- Active to thermostat

7 Double Brown
- Active to Oven lights
- Active to Neon indicator.

P8 Red – Main active from timer

P7 - BLANK

***Terminals 7 & 8 connected together on top**



***Terminals P7 & P8 connected together underneath**



New EGO switch 30100500060

8 - BLANK

7 Triple Brown
- Active to thermostat
- Active to Oven lights
- Active to Neon indicator.

P8 - BLANK

P7 Red – Main active from timer

***Terminals 7 & 8 NOT connected**



***Terminals P7 & P8 NOT connected**



No	Part No.	Description	Qty	Comment
1	SP200037000	Wall Cover Baord	1	
2	PA210004001	Pan Support	2	
3	PA210003027	Iron Cap-Wok Small	1	
4	PA210003028	Iron Cap-Wok Large	1	
5	PA210003000	Iron Cap-Rapid	1	
6	PA210001001	Burner Cover-Wok	1	
7	PA210001013	Burner Cover-Rapid	1	
8	SP200014002	Hob Panel	1	
9	PA210016003	Aluminium Tube	1	
10	PA210006003	Thermocouple	1	
11	PA210005002	Indicator Light	1	
12	PA210002005	Burner Base	1	
13	SP200008003	Pan Support	1	
14	PA210005000	Ignition Light	2	
15	PA21000206	Burner Base-Rapid	1	
16	PA210029000	Air Flue	1	
17	PA210034000	Spark Pack	1	
18	SP200025000	Air Flue	1	
19	PA210031014	Overheat Protector	1	
20	SP200026003	Bottom Flue	1	
21	PA210032013	Selector Switch	1	
21	PA210032015	Selector Switch	1	
22	PA210036008	Thermostat	1	
23	PA210012011	Inner Air Flue	1	
24	PA210015001	Valve	1	
	PA210015000	Valve	1	
	PA210015002	Valve	2	
	PA210015003	Valve	1	
25	PA210038000	Microswitch	1	
26	PA210039005	Knobs Tk4#	7	
27	SP200032003	Inner Support	1	
28	XZ200004000	Door Seal	1	
29	PA210042000	Side Rack Fixing Kit	2	
30	PA210049000	Side Rack	2	
31	PA210008037	Fan Element	2	
32	SP220024033	Inner Assembly	1	
33	PA210008002	Grill Element	1	
33	PA210008048	Grill Element Ego	1	
34	SP230078002	Hinge Fixing Board	1	
35	SP220001011	Fan Element Cover Board	1	
36	SP200002000	Timer Support	1	
37	PA210035051	Timer	1	
38	PA210077000	Timer Buttons	6	
39	SP200015002	Panel Connect Trim	1	
40	SP2000070000N	Control Panel	1	
40	SP200007098M	Contol Panel Ego	1	
41	PA210037005	Indicator Light	2	
42	PA210028000	Handle	1	
43	SP200063001	Rear Support	1	
44	XZ200017000	Side Panel	1	
45	PA210027000	Wire Rack	2	
46	PA210026000	Tray Rack	1	
47	PA210057000	Tray Guide Kit	2	
48	SP220027000	Baking Tray	1	
49	PA210048002	Telescopic Runner	1	

No	Part No.	Description	Qty	Comment
50	SP200005003	Telescopic Runner Support	1	
51	SP240018002	Bottom Drawer Cover Board	1	
52	SP240020000	Drawer Inner Support	1	
53	SP200019000	Drawer Panel	1	
54	PA210056000	Stop Pushing Washer	2	
55	SP200029018	Feet	1	
56	SP240022004	Inner Cover Baord	1	
57	SP200006011	Feet Fixing	1	
58	SP200030005N	Kick Panel	1	
59	SP200005002	Telescopic Rim	1	
60	SP200031002	Kick Panel Fixing Board	1	
61	SP200029019	Feet	1	
62	PA210018003	Non-Slip Feet	4	
63	XZ200017016	Side Panel	1	
64	SP200003000	Bottom Fixing Support	1	
65	PA210008000	Bottom Element	1	
66	PA210025003	Cable	1	
67	PA210055000	Terminal Box	1	
68	SP230078006	Hinge Guide	1	
69	PA210033000	Temperature Sensor Fixing	4	
70	PA210046000	Insulation Fibre	0.06	
71	SP200023003	Rear Fixing Board	1	
72	SP200032002	Inner Liner Support	1	
73	SP210035014	Liner Front Panel	1	
74	PA210009009	Cooking Fan Motor	2	
75	PA210053000	Lamp Assembly	2	
76	SP200004009	Back Cover Baord	1	
77	SP200057001	Hold Climbing	2	
78	SP200056000	Air Inner Flue	2	
79	SP200016004	Back Cover Fixing	1	
80	SP200016005	Back Cover Fixing	1	
81	PA210009008	Cooling Fan Motor	1	
82	SP200033000	Air Flue Cover	1	
83	PA210030000	Cooling Fan Thermostat	1	
84	PA210002008	Burner Base-Rapid	1	
85	PA210006001	Thermocouple	2	
86	PA210002007	Burner Base-Middle	2	
87	PA210006000	Thermocouple	2	
88	PA210001003	Burner Cover-Rapid	1	
89	PA210001002	Burner Cover-Middle	2	
90	PA210003003	Iron Cap-Rapid	1	
91	PA210003001	Iron Cap-Middle	2	
92	PA210004002	Pan Support-Left&Right	1	
93	SP200038000	Back Cover Board	1	
94	PA210137003	Handle Washer	2	
95	SP200010000	Handle Fixing Board	2	
96	SP230014030	Door Top Support	1	
97	PA210063006	Middle Glass Top Fixing	3	
98	SP230014028	Door Frame Support-Right	1	
99	SP230014029	Door Frame Support-Left	1	
100	PA210017273	Inner Glass With Trim	1	New Inner Glass 30500400069 (October '17)
101	PA210017281	Middle Glass	1	
102	PA210052000	Handle	1	
103	PA210017252T	Outer Glass	1	
104	SP200012006	Top Trim	1	

No	Part No.	Description	Qty	Comment
105	SP200013000	Bottom Trim	1	
106	PA210040006	Hinge	2	
107	PA210021008	Middle Glass Fixing	1	
108	PA210021009	Middle Glass Fixing	1	
109	PA210063001	Glass Fixing	1	
110	PA210014001	Washer	3	
111	PA210113000	Air Inner Connector	1	
112	PA210095001	End Cap	1	
113	PA210011000	Copper Elbow	1	
	XZ200001429	Complete Door (New)		