

- Prescriptions de montage et mode d'emploi de la hotte aspirante
- Istruzioni di montaggio e d'uso della cappa aspirante-filtrante
- Instructions on mounting and use of the cooker hood
- Montagevorschrift und Gebrauchsanleitung für die
- Dunstabzugshaube
- Installationsvejledning og brugsanvisning
- Instrucciones de montaje y uso
- Gebruiksaanwijzing voor dampkap

D3

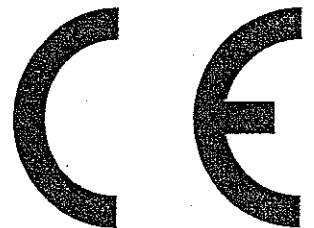
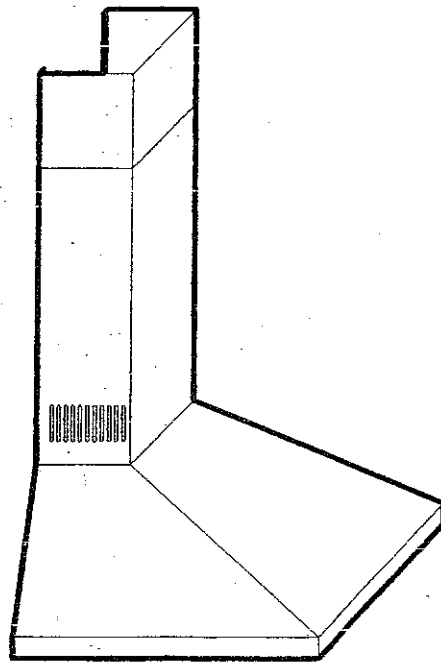


Fig.1

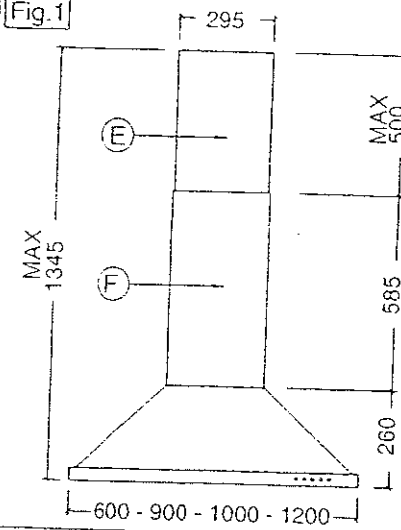


Fig.2

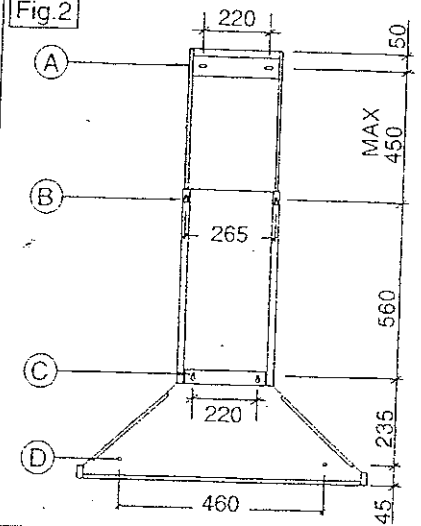


Fig.3

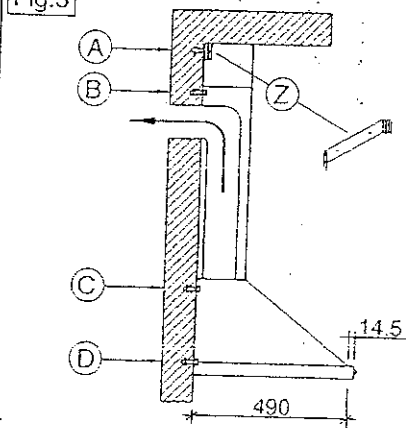


Fig.4






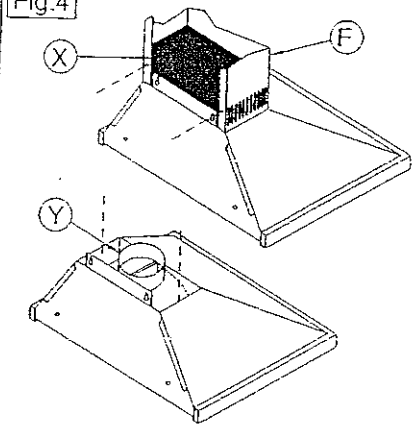


Fig.5

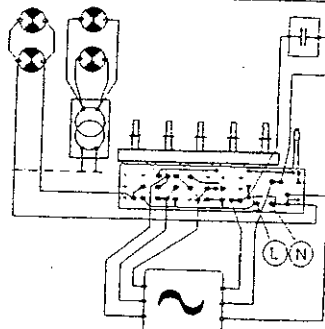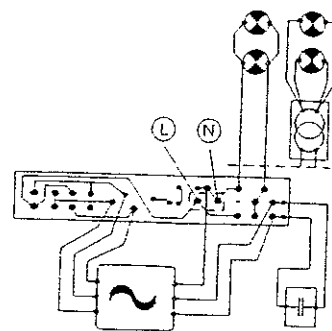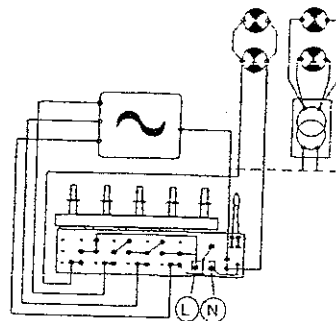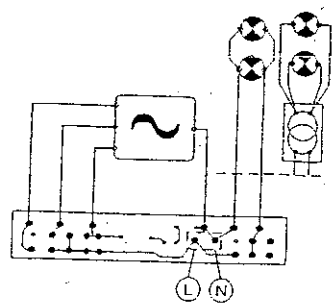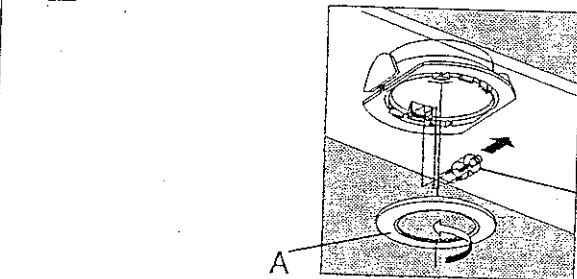

ENGLISH

INSTALLATION

The appliance has been designed as exhausting (external exhausting) or filtering hood (internal recirculation). The appliance has to be installed at a minimum height of 650 mm. above the electric cookers or 750 mm. above the gas or mixed ones. Should a connecting pipe composed of 2 or more parts be used, the upper part has to be outside the lower one. Do not connect the discharge pipe to a flue in which warm air circulates or which is used to remove fumes of the appliances which are powered with a different energy from the electric one. Pay attention if an exhausting hood and a burner or a fireplace depending on the air of the room and which are powered with a different energy from the electric one work at the same time, because during the aspiration the hood takes the air away from the room, that air which is necessary to the burner or the fireplace for the combustion. So for a safe working, provide for a proper ventilation of the room. For the external exhausting, conform to the laws in force in your country.

ELECTRICAL CONNECTION

The appliance is built in class II, so no wire has to be connected with the earth terminal.

The connection to the electrical mains must be made as follows:

BROWN = L live
BLU = N neutral.

If it is not supplied, fit a plug normalized on the cord for the load showed on the rating plate. In the case of a direct connection to the mains, it is necessary to place between the appliance and the mains an omnipolar switch with minimum opening between contacts of 3 mm. dimensioned for the load and corresponding with the laws in force.

ATTENTION: should the lamps not work, make sure they are well tightened.

MOUNTING OF THE HOOD ON THE WALL

Drill 8 holes (A-B-C-D) according to the measures shown fig. 2.

For the assembling use screws and dowels, which are appropriate for that kind of wall (ex. concrete, plasterboard etc.)

Block the clamp (Z) to the wall fig. 3.

Hang the hood to the wall using the 2 holes (C) fig. 1

Fasten definitely the hood through the 2 security holes (D).

EXHAUSTING VERSION

Block the coupling flange (Y) fig. 4.

Connect the flange (Y) to the discharging hole through a connecting pipe inner diameter 120 mm.

Hang up the 2 connections (E-F) fitting vertically them in the hood and blocking them using the two holes (B) fig. 2.

Remove the connection (E) from the connection (F) and block it laterally to the clamp (Z) fig. 3 with appropriate screws.

To transform the hood from exhausting version to filtering one, demand your dealer the active carbon filter and the transformation Kit which includes an air deviator and the corresponding screws for the fixing.

FILTERING VERSION

Fit the diaphragm (X) fig. 4 in the lower connection (F) fig. 4 by using the proper screws.

Hang up the 2 connections (E-F) by fitting vertically them in the hood and blocking them using the two holes (B) fig. 2.

Remove the connection (E) from the connection (F) and block it laterally to the clamp (Z) fig. 2 with appropriate screws.

Active carbon filters are necessary to depurate the air, that will be released in the room. Filters are not washable; they cannot be regenerated and have to be replaced at most every 4 months. The saturation of the activated charcoal depends on the more or less prolonged use of the hood, on the type of cooking and on the regularity of cleaning the grease filter. The filter has to be applied to the aspirating group, which is inside the hood hiling the centre of the group with it and turning it of 90 degrees until the stop click is heard to lock it. The air is released in the room through the holes made at the base of the connection (F).

USE AND MAINTENANCE

It is advisable to let the appliance work for 15 minutes after the cooking of the food in order to remove completely the fumes. The effective functioning of the hood depends on the regularity with which the maintenance operations are carried out, in particular those of the anti-grease filter and of the active carbon filter.

The anti-grease filter has the function of catching the particules suspended on the air, so it is subject to get clogged at various intervals, according to the use of the appliance.

In any case the washing instructions of the filter should not be followed, it could burst into flames.

Clean frequently all the deposits on the fan and on all the other surfaces, using a cloth moistened by methylated spirits or neutral and not abrasive fluid deterative.

If the appliance is fitted with halogen lamp, to replace it follow the drawing fig. 5 cover A anticlockwise; remove the halogen lamp B in the direction of the arrow.

Put in the new lamp and tighten the cover A clockwise.

WARNING!!

UNDER CERTAIN CIRCUMSTANCES DOMESTIC APPLIANCES MAY BE DANGEROUS.

- Do not check filters with hood working.
- Do not touch the lamps after a prolonged use of the appliance.
- No food must be cooked flambe underneath the hood.
- The use of an unprotected flame is dangerous for the filters and could cause fires.
- Watch constantly the fried food in order to avoid that the cooking oil flares up.
- Before performing any maintenance operation, disconnect the hood from the mains.

The manufacturers refuse to accept any responsibility for eventual damages, because of failure to observe the above instructions.

This appliance complies with the directions EMC 89/336/EEC revised 92/31/EEC and 93/68/EEC.