


# BAM3000

## Instruction manual



**Baumatic®**

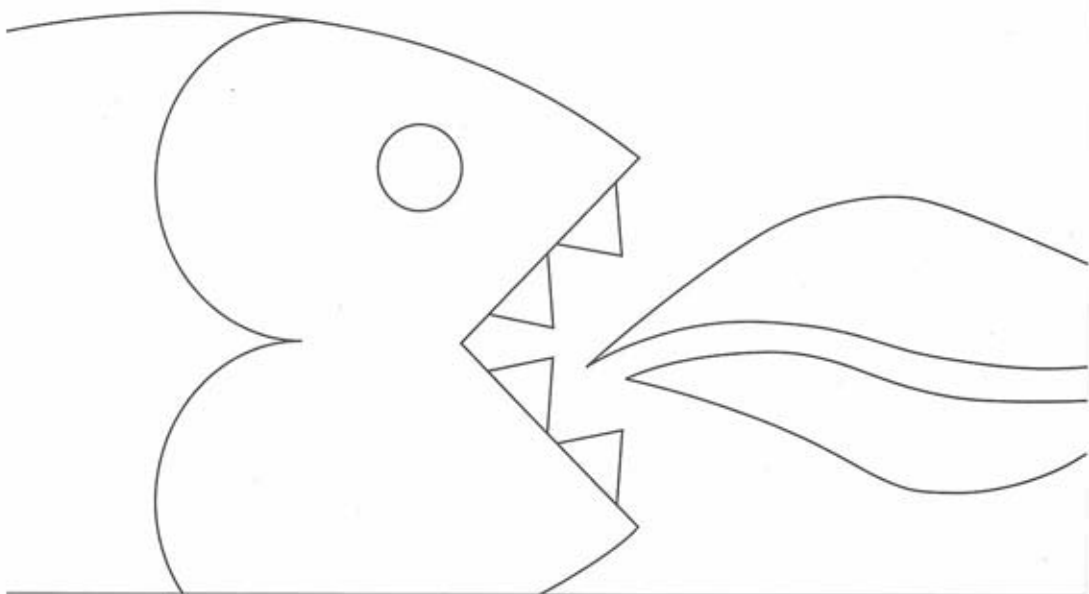




## Microwave Oven

This owner's guidebook is for the following 900 watts microwave oven model:

**BAM3000**

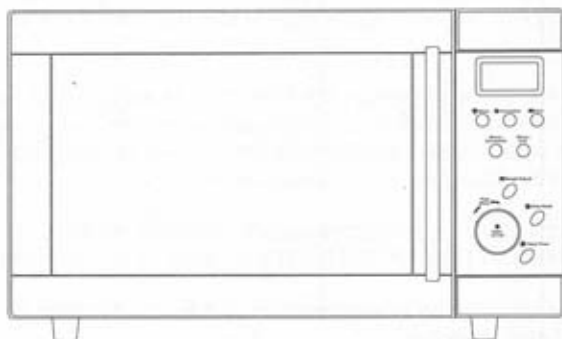

1. READ these instructions carefully before installing and operating the oven. Keep them for further reference.
2. Record in the space below the SERIAL NO. found on the nameplate on your oven and retain this information for future reference.

SERIAL NO.:

## Welcome to Think Appliances

Thank you for selecting a quality product from Think Appliances. We have taken the time to ensure that your appliance is of the highest possible standard and will give you years of use in your home.

Please take the time to call our Customer Care centre on our free call number

**1800 444 357**

To register your 3 year parts and labour warranty (some conditions apply – please refer to your warranty card for more details).

Our Customer Care centre is there to ensure you get the most out of your appliance. For example, should you want to learn more about recommended cooking temperatures, the various cooking functions available, how to set and program your LED clock, and importantly taking care of your appliance when cleaning, please call us because we are here to help you.

It is important that you read through the following use and care manual thoroughly to familiarise yourself with the installation and operation requirements of your appliance to ensure optimum performance. Should you have any queries regarding this information, please don't hesitate to contact our Customer Care centre.

We also carry a complete range of spare parts for all Think products. Please contact our team at Pronto Parts on 1300 306 973 for all your spare parts requirements.

Again, thank you for choosing an appliance brought to you by Think Appliances and we look forward to being of service to you.

Kind regards,

Phillip Ross

Managing Director  
Think Appliances



## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
  - a. Door (bent),
  - b. Hinges and latches (broken or loosened),
  - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## CONTENTS

WELCOME TO THINK APPLIANCES.....	1
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.....	2
SPECIFICATIONS.....	3
BEFORE YOU CALL FOR SERVICE.....	3
INSTALLATION.....	3
GROUNDING INSTRUCTIONS.....	4
RADIO INTERFERENCE.....	4
IMPORTANT SAFETY INSTRUCTIONS.....	4
MICROWAVE COOKING PRINCIPLES.....	5
UTENSILS GUIDE.....	6
PART NAMES.....	6
CONTROL PANEL.....	7
HOW TO SET THE OVEN CONTROLS.....	8
SETTING THE CLOCK.....	8
MICROWAVE COOKING.....	8
GRILL.....	8
CONVECTION.....	9
MICRO +GRILL.....	9
MICRO+CONVECTION.....	10
DEFROSTING.....	10
MULTI-STAGE COOKING.....	10
SETTINGS ABOUT AUTO-MENU.....	11
CLEANING AND CARE.....	13
CONDITIONS OF GUARANTEE.....	14

## SPECIFICATIONS

Power Consumption:	220-240V~50Hz, 1400W (Microwave)
	220-240V, 2000W (Convection)
	220-240V, 1200W (Heater)
Rated Microwave Power Output:	900W
Operation Frequency:	2450MHz
Outside Dimensions:	305mm(H)X525mm(W)X478mm(D)
Oven Cavity Dimensions:	219mm(H)X350mm(W)X384mm(D)
Oven Capacity:	30Litres
Cooking Uniformity:	Turntable System{ $\Phi$ 314mm}
Net Weight:	Approx. 19.5kg

## BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is

programmed correctly and the timer is set.

4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFY THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

## INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the

oven or over any hot or sharp surface.

8. The socket must be readily accessible so that it can be easily unplugged in an

emergency.

9. Do not use the oven outdoors.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

**WARNING** Improper use of the grounding plug can result in a risk of electric shock.

### Note

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

**Green and Yellow = EARTH**

**Blue = NEUTRAL**

**Brown = LIVE**

## RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or

television.

3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not

- designed for industrial or laboratory use.
3. Do not operate the oven when empty.
  4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
  5. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
  6. To reduce the risk of fire in the oven cavity:
    - a. When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition;
    - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
    - c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
    - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
  7. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
  8. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
  9. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
  10. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
  11. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
  12. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
  13. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
  14. Utensils should be checked to ensure that they are suitable for use in microwave oven.
  15. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
  16. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.

## MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to speed cooking of such foods as chicken



and hamburgers. Large items like roasts must be turned over at least once.

5. Rearrange foods such as meatballs

halfway through cooking both from top to bottom and from the center of the dish to the outside.


## UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
  2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
  3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
  4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
  5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.
- The list below is a general guide to help you select the correct utensils.

Cookware	Microwave	Grill	Convection	Combination*
Heat-Resistant Glass	Yes	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Metal Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No


\* Combination: "microwave+grill", and "microwave+convection"

## PART NAMES

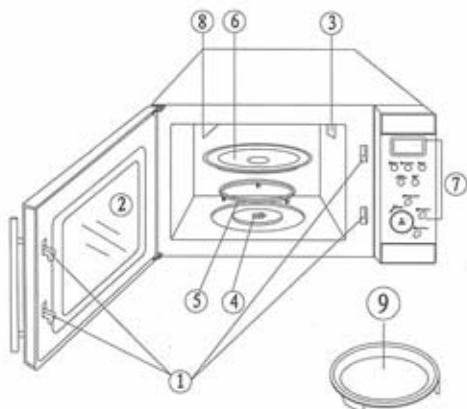

1. Door Safety Lock System
2. Oven Window
3. Oven Air Vent
4. Shaft
5. Roller Ring
6. Glass Tray
7. Control Panel
8. Grill Heater
9. Baking Plate

## CONTROL PANEL

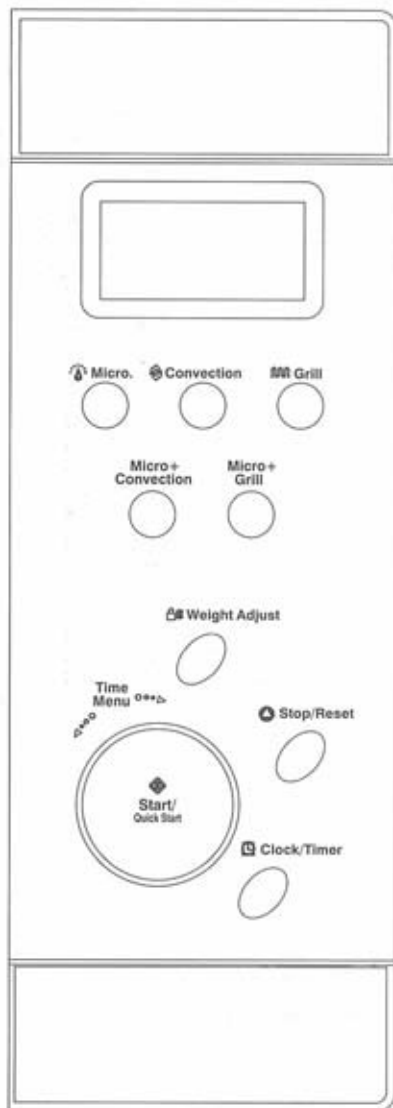

### DISPLAY SCREEN

Cooking time, power, indicators and present time are displayed.

### MICRO.

Press a number of times to select microwave power level.

### GRILL

Press to set a grill-cooking program.

### CONVECTION

Press to program convection temperature.

### MICRO+GRILL

Press to select different combination cooking settings.

### MICRO+CONVECTION

Press to select different combination cooking settings.

### TIME/MENU (DIAL)

Rotate to set cooking time or select auto-menu.

### START/QUICK START

Press to start cooking program or set quick start cooking program.

### WEIGHT ADJUST

Press to select the amount of food or enter cooking time setting state.

### CLOCK / TIMER

Press to set the clock or timer.

### STOP/RESET

Touch to stop cooking program or clear all previous settings before cooking starts.

(Please also see the following pages for more detail)

## HOW TO SET THE OVEN CONTROLS

### BEEPS DURING OVEN SETTINGS

- ONE BEEP: Oven accepts the entry.
- TWO BEEPS: Oven does not accept the entry. Please check and try again.

### SETTING THE CLOCK

1. Press CLOCK / TIMER button.
2. Rotate the TIME/MENU dial until the correct hour is displayed.
3. Press CLOCK / TIMER button.
4. Rotate the TIME/MENU dial until the correct minute is displayed.
5. Press CLOCK / TIMER button to confirm.

#### NOTE:

1. This is a 12-hour clock (1:00--12:59), which automatically starts working at default setting of 1:00 when the oven is plugged in.
2. To use the timer feature, holding down the CLOCK/TIMER button for at least 1.5 seconds and then turn the TIME/MENU dial to set a count down time of up to 95 minutes.

### MICROWAVE COOKING

Microwave cooking allows you to customize cooking power and time. First, you select a power level by pressing the MICRO button a number of times (see the table below). Then you set the cooking time (maximum 95 minutes here) by rotating the TIME/MENU dial, before pushing the START button.

Press MICRO button to select different cooking power		
Press	Power	Description
once	100%(P-HI)	High
twice	90%(P-90)	
3 times	80%(P-80)	
4 times	70%(P-70)	Medium High
5 times	60%(P-60)	
6 times	50%(P-50)	Medium

7 times	40%(P-40)	
8 times	30%(P-30)	Med. Low/Defrost
9 times	20%(P-20)	
10 times	10%(P-10)	Low
11 times	0%(P-0)	

Suppose you want to cook for 5 minute at 60% power level.

1. Press MICRO button 5 times.
2. Rotate the TIME/MENU dial until the correct cooking time (5:00) is displayed.
3. Press START button.

#### NOTE:

1. If you want to temporarily stop a cooking session, press the STOP/RESET once and then you can start the cooking again by press START; or press the STOP/RESET twice to cancel the cooking program altogether.
2. After the cooking time ends, the system will beep four times and END is displayed. Before starting another cooking session, you need to clear the display and reset the system by pressing the STOP/RESET button.

### GRILL

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes.

Suppose you want to program grill cooking for 12 minutes.

1. Make sure the system is reset, which means no current cooking program is running, and the system is waiting for instructions.
2. Press GRILL button.
3. Turn TIME/MENU to display 12:00.
4. Press START button.

#### NOTE:

Grill cooking power is set at full power level by

the system. Maximum cooking time for grill is 95 minutes.

### CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and crisp foods quickly and evenly. This oven can be programmed for ten different cooking temperatures.

#### To Cook with Convection

Press CONVECTION button to set convection temperature.

Press	Temperature(°C)
once	230*
twice	215
3 times	200
4 times	185
5 times	170
6 times	155
7 times	140
8 times	125
9 times	110
...	...

\* The temperature figures quoted here may be updated according to different specifications. Please take what actually shown on the oven's screen as the correct setting.

Suppose you want to cook at 185°C for 40 minutes.

1. Press CONVECTION button 4 times.
2. Rotate the TIME/MENU dial until the correct cooking time (40:00) is displayed.
3. Press START button.

#### NOTE:

1. The maximum convection cooking time is 9 hours, 30 minutes. After time has elapsed four beeps sound and END appears in display. Press STOP/RESET button or open door to clear END before starting another cooking function.
2. You can check the convection temperature while cooking is in progress by pressing the CONVECTION button.

#### To Preheat and Cook with Convection

Your oven can be programmed to combine

preheating and convection cooking operations.

Suppose you want to preheat to 170 °C and then cook 35 minutes.

1. Press CONVECTION button 5 times.
2. Press START button. When the oven reaches the programmed temperature, one beep will sound and "PREH" will flicker in the display.
3. Open the door and place container of food at the center of the turntable.
4. Rotate the TIME/MENU dial to program cooking time (35:00).
5. Press START button.

### MICRO +GRILL

This feature allows you to combine grill and microwave cooking on two different settings. First, press this button once or twice to choose an appropriate combination setting, then, at the screen prompt, enter the desired cooking time by turning the TIME/MENU dial. After you have pushed the start button, the system begins to count down.

#### NOTE:

1. The maximum cooking time here is 95 minutes.
2. During cooking, you can see the programmed setting by pressing this button.

### COMBINATION 1

The longest cooking time is 95 minutes.

30% time for microwave cooking, 70% for grill cooking. Use for fish, potatoes or au gratin.

Suppose you want to set combination 1 cooking for 26 minutes.

1. Press STOP/RESET button.
2. Press MICRO+GRILL button once.
3. Turn TIME/MENU to 26:00.
4. Press START button.

### COMBINATION 2

The longest cooking time is 95 minutes.

55% time for microwave cooking, 45% for grill cooking. Use for pudding, omelets, baked potatoes and poultry.

Suppose you want to set combination 2 cooking for 12 minutes.

1. Press STOP/RESET button.
2. Press MICRO+GRILL button twice.
3. Turn TIME/MENU to 12:00.
4. Press START button.

### MICRO+CONVECTION

This oven has four pre-programmed settings that make it easy to cook with both convection heat and microwave automatically.

Press MICRO+CONVECTION button to select convection temperature:

	Press	Oven temperature(°C)
COMB1	once	230
COMB2	twice	200
COMB3	3 times	180
COMB4	4 times	150

Suppose you want to bake a cake for 26 minutes with COMB3.

1. Press MICRO +CONVECTION button 3 times.
2. Rotate the TIME/MENU dial to program cooking time (26:00).
3. Press START button to start.

#### NOTE:

The maximum cooking time is 9 hours, 30 minutes. After time has elapsed four beeps sound and END appears in display. Press RESET button or open door to clear END before starting another cooking function. You can check the convection temperature while cooking is in progress by pressing the MICRO+CONVECTION button.

### DEFROSTING

Suppose you want to defrost frozen food for five minutes.

1. Rotate the TIME/MENU dial until "08" and "CODE" are displayed.
2. Press WEIGHT ADJUST button.
3. Rotate the TIME/MENU dial to program defrosting time.
4. Press START button.

#### NOTE:

1. For either raw or previously cooked frozen food the rule of thumb is approximately 5


minutes per pound. For example, defrost 5 minutes for 1 pound of frozen spaghetti sauce.

2. Always stop the oven periodically to remove or separate the portions that are defrosted. If food is not defrosted at the end of the estimated defrosting time, program the oven in 1-minute increments until totally defrosted.
3. When using plastic containers from the freezer, defrost only long enough to remove from plastic in order to place in a microwave-safe dish.
4. The maximum defrosting time is 45 minutes. After time has elapsed four beeps sound and END appears in display. Press RESET button or open door to clear END before starting another cooking function.

### MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences. DEFROSTING can only be selected before the cooking stage in a program.

Suppose you want to set the following cooking program.

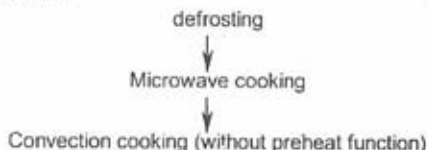

1. Rotate the TIME/MENU dial until "08" and "CODE" are displayed.
2. Press WEIGHT ADJUST button.
3. Rotate the TIME/MENU dial to program defrosting time.
4. Press MICRO button to set power level.
5. Rotate the TIME/MENU dial to program cooking time.
6. Press CONVECTION button to set convection temperature.
7. Rotate the TIME/MENU dial to program cooking time.
8. Press START button.

## SETTINGS ABOUT AUTO-MENU

"AUTO MENU" allow you to cook or reheat food automatically without entering power level or time.

\* The following quoted cooking timings may be updated according to different specifications. Please always take the timings actually shown on the screen of your oven as the correct setting.

### BAKED POTATO

Amount	Press WEIGHT ADJUST.	Cooking time
1	once	5 min 40 sec
2	twice	9 min. 40 sec.
3	3 times	13 min
4	4 times	17 min

Each amount is about 5 to 7 oz.

1. Rotate the TIME/MENU dial until "01" and "CODE" are displayed.
2. Press WEIGHT ADJUST. to select needed amount.
3. Press START button.

#### NOTE:

After the cooking program have finished, let food stand in the oven for 5~10 minutes.

### BEVERAGE

Amount	Press WEIGHT ADJUST.	Cooking time
1	once	2 min 20 sec
2	twice	4 min
3	3 times	5 min 40 sec
4	4 times	7 min 20 sec

Each amount is about 9 to 11 oz.

1. Rotate the TIME/MENU dial until "02" and "CODE" are displayed.
2. Press WEIGHT ADJUST. to select needed amount.
3. Press START button.

### POPCORN

1. Rotate the TIME/MENU dial until "03" and

"CODE" are displayed.

2. Press WEIGHT ADJUST. button once, the cooking time (2 min 30 sec) will be displayed.
3. Press START button.

#### NOTE:

To reset POPCORN time: Rotate the TIME/MENU dial until "03" and "CODE" are displayed, press WEIGHT ADJUST. button twice, rotate the TIME/MENU dial to program the new popcorn time, and then press START button to verify. The new popcorn time will remain whenever you use the POPCORN function until you reset it.

### REHEAT

1. Rotate the TIME/MENU dial until "4" and "CODE" are displayed.
2. Press WEIGHT ADJUST. button, reheating time (3 min 40 sec) will be displayed.
3. Press START button.

### PIZZA

Roast a pizza of 4 ~ 5 oz.

1. Rotate the TIME/MENU dial until "05" and "CODE" are displayed.
2. Press WEIGHT ADJUST. button once, the roasting time (1 min 10 sec) will be displayed.
3. Press START button.

Roast a bigger pizza.

1. Rotate the TIME/MENU dial until "05" and "CODE" are displayed.
2. Press WEIGHT ADJUST. button twice, the roasting time (3 min 30 sec) will be displayed.
3. Press START button.

### MEAT SKEWERS

Press WEIGHT ADJUST.	Weight	Cooking time
once	6 oz	12 min
twice	11 oz	15 min
3 times	1 lb. 3 oz	23 min
4 times	1 lb. 12 oz	30 min

1. Rotate the TIME/MENU dial until "06" and

"CODE" are displayed.

2. Press WEIGHT ADJUST. to select needed amount.
3. Press START button.

**NOTE:**

At the middle time of cooking process, a beep will sound to remind you to rearrange the food.

**CAKE**

1. Rotate the TIME/MENU dial until "07" and "CODE" are displayed.
2. Press WEIGHT ADJUST. button once, the

cooking time (40 min.) will be displayed.

3. Press START button.

**NOTE:**

To reset cooking time: Rotate the TIME/MENU dial until "07" and "CODE" are displayed, press WEIGHT ADJUST. button twice, rotate the TIME/MENU dial to program the new cooking time, and then press START button to verify. The new cooking time will remain whenever you use the CAKE function until you reset it.

## OTHER CONVENIENT FEATURES

### MINUTE TIMER

1. Holding down the CLOCK/TIMER button for 3 seconds.
2. Rotate the TIME/MENU dial until the desired time is displayed.
3. Press START button to start.

**NOTE:**

The maximum time is 95 minutes. Time countdown can be seen in display for 3 seconds before clock or cooking time is returned to display. When the count down ends, a long beep will sound.

Touch TIMER and then touch RESET to cancel TIMER during timing process.

### CHILD PROOF LOCK

The child proof lock prevents unsupervised operation by little children.

To set the child proof lock: Press RESET button for 3 seconds, then a beep will sound and the indicator light will come on. In the lock state, all buttons are disabled.

To cancel the child proof lock: Press RESET button for three seconds, then a beep will sound and the indicator light will come off.

### QUICK START

Use this feature to program the oven to microwave food at 100% power conveniently.

Press START button in quick succession to set the cooking time. The maximum cooking time is 10 minutes. The oven will auto-start two seconds later. After time has elapsed four beeps sound and END appears in display. Press RESET button or open door to clear END before starting another cooking function.

### TO STOP THE OVEN WHILE THE OVEN IS OPERATING

1. Press STOP button.

You can restart the oven by pressing START pad.

Touch RESET to erase all instructions.

2. Open the door.


You can restart the oven by closing the door and pressing START pad.

**NOTE:**

Oven stops operating when door is opened.

## CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

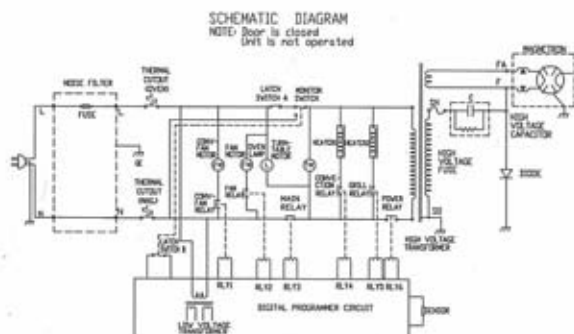

**GB**

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). This guideline is the frame of a Europeanwide validity of return and recycling on Waste Electrical and Electronic Equipment





## CONDITIONS OF GUARANTEE

Dear Customer,

The conditions of guarantee which apply to your appliance are as follows: This product is guaranteed for 3 years from the date of original purchase. Think Appliances will repair any defect that arises due to faulty manufacturing or workmanship free of charge during this period.

Think Appliances will provide free of charge the parts required to repair the appliance during the warranty period, only if they are fitted by a qualified technician (for this phone Think appliances), for any defect that arises due to faulty materials, manufacturing or workmanship within a period of 3 years from the original purchase date.

An additional and annually renewable insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than a qualified technician interfere with the appliance, the policy is negated and Think Appliance will be no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Think Appliances.

If the appliance fails and is considered either not repairable or uneconomical to repair between twelve months and five years from purchase date, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

Continued over page.....

This guarantee does not cover:

- 1 Sinks and taps
- 2 Failure to comply with the manufacturer's instructions for use.
- 3 The replacement of cosmetic components or accessories
- 4 Accidental damage or wilful abuse.
- 5 Subsequent loss or damage owing to the failure of the appliance or electrical supply.
- 6 Incorrect installation
- 7 Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- 8 Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals, refrigeration system blockage.

In the course of the work carried out it may be necessary to remove the appliance from its operating position. Whilst all reasonable care will be taken, Think Appliances cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

If you have any further questions please contact **Think Appliances Pty Ltd**:

#### **SERVICE DEPARTMENT**

**Phone: 1800 444 357**

**Fax: 1300 133 279**

**Email: [service@thinkappliances.com](mailto:service@thinkappliances.com)**

#### **SALES DEPARTMENT**

**Phone: 1300 132 824**

**Fax: 1300 660 188**

**Web: [www.thinkappliances.com](http://www.thinkappliances.com)**





**Baumatic®**

**...you will be mine**